

ECM-TGUC

11th Gen Intel® Core™ SoC i5/i3 BGA Processor 3.5" Micro
Module

User's Manual



1st Ed –17 August 2022

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

Copyright Notice

Copyright © 2022 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that

these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

ECM-TGUC User's Manual

Product Warranty

Avalue warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Avalue, or which have been subject to misuse, abuse, accident or improper installation. Avalue assumes no liability under the terms of this warranty as a consequence of such events. Because of Avalue's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If any of Avalue's products is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details. If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU type and speed, Avalue's products model name, hardware & BIOS revision number, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information available.
3. If your product is diagnosed as defective, obtain an RMA (return material authorization) number from your dealer. This allows us to process your good return more quickly.
4. Carefully pack the defective product, a complete Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Content

1. Getting Started	8
1.1 Safety Precautions	8
1.2 Packing List.....	8
1.3 Document Amendment History	9
1.4 Manual Objectives.....	10
1.5 System Specifications	11
1.6 Architecture Overview—Block Diagram	15
2. Hardware Configuration	16
2.1 Product Overview.....	17
2.2 Jumper and Connector List.....	18
2.3 Setting Jumpers & Connectors	20
2.3.1 Serial port 2 pin9 signal select (JRI2)	20
2.3.2 Clear CMOS (JRTC1)	20
2.3.3 AT/ATX Input power select (JAT1).....	21
2.3.4 Flash Descriptor Security Override (JME1).....	21
2.3.5 M.2 Key B power level select (JSEL1)	22
2.3.6 LCD inverter connector (JBKL1)	22
2.3.7 Serial port 1 connector (JCOM1)	23
2.3.8 Serial port 2 connector (JCOM2)	23
2.3.9 Serial port 3-6 connector (JCOM3_6)	24
2.3.10 Serial port 1 in RS-422/485 mode (J422485)	25
2.3.11 CPU fan connector (JC_FAN1).....	25
2.3.12 General purpose I/O connector (JDIO1).....	26
2.3.13 SATA Power connector (JSATA_PWR1)	26
2.3.14 Battery connector (JBAT1).....	27
2.3.15 Power connector (JPWR1)	27
2.3.16 LVDS connector (JLVDS1)	28
2.3.17 USB2.0 connector (JUSB56)	29
2.3.18 USB2.0 connector (JUSB78)	29
2.3.19 Front Panel connector (JFP1).....	30
2.3.20 PC Buzzer connector (JBZ1)	30
2.3.21 AMP connector (JAMP1)	31
2.3.22 BIOS connector (JBIOS1).....	31
2.3.23 eSPI debug connector (JESPI1)	32
2.3.24 Audio connector (JAUDIO1)	32
2.3.24.1 Signal Description – Audio connector (JAUDIO1).....	32

ECM-TGUC User's Manual

2.3.25	SIM card slot (JN_SIM1)	33
3	BIOS Setup	34
3.1	Introduction	35
3.2	Starting Setup	35
3.3	Using Setup	36
3.4	Getting Help	37
3.5	In Case of Problems	37
3.6	BIOS setup	38
3.6.1	Main Menu	38
3.6.1.1	System Language	39
3.6.1.2	System Date	39
3.6.1.3	System Time	39
3.6.2	Advanced Menu	39
3.6.2.1	CPU Configuration	40
3.6.2.2	Power & Performance	41
3.6.2.2.1	CPU – Power Management Control	41
3.6.2.3	PCH-FW Configuration	42
3.6.2.3.1	Firmware Update Configuration	42
3.6.2.4	Trusted Computing	43
3.6.2.5	APCI Settings	43
3.6.2.6	Super IO Configuration	44
3.6.2.6.1	Serial Port 1 Configuration	45
3.6.2.6.2	Serial Port 2 Configuration	45
3.6.2.6.3	Serial Port 3 Configuration	46
3.6.2.6.4	Serial Port 4 Configuration	46
3.6.2.6.5	Serial Port 5 Configuration	47
3.6.2.6.6	Serial Port 6 Configuration	47
3.6.2.7	NCT6126D HW Monitor	48
3.6.2.7.1	Smart Fan Mode	48
3.6.2.8	S5 RTC Wake Settings	49
3.6.2.9	USB Configuration	49
3.6.2.10	Network Stack Configuration	50
3.6.2.11	NVMe Configuration	51
3.6.3	Chipset	51
3.6.3.1	System Agent (SA) Configuration	52
3.6.3.1.1	Memory Configuration	52
3.6.3.1.2	Graphics Configuration	53
3.6.3.1.3	VMD setup menu	53
3.6.3.2	PCH-IO Configuration	54
3.6.3.2.1	PCI Express Configuration	54

3.6.3.2.2	SATA And RST Configuration	58
3.6.3.2.3	HD Audio Configuration	58
3.6.3.3	Board & Panel Configuration	59
3.6.3.3.1	SHOW DMI INFO	60
3.6.4	Security.....	61
3.6.4.1	Secure Boot.....	61
3.6.4.1.1	Key Management.....	62
3.6.5	Boot	63
3.6.6	Save and exit.....	64
3.6.6.1	Save Changes and Reset.....	64
3.6.6.2	Discard Changes and Reset.....	64
3.6.6.3	Restore Defaults	65
3.6.6.4	Launch EFI Shell from filesystem device	65
4.	Drivers Installation.....	66
4.1	Install Chipset Driver	67
4.2	Install VGA Driver.....	68
4.3	Install ME Driver	69
4.4	Install LAN Driver	70
4.5	Install Serial IO Driver	72
4.6	Install Audio Driver (For Realtek ALC888S).....	73
4.7	Install Realtek Audio Control Driver	74
5.	Mechanical Drawing	75

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x 3.5" ECM-TGUC Micro Module
- 1 x Serial ATA cable (7-pin, standard) 1 x Wire SATA power cable (15-pin, 4P/2.0mm)



If any of the above items is damaged or missing, contact your retailer.

1.3 Document Amendment History

Revision	Date	By	Comment
1 st	August 2022	Avalue	Initial Release

1.4 Manual Objectives

This manual describes in details Avalue Technology ECM-TGUC Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to set up ECM-TGUC or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors regarding this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

1.5 System Specifications

System	
CPU	Onboard Tiger Lake U 11th Intel® Core™ SoC i3/i5@BGA Processor Intel® Core™ i3-1115G4 (up to 3.0GHz, dual-core, 6M Cache, TDP: 28/15/12W) Intel® Core™ i5-1135G7 (up to 2.4GHz, quad-core, 8M Cache, TDP: 28/15/12W)
BIOS	AMI uEFI BIOS, 256Mbit SPI Flash ROM
I/O Chip	NCT6126
System Memory	One 260-pin DDR4 3200MHz SO-DIMM socket, supports up to 32GB Max (non ECC only.)
Watchdog Timer	H/W Reset, 1sec. – 65535sec./min.1sec. or 1min. step
H/W Status Monitor	CPU temperature monitoring Voltages monitoring CPU fan speed control
TPM	Onboard NuvoTon NPCT750AADYX support TPM 2.0, co-lay Infineon SLB9670VQ2.0 & Z32H330TC-SQN-755
iAMT	Core i SKU CPU support iAMT Celeron SKU CPU no support iAMT
Expansion Slot	
M.2	1 x M.2 Type M 2280 (with 1 x PCI-e Gen4 x4) 1 x M.2 Type B 3042/3052/2242 (with SATA and USB2.0, USB 3.0, with 1 x SIM card slot, support WWAN+GNSS or SSD) * Only supports one SIM card (co-lay 1 x 10pin FPC connector for uSIM card adapter) 3.8V for 5G 1 x M.2 Key E 2230 support WiFi module (1 x PCI-e x 1 & USB 2.0 Signal)
Storage	
M.2	1 x M.2 Type M 2280 (with 1 x PCI-e Gen4 x4) 1 x M.2 Type B 3042/3052/2242 (with SATA and USB 2.0, USB 3.0, with 1 x SIM card slot, support WWAN+GNSS or SSD)
SATA	1 x SATA III
Edge I/O	
LAN	1 x Intel® I219LM Gigabit Ethernet PHY 1 x Intel® I225V Gigabit Ethernet
USB 2.0	1 x USB 2.0
USB 3.1	3 x USB 3.2 Gen 2x1
DP	2x DP++

ECM-TGUC User's Manual

DC Input	1 x DC Jack lockable connector type
LED Indicator	Power LED /HDD LED at IO
Onboard I/O	
COM	<p>COM</p> <ul style="list-style-type: none"> - COM 1 support RS232/422/485 connector Supported and RS422/485 by BIOS setting - 1 x 2 x 5 pin, pitch 2.00mm connector support RS-232connector - 1 x 2 x 3 pin, pitch 2.00mm connector, for RS422/485 by BIOS setting - COM2 1 x 2 x 5 pin, pitch 2.00mm connector support RS-232connector - 1 x 2 x 3 pin, pitch 2.00mm connector support Pin 9 with / +5V & +12V Supported by jumper <p>COM3 to 6: (BOM optional)</p> <ul style="list-style-type: none"> - 1 x 2 x 20 pin, pitch 2.00mm connector for COM3~6: support RS-232 connector
USB 2.0	2 x 2 x 5 pin, pitch 2.00mm connector (or pin header) for 4 USB 2.0
GPIO	1 x 2 x 6 pin, pitch 2.00mm connector for GPIO: 8 bits & +3.3S Level
SATA Power	1 x SATA Power, 4 pin pitch 2.00mm connector
CPU/System FAN	1 x 1 x 4 pin, pitch 2.54mm CPU fan connector with smart fan function supported
Buzzer	1 x Buzzer header
Front Panel	1 x 2 x 5 pin, pitch 2.00mm connector for front panel
RTC Battery	1 x 2 Pin Pitch 1.25mm horizontal type battery connector (CR2032 Battery)
AT/ATX Selector	1 x 1 x 3 pin pitch 2.00mm connector for AT/ATX jumper
Clear CMOS	1 x 1 x 3 pin pitch 2.00mm connector
LVDS	<p>1 x 2 x 20 pin, pitch 1.25mm connector for LVDS or eDP.</p> <p>Note: JLVDS1 Support 1 x LVDS or 1 x eDP</p>
LCD Inverter	1 x 1 x 5 pin, pitch 2.00mm Wafer connector for LCD inverter backlight (5V/12V)
BIOS SPI	1 x 2 x 4 pin, pitch 2.00mm connector for BIOS SPI
EC Debug /eSPI	1 x 2 x 6 pin, pitch 1.00mm connector for eSPI
Audio	1 x 2 x 6 pin, pitch 2.00mm connector for front Audio, support Mic-in, Line-out, Line-in
Power Input Connector	1 x 4 pin, pitch wafer 2.50mm connector for power input connector
Amp Connector	1 x 4 pin, pitch wafer 2.00mm connector for 3W x 2 Speaker
Display	
Graphic Chipset	Intel® Tiger Lake UP3 SoC Processor integrated Gen12 graphics
Spec. & Resolution	<p>Intel resolution:</p> <p>2 x DP++ 1.4 : 4096 x 2304@60 Hz</p> <p>1 x LVDS: 1920 x 1080 Dual channel 18/24-bits LVDS (Chrontel</p>

	CH7513A-BF eDP to LVDS) or 1 x eDP 1920 x 1080@60Hz (2 Lanes), default LVDS Note: JLVDS1 Support 1 x LVDS or 1 x eDP
Multiple Display	Triple Display 2 x DP++, 1 x 2CH LVDS or 1 x eDP, default LVDS
Audio	
Audio Codec	RealTek ALC888S-VD2-GR
Amplifier	ALC105 2W4Ω per channel Amplifier
Other	Mic-in, Line-out, Line-in supports 5.1-CH
Ethernet	
LAN Chipset	1 x Intel® I219LM Gigabit Ethernet PHY 1 x Intel® I225V Gigabit Ethernet
LAN Spec.	1 x 10/100/1000 Base-Tx GbE compatible 1 x 10/100/1000/2.5 Base-Tx GbE compatible
Mechanical & Environmental	
Power Requirement	DC in +12V ~ +24V
ACPI	Single power ATX Support S0,S3, S4, S5 ACPI 5.0 Compliant
Power Mode	AT / ATX mode Switchable Through Jumper
Operating Temp.	0~60°C (32~140°F)
Storage Temp.	-40°C ~ +75°C
Operating Humidity	40°C @ 95% Relative Humidity, Non-condensing
Size (L x W) (Please consult product engineers for the production feasibility if the size is larger than 410x360mm or smaller than 80x70mm)	5.7" x 4" (146mm x 101mm)
Weight	0.40kg
Vibration Test	<u>Package Vibration Test</u> Reference IEC60068-2-64 Testing procedures Test Fh: Vibration broadband random Test 1. PSD: 0.026G ² /Hz, 2.16 Grms 2. Non-operation mode 3. Test Frequency: 5-500Hz 4. Test Axis: X,Y and Z axis 5. 30 min. per each axis

ECM-TGUC User's Manual

	<p>6. IEC 60068-2-64 Test:Fh</p> <p><u>Random Vibration Operation</u></p> <p>Reference IEC60068-2-64 Testing procedures</p> <p>Test Fh : Vibration broadband random Test</p> <ol style="list-style-type: none"> 1. PSD: 0.00454G²/Hz, 1.5 Grms 2. Operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 minutes per each axis 6. IEC 60068-2-64 Test:Fh <p><u>Random Vibration Non Operation</u></p> <p>Reference IEC60068-2-64 Testing procedures</p> <p>Test Fh : Vibration broadband random Test</p> <ol style="list-style-type: none"> 1. PSD: 0.01818G²/Hz, 3.0 Grms 2. Non Operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 minutes per each axis 6. IEC 60068-2-64 Test:Fh
Drop Test	<p><u>Packing Drop</u></p> <p>Reference ISTA 2A, Method : IEC-60068-2-32 Test: Ed</p> <p>Drop Test</p> <ol style="list-style-type: none"> 1 One corner , three edges, six faces 2 ISTA 2A, IEC-60068-2-32 Test:Ed
OS Information	Win10 64bit, Linux




Note: Specifications are subject to change without notice.

User condition suggestion:

1. JLVDS1 connector support 1 x 2CH LVDS or 1x eDP, by BIOS select to eDP and use with eDP panel.
2. N_SIM1 and JN_SIM1 can't be using at the same time, user need to choose either one.



1.6 Architecture Overview—Block Diagram

The following block diagram shows the architecture and main components of ECM-TGUC

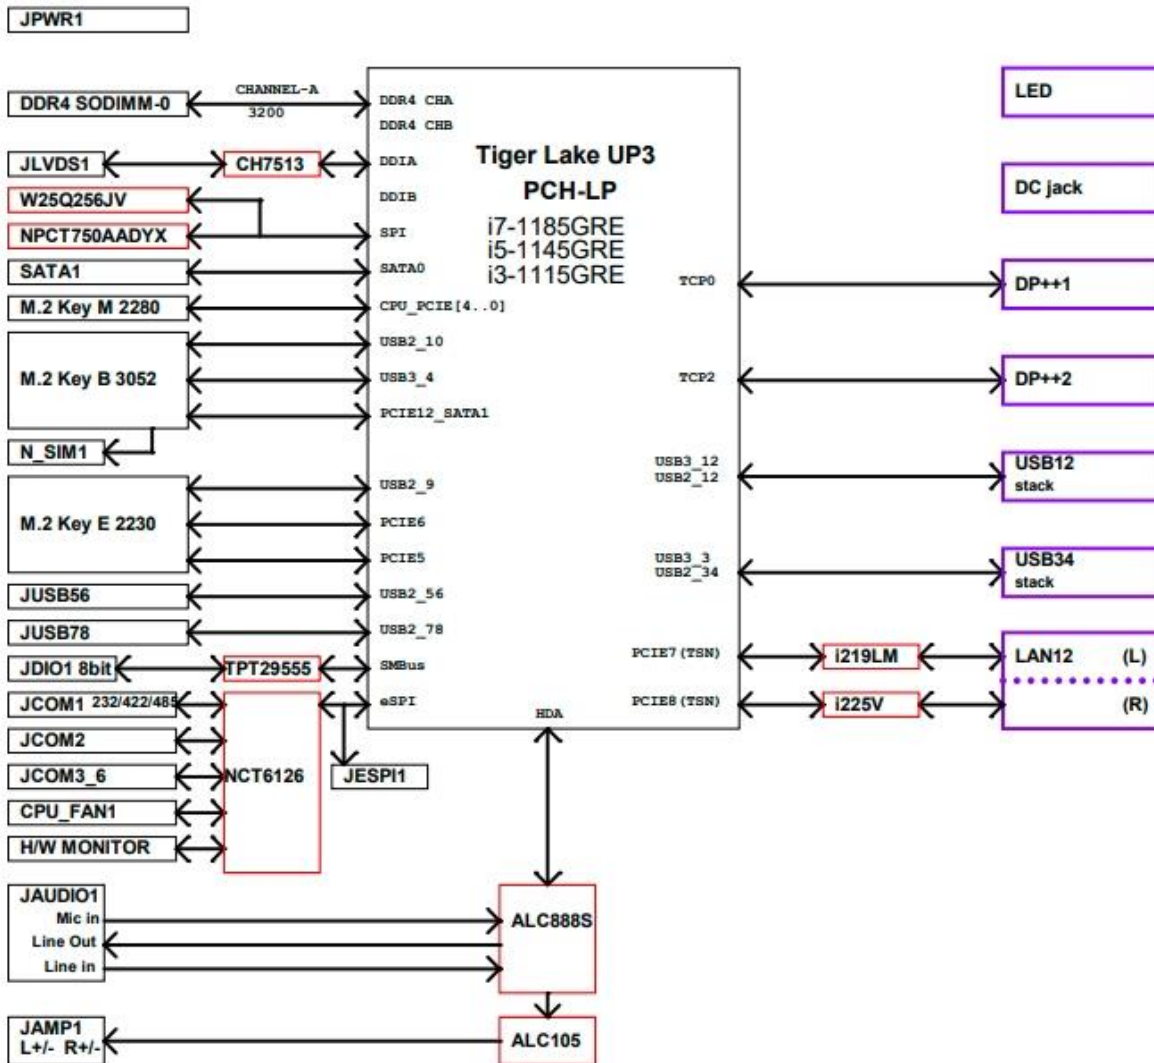

2. Hardware Configuration


2.1 Product Overview

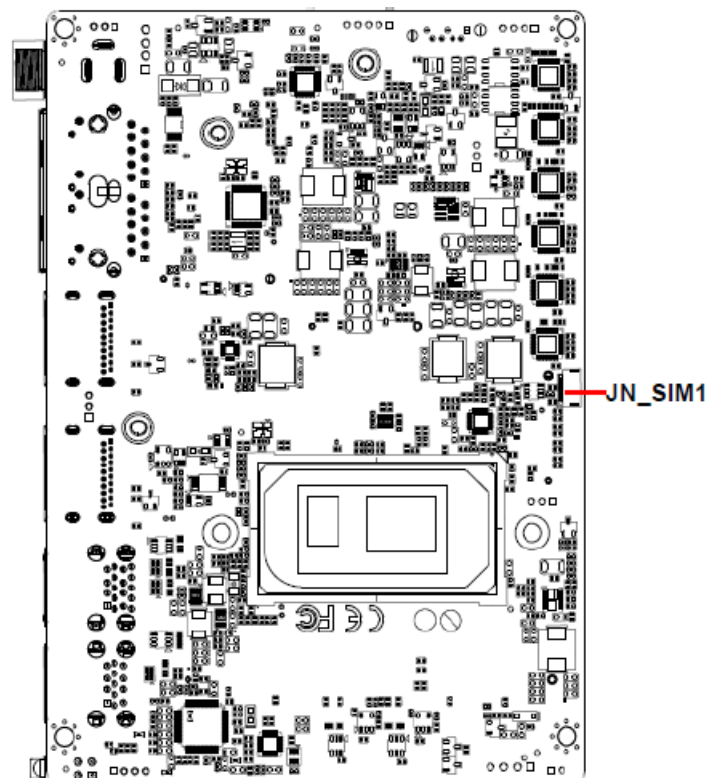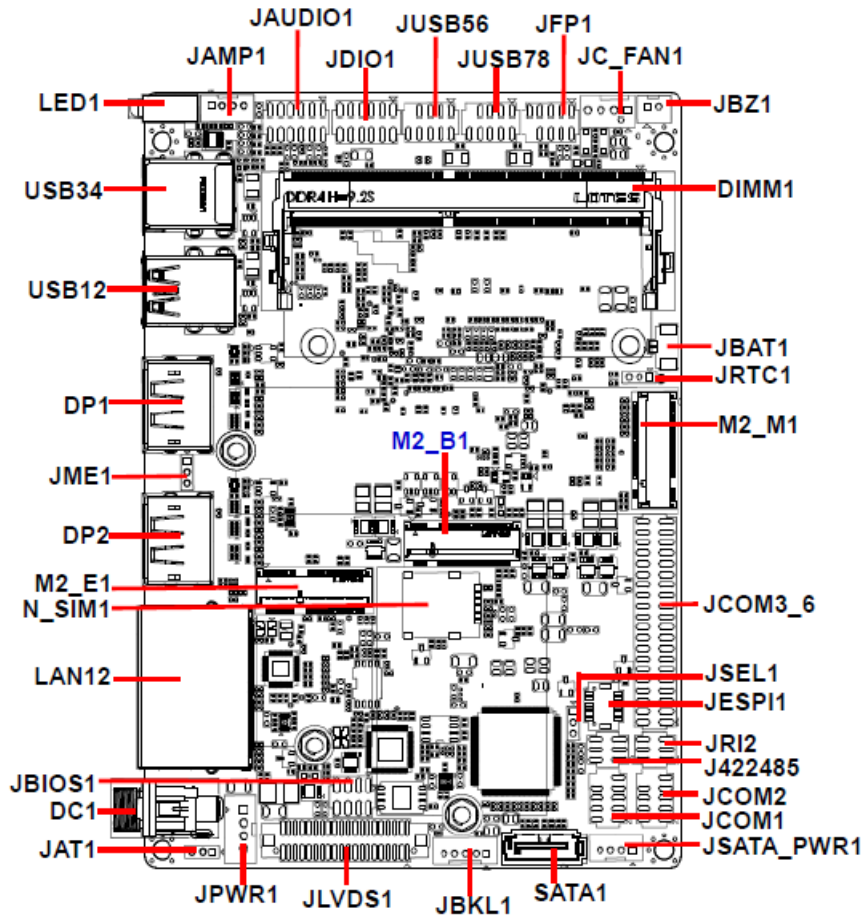

2.2 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

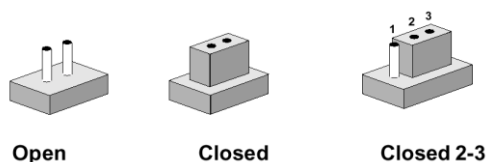

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

Jumpers

Label	Function	Note
JRI2	Serial port 2 pin9 signal select	3 x 2 header, pitch 2.00mm
JAT1	AT/ATX Input power select	3 x 1 header, pitch 2.00mm
JRTC1	Clear CMOS	3 x 1 header, pitch 2.00mm
JME1	Flash Descriptor Security Override	3 x 1 header, pitch 2.00mm
JSEL1	M.2 Key B power level select	3 x 1 header, pitch 2.00mm


Connectors

Label	Function	Note
JBKL1	LCD inverter backlight connector	5 x 1 wafer, pitch 2.00mm Matching Connector: JST PHR-5
JC_FAN1	CPU fan connector	4 x 1 wafer, pitch 2.54mm


JCOM1	Serial port 1 connector	5 x 2 header, pitch 2.00mm
JCOM2	Serial port 2 connector	5 x 2 header, pitch 2.00mm
JCOM3_6	Serial port 3-6 connector	20 x 2 header, pitch 2.00mm
J422485	Serial port 1 in RS-422/485 mode	3 x 2 header, pitch 2.00mm
JDIO1	General purpose I/O connector	6 x 2 header, pitch 2.00mm
M2_M1	M.2 KEY-M 2280 connector	
M2_E1	M.2 KEY-E 2230 connector	
M2_B1	M.2 KEY-B 3042/3052/2242 connector	
LED1	HDD/Power LED indicator	
JLVDS1	LVDS connector	DIN 40-pin wafer, pitch 1.25mm Matching Connector: Hirose DF13-40DS-1.25C
JFP1	Front Panel connector	5 x 2 header, pitch 2.00mm
USB12	2 x USB3.2 connector	
USB34	1 x USB2.0 connector 1 x USB3.2 connector	
JUSB56	USB2.0 connector	5 x 2 header, pitch 2.00mm
JUSB78	USB2.0 connector	5 x 2 header, pitch 2.00mm
JBZ1	PC Buzzer connector	2 x 1 wafer, pitch 2.00mm
LAN1/2	RJ-45 Ethernet 1/2	
JBAT1	Battery connector	2 x 1 wafer, pitch 1.25mm
JPWR1	Power connector	4 x 1 wafer, pitch 2.00mm
JBIO1	BIOS connector	4 x 2 header, pitch 2.00mm
JSATA_PWR1	SATA Power connector	4 x 1 wafer, pitch 2.00mm
SATA1	Serial ATA connector	
DP1/2	2 x DP connector	
DIMM1	DDR4 SODIMM socket	
JESPI1	eSPI debug connector	6 x 2 wafer, pitch 1.00mm
JAUDIO1	Audio connector	6 x 2 header, pitch 2.00mm
N_SIM1	SIM card slot	
JAMP1	Amp connector	4 x 1 wafer, pitch 2.00mm
DC1	DC Jack lockable connector	
JN_SIM1	SIM card slot	10 x 1 FPC, pitch 0.50 mm

2.3 Setting Jumpers & Connectors


2.3.1 Serial port 2 pin9 signal select (JRI2)

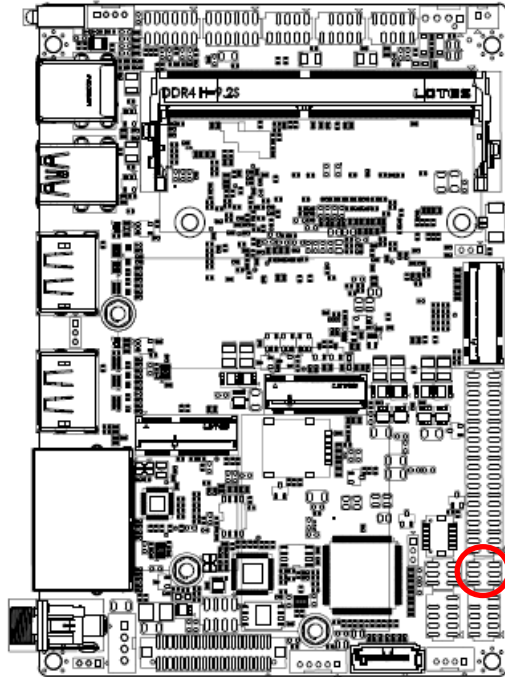


Ring*

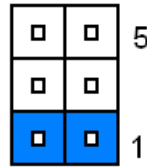

+12V

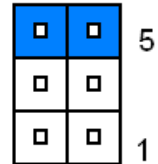


+5V

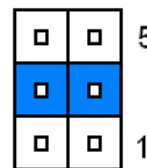


* Default


2.3.2 Clear CMOS (JRTC1)

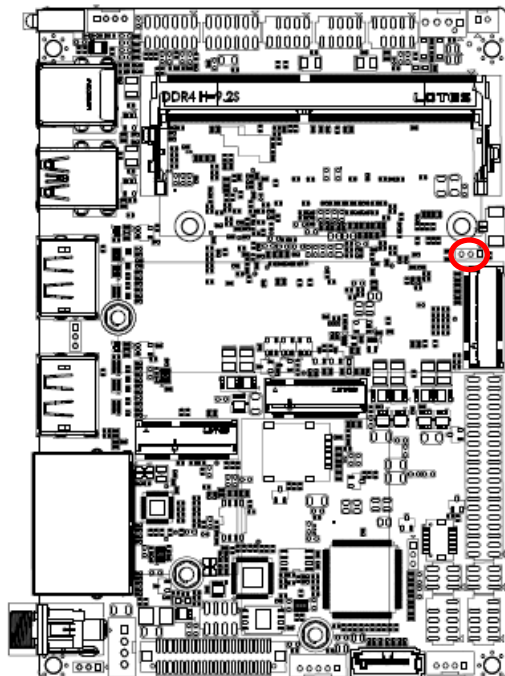

Normal*


 


Clear CMOS

 



* Default

2.3.3 AT/ATX Input power select (JAT1)

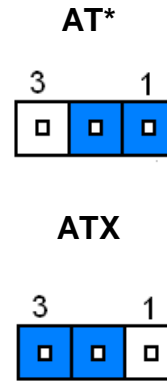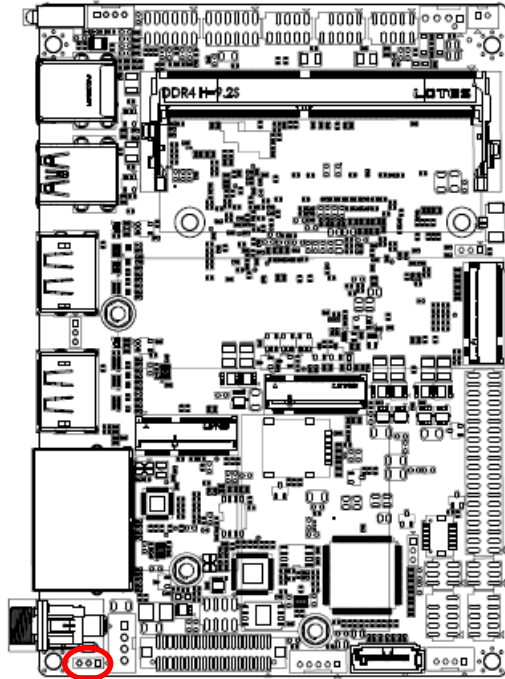


* Default

2.3.4 Flash Descriptor Security Override (JME1)

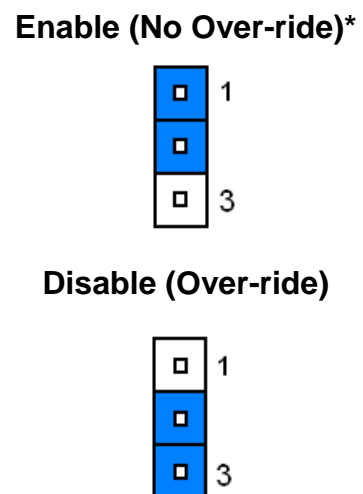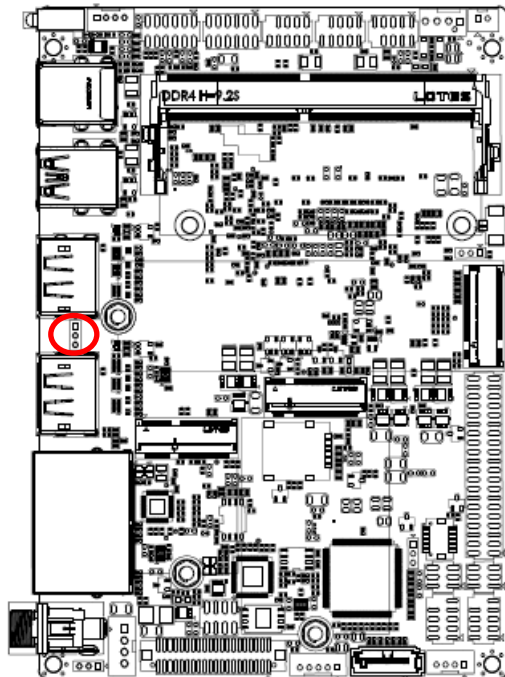


* Default


2.3.5 M.2 Key B power level select (JSEL1)

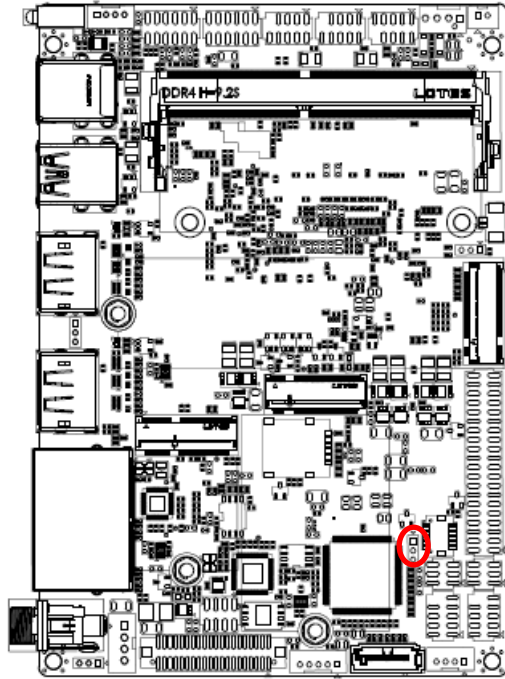

 3.3V*





 3.8V





* Default

 2.3.6 LCD inverter connector (JBKL1)

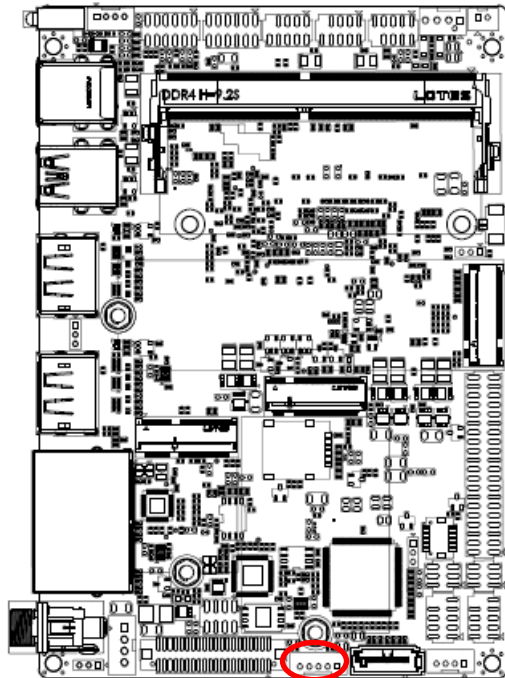



Signal	PIN
+12V	1
GND	2
BKLEN	3
VBRIGHT	4
+5V	5

2.3.7 Serial port 1 connector (JCOM1)

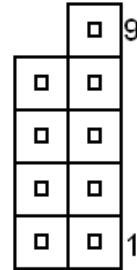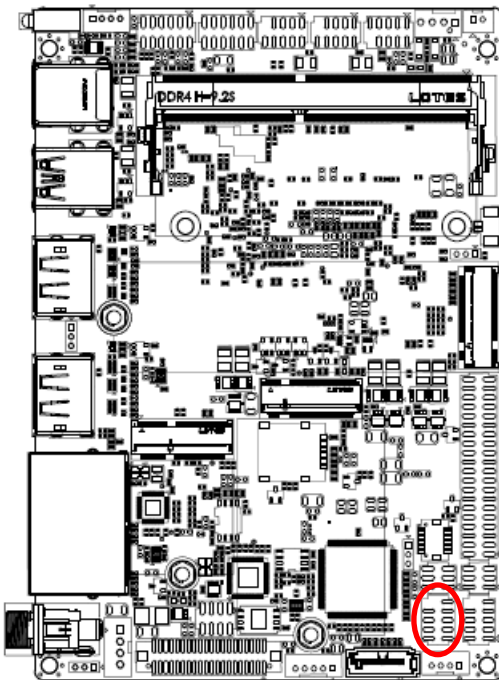



Signal	PIN	PIN	Signal
		9	COM_RI#_1
COM_CTS#_1	8	7	COM_RTS#_1
COM_DSR#_1	6	5	GND
COM_DTR#_1	4	3	COM_TXD_1
COM_RXD_1	2	1	COM_DCD#_1

2.3.8 Serial port 2 connector (JCOM2)

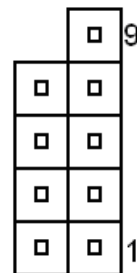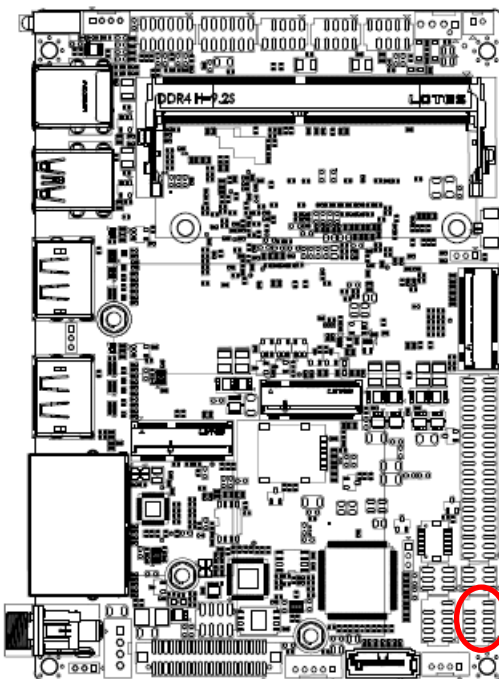



Signal	PIN	PIN	Signal
		9	+V12S_COM_RI#_2
COM_CTS#_2	8	7	COM_RTS#_2
COM_DSR#_2	6	5	GND
COM_DTR#_2	4	3	COM_TXD_2
COM_RXD_2	2	1	COM_DCD#_2

2.3.9 Serial port 3-6 connector (JCOM3_6)

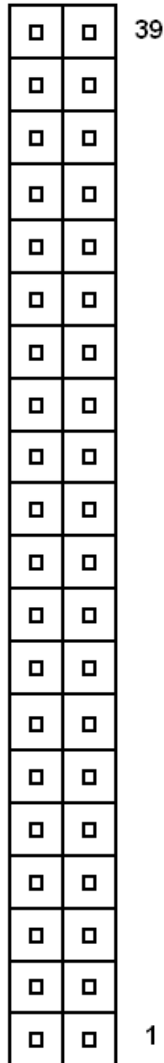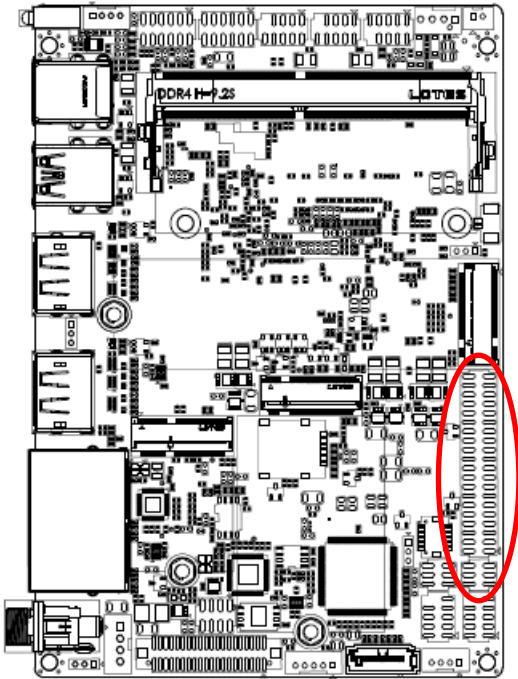



Signal	PIN	PIN	Signal
NC	40	39	COM_RI#_6
COM_CTS#_6	38	37	COM_RTS#_6
COM_DSR#_6	36	35	GND
COM_DTR#_6	34	33	COM_TXD_6
COM_RXD_6	32	31	COM_DCD#_6
NC	30	29	COM_RI#_5
COM_CTS#_5	28	27	COM_RTS#_5
COM_DSR#_5	26	25	GND
COM_DTR#_5	24	23	COM_TXD_5
COM_RXD_5	22	21	COM_DCD#_5
NC	20	19	COM_RI#_4
COM_CTS#_4	18	17	COM_RTS#_4
COM_DSR#_4	16	15	GND
COM_DTR#_4	14	13	COM_TXD_4
COM_RXD_4	12	11	COM_DCD#_4
NC	10	9	COM_RI#_3
COM_CTS#_3	8	7	COM_RTS#_3
COM_DSR#_3	6	5	GND
COM_DTR#_3	4	3	COM_TXD_3
COM_RXD_3	2	1	COM_DCD#_3

2.3.10 Serial port 1 in RS-422/485 mode (J422485)

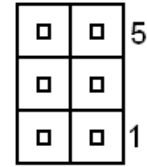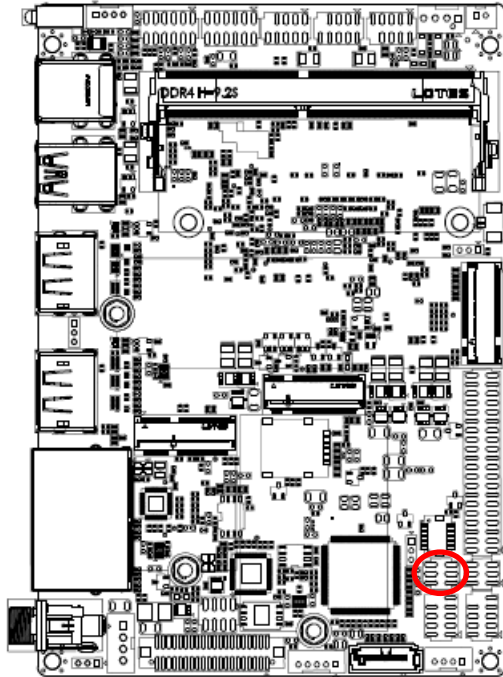



Signal	PIN	PIN	Signal
GND	6	5	+V5S_422485
422_RXDN	4	3	422_RXDP
485-422_TXDP	2	1	485-422_TXDN

 2.3.11 CPU fan connector (JC_FAN1)

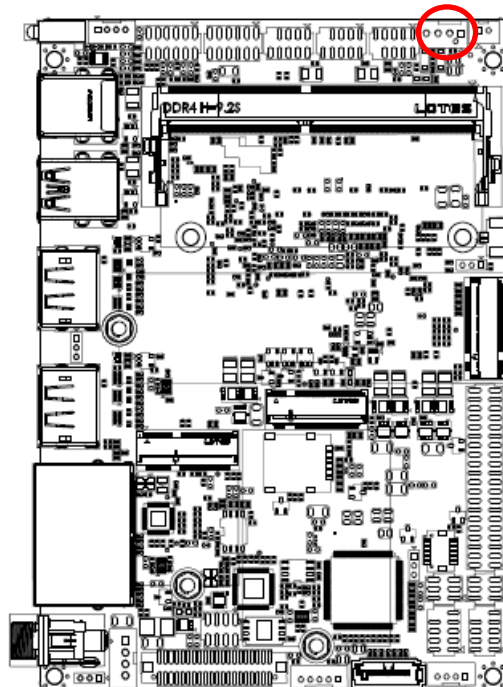



Signal	PIN
GND	1
+12V	2
CPUFAN_IN	3
CPUFAN_OUT	4

2.3.12 General purpose I/O connector (JDIO1)

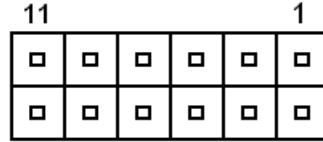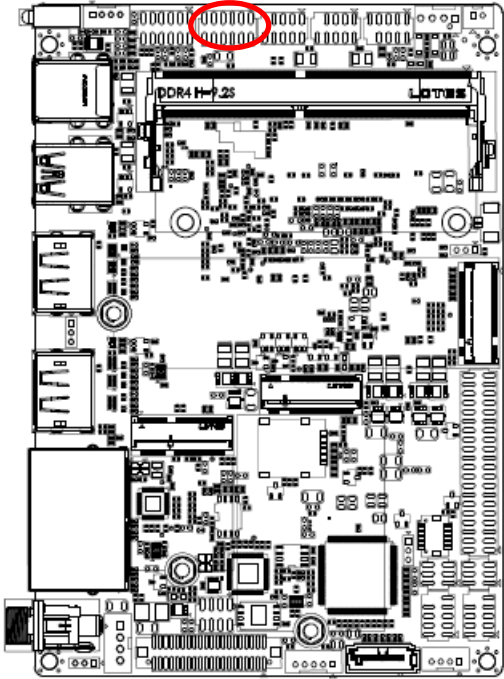


Signal	PIN	PIN	Signal
DIO_GP20	1	2	DIO_GP10
DIO_GP21	3	4	DIO_GP11
DIO_GP22	5	6	DIO_GP12
DIO_GP23	7	8	DIO_GP13
SMB_SCL_S0	9	10	SMB_SDA_S0
GND	11	12	+5V

 2.3.13 SATA Power connector (JSATA_PWR1)

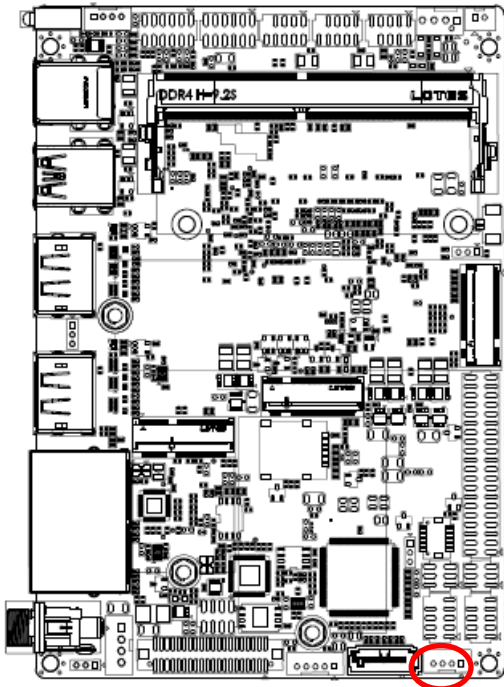


Signal	PIN
+5V	1
GND	2
GND	3
+12V	4

2.3.14 Battery connector (JBAT1)

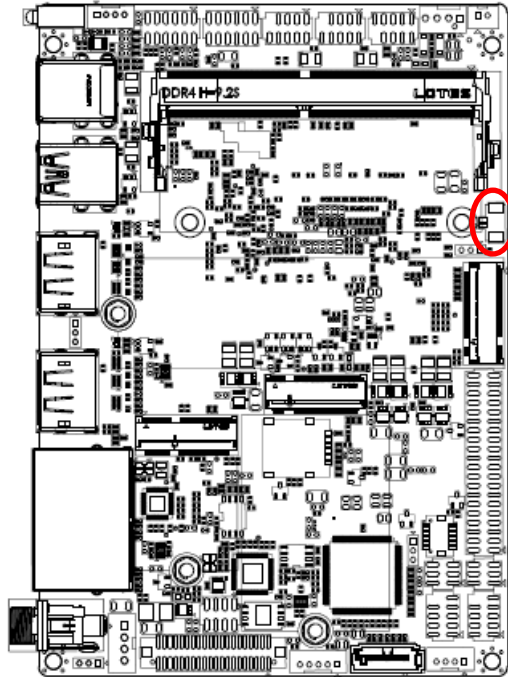



Signal	PIN
GND	2
+RTCBAT	1

2.3.15 Power connector (JPWR1)

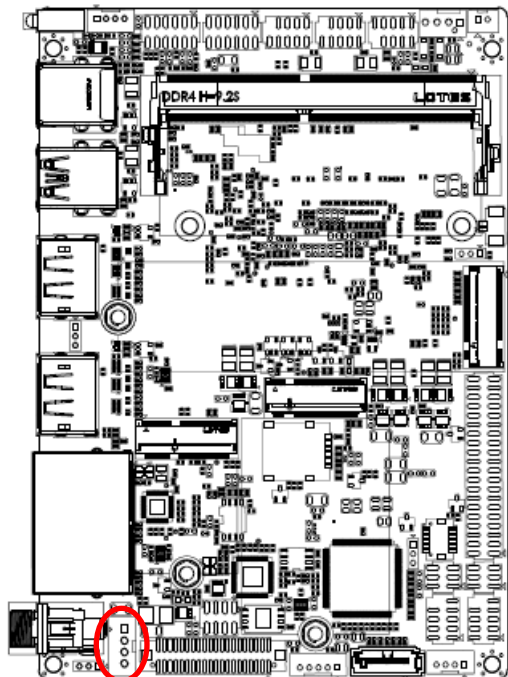



Signal	PIN
+24VSB	1
+24VSB	2
GND	3
GND	4

2.3.16 LVDS connector (JLVDS1)

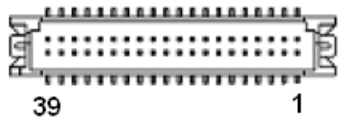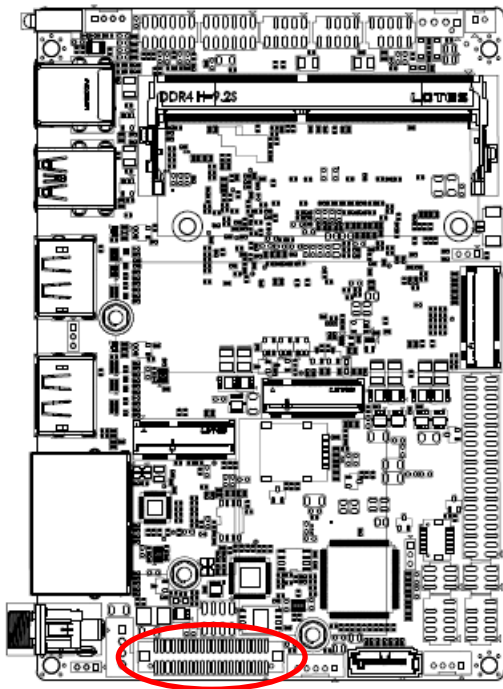



Signal	PIN	PIN	Signal
+3.3V	1	2	+5V
+3.3V	3	4	+5V
+3.3V	5	6	+5V
GND	7	8	GND
LVDS_A_DATA_P_1/ eDP_TX1P	9	10	LVDS_A_DATA_P_0/ eDP_HPDP
LVDS_A_DATA_N_1/ eDP_TX1N	11	12	LVDS_A_DATA_N_0
GND	13	14	GND
LVDS_A_DATA_P_3	15	16	LVDS_A_DATA_P_2/ eDP_TX0P
LVDS_A_DATA_N_3	17	18	LVDS_A_DATA_N_2/ eDP_TX0N
GND	19	20	GND
LVDS_B_DATA_P_1	21	22	LVDS_B_DATA_P_0
LVDS_B_DATA_N_1	23	24	LVDS_B_DATA_N_0
GND	25	26	GND
LVDS_B_DATA_P_3	27	28	LVDS_B_DATA_P_2
LVDS_B_DATA_N_3	29	30	LVDS_B_DATA_N_2
GND	31	32	GND
LVDS_B_CLK_P	33	34	LVDS_A_CLK_P/ eDP_AUXP
LVDS_B_CLK_N	35	36	LVDS_A_CLK_N/ eDP_AUXN
GND	37	38	GND
+12V	39	40	+12V

2.3.17 USB2.0 connector (JUSB56)

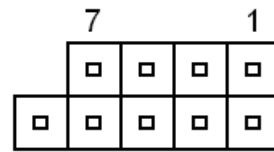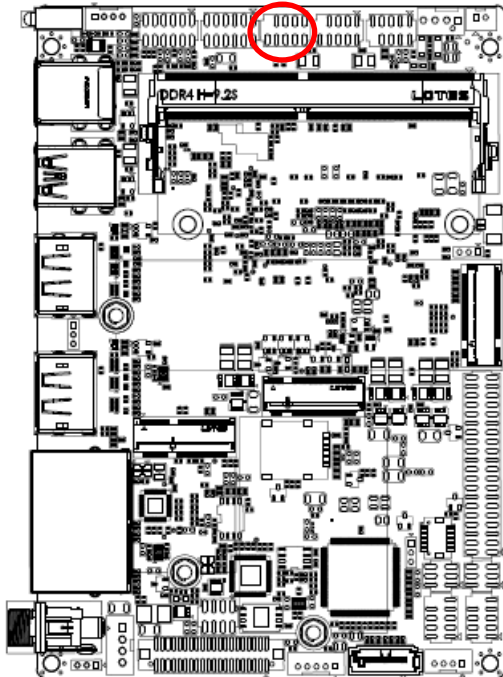



Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN5	3	4	USB_R_DN6
USB_R_DP5	5	6	USB_R_DP6
GND	7	8	GND
		10	GND

2.3.18 USB2.0 connector (JUSB78)

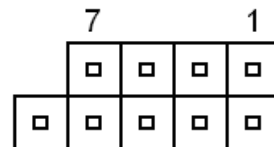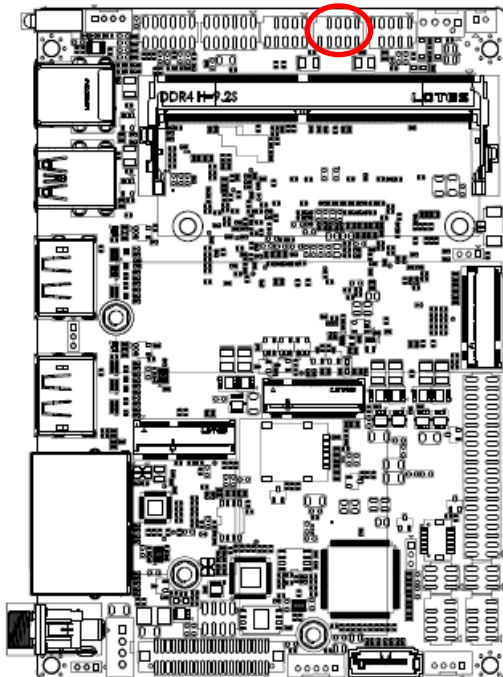


Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN7	3	4	USB_R_DN8
USB_R_DP7	5	6	USB_R_DP8
GND	7	8	GND
		10	GND

2.3.19 Front Panel connector (JFP1)

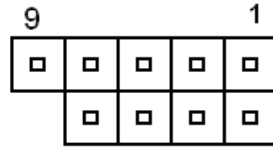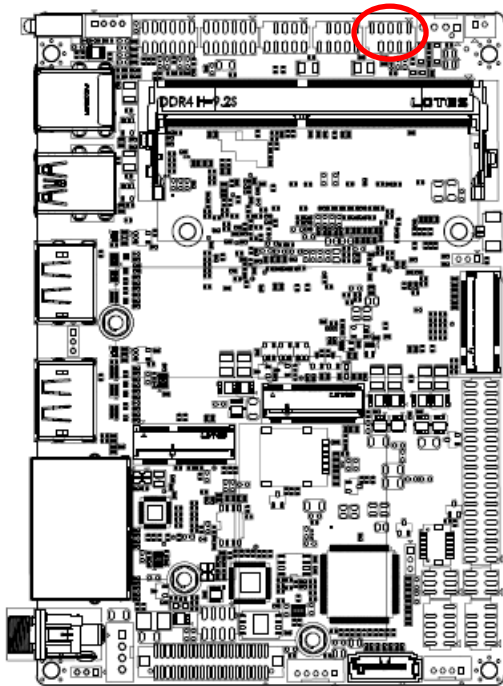



Signal	PIN	PIN	Signal
HDD_LED_P	1	2	PWR_LED_P
HDD_LED#	3	4	PWR_LED#
PM_SYSRST#	5	6	PWRBTN_IN#
GND	7	8	GND
NC	9		

2.3.20 PC Buzzer connector (JBZ1)

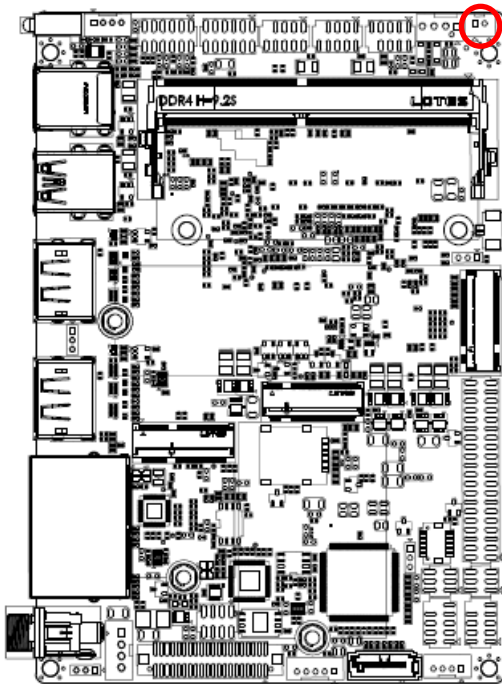



Signal	PIN
SOC_SPKR_R	1
+5V	2

 2.3.21 AMP connector (JAMP1)

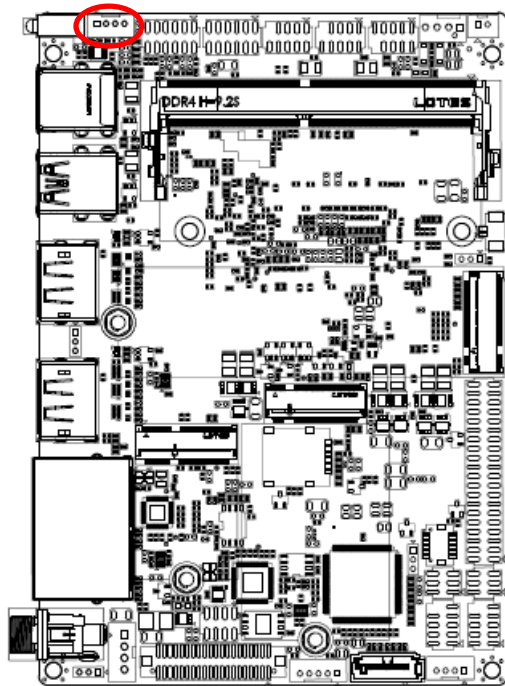



Signal	PIN
AMP_LOUT+	1
AMP_LOUT-	2
AMP_ROUT+	3
AMP_ROUT-	4

2.3.22 BIOS connector (JBIOS1)

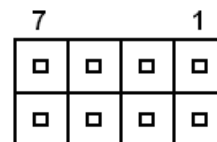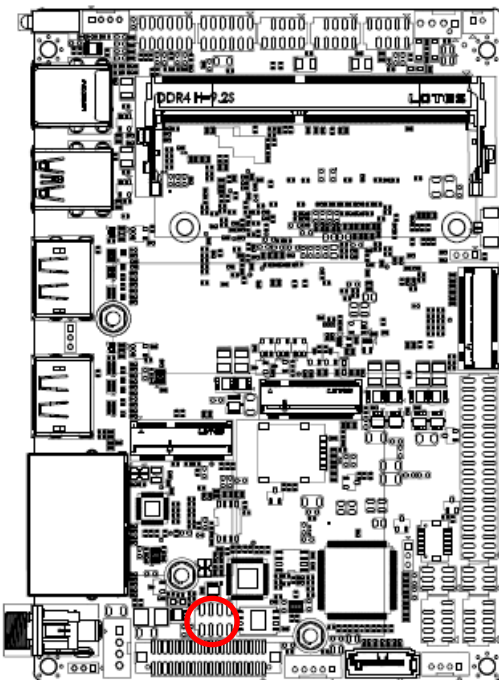



Signal	PIN	PIN	Signal
+V3.3A_SPI	1	2	GND
SPI_CS0#_ROM	3	4	SPI_CLK_ROM
SPI_MISO_ROM	5	6	SPI_MOSI_ROM
SPI_HOLD#_ROM	7	8	SPI_WP#_ROM

 2.3.23 eSPI debug connector (JESPI1)

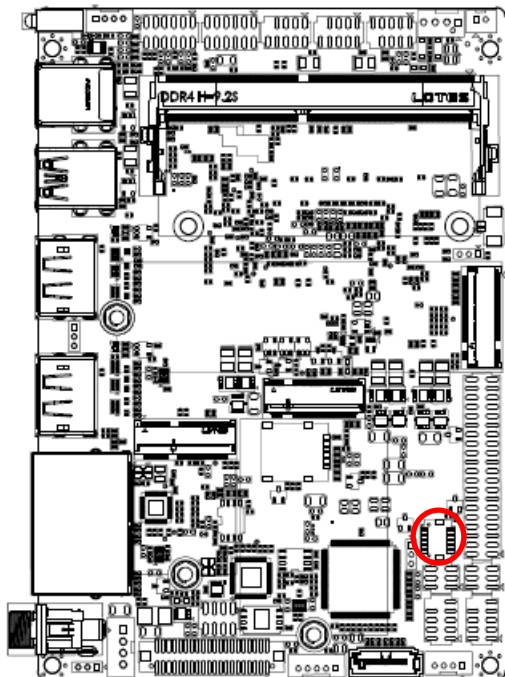

Signal	PIN	PIN	Signal
eSPI_R_IO0	1	2	+3.3V
eSPI_R_IO1	3	4	PCH_PLT_RST#
eSPI_R_IO2	5	6	eSPI_R_CS#
eSPI_R_IO3	7	8	eSPI_R_CLK
NC	9	10	GND
eSPI_R_RST#	11	12	NC

2.3.24 Audio connector (JAUDIO1)

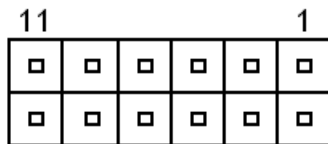
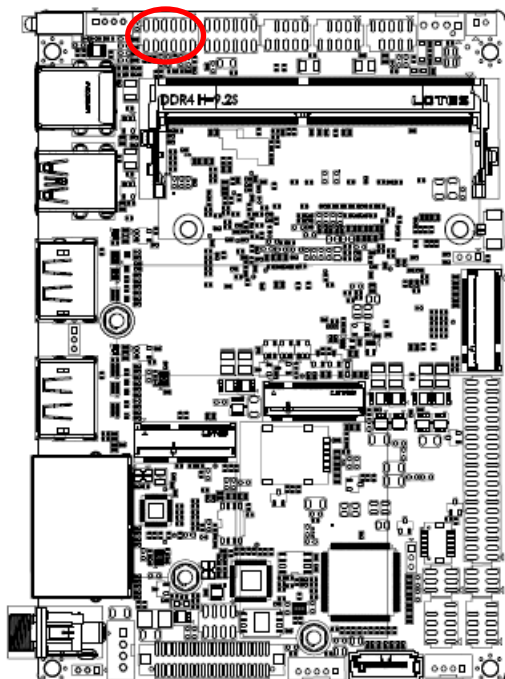


Signal	PIN	PIN	Signal
FRONT-R-OUT	1	2	FRONT-L-OUT
HD_AGND	3	4	HD_AGND
LINE1-R-IN	5	6	LINE1-L-IN
MIC1-R-IN	7	8	MIC1-L-IN
FRONT-JD	9	10	LINE1-JD
MIC1-JD	11	12	HD_AGND

2.3.24.1 Signal Description – Audio connector (JAUDIO1)

Signal	Signal Description
LINE1-JD	AUDIO IN (LINE_RIN/LIN)sense pin
FRONT-JD	AUDIO Out(ROUT/LOUT) sense pin
MIC1-JD	MIC IN (MIC_RIN/LIN) sense pin

 2.3.25 SIM card slot (JN_SIM1)

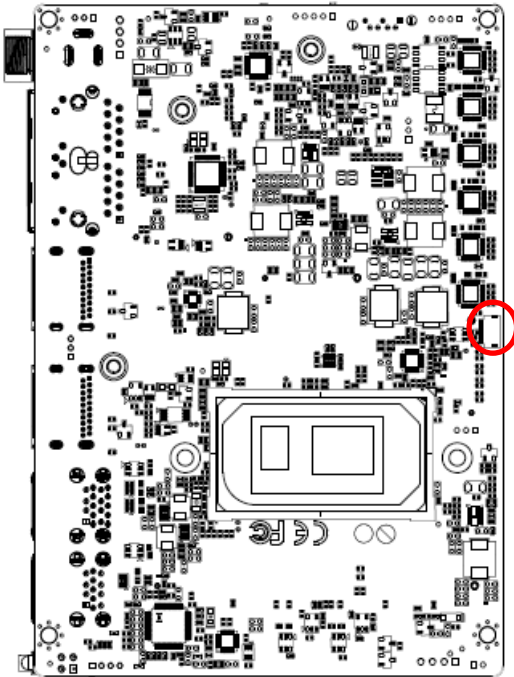

Signal	PIN
NC	10
N_SIM_CD_R	9
GND	8
UIM_DATA_R	7
UIM_CLK_R	6
GND	5
+VPP_SIM_1	4
UIM_RESET#	3
GND	2
+VCC_SIM	1

3. BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <ESC> or immediately after switching the system on, or

By pressing the <ESC> or key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press <ESC> or to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the <Enter> key again.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.


The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

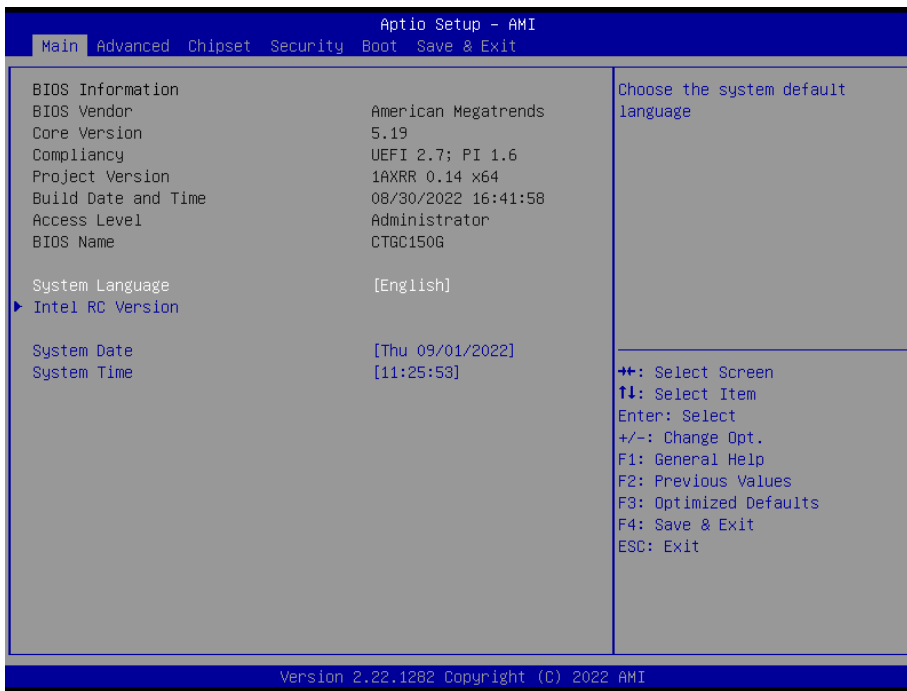

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.



Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website (www.avalue.com.tw) to download the latest product and BIOS information.


3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.



3.6.2.1 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

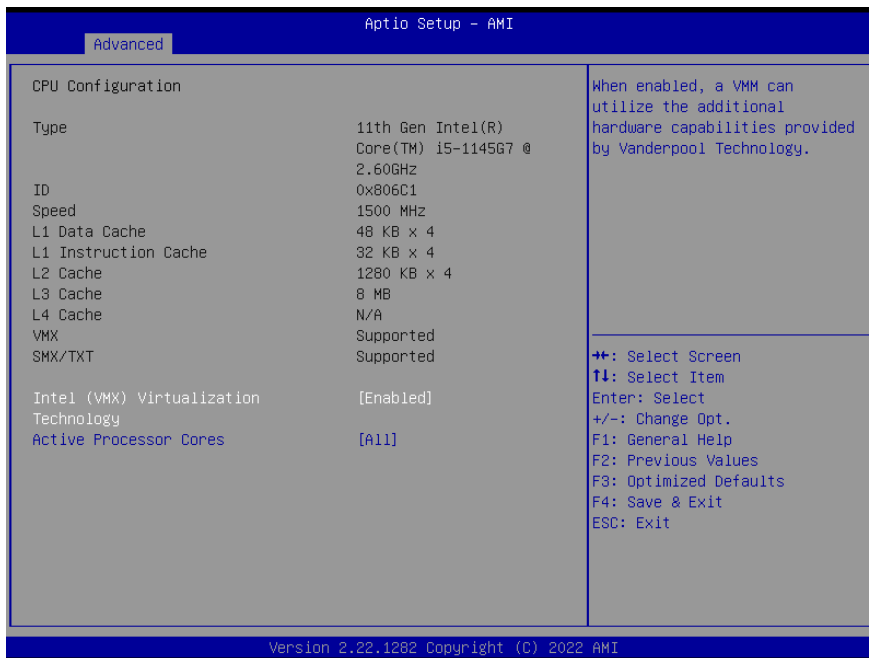


Item	Options	Description
Intel (VMX) Virtualization Technology	Disabled Enabled[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Active Processor Cores	All[Default] 1 2 3 4 5 6 7 8	Number of cores to enable in each processor package.

3.6.2.2 Power & Performance



3.6.2.2.1 CPU – Power Management Control

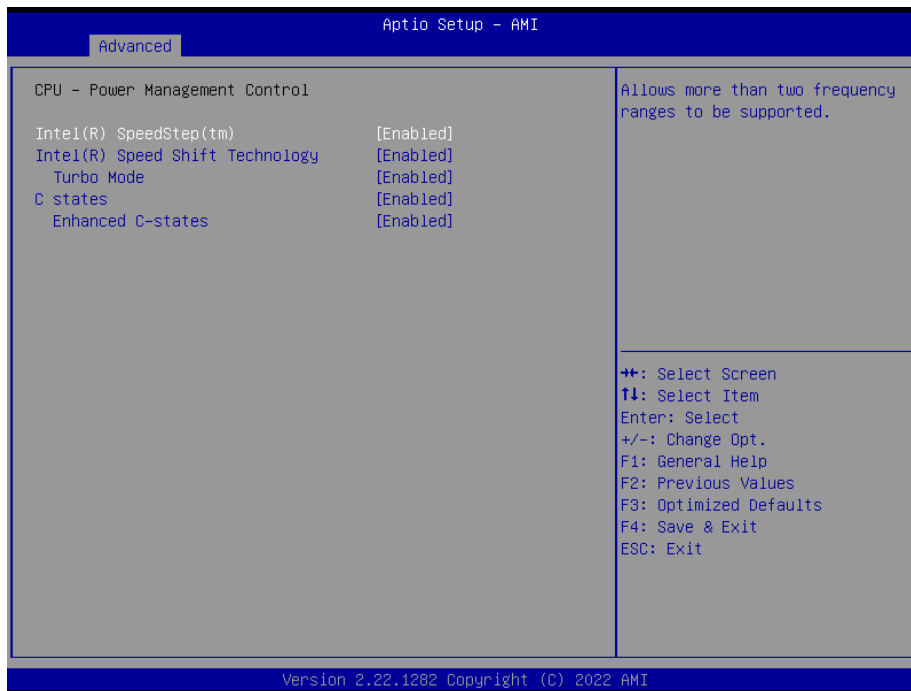


Item	Option	Description
Intel® SpeedStep™	Enabled[Default], Disabled	Allows more than two frequency ranges to be supported.
Intel® Speed Shift Technology	Enabled[Default], Disabled	Enable/Disable Intel® Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.

ECM-TGUC User's Manual

Turbo Mode	Enabled[Default], Disabled	Enable/Disable processor Turbo Mode (requires Intel Speed Step or Intel Speed Shift to be available and enabled).
C States	Enabled[Default], Disabled	Enable/Disable CPU Power Management.
Enhanced C-States	Enabled[Default], Disabled	Enable/Disable C1E. When enabled, CPU will switch to minimum speed when all cores enter C-State.

3.6.2.3 PCH-FW Configuration

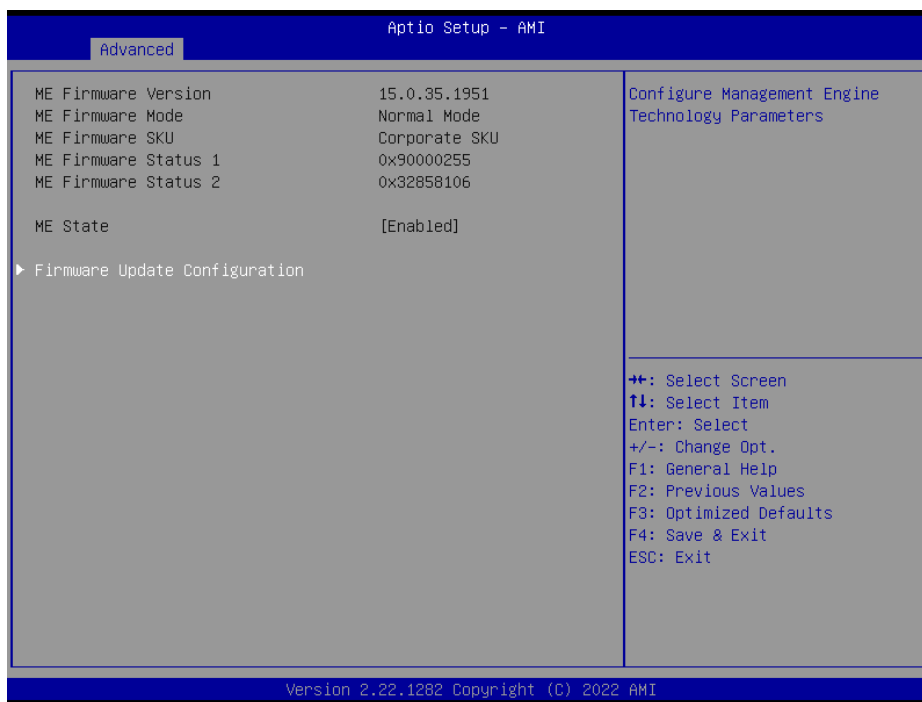


3.6.2.3.1 Firmware Update Configuration




Item	Option	Description
ME FW Image Re-Flash	Disabled[Default], Enabled	Enable/Disable Me FW Image Re-Flash function.

3.6.2.4 Trusted Computing

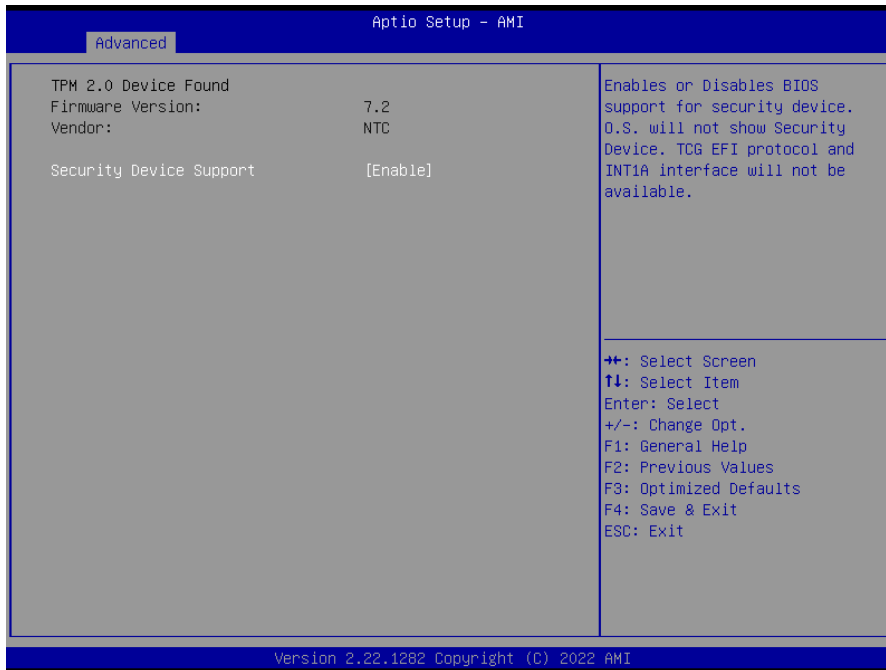

Item	Options	Description
Security Device Support	Disable, Enable[Default]	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.


3.6.2.5 APCI Settings

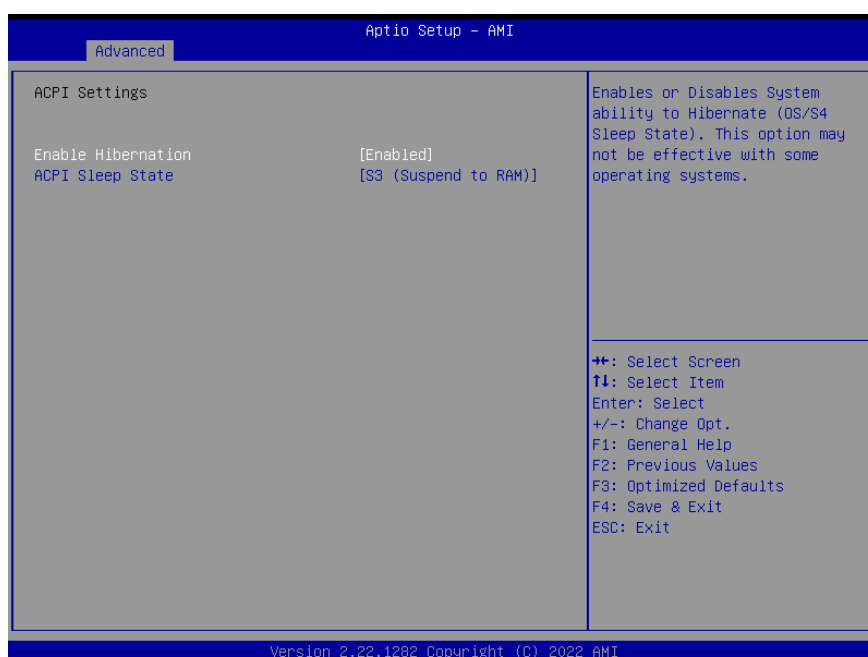

Item	Options	Description
Enable Hibernation	Disabled Enabled[Default],	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some OS.
ACPI Sleep State	Suspend Disabled, S3 (Suspend to RAM)[Default]	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.


3.6.2.6 Super IO Configuration

You can use this item to set up or change the Super IO configuration for serial ports. Please refer to 3.6.2.6.1 ~ 3.6.2.6.6 for more information.

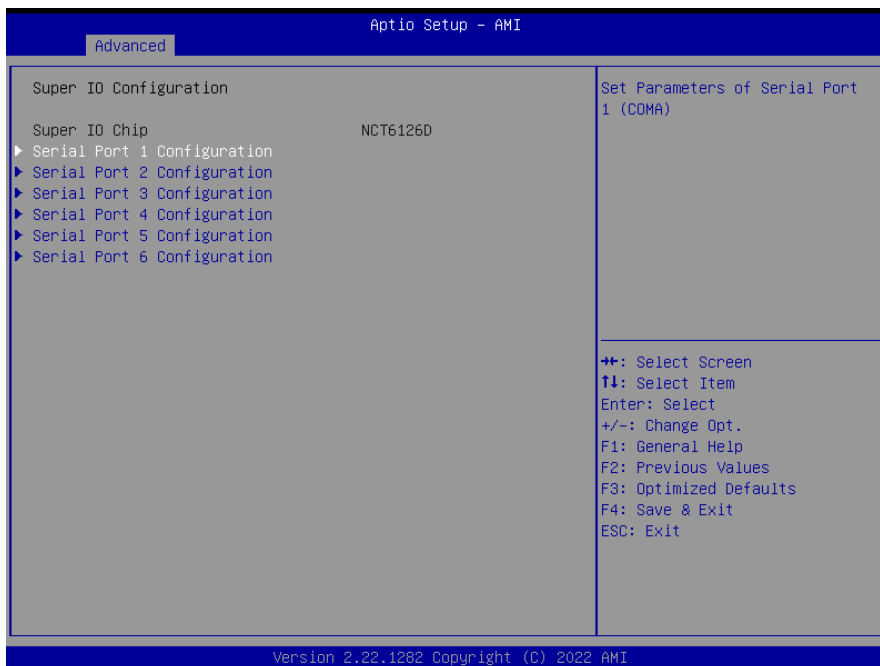


Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).
Serial Port 3 Configuration	Set Parameters of Serial Port 3 (COMC).
Serial Port 4 Configuration	Set Parameters of Serial Port 4 (COMD).
Serial Port 5 Configuration	Set Parameters of Serial Port 5 (COME).
Serial Port 6 Configuration	Set Parameters of Serial Port 6 (COMF).

3.6.2.6.1 Serial Port 1 Configuration

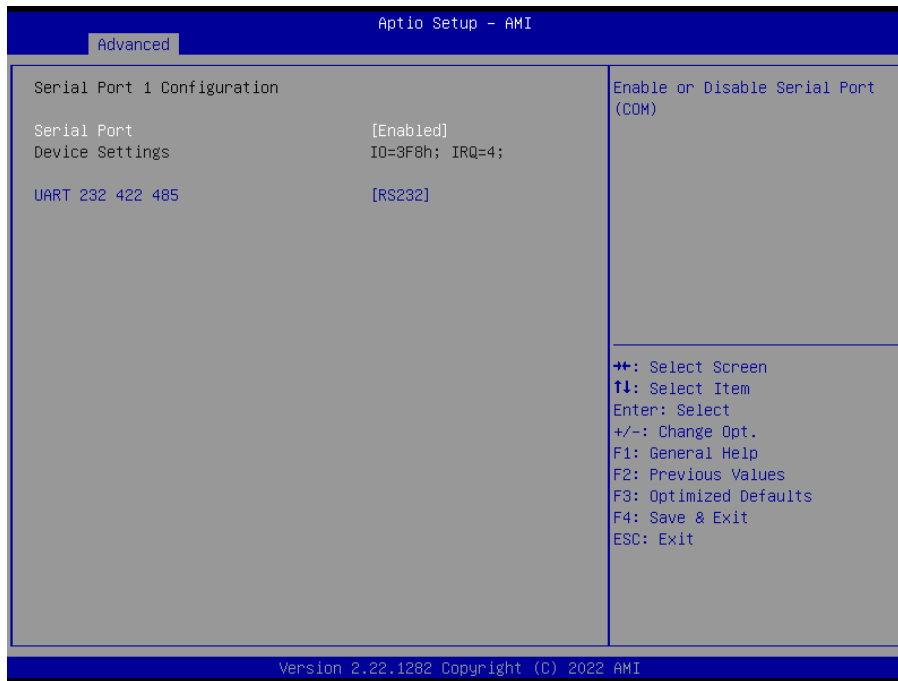


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default] UART 422 UART 485	Change the Serial Port as RS232/422/485.

3.6.2.6.2 Serial Port 2 Configuration

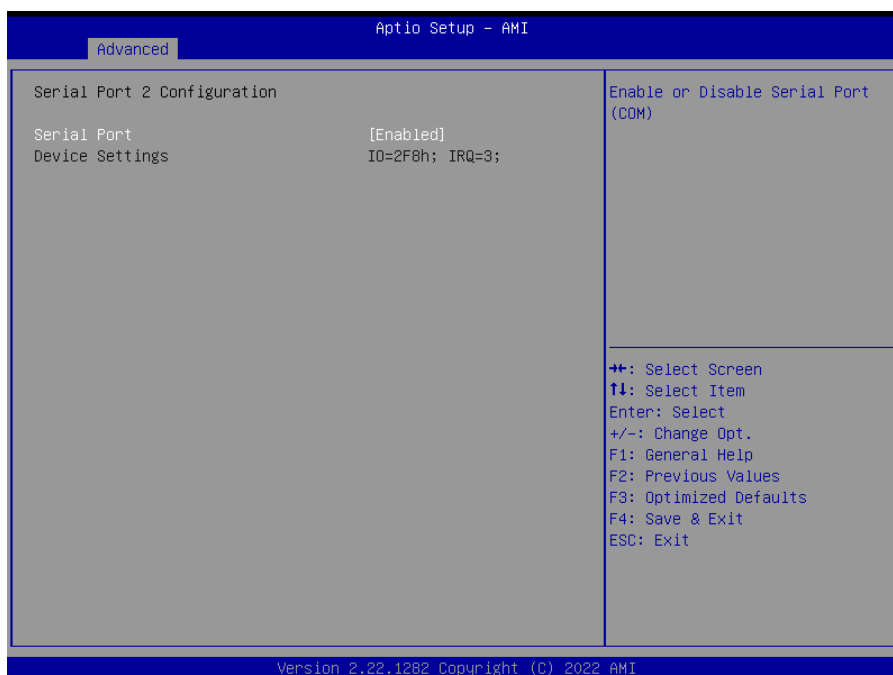


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

3.6.2.6.3 Serial Port 3 Configuration

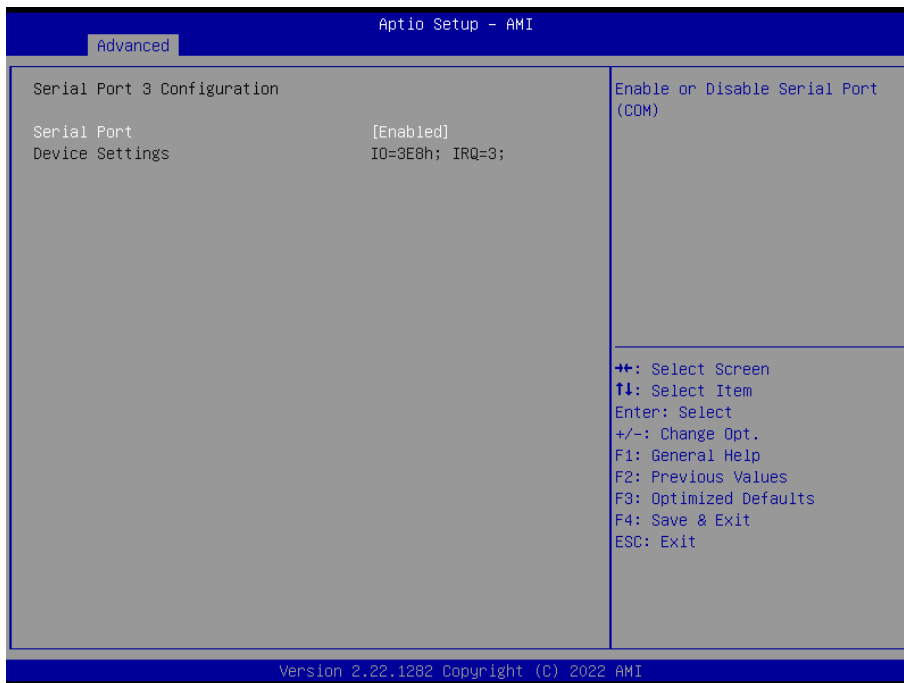


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

3.6.2.6.4 Serial Port 4 Configuration

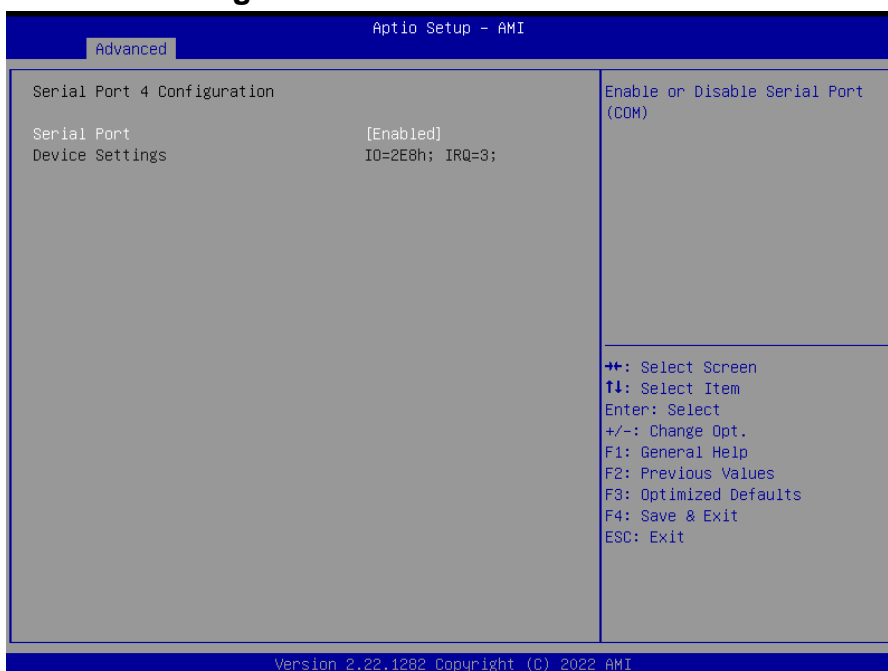


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

3.6.2.6.5 Serial Port 5 Configuration

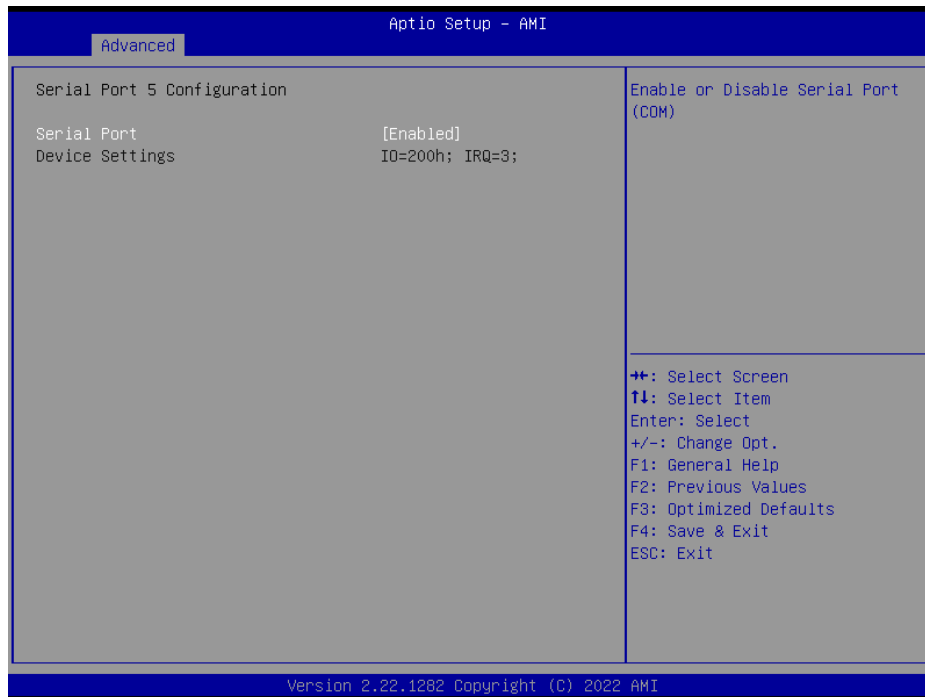

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).


3.6.2.6.6 Serial Port 6 Configuration

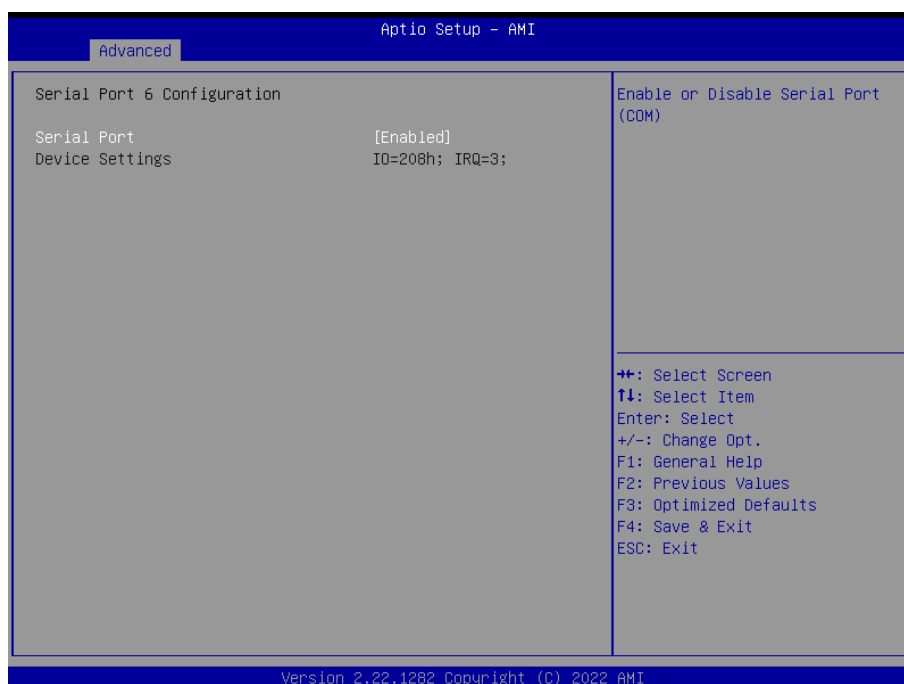

ECM-TGUC User's Manual

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

3.6.2.7 NCT6126D HW Monitor

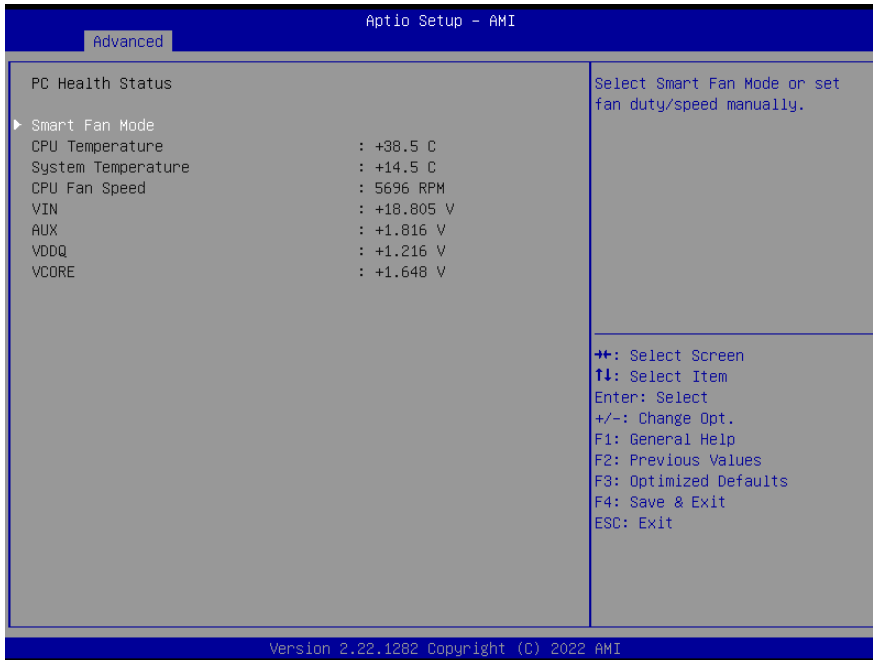


3.6.2.7.1 Smart Fan Mode



Item	Option	Description
CPU Fan Mode	Manual Mode[Default]/Mode 01/Mode 02/Mode 03/Mode 04/Mode 05/Mode 06/Mode 07/Mode 08/Mode 09/Mode 10/Mode 11/Mode 12/Mode 13/Mode	Smart Fan Mode Select: Mode 01 to Mode 20 Or Manual(No Smart Fan).

	14/Mode 15/Mode 16/Mode 17/Mode 18/Mode 19/Mode 20	
CPU Fan Manual Mode Duty	1-255[Default]	Set Fan Duty Manually(1~255).

3.6.2.8 S5 RTC Wake Settings

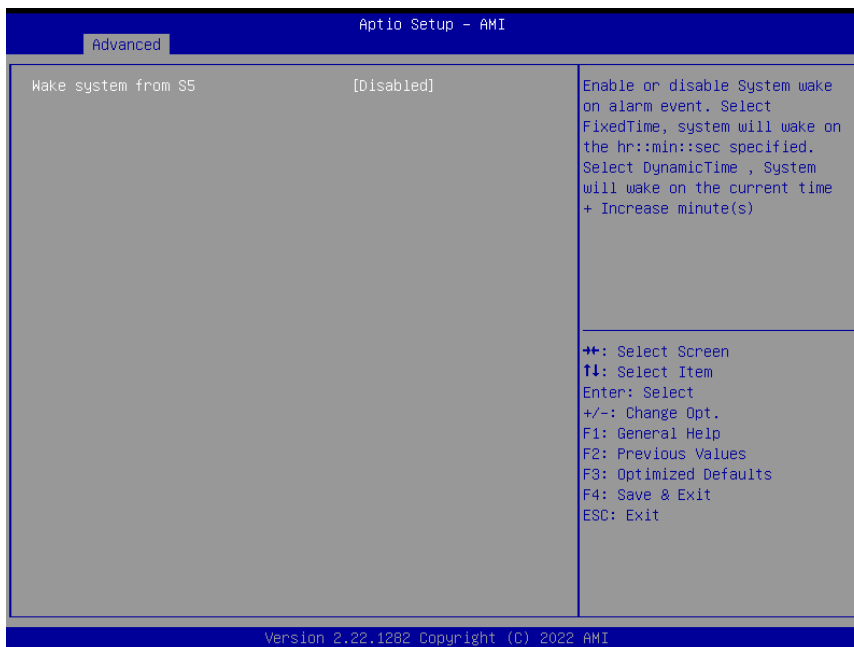

Item	Options	Description
Wake system from S5	Disabled[Default], Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).

3.6.2.9 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.



ECM-TGUC User's Manual


Item	Options	Description
USB transfer time-out	1 sec 5 sec 10 sec 20 sec [Default]	The time-out value for Control, Bulk, and Interrupt transfers.
Device reset time-out	10 sec 20 sec [Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
Device power-up delay	Auto [Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.
Mass Storage Devices	Auto [Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.

3.6.2.10 Network Stack Configuration




Item	Options	Description
Network Stack	Enabled Disabled [Default]	Enable/Disable UEFI Network Stack.


3.6.2.11 NVMe Configuration

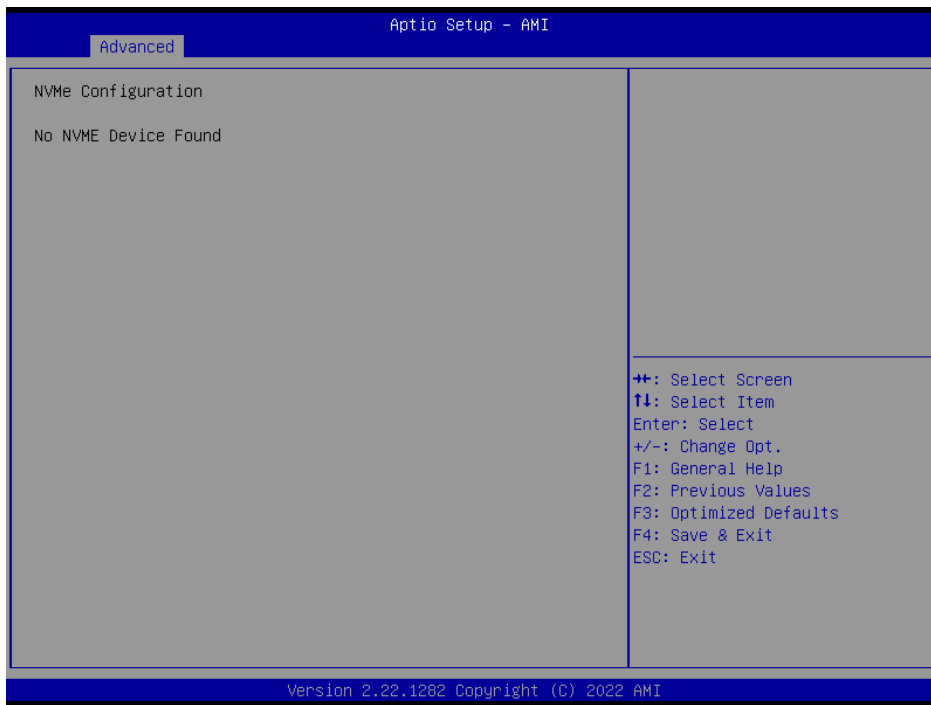

3.6.3 Chipset

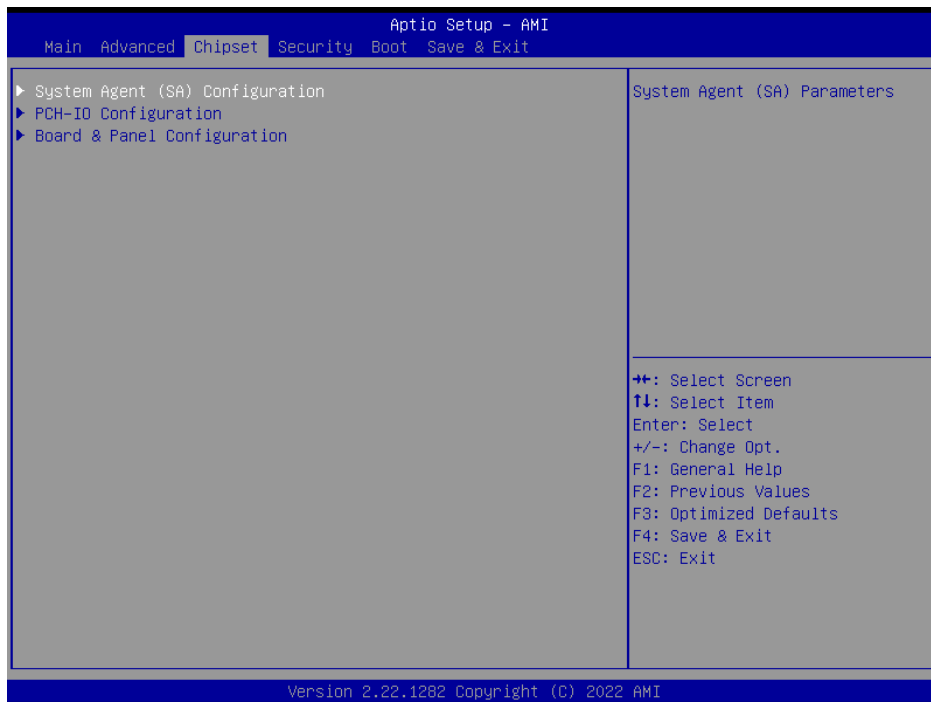


3.6.3.1 System Agent (SA) Configuration

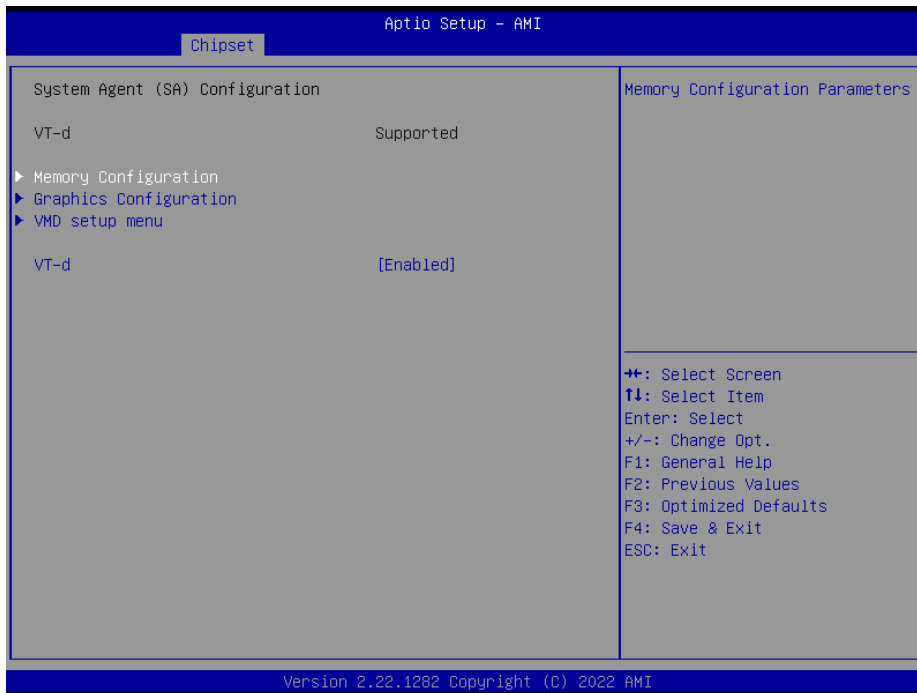


Item	Option	Description
VT-d	Enabled[Default] Disabled	VT-d capability.

3.6.3.1.1 Memory Configuration

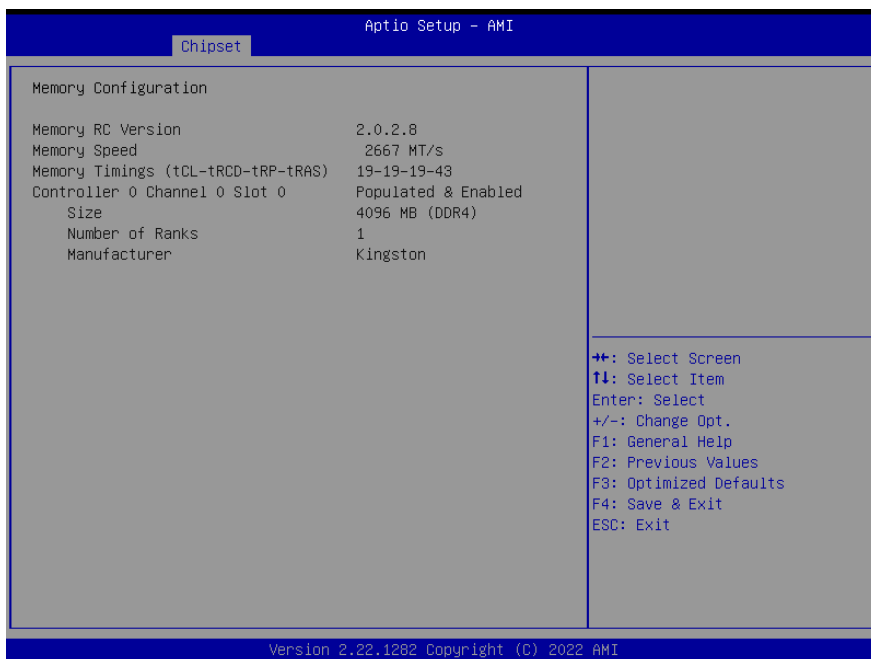


3.6.3.1.2 Graphics Configuration

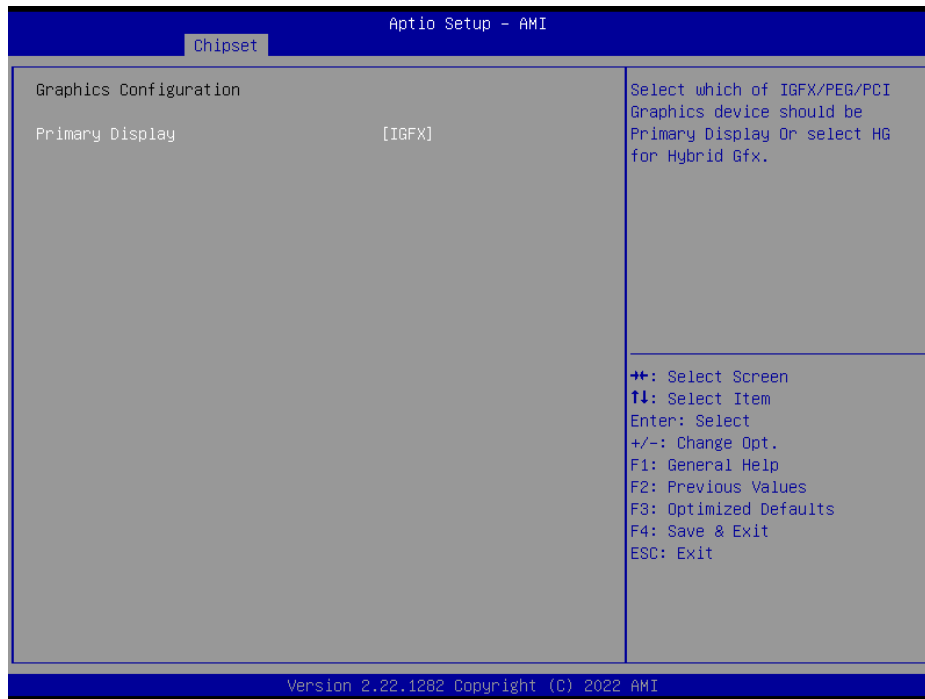

Item	Option	Description
Primary Display	Auto IGFX[Default]	Select which of IFGX/PEG/PCI Graphics device should be Primary Display Or select HG for Hybrid Gfx.

3.6.3.1.3 VMD setup menu

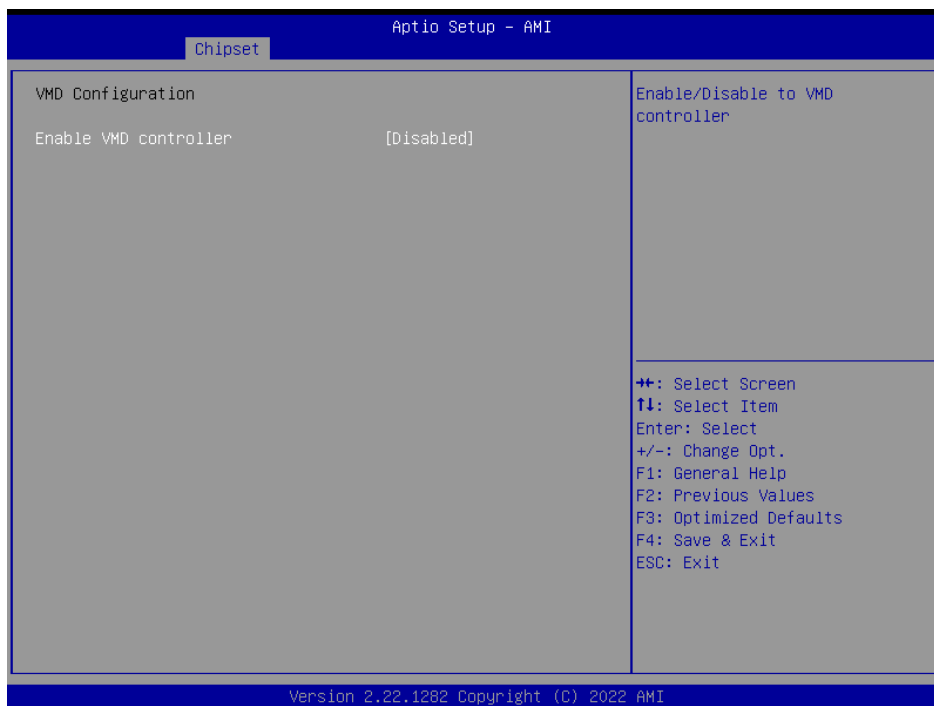

ECM-TGUC User's Manual


Item	Option	Description
Enable VMD controller	Enabled Disabled[Default]	Enable/Disable VMD controller.

3.6.3.2 PCH-IO Configuration



Item	Option	Description
PCH LAN Controller	Enabled[Default] Disabled	Enable/Disable onboard NIC.

3.6.3.2.1 PCI Express Configuration

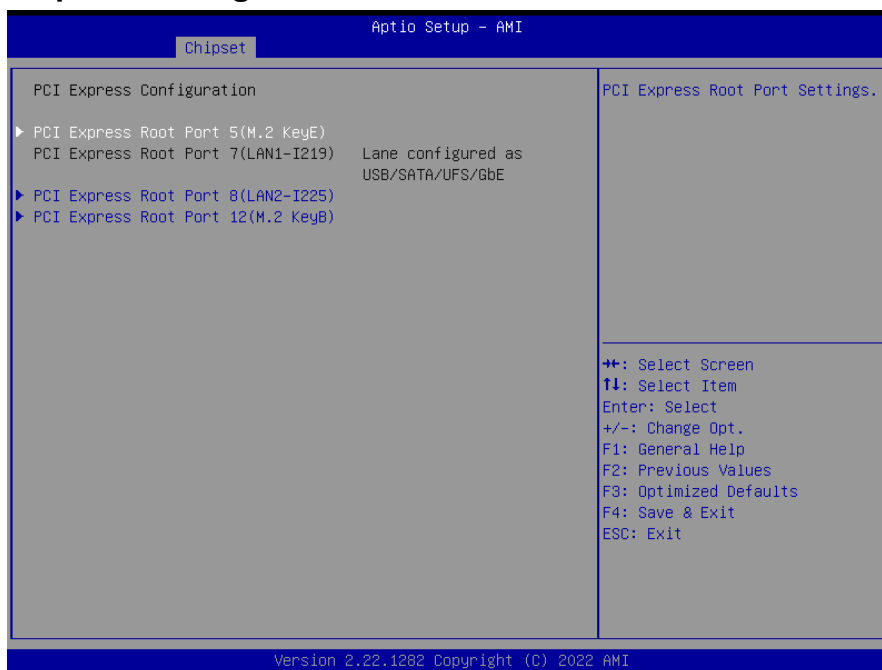

3.6.3.2.1.1 PCI Express Root Port 5(M.2 KeyE)



Item	Option	Description
PCI Express Root Port 5(M.2 KeyE)	Enabled[Default], Disabled	Control the PCI Express Root Port.
ASPM	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
L1 Substates	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
PCIe Speed	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

3.6.3.2.1.2 PCI Express Root Port 8(LAN2-I225)



Item	Option	Description
PCI Express Root Port 8(LAN2-I225)	Enabled[Default], Disabled	Control the PCI Express Root Port.
ASPM	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
L1 Substates	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
PCIe Speed	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

3.6.3.2.1.3 PCI Express Root Port 12(M.2 KeyB)



Item	Option	Description
PCI Express Root Port 12(M.2 KeyB)	Enabled[Default], Disabled	Control the PCI Express Root Port.
ASPM	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
L1 Substates	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
PCIe Speed	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.


ECM-TGUC User's Manual

3.6.3.2.2 SATA And RST Configuration



Item	Options	Description
SATA Controller(s)	Enabled[Default] Disabled,	Enable/Disable SATA Device.
Port 0	Enabled[Default] Disabled	Enable or Disable SATA Port.
Port 1	Enabled[Default] Disabled	Enable or Disable SATA Port.

3.6.3.2.3 HD Audio Configuration

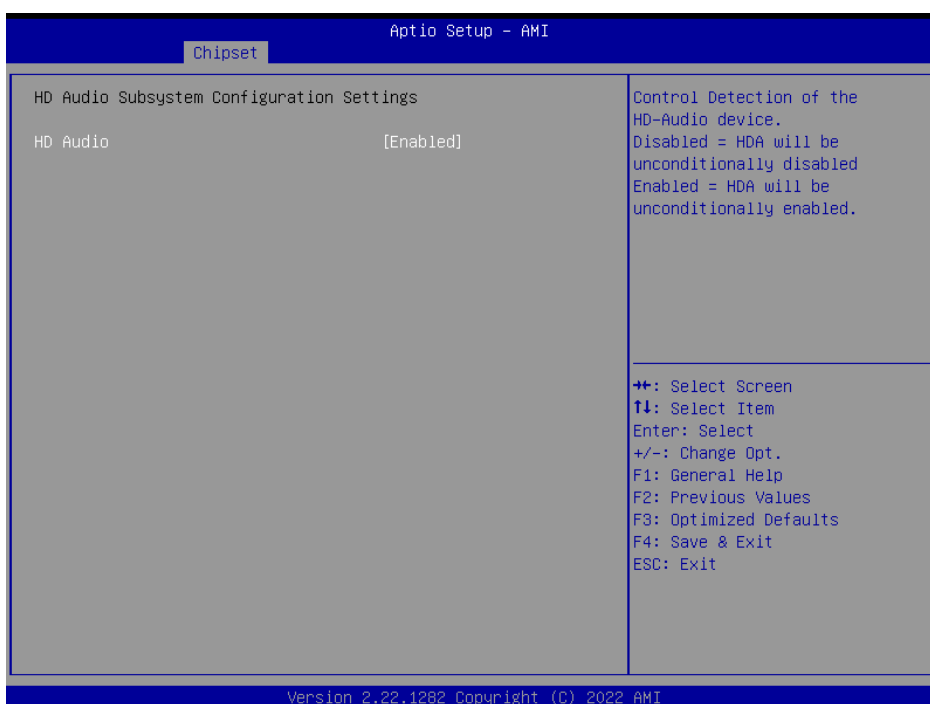

Item	Option	Description
HD Audio	Disabled Enabled[Default]	Control Detection of the HD-Audio device. Disable = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.

3.6.3.3 Board & Panel Configuration




Item	Option	Description
Active CH7511/7513	Disabled Enabled[Default]	<ol style="list-style-type: none"> If board used 7511, this option can active 7511 to output LVDS signal. If board used 7513, this option can active 7513 to output LVDS or eDP signal.
CH7511/7513 EDID Panel Option	1024x768 24/1[Default] 800x600 18/1 1024x768 18/1 1366x768 18/1 1024x600 18/1 1280x800 18/1 1920x1200 24/2 1920x1080 18/2 1280x1024 24/2 1440x900 18/2 1600x1200 24/2 1366x768 24/1 1920x1080 24/2 7513-eDP	<p>Panel EDID Option.</p> <ol style="list-style-type: none"> If board used 7511-to-LVDS, these options have total 14 LVDS resolution can be selected. If board used 7513, these options have total 13 LVDS resolution and one eDP can be selected.
ErP Function	Disabled[Default] Enabled	ErP Function (Deep S5).
PWR-On After PWR-Fail	Off[Default]	AC loss resume.


ECM-TGUC User's Manual

	On Last state	
Wake Up by Ring	Disabled Enabled[Default]	Wake Up by Ring from S3/S4/S5.
Watch Dog	Disabled[Default] 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
USB Standby Power	Disabled Enabled[Default]	Enable/Disabled USB Standby Power during S3/S4/S5.
M.2 KeyB 5G Workaround	Disabled[Default] Enabled	Enable/Disabled M.2 KeyB 5G Card Workaround.

3.6.3.3.1 SHOW DMI INFO

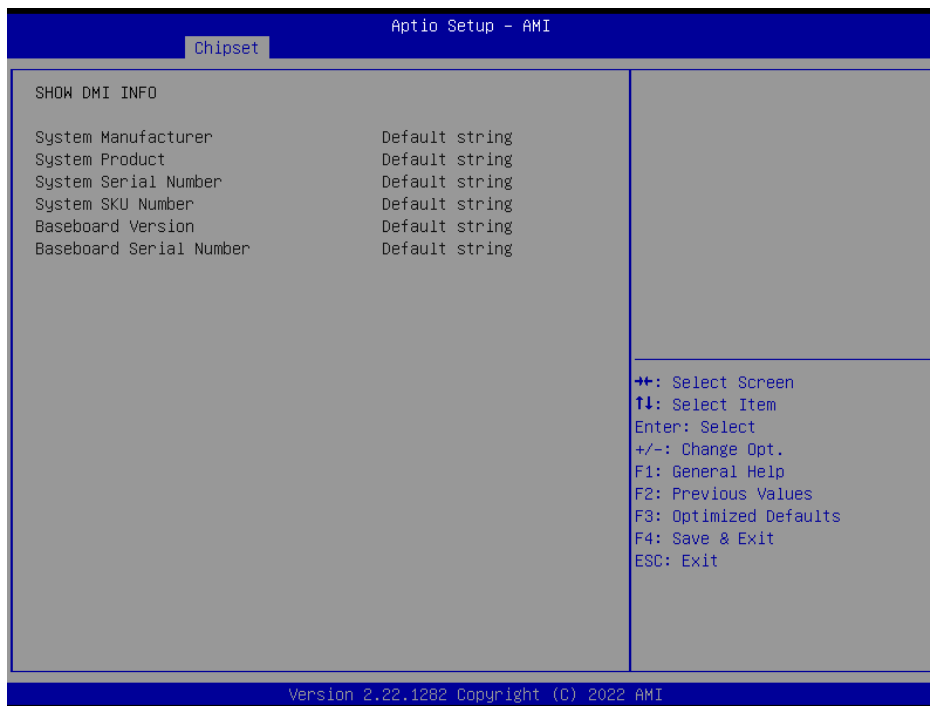

3.6.4 Security

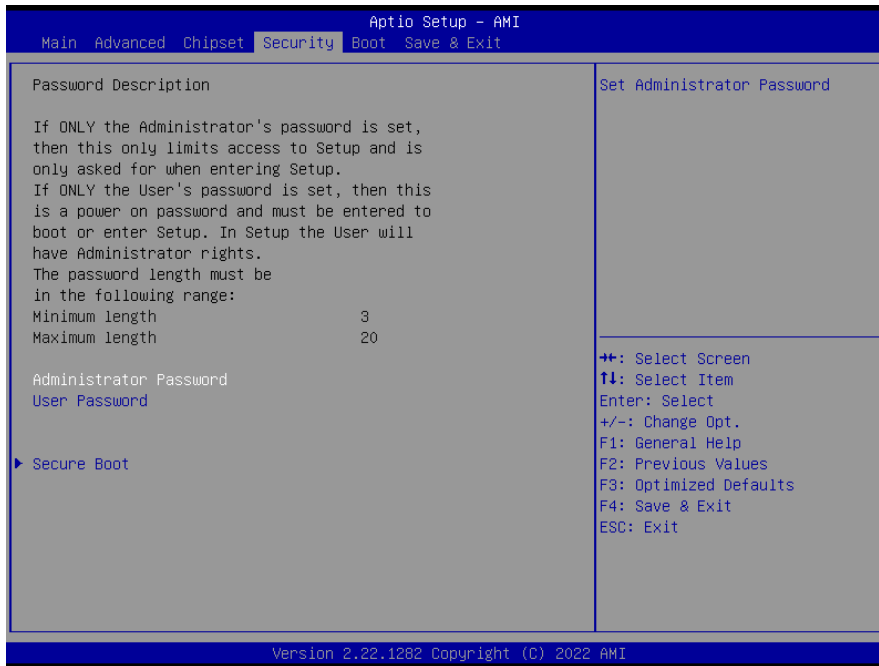

- **Administrator Password**


Set setup Administrator Password

- **User Password**

Set User Password


3.6.4.1 Secure Boot



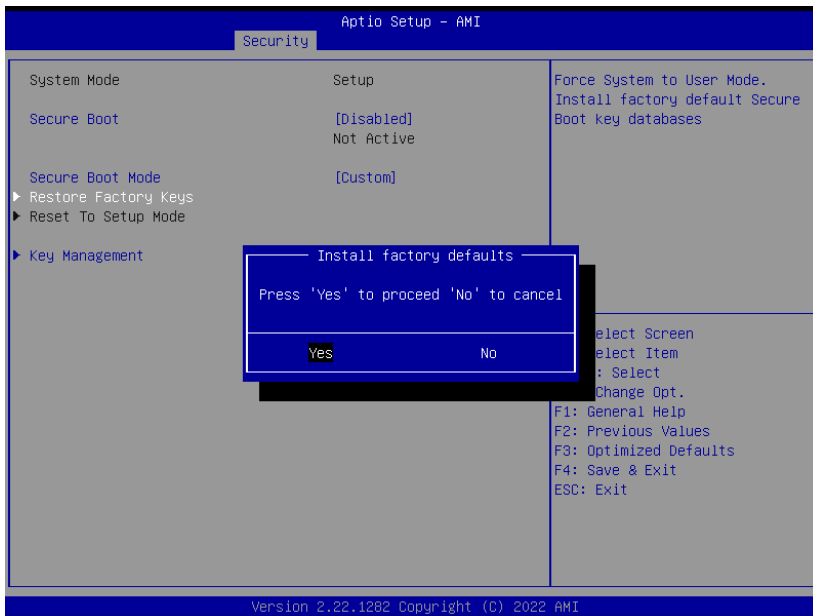


Item	Option	Description
Secure Boot	Disabled[Default] Enabled	Secure Boot feature is Active if Secure Boot is Enable, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.
Secure Boot Mode	Standard Custom[Default]	Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.

3.6.4.1.1 Key Management

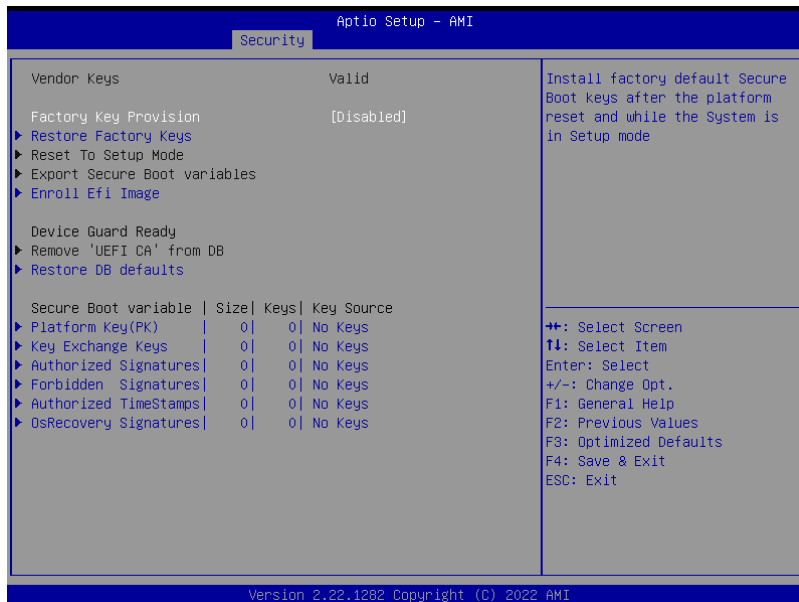



Item	Option	Description
Factory Key Provision	Disabled[Default] Enabled	Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

3.6.5 Boot

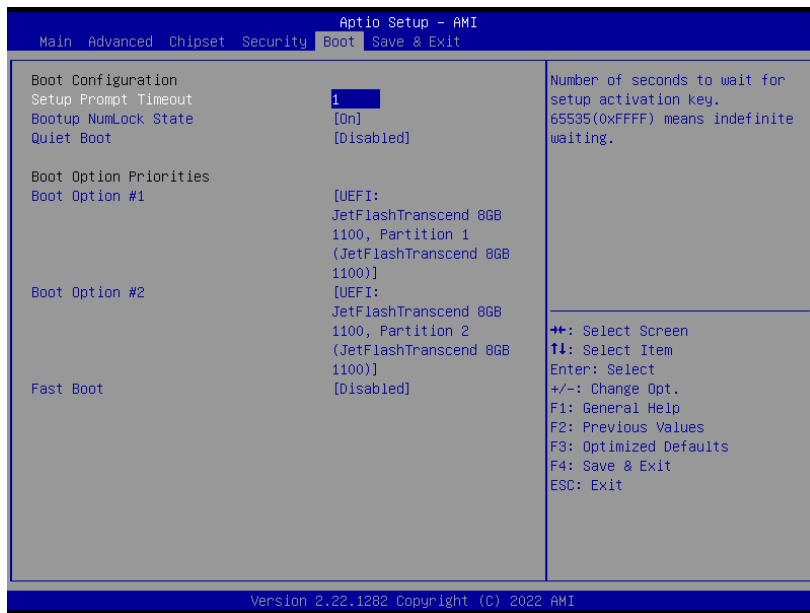

Item	Option	Description
Setup Prompt Timeout	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default] Off	Select the keyboard NumLock state
Quiet Boot	Disabled[Default] Enabled	Enables or disables Quiet Boot option
Fast Boot	Disabled[Default] Enabled	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
Boot Option #1/2	Set the system boot order.	

3.6.6 Save and exit

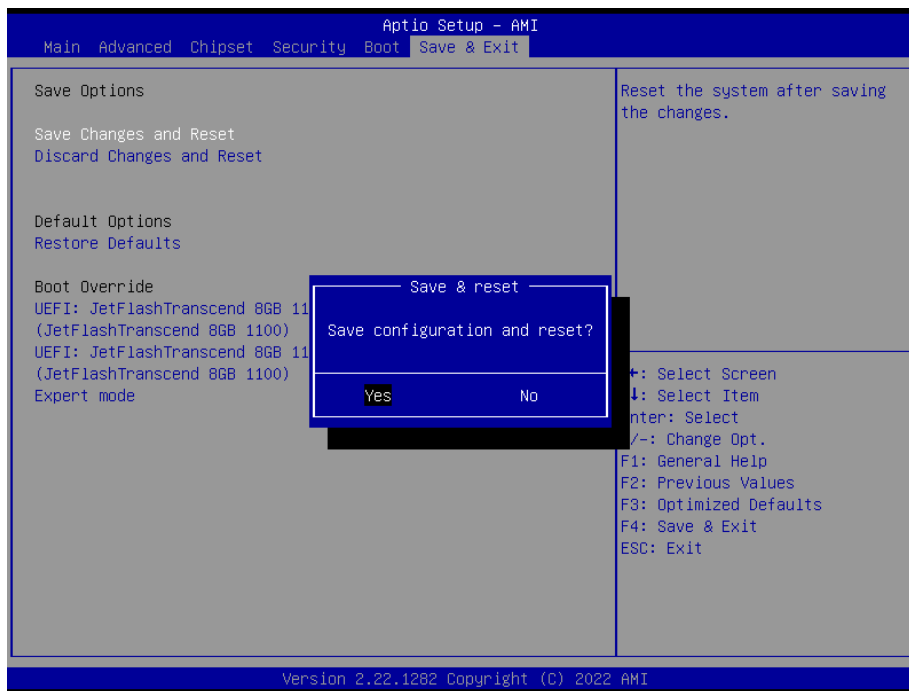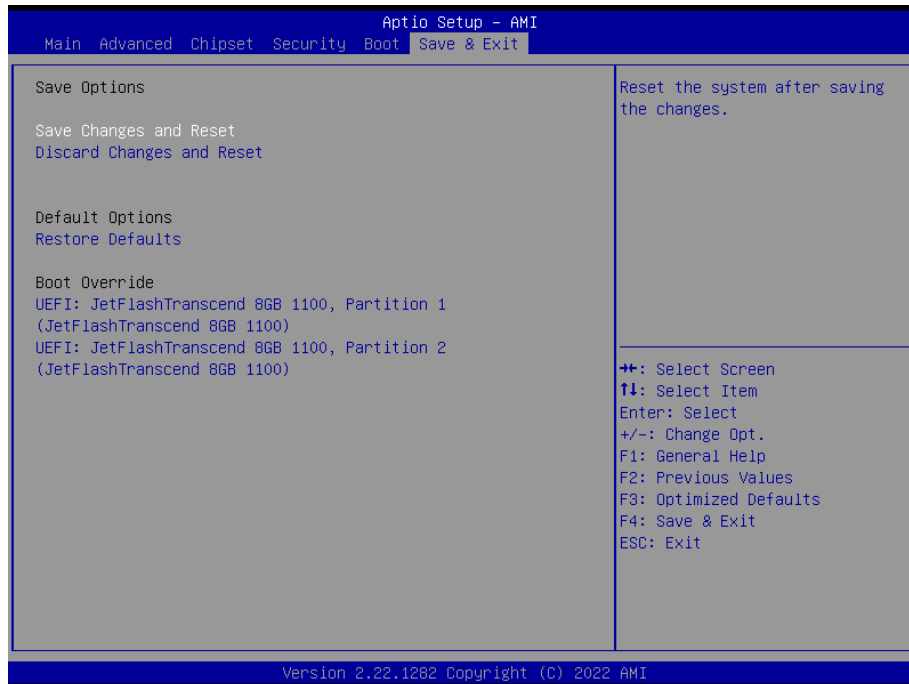

3.6.6.1 Save Changes and Reset

Reset the system after saving the changes.

3.6.6.2 Discard Changes and Reset

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

3.6.6.3 *Restore Defaults*

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

3.6.6.4 *Launch EFI Shell from filesystem device*

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

4. Drivers Installation



Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.


4.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

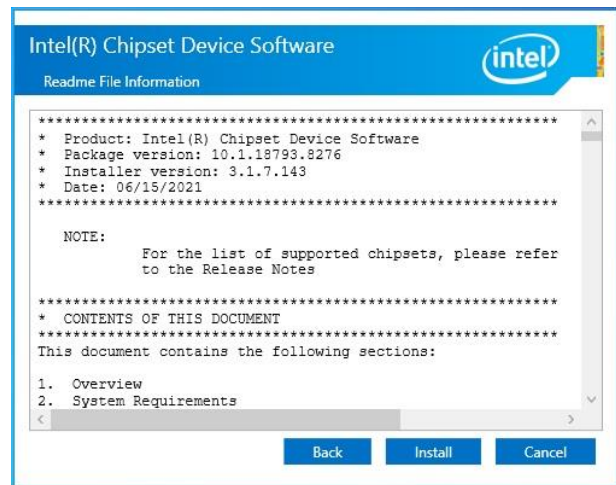

Step 3. Click Install.



Step1. Click Next.



Step 4. Complete setup.



Step 2. Click Accept.


4.2 Install VGA Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

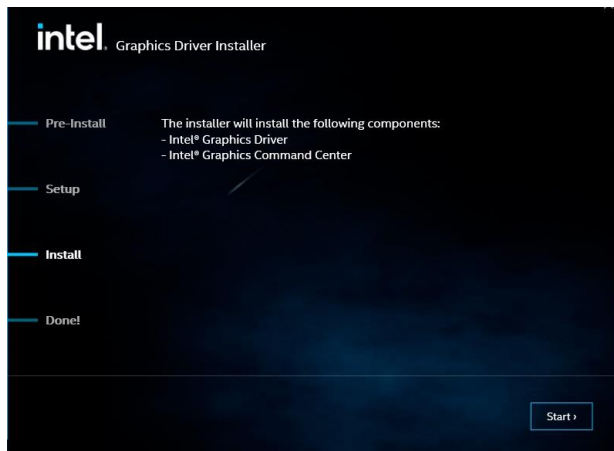


Step 3. Click Start.



Step 1. Click Begin installation.

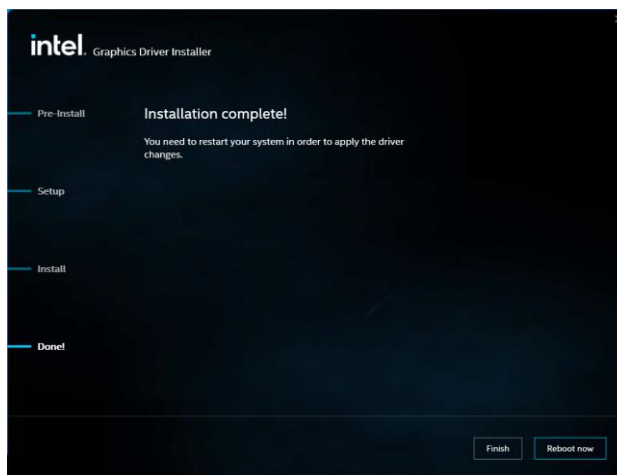

Step 4. Click Reboot now.

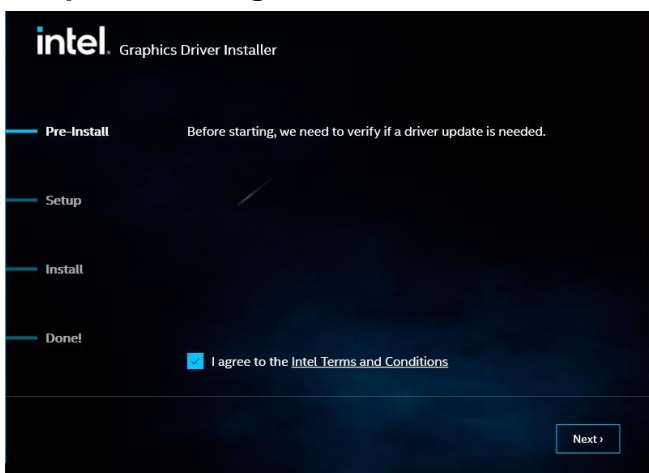

Step 2.


Click **Next** to accept license agreement.

4.3 Install ME Driver


All drivers can be found on the Avalue Official Website:
<http://www.avalue.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

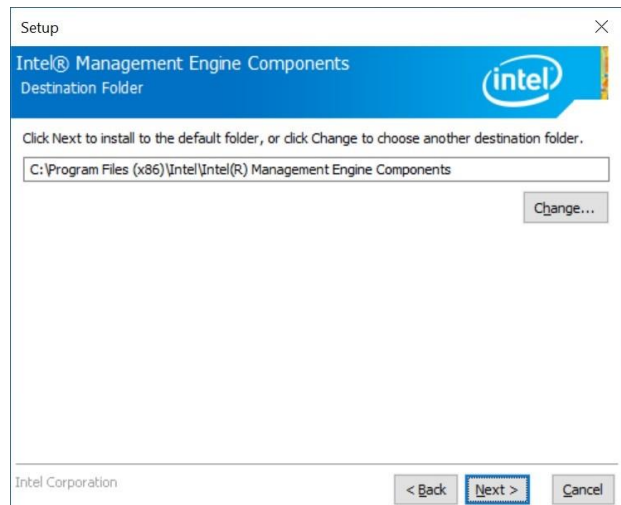

Step 3. Click Next.

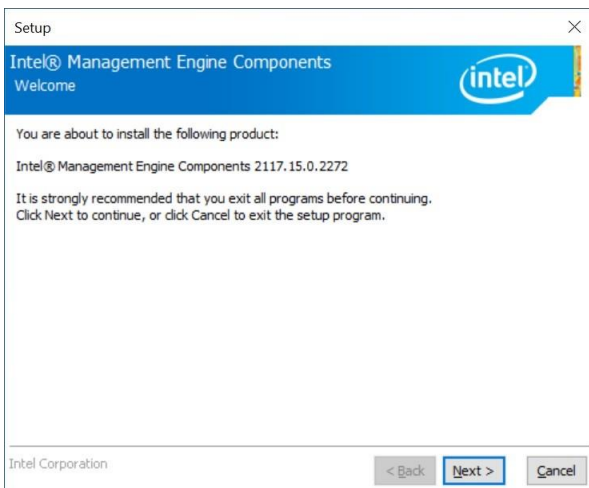

Step 1. Click Next to continue setup.

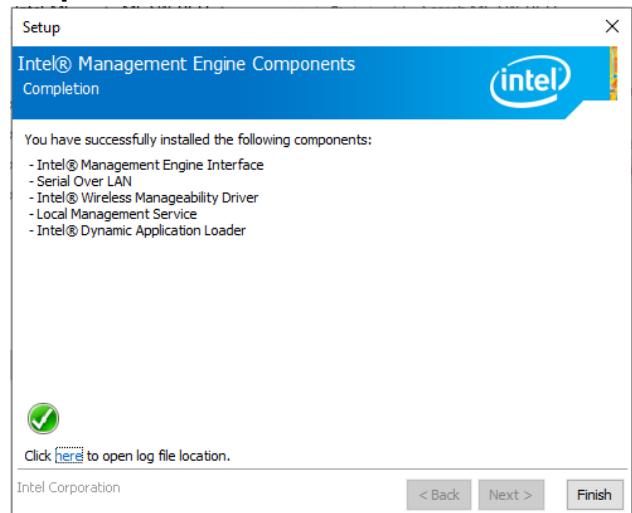

Step 4. Click Finish to complete setup.




Step 2. Click Next.

4.4 Install LAN Driver


All drivers can be found on the Avalue Official Website:
<http://www.avalu.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

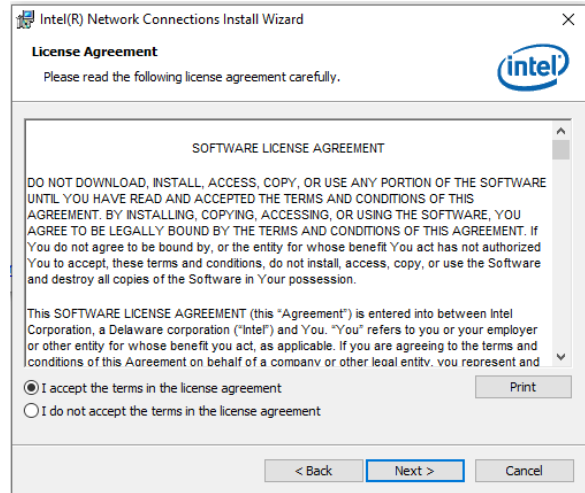


Step 3. Click Next.

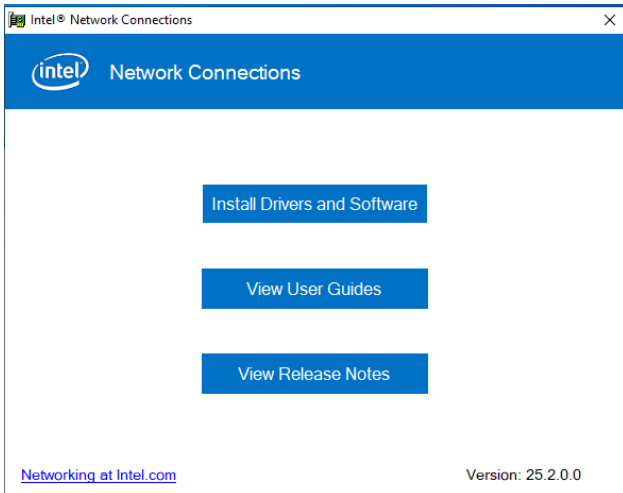


Step 1. Click Next to continue installation.

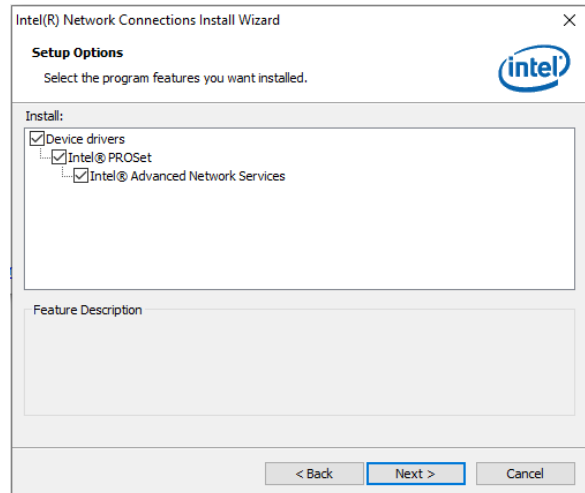


Step 4. Click Yes.

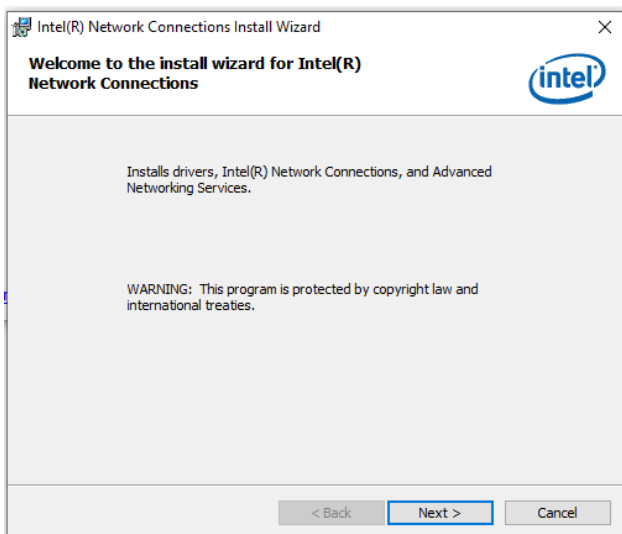

Step 2. Click Next.

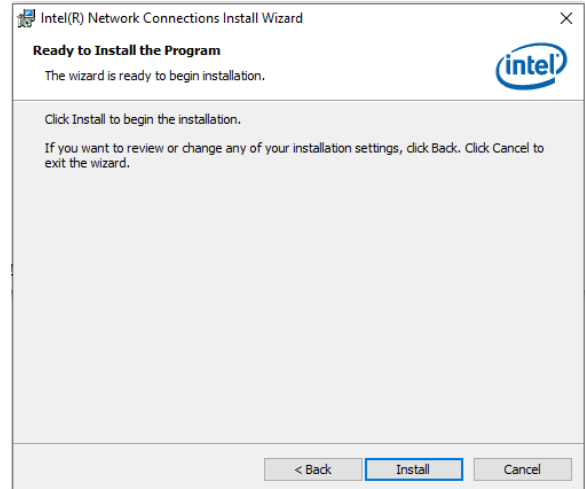

Step 5. Click Install.

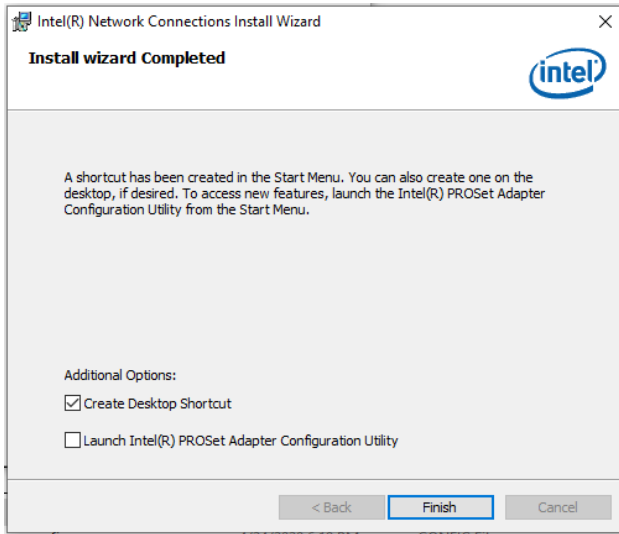

Step 6. Click **Finish** to complete setup.


4.5 Install Serial IO Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalu.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

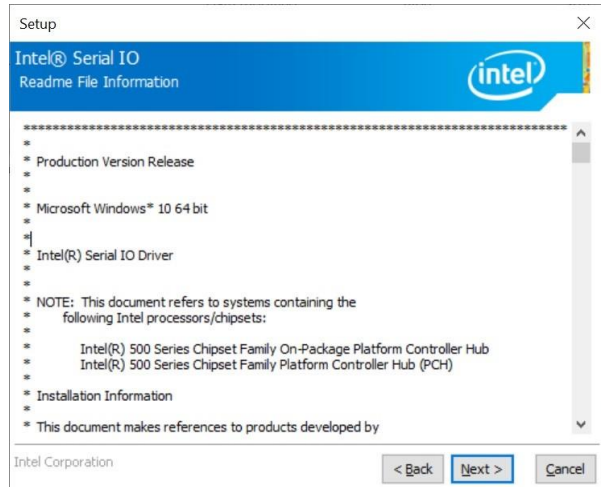

Step 3. Click Next.

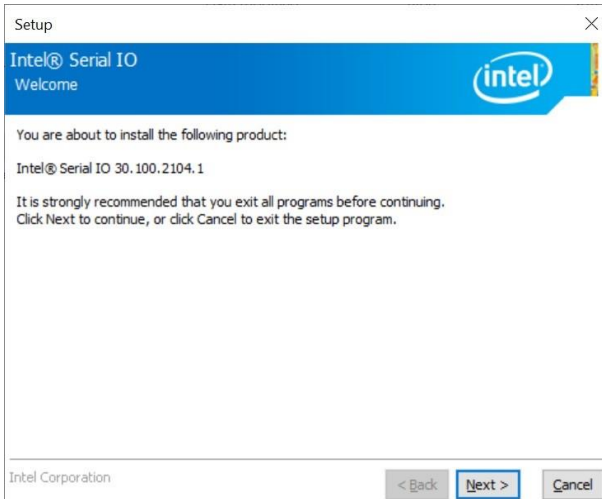

Step 1. Click Next to continue installation.

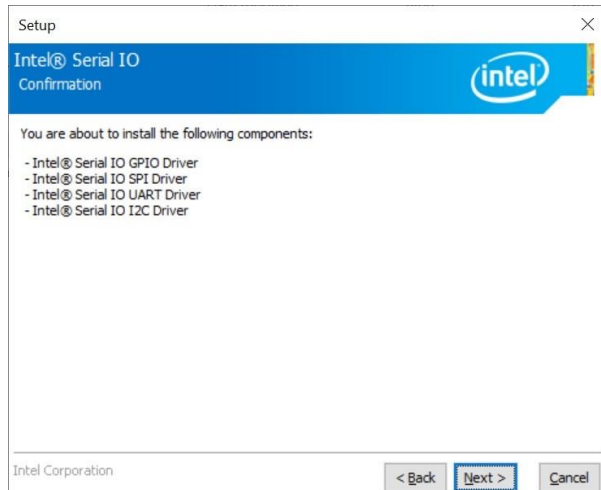

Step 4. Click Next.



Step 2. Click Next.



Step 5. Click Finish to complete setup.


4.6 Install Audio Driver (For Realtek ALC888S)

All drivers can be found on the Avalue Official Website:


<http://www.avalu.com.tw>.



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

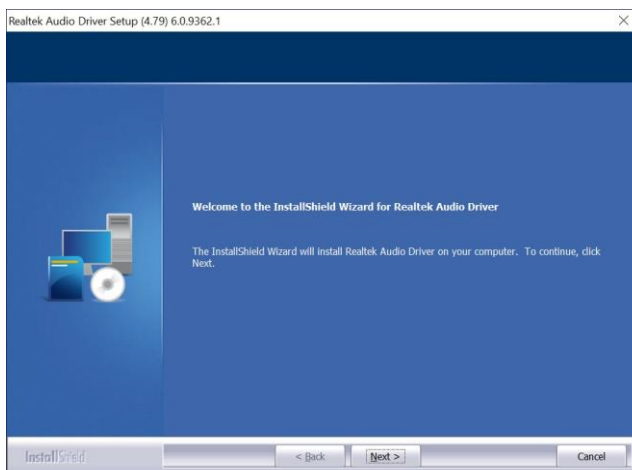

Step 1. Click **Next** to continue setup.

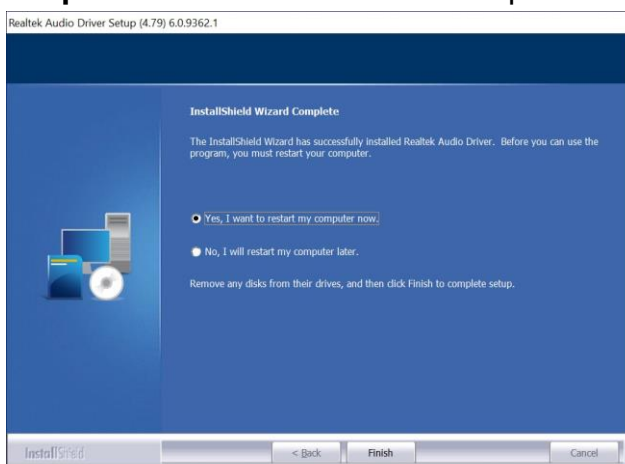

Step 2. Click **Finish** to complete the setup.


4.7 Install Realtek Audio Control Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com.tw>.



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

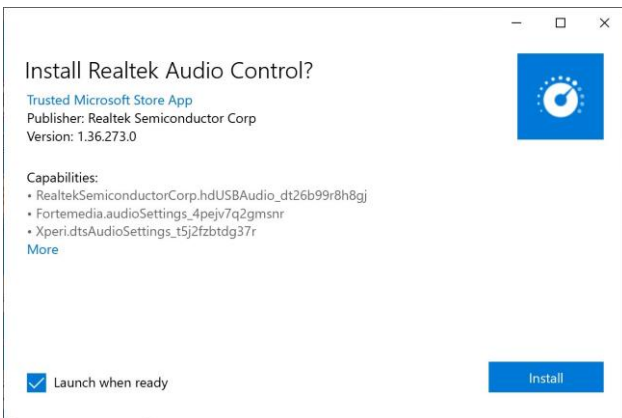




Step 1. Click Install.

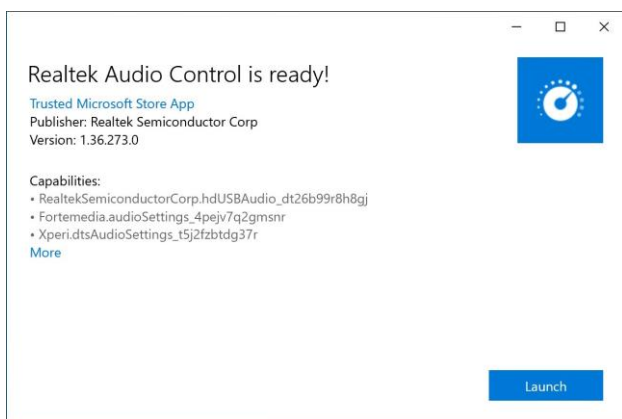

Step 2. Complete setup.

5. Mechanical Drawing

 ECM-TGUC User's Manual

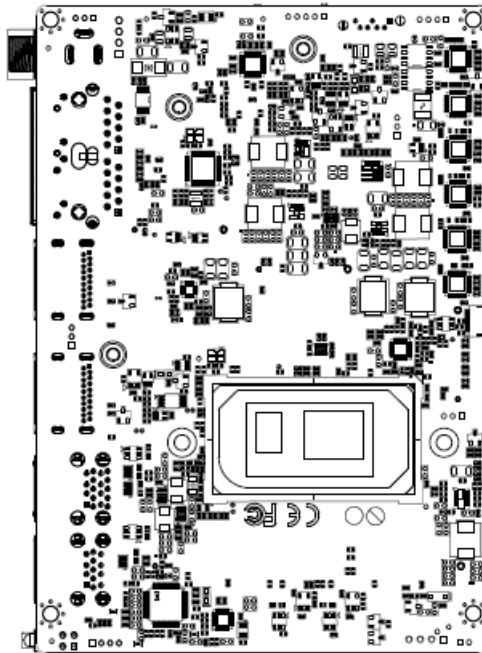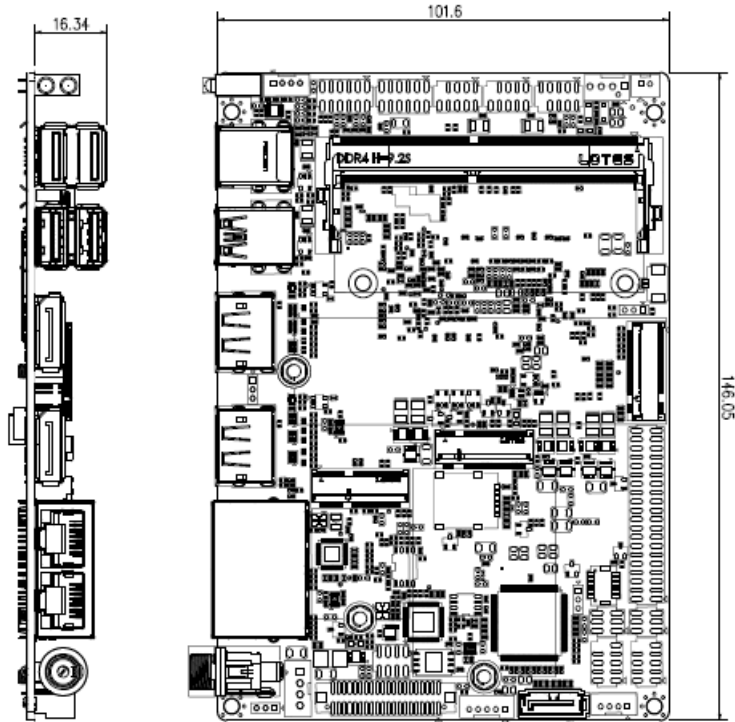

Unit: mm