

# ECM-ADLS

3.5" Alder Lake-S Micro Module

## User's Manual

---

1<sup>st</sup> Ed –21 June 2023

## FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

## Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

## Copyright Notice

Copyright © 2023 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

## Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

## Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that

these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

### Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

### A Message to the Customer

#### *Avalue Customer Services*

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

#### *Technical Support*

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

## ECM-ADLS User's Manual

### *Product Warranty*

Avalue warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Avalue, or which have been subject to misuse, abuse, accident or improper installation. Avalue assumes no liability under the terms of this warranty as a consequence of such events. Because of Avalue's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If any of Avalue's products is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details. If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU type and speed, Avalue's products model name, hardware & BIOS revision number, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information available.
3. If your product is diagnosed as defective, obtain an RMA (return material authorization) number from your dealer. This allows us to process your good return more quickly.
4. Carefully pack the defective product, a complete Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

# Content

<b>1. Getting Started</b> .....	<b>8</b>
1.1 Safety Precautions .....	8
1.2 Packing List.....	8
1.3 Document Amendment History .....	9
1.4 Manual Objectives.....	10
1.5 System Specifications .....	11
1.6 Architecture Overview—Block Diagram .....	15
<b>2. Hardware Configuration</b> .....	<b>16</b>
2.1 Product Overview.....	17
2.2 Jumper and Connector List.....	18
2.3 Setting Jumpers & Connectors .....	20
2.3.1 Multi-function select (SW1) .....	20
2.3.2 LCD inverter backlight connector (JBKL1).....	21
2.3.3 CPU fan connector (JCPU_FAN1).....	21
2.3.4 Serial port 2 connector (JCOM2) .....	22
2.3.5 General purpose I/O connector (JDIO1) .....	23
2.3.6 Power connector (PWR1).....	23
2.3.7 LVDS connector (JLVDS1).....	24
2.3.8 USB2.0 connector (JUSB1).....	25
2.3.9 USB2.0 connector (JUSB2).....	25
2.3.10 Front Panel connector (JFP1).....	26
2.3.11 PC Buzzer connector (JBZ1) .....	26
2.3.12 SPI connector (JSPI1) .....	27
2.3.13 ESPI connector (JESPI1).....	27
2.3.14 EC Debug connector (JEC1) .....	28
2.3.15 Audio connector (JAUDIO1) .....	28
2.3.15.1 Signal Description – Audio connector (JAUDIO1).....	28
2.3.16 Battery connector (JBAT1).....	29
<b>3. BIOS Setup</b> .....	<b>30</b>
3.1 Introduction .....	31
3.2 Starting Setup .....	31
3.3 Using Setup .....	32
3.4 Getting Help.....	33
3.5 In Case of Problems.....	33
3.6 BIOS setup.....	34
3.6.1 Main Menu.....	34

## ECM-ADLS User's Manual

3.6.1.1	System Language.....	35
3.6.1.2	System Date .....	35
3.6.1.3	System Time.....	35
3.6.2	Advanced Menu .....	35
3.6.2.1	CPU Configuration.....	36
3.6.2.1.1	Performance-core Information.....	37
3.6.2.1.2	CPU – Power Management Control .....	37
3.6.2.2	PCH-FW Configuration .....	38
3.6.2.2.1	AMT Configuration.....	38
3.6.2.2.2	Firmware Update Configuration.....	39
3.6.2.2.3	PTT Configuration.....	39
3.6.2.3	Trusted Computing .....	40
3.6.2.4	APCI Settings .....	40
3.6.2.5	Super IO Configuration .....	41
3.6.2.5.1	Serial Port 1 Configuration .....	42
3.6.2.5.2	Serial Port 2 Configuration .....	42
3.6.2.6	HW Monitor.....	43
3.6.2.7	S5 RTC Wake Settings.....	44
3.6.2.8	Serial Port Console Redirection .....	44
3.6.2.9	USB Configuration .....	45
3.6.2.10	Network Stack Configuration .....	46
3.6.2.11	NVMe Configuration .....	46
3.6.3	Chipset.....	47
3.6.3.1	System Agent (SA) Configuration.....	47
3.6.3.1.1	Memory Configuration .....	48
3.6.3.1.2	Graphics Configuration .....	48
3.6.3.1.3	DMI/OPI Configuration .....	49
3.6.3.2	PCH-IO Configuration.....	49
3.6.3.2.1	PCI Express Configuration .....	50
3.6.3.2.2	SATA Configuration .....	54
3.6.3.2.3	HD Audio Configuration .....	55
3.6.3.3	Board Configuration.....	55
3.6.4	Security.....	57
3.6.4.1	Secure Boot.....	58
3.6.5	Boot .....	58
3.6.6	Save and exit.....	59
3.6.6.1	Save Changes and Reset.....	60
3.6.6.2	Discard Changes and Reset.....	60
3.6.6.3	Restore Defaults .....	60
3.6.6.4	Launch EFI Shell from filesystem device .....	60

<b>4. Drivers Installation.....</b>	<b>61</b>
4.1 Install Chipset Driver .....	62
4.2 Install VGA Driver.....	63
4.3 Install ME Driver .....	64
4.4 Install LAN Driver .....	65
4.5 Install Serial IO Driver .....	67
4.6 Install Audio Driver (For Realtek ALC888S).....	68
<b>5. Mechanical Drawing .....</b>	<b>69</b>

# 1. Getting Started

## 1.1 Safety Precautions

### Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

### Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

## 1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x 3.5" ECM-ADLS Micro Module
- 1 x CPU cooler
- 1 x Cable set contains the followings:
  - 1 x Power Cable (6-pin)
  - 1 x Flat Cable 9P(M)-PHD (10P/2.0mm)



---

If any of the above items is damaged or missing, contact your retailer.

---



### 1.3 Document Amendment History

Revision	Date	By	Comment
1 <sup>st</sup>	June 2023	Avalue	Initial Release

### 1.4 Manual Objectives

This manual describes in details Avalue Technology ECM-ADLS Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to set up ECM-ADLS or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors regarding this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

## 1.5 System Specifications

System	
<b>CPU</b>	Intel® 12th Gen Core™ i9/i7/i5/i3/Pentium®/Celeron® Processor, supports LGA 1700 CPU Up to 35W Max Intel® 13th Gen Core™ i5/i3/Pentium®/Celeron® Processor, supports LGA 1700 CPU Up to 35W Max
<b>BIOS</b>	AMI uEFI BIOS, 256Mbit SPI Flash ROM
<b>System Chipset</b>	Intel® R680E/Q670E/H610E chipsets (ECC support to R680E only)
<b>I/O Chip</b>	EC ITE IT5782
<b>System Memory</b>	1 x 262-pin DDR5 4800MHz SO-DIMM socket, support up to 32GB
<b>Watchdog Timer</b>	H/W Reset, 1sec. – 65535sec./min.1sec. or 1min. step
<b>H/W Status Monitor</b>	CPU temperature monitoring Voltages monitoring CPU fan speed control
<b>TPM</b>	fTPM
<b>iAMT</b>	Yes, by CPU (i9/i7/i5), note: PCH H610E does not support.
Expansion Slot	
<b>M.2</b>	1 x M.2 (2230) E-Key, support Wi-Fi module, support 2x PCIe x1 Gen 3, USB 2.0 1 x M.2 (2280) M-Key, support PCI-e x 4 Gen 3 NVMe or SATA device
Storage	
<b>M.2</b>	1 x M.2 (2280) M-Key, support PCI-e x 4 Gen 3 NVMe or SATA device
Edge I/O	
<b>COM</b>	COM 1: 1x DB9 connector support RS232/422/485 by BIOS setting
<b>LAN</b>	2 x 2.5 Gigabit Ethernet
<b>USB 3.2</b>	4 x USB 3.2 Gen 2 at I/O (note: H610E USB 3.2 Support 2x Gen 2 & 2x Gen 1)
<b>DP</b>	1 x DP++
<b>HDMI</b>	1 x HDMI 2.0
Onboard I/O	
<b>COM</b>	COM 2 : 1 x 2 x 5 pin, pitch 2.00mm connector support RS232/422/485 by BIOS setting
<b>USB 2.0</b>	2 x 2 x 5 pin pitch 2.00mm connector for 4 x USB 2.0
<b>GPIO</b>	1 x 2 x 6 pin, pitch 1.27mm connector for GPIO: 8bits
<b>CPU/System FAN</b>	1 x 1 x 4 pin, pitch 2.54mm CPU fan connector with smart fan function supported
<b>Buzzer</b>	1 x 2 pin pitch 2.00mm Buzzer header
<b>Front Panel</b>	1 x 2 x 5 pin, pitch 2.00mm connector for front panel
<b>RTC Battery</b>	1 x 2 Pin Pitch 1.25mm horizontal type battery connector SMD type (CR2450 Battery)

## ECM-ADLS User's Manual

<b>AT/ATX Selector</b>	1 x 2 x 2 SMT switch (SW1 : Pin 1~4)
<b>Clear CMOS</b>	1 x 2 x 2 SMT switch (SW1 : Pin 2~3)
<b>LVDS</b>	1 x 2 x 20 pin, pitch 1.25mm connector for LVDS or eDP
<b>LCD Inverter</b>	1 x 1 x 5 pin, pitch 2.00mm Wafer connector for LCD inverter backlight (5V/12V)
<b>BIOS SPI</b>	1 x 2 x 4pin, pitch 2.00mm connector for BIOS SPI
<b>eSPI</b>	1 x 2 x 6 pin, pitch 1.27mm connector for eSPI (debug 80 port)
<b>EC Debug</b>	1 x 1 x 3pin, pitch 2.00mm connector for EC Debug
<b>Audio</b>	1 x 2 x 6 pin, pitch 2.00mm connector for front Audio
<b>DC-Input</b>	1 x 2 x 3 pin, pitch 4.2mm connector for +12V DC in
<b>Display</b>	
<b>Graphic Chipset</b>	Intel® 12th Generation CPU integrated
<b>Spec. &amp; Resolution</b>	<ul style="list-style-type: none"> <li>● 1 x DP 1.4b : 4096 x 2304@60 Hz, support DP++</li> <li>● 1 x HDMI 2.0 : 4096 x 2304@60 Hz</li> <li>● 1 x LVDS: 1920 x 1080 Dual channel 18/24-bits LVDS (Chrontel CH7513A-BF eDP to LVDS) or 1 x eDP 1920 x 1080@60Hz (2 Lanes), default LVDS</li> </ul> <p>Note: JLVD1 Support 1 x LVDS or 1 x eDP, share the same connector</p>
<b>Multiple Display</b>	Triple display
<b>Audio</b>	
<b>Audio Codec</b>	Realtek ALC888S HD Audio Decoding Controller
<b>Ethernet</b>	
<b>LAN Chipset</b>	2 x Intel® i226-LM 2.5 Gigabit Controller
<b>LAN Spec.</b>	2 x 2.5 Gigabit Ethernet
<b>Mechanical &amp; Environmental Specification</b>	
<b>Power Requirement</b>	DC in +12V Note: Only use DC IN 12V for ECM-ADLS, please do not use Switching Power Supply.
<b>ACPI</b>	Single power ATX Support S0, S3, S4, S5 ACPI 6.1 Compliant
<b>Power Mode</b>	AT / ATX mode Switchable Through Jumper
<b>Operating Temp.</b>	0~60°C (32~140°F) with 0.5m/s air flow
<b>Storage Temp.</b>	-40~ +75°C
<b>Operating Humidity</b>	40°C @ 95% Relative Humidity, Non-condensing
<b>Size (L x W)</b> (Please consult product engineers for the production feasibility if the size is larger than	5.7" x 4" (146mm x 101mm)

<p>410x360mm or smaller than 80x70mm)</p>	
<p><b>Weight</b></p>	<p>0.40kg</p>
<p><b>Vibration Test</b></p>	<p><u>Package Vibration Test</u>  Reference IEC60068-2-64 Testing procedures  Test Fh: Vibration broadband random Test  1. PSD: 0.026G<sup>2</sup>/Hz, 2.16 Grms  2. Non-operation mode  3. Test Frequency: 5-500Hz  4. Test Axis: X,Y and Z axis  5. 30 min. per each axis  6. IEC 60068-2-64 Test:Fh</p> <p><u>Random Vibration Operation</u>  Reference IEC60068-2-64 Testing procedures  Test Fh : Vibration broadband random Test  1. PSD: 0.00454G<sup>2</sup>/Hz, 1.5 Grms  2. Operation mode  3. Test Frequency : 5-500Hz  4. Test Axis : X,Y and Z axis  5. 30 minutes per each axis  6. IEC 60068-2-64 Test:Fh</p> <p><u>Random Vibration Non Operation</u>  Reference IEC60068-2-64 Testing procedures  Test Fh : Vibration broadband random Test  1. PSD: 0.01818G<sup>2</sup>/Hz, 3.0 Grms  2. Non Operation mode  3. Test Frequency : 5-500Hz  4. Test Axis : X,Y and Z axis  5. 30 minutes per each axis  6. IEC 60068-2-64 Test:Fh</p>
<p><b>Drop Test</b></p>	<p><u>Packing Drop</u>  Reference ISTA 2A, Method : IEC-60068-2-32 Test: Ed  Drop Test  1 One corner, three edges, six faces  2 ISTA 2A, IEC-60068-2-32 Test:Ed</p>




**Note:** Specifications are subject to change without notice.

### **User condition suggestion:**

1. Please only use DC IN 12V for ECM-ADLS, please do not use Switching Power Supply.
2. JLVDS1 connector support 1 x 2CH LVDS or 1x eDP, by BIOS select to eDP and use with eDP panel.

## 1.6 Architecture Overview—Block Diagram

The following block diagram shows the architecture and main components of ECM-ADLS

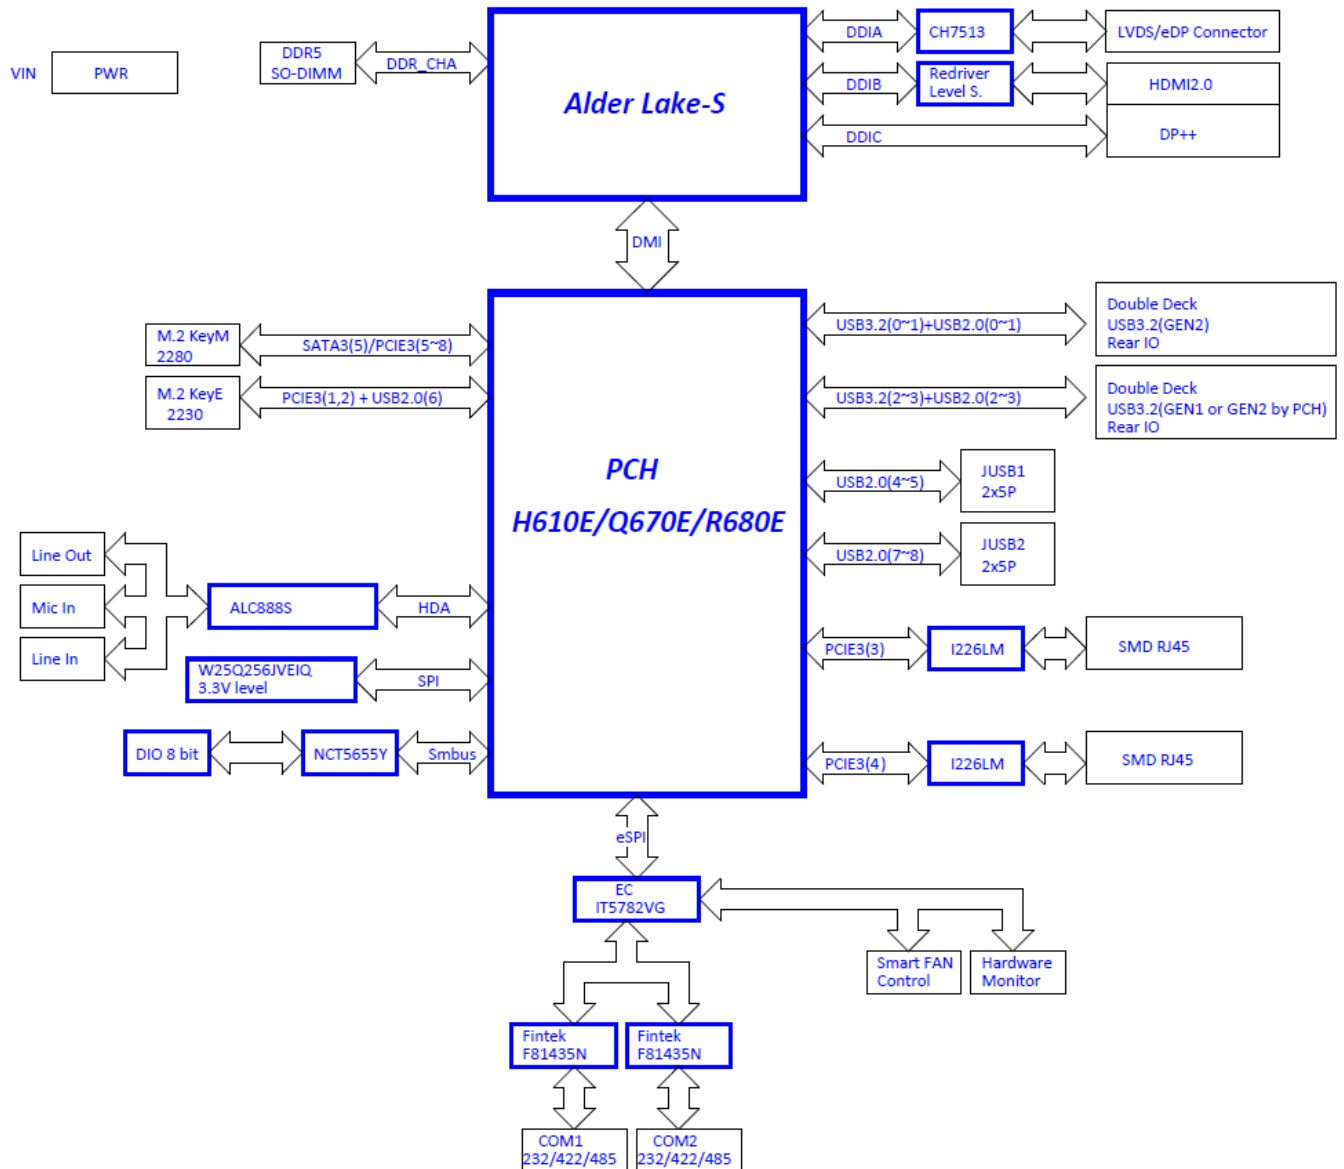


# 2. Hardware Configuration

---




## 2.1 Product Overview

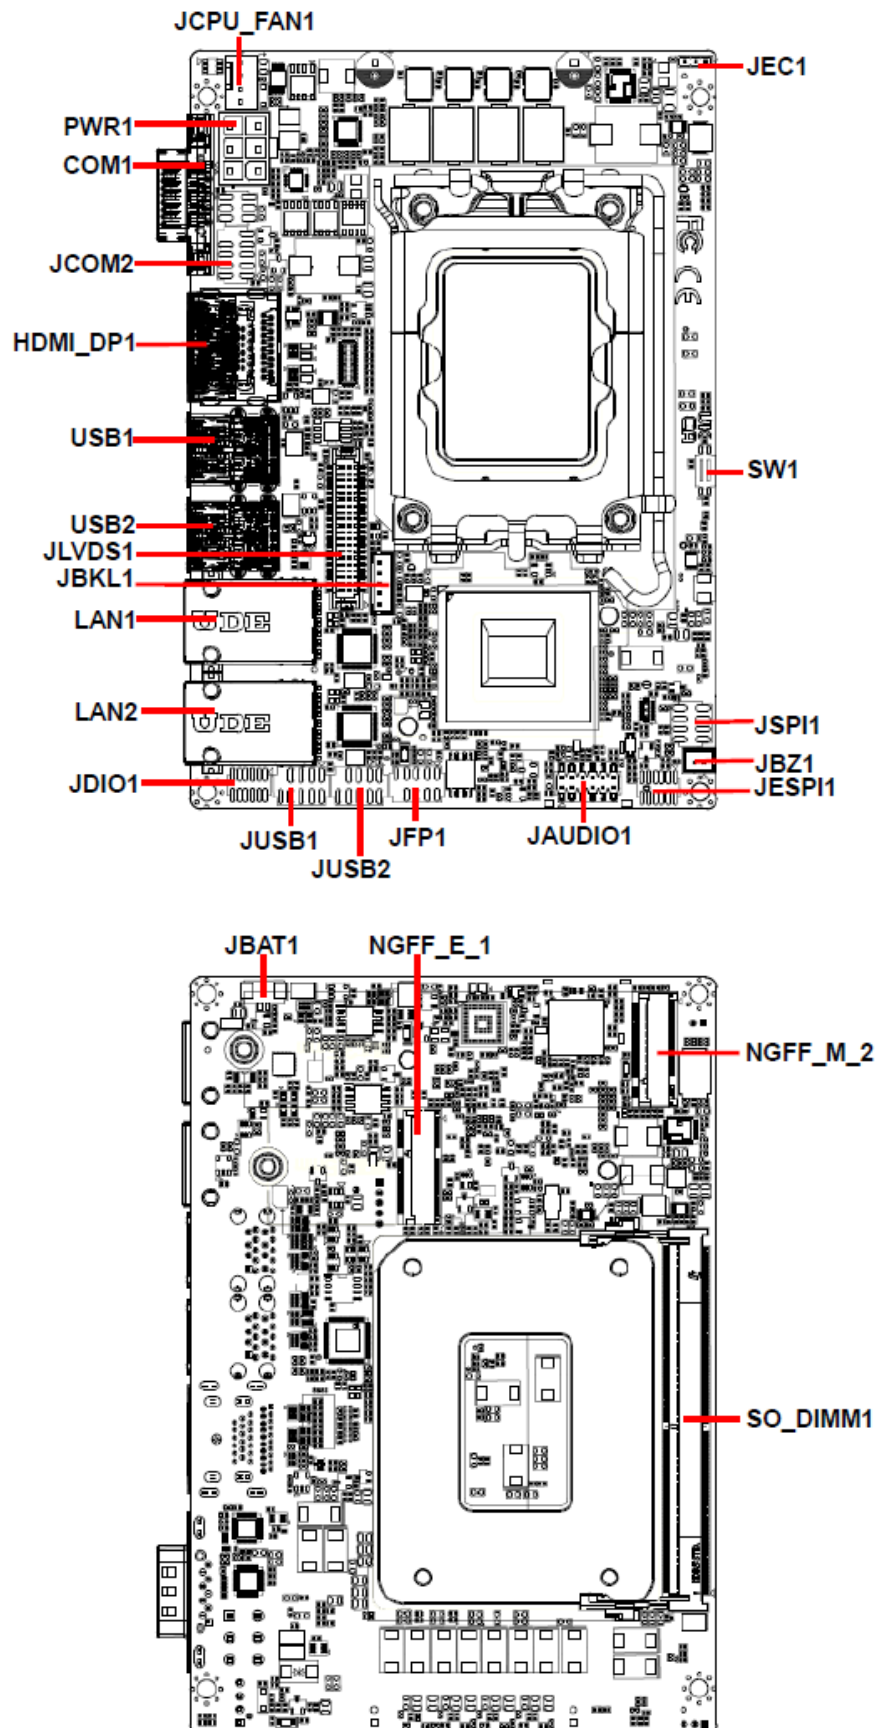

## 2.2 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

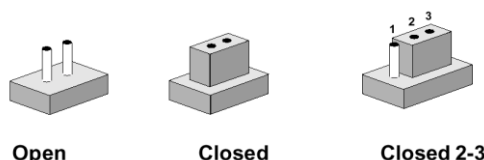

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board’s jumpers and connectors.

### Jumpers

Label	Function	Note
SW1	Multi-function select	


### Connectors

Label	Function	Note
JBKL1	LCD inverter backlight connector	5 x 1 wafer, pitch 2.00mm Matching Connector: JST PHR-5
JCPU_FAN1	CPU fan connector	4 x 1 wafer, pitch 2.54mm
COM1	Serial Port 1 connector	
JCOM2	Serial Port 2 connector	5 x 2 header, pitch 2.00mm
JDIO1	General purpose I/O connector	6 x 2 wafer, pitch 1.27mm
JLVDS1	LVDS connector	DIN 40-pin wafer, pitch 1.25mm Matching Connector: Hirose DF13-40DS-1.25C

<b>JFP1</b>	Front Panel connector	5 x 2 header, pitch 2.00mm
<b>USB1/2</b>	4 x USB3.2 connector	
<b>JUSB1</b>	USB2.0 connector	5 x 2 header, pitch 2.00mm
<b>JUSB2</b>	USB2.0 connector	5 x 2 header, pitch 2.00mm
<b>JBZ1</b>	PC Buzzer connector	2 x 1 wafer, pitch 2.00mm
<b>LAN1/2</b>	RJ-45 Ethernet 1/2	
<b>JEC1</b>	EC Debug connector	3 x 1 header, pitch 2.00mm
<b>PWR1</b>	Power connector	3 x 2 wafer, pitch 4.20mm
<b>JSPI1</b>	SPI connector	4 x 2 header, pitch 2.00mm
<b>JESPI1</b>	ESPI connector	6 x 2 header, pitch 1.27mm
<b>HDMI_DP1</b>	HDMI connector DP connector	
<b>JAUDIO1</b>	Audio connector	6 x 2 header, pitch 2.00mm
<b>JBAT1</b>	Battery connector	2 x 1 wafer, pitch 1.25mm
<b>NGFF_M_2</b>	M.2 KEY-M connector	
<b>NGFF_E_1</b>	M.2 KEY-E connector	
<b>SO_DIMM1</b>	DDR5 SODIMM socket	

## 2.3 Setting Jumpers & Connectors

### 2.3.1 Multi-function select (SW1)


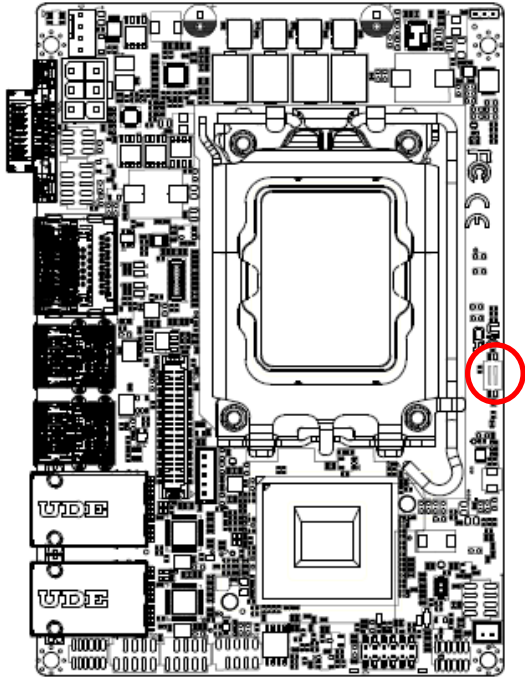


\*Default





AT mode\*

ATX mode




Clear CMOS

Normally\*





### 2.3.2 LCD inverter backlight connector (JBKL1)

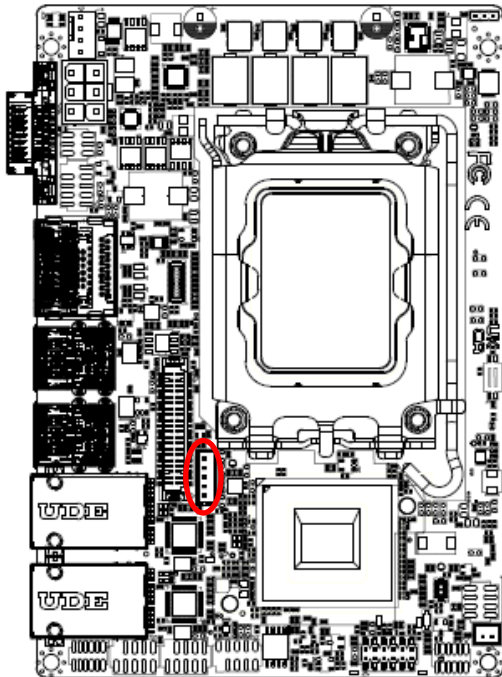



Signal	PIN
+5V	5
VBRIGHT	4
BKLEN	3
GND	2
+12V	1

### 2.3.3 CPU fan connector (JCPU\_FAN1)

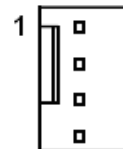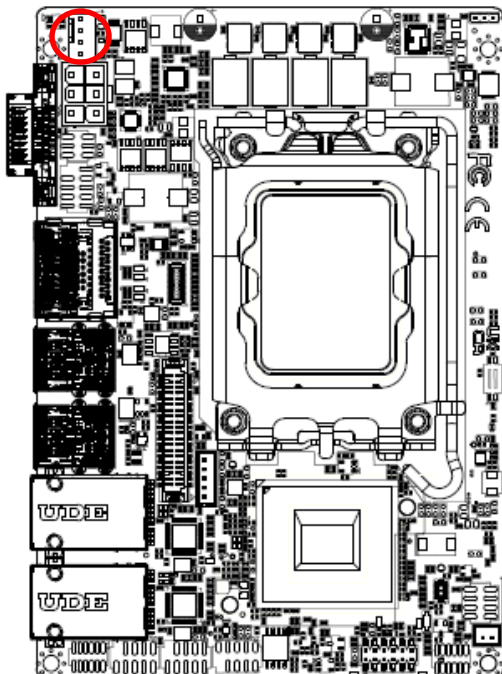

Signal	PIN
GND	1
+12V	2
EC_TACH0	3
PWM_FAN0	4

2.3.4 Serial port 2 connector (JCOM2)

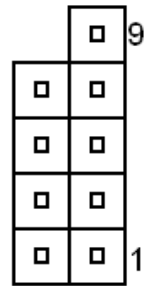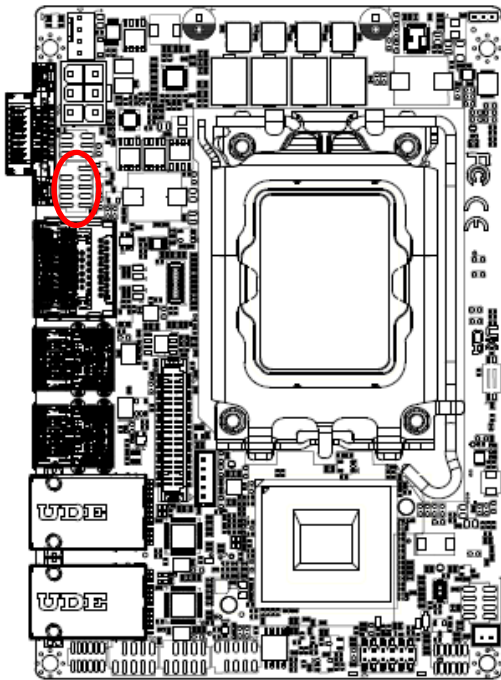

RS232 mode

Signal	PIN	PIN	Signal
		9	COM_RI#
COM_CTS#	8	7	COM_RTS#
COM_DSR#	6	5	GND
COM_DTR#	4	3	COM_TXD
COM_RXD	2	1	COM_DCD#



RS422 mode

Signal	PIN	PIN	Signal
		9	
	8	7	
	6	5	GND
RX-	4	3	RX+
TX+	2	1	TX-

RS485 mode



Signal	PIN	PIN	Signal
		9	
	8	7	
	6	5	GND
	4	3	
TX+	2	1	TX-

### 2.3.5 General purpose I/O connector (JDIO1)

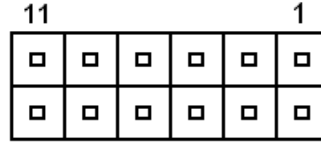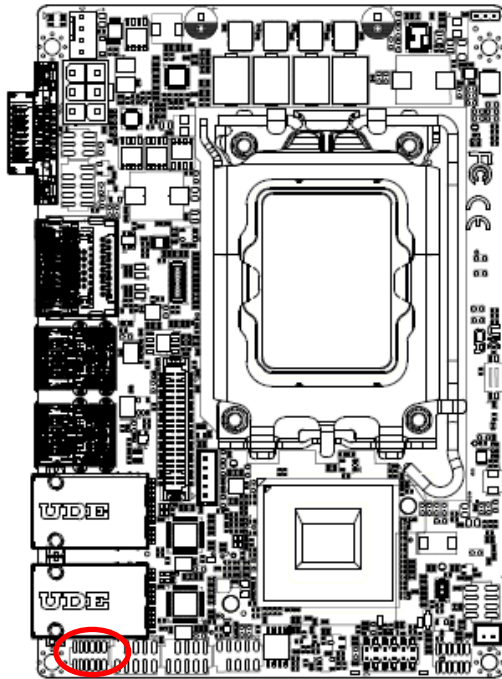



Signal	PIN	PIN	Signal
DIO_GP20	1	2	DIO_GP10
DIO_GP21	3	4	DIO_GP11
DIO_GP22	5	6	DIO_GP12
DIO_GP23	7	8	DIO_GP13
SMB_SCL_S0	9	10	SMB_SDA_S0
GND	11	12	+5V

### 2.3.6 Power connector (PWR1)

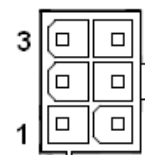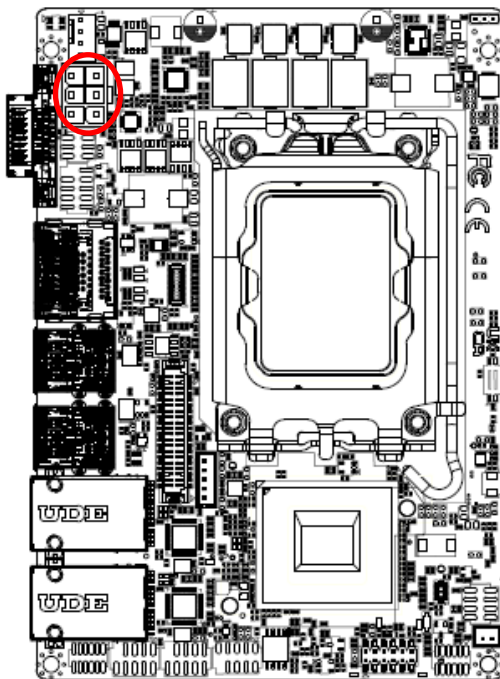

Signal	PIN	PIN	Signal
+VIN	3	6	GND
+VIN	2	5	GND
+VIN	1	4	GND

2.3.7 LVDS connector (JLVDS1)

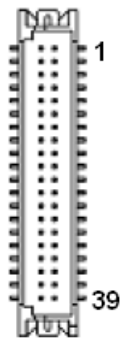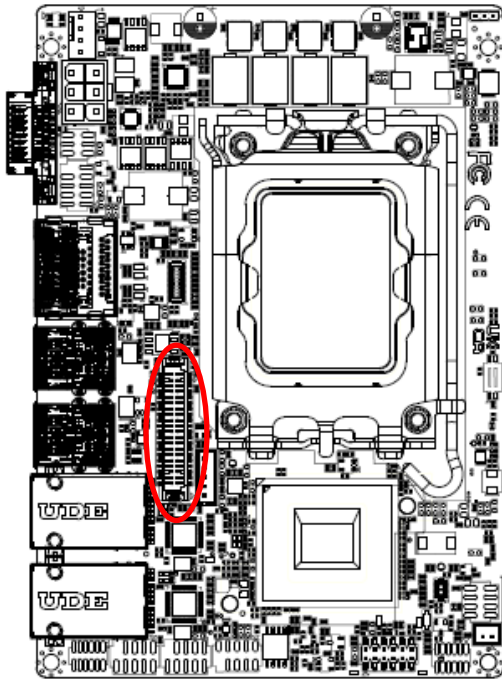



**Note:**

Change modes by BIOS

Signal	PIN	PIN	Signal
+3.3V	1	2	+5V
+3.3V	3	4	+5V
+3.3V	5	6	+5V
GND	7	8	GND
LVDS_A_DATA_P_1/ eDP_TX1P	9	10	LVDS_A_DATA_P_0/ eDP_HPDP
LVDS_A_DATA_N_1/ eDP_TX1N	11	12	LVDS_A_DATA_N_0
GND	13	14	GND
LVDS_A_DATA_P_3	15	16	LVDS_A_DATA_P_2/ eDP_TX0P
LVDS_A_DATA_N_3	17	18	LVDS_A_DATA_N_2/ eDP_TX0N
GND	19	20	GND
LVDS_B_DATA_P_1	21	22	LVDS_B_DATA_P_0
LVDS_B_DATA_N_1	23	24	LVDS_B_DATA_N_0
GND	25	26	GND
LVDS_B_DATA_P_3	27	28	LVDS_B_DATA_P_2
LVDS_B_DATA_N_3	29	30	LVDS_B_DATA_N_2
GND	31	32	GND
LVDS_B_CLK_P	33	34	LVDS_A_CLK_P/ eDP_AUXP
LVDS_B_CLK_N	35	36	LVDS_A_CLK_N/ eDP_AUXN
GND	37	38	GND
+12V	39	40	+12V





### 2.3.8 USB2.0 connector (JUSB1)

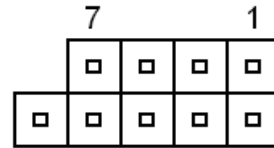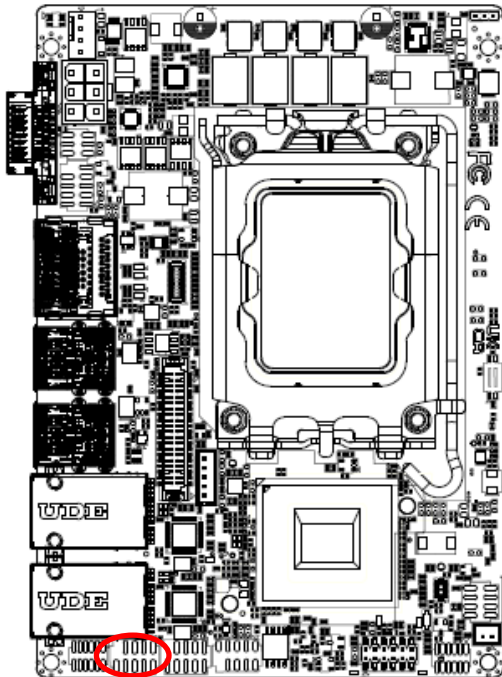



Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN4	3	4	USB_R_DN5
USB_R_DP4	5	6	USB_R_DP5
GND	7	8	GND
		10	GND

### 2.3.9 USB2.0 connector (JUSB2)

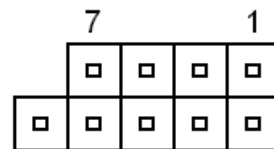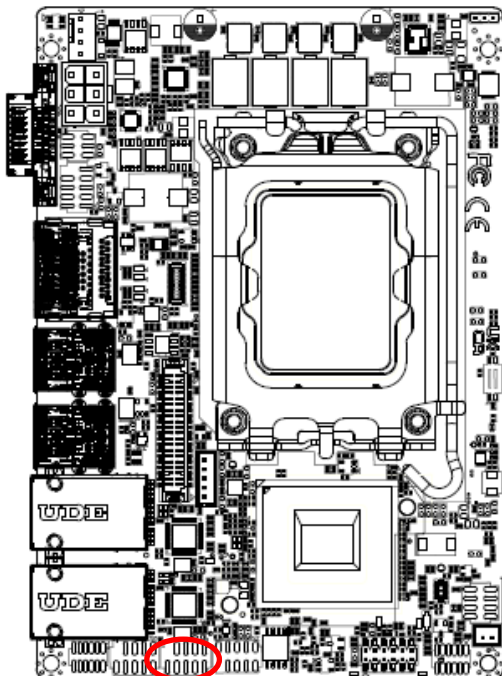



Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN7	3	4	USB_R_DN8
USB_R_DP7	5	6	USB_R_DP8
GND	7	8	GND
		10	GND

2.3.10 Front Panel connector (JFP1)

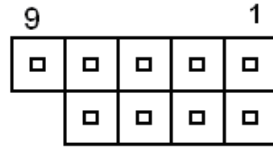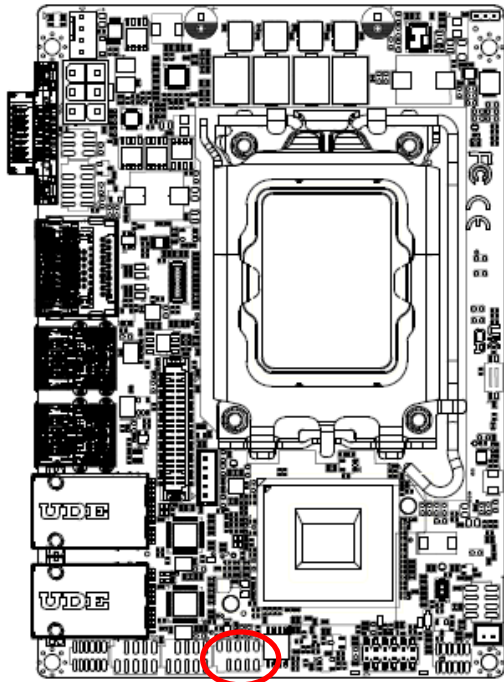



Signal	PIN	PIN	Signal
FP_HDD_LED+	1	2	FP_PWR_LED+
HDD_LED#	3	4	PWR_LED#
RSTBTN#	5	6	PWRBTN_IN#
GND	7	8	GND
NC	9		

2.3.11 PC Buzzer connector (JBZ1)

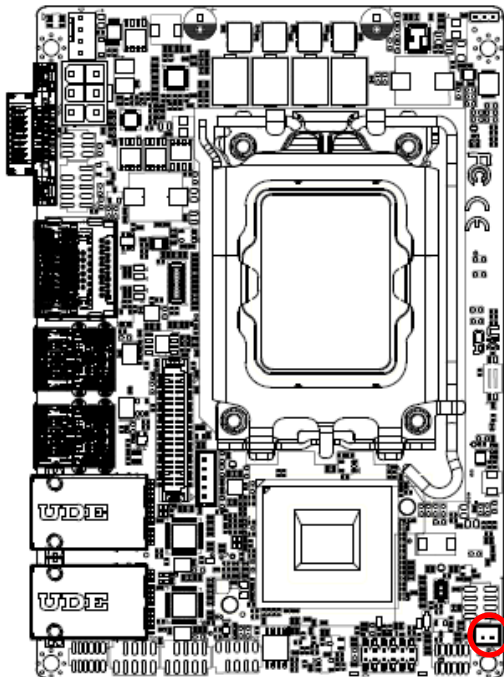



Signal	PIN
SOC_SPKR_R	1
+5V	2

### 2.3.12 SPI connector (JSPI1)

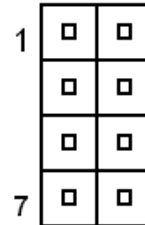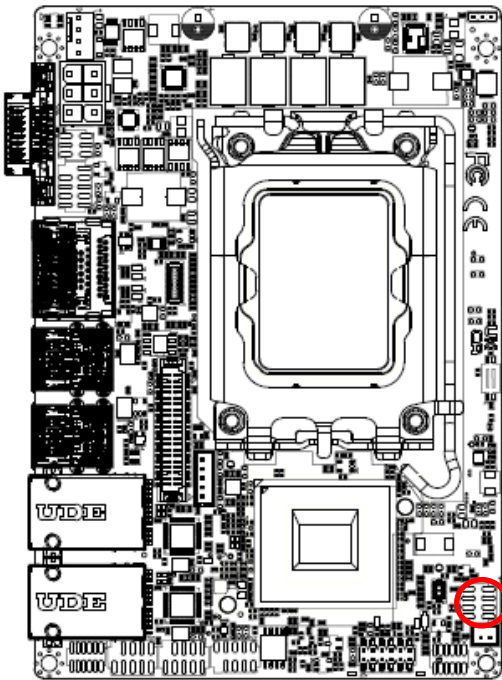



Signal	PIN	PIN	Signal
+V3.3A_SPI	1	2	GND
SPI_CS0#_ROM	3	4	SPI_CLK_ROM
SPI_MISO_ROM	5	6	SPI_MOSI_ROM
SPI_HOLD#_ROM	7	8	SPI_WP#_ROM

### 2.3.13 ESPI connector (JESPI1)

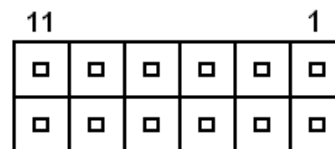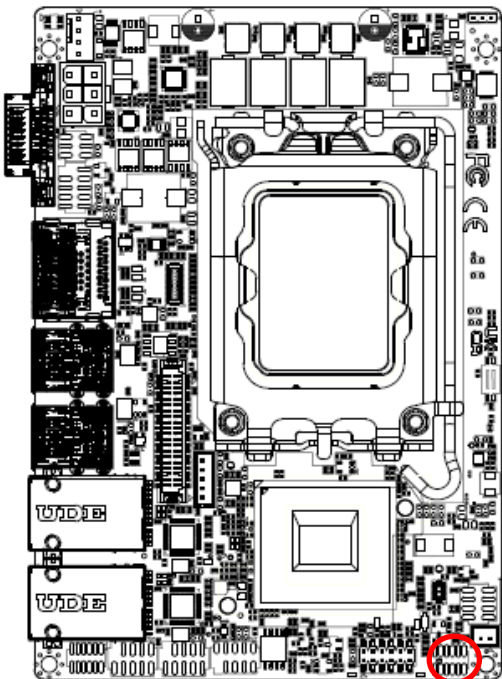



Signal	PIN	PIN	Signal
ESPI_IO0	1	2	+3.3VSB
ESPI_IO1	3	4	PLT_RST#
ESPI_IO2	5	6	ESPI_CS0#
ESPI_IO3	7	8	ESPI_CLK
NC	9	10	GND
ESPI_RST	11	12	NC

2.3.14 EC Debug connector (JEC1)

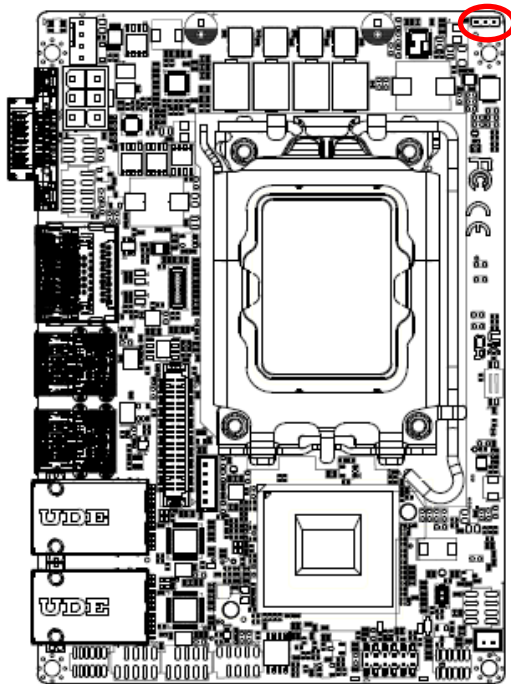

Signal	PIN
EC_SMCLK_DEBUG	1
EC_SMDAT_DEBUG	2
GND	3

2.3.15 Audio connector (JAUDIO1)

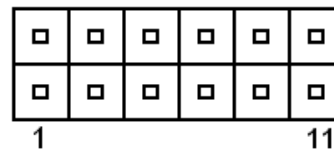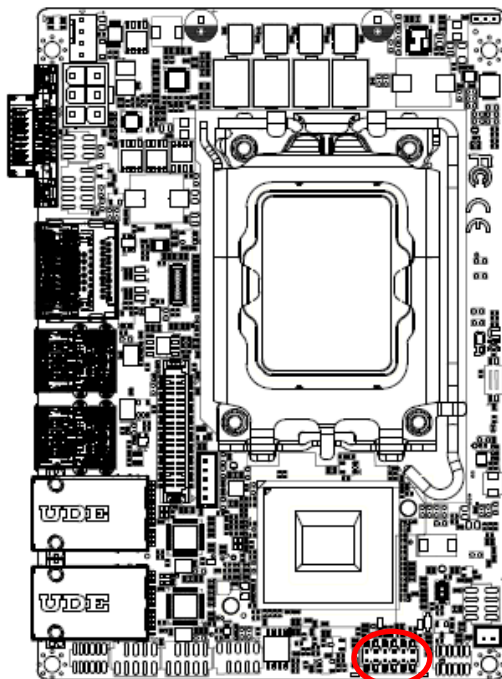


Signal	PIN	PIN	Signal
FRONT-R-OUT	1	2	FRONT-L-OUT
HD_AGND	3	4	HD_AGND
LINE1-R-IN	5	6	LINE1-L-IN
MIC1-R-IN	7	8	MIC1-L-IN
FRONT-JD	9	10	LINE1-JD
MIC1-JD	11	12	HD_AGND

2.3.15.1 Signal Description – Audio connector (JAUDIO1)

Signal	Signal Description
LINE1-JD	AUDIO IN (LINE_RIN/LIN)sense pin
FRONT-JD	AUDIO Out(ROUT/LOUT) sense pin
MIC1-JD	MIC IN (MIC_RIN/LIN) sense pin

### 2.3.16 Battery connector (JBAT1)

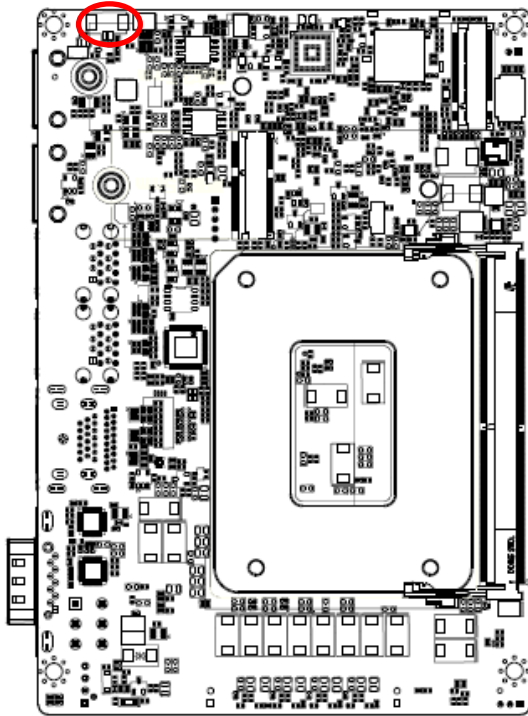

Signal	PIN
+RTCBAT	1
GND	2

# 3. BIOS Setup

---

### 3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

### 3.2 Starting Setup

AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <ESC> or <Del> immediately after switching the system on, or

By pressing the <ESC> or <Del> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

**Press <ESC> or <Del> to enter SETUP**

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

### 3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



**Note:** Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.



### 3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the <Enter> key again.

### 3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

### 3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

#### 3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

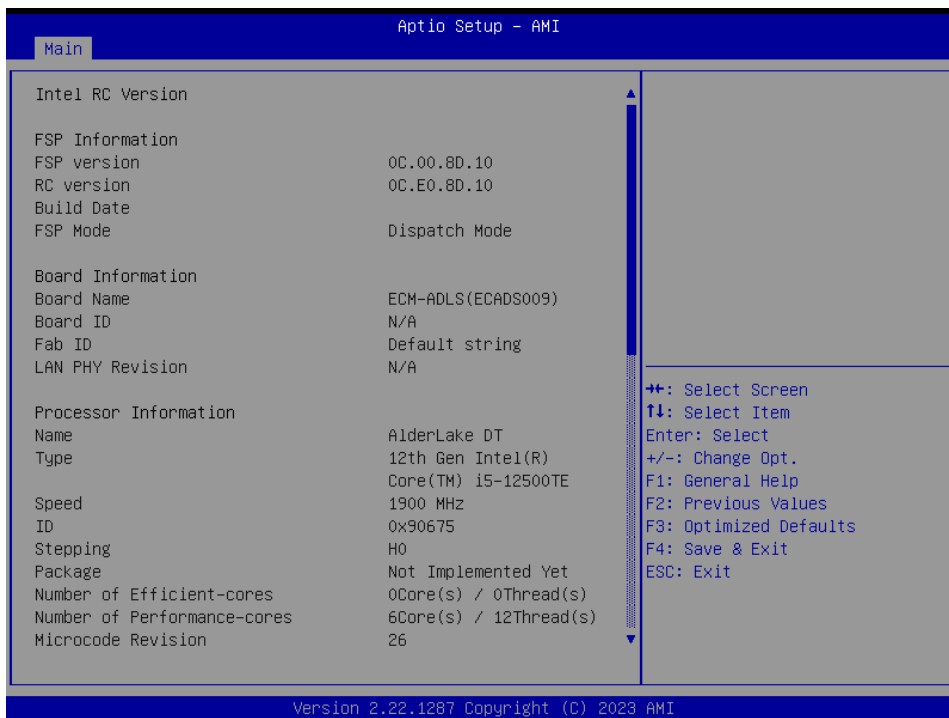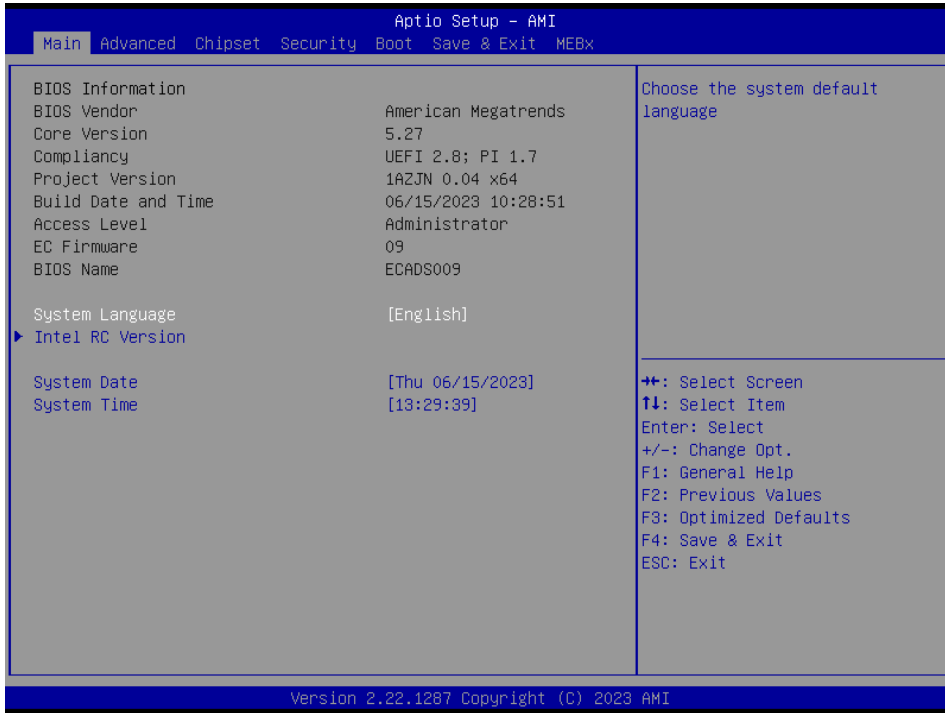

### 3.6.1.1 System Language

This option allows choosing the system default language.

### 3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

### 3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.



**Note:** The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website ([www.avalue.com.tw](http://www.avalue.com.tw)) to download the latest product and BIOS information.


## 3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.




3.6.2.1 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

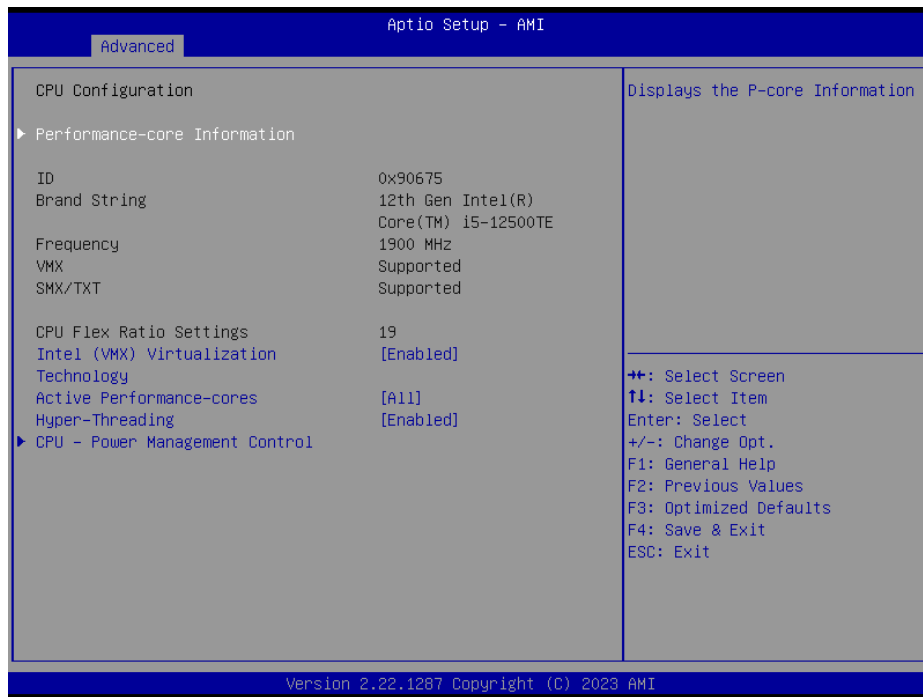

Item	Options	Description
<b>Intel (VMX) Virtualization Technology</b>	Disabled Enabled[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
<b>Active Processor Cores</b>	All[Default] 1 2 3 4 5 6 7 8	Number of cores to enable in each processor package.
<b>Hyper-Threading</b>	Disabled Enabled[Default]	Enable or Disable Hyper-Threading Technology.

### 3.6.2.1.1 Performance-core Information

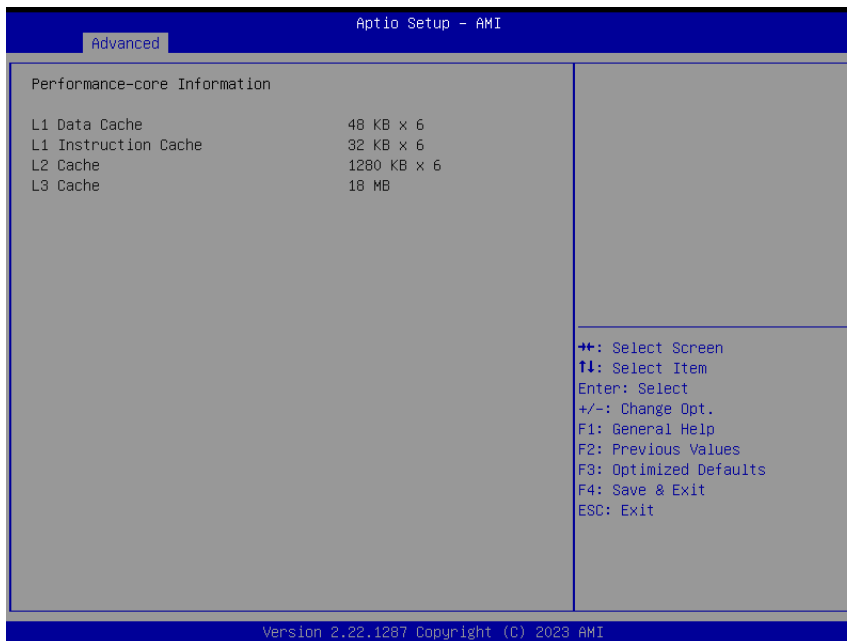


### 3.6.2.1.2 CPU – Power Management Control



Item	Option	Description
Intel® SpeedStep™	Enabled[Default], Disabled	Allows more than two frequency ranges to be supported.
Intel® Speed Shift Technology	Enabled[Default], Disabled	Enable/Disable Intel® Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.
Turbo Mode	Enabled[Default], Disabled	Enable/Disable processor Turbo Mode (requires Intel Speed Step or Intel Speed Shift to be available and enabled).
C States	Enabled[Default], Disabled	Enable/Disable CPU Power Management.


# ECM-ADLS User's Manual

## 3.6.2.2 PCH-FW Configuration

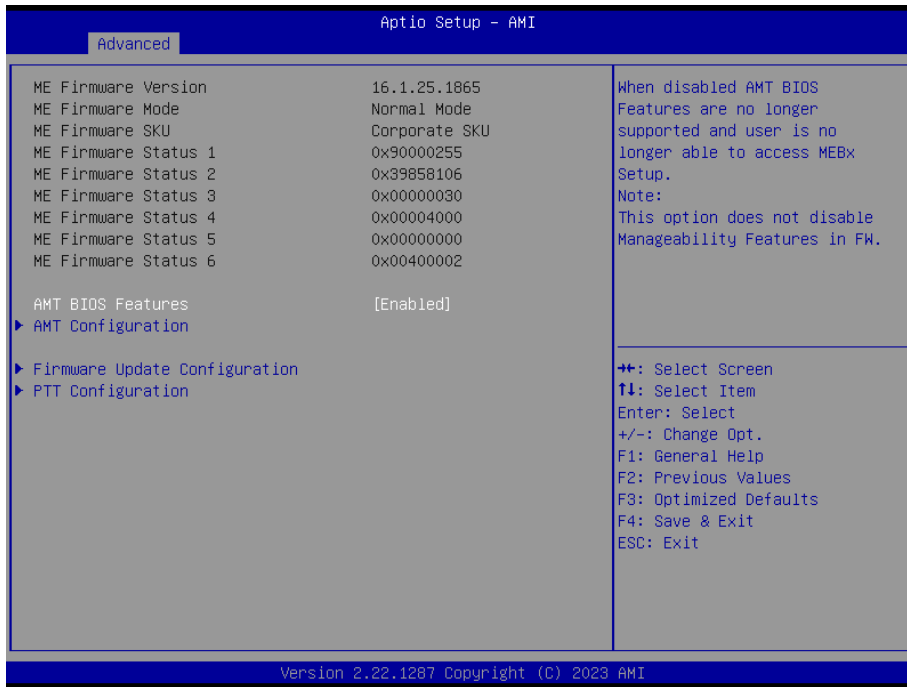


Item	Option	Description
AMT BIOS Features	Disabled Enabled[Default]	When disabled AMT BIOS Features are no longer supported and user is no longer able to access MEBx Setup. Note: This option does not disable Manageability Features in FW.

### 3.6.2.2.1 AMT Configuration

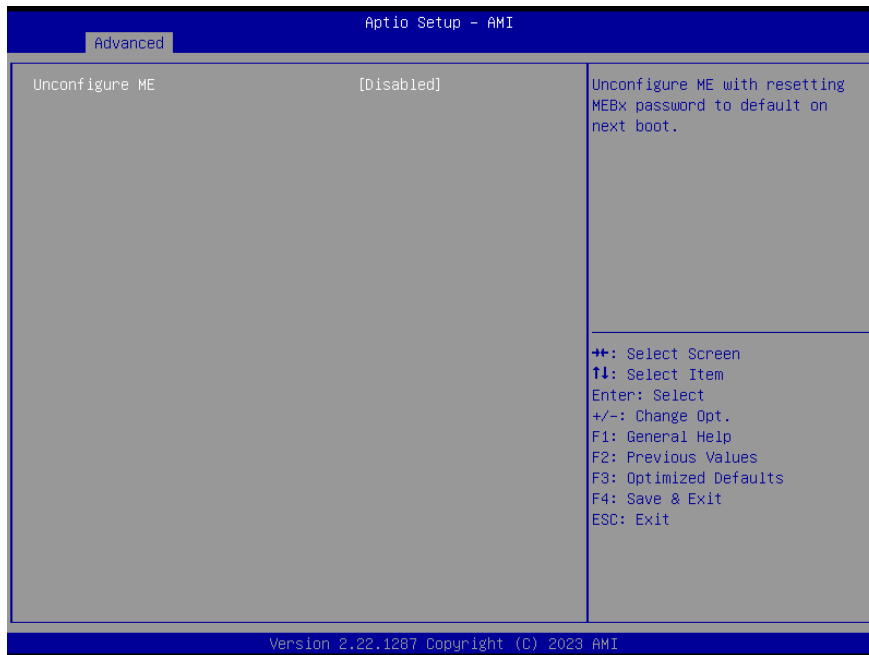


Item	Option	Description
Unconfigure ME	Disabled[Default], Enabled	Unconfigure ME with resetting MEBx password to default on next boot.

### 3.6.2.2 Firmware Update Configuration

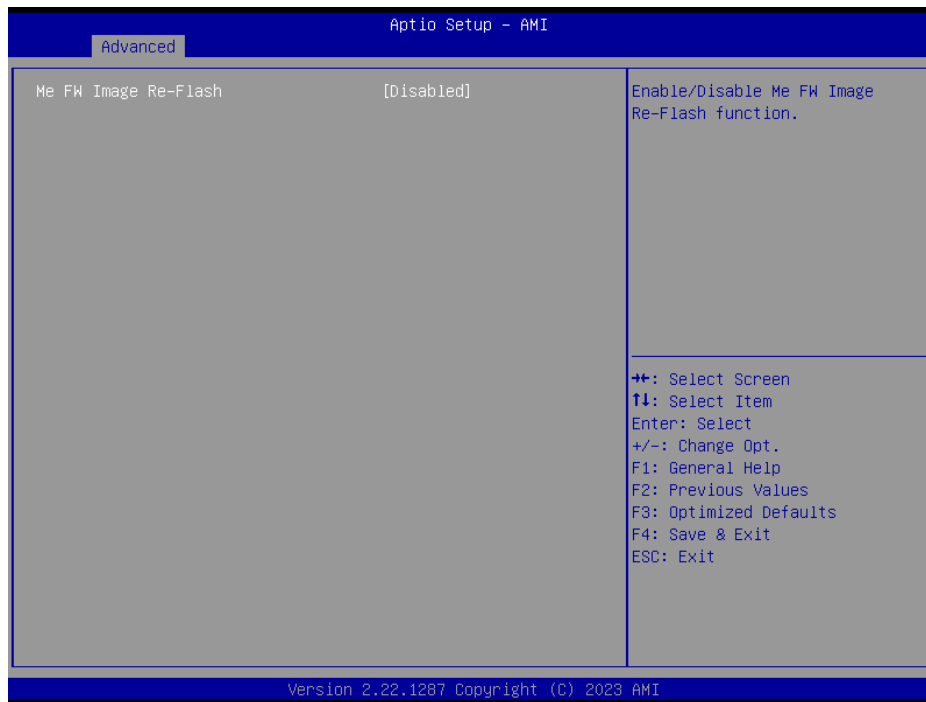


Item	Option	Description
ME FW Image Re-Flash	Disabled[Default], Enabled	Enable/Disable Me FW Image Re-Flash function.

### 3.6.2.2.3 PTT Configuration

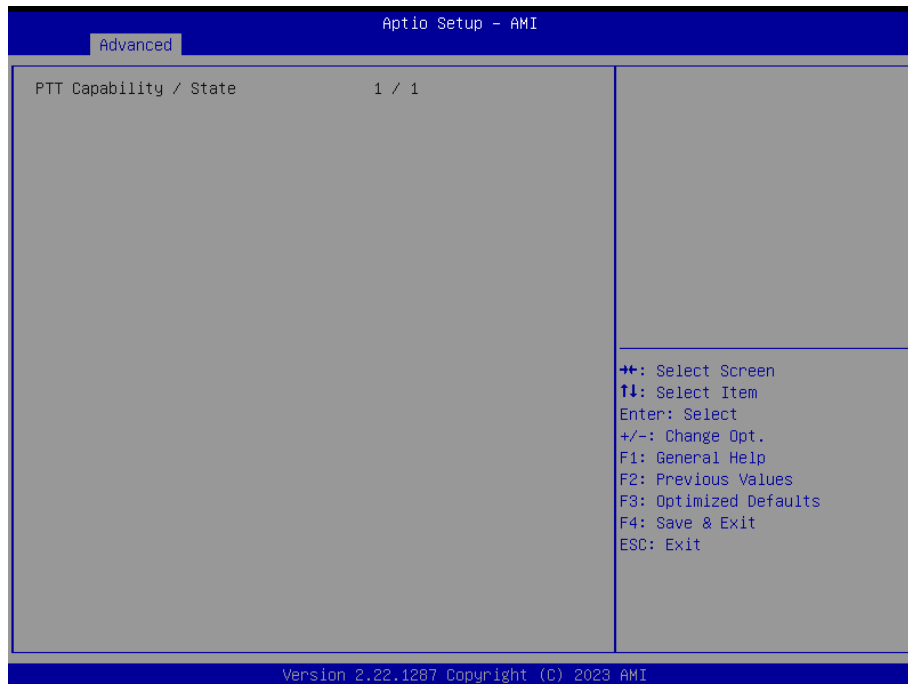


# ECM-ADLS User's Manual

## 3.6.2.3 Trusted Computing

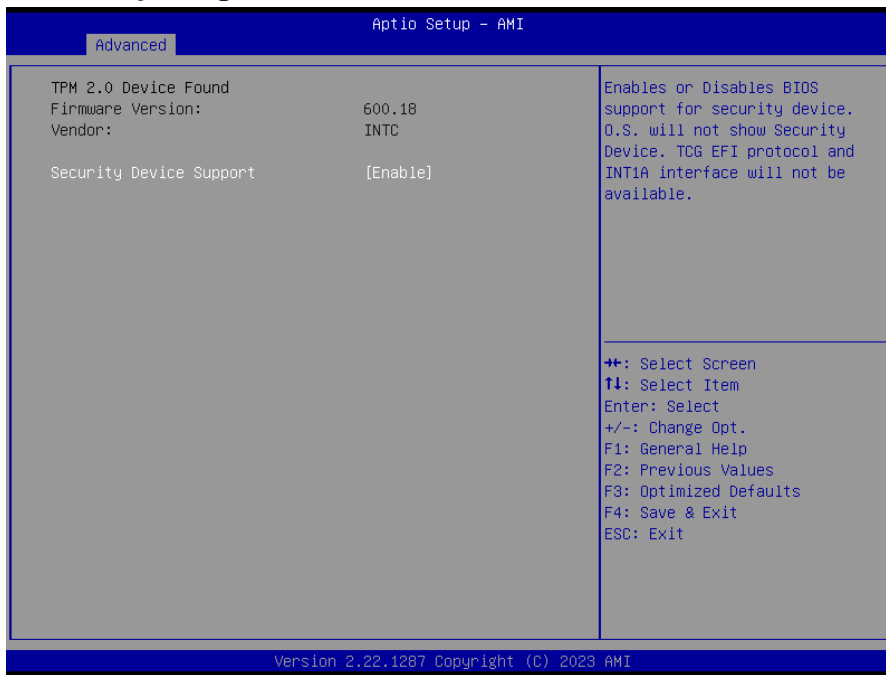

Item	Options	Description
<b>Security Device Support</b>	Disable, Enable <b>[Default]</b>	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

## 3.6.2.4 APCI Settings

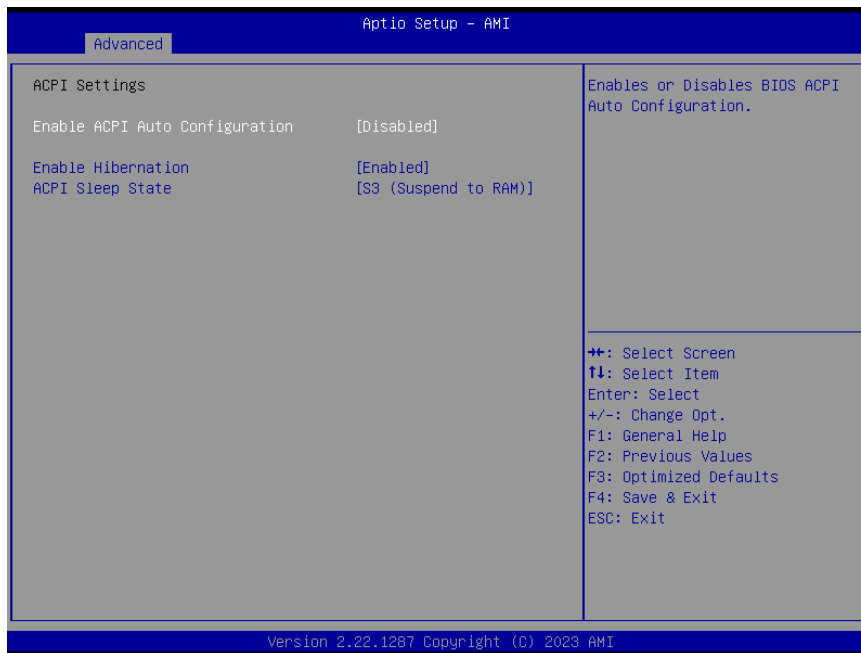

Item	Options	Description
<b>Enable ACPI Auto Configuration</b>	Disabled <b>[Default]</b> Enabled,	Enables or Disables BIOS ACPI Auto Configuration.



<p><b>Enable Hibernation</b></p>	<p>Disabled Enabled[Default],</p>	<p>Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some OS.</p>
<p><b>ACPI Sleep State</b></p>	<p>Suspend Disabled, S3 (Suspend to RAM)[Default]</p>	<p>Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.</p>

### 3.6.2.5 Super IO Configuration


You can use this item to set up or change the Super IO configuration for serial ports. Please refer to 3.6.2.5.1 ~ 3.6.2.5.2 for more information.



Item	Description
<p><b>Serial Port 1 Configuration</b></p>	<p>Set Parameters of Serial Port 1 (COMA).</p>
<p><b>Serial Port 2 Configuration</b></p>	<p>Set Parameters of Serial Port 2 (COMB).</p>


# ECM-ADLS User's Manual

## 3.6.2.5.1 Serial Port 1 Configuration

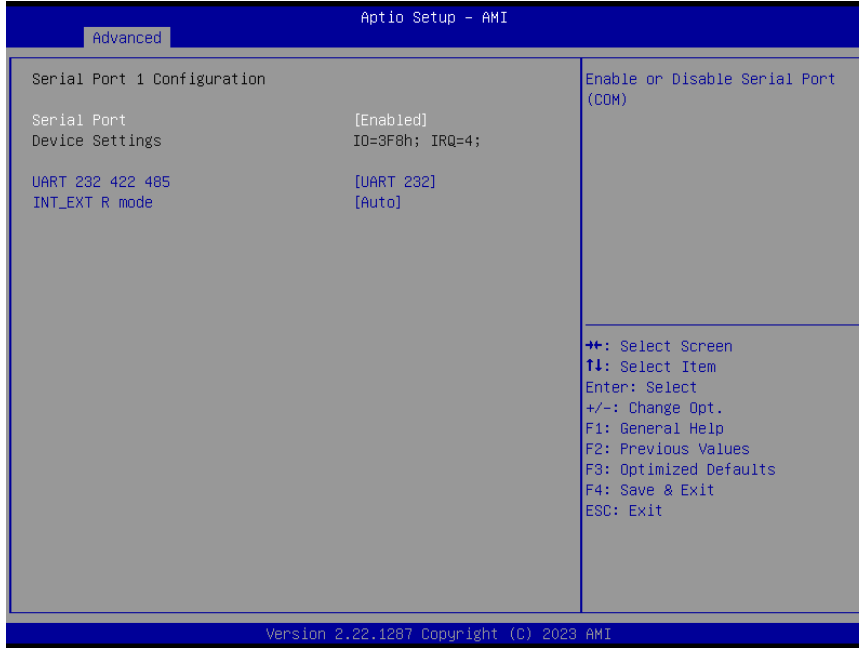


Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default] UART 422 UART 485	Change the Serial Port as RS232/422/485.
INT_EXT R mode	Auto[Default] Non INT+EXT R INT R EXT R INT+EXT R	Adjust the Serial Port with internal or external termination resistors.

## 3.6.2.5.2 Serial Port 2 Configuration

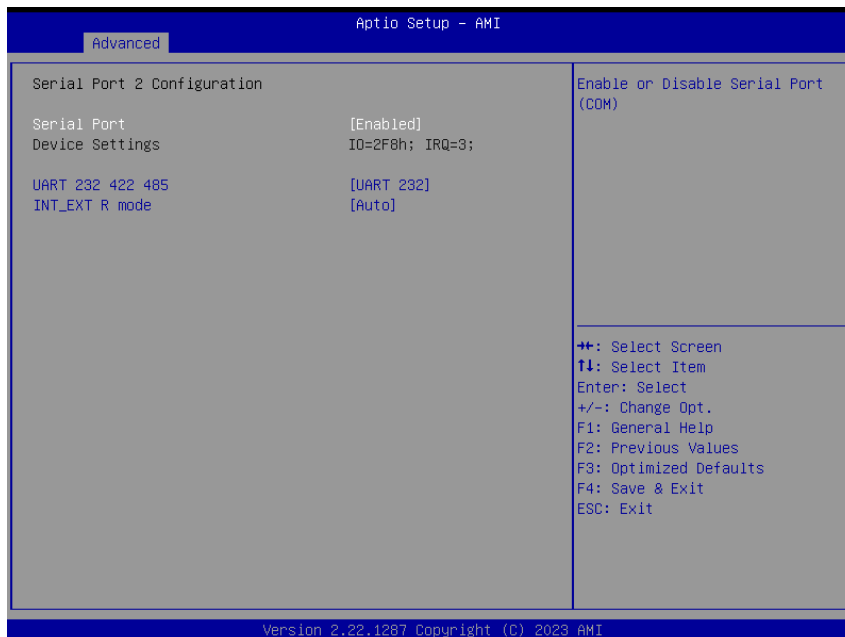

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default] UART 422 UART 485	Change the Serial Port as RS232/422/485.
INT_EXT R mode	Auto[Default] Non INT+EXT R INT R EXT R INT+EXT R	Adjust the Serial Port with internal or external termination resistors.

### 3.6.2.6 HW Monitor

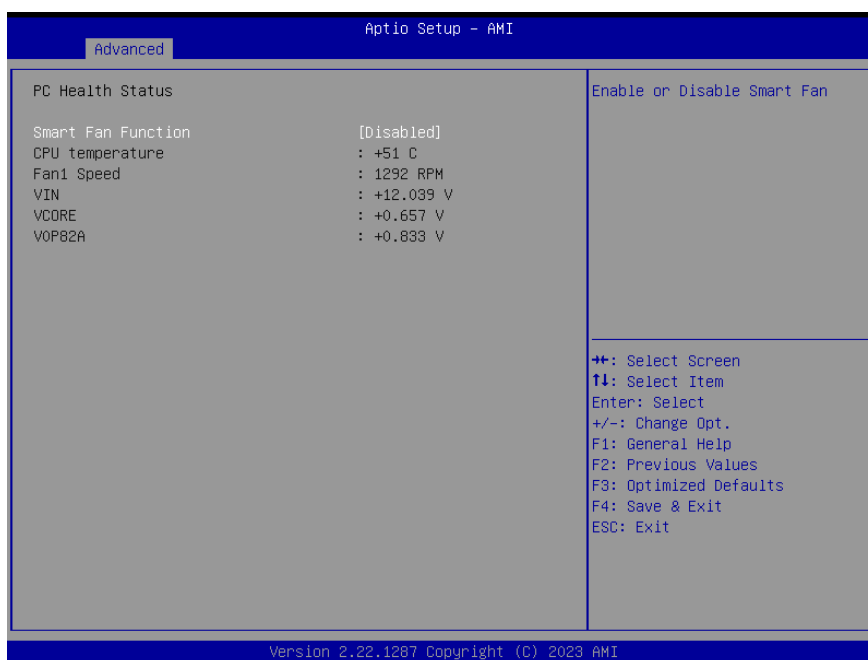

Item	Options	Description
Smart Fan Function	Enabled, Disabled[Default]	Enables or Disables Smart Fan.

3.6.2.7 S5 RTC Wake Settings



Item	Options	Description
Wake system from S5	Disabled[Default], Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).


3.6.2.8 Serial Port Console Redirection



Item	Options	Description
<b>Console Redirection</b>	Disabled[Default], Enabled	Console Redirection Enable or Disable.
<b>Console Redirection EMS</b>	Disabled[Default], Enabled	Console Redirection Enable or Disable.

### 3.6.2.9 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

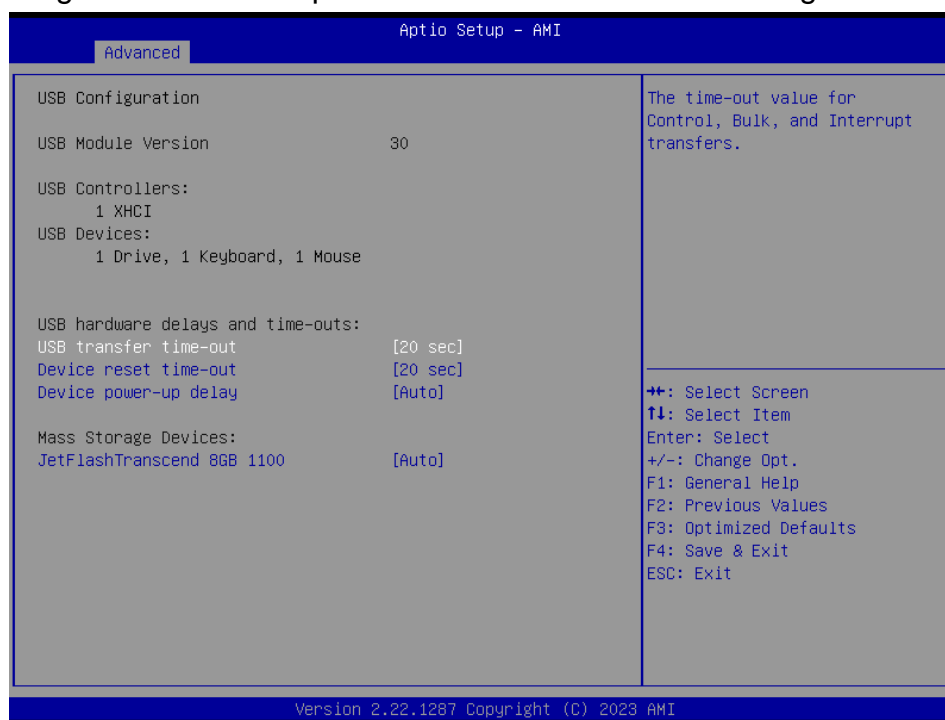

Item	Options	Description
<b>USB transfer time-out</b>	1 sec 5 sec 10 sec 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
<b>Device reset time-out</b>	10 sec 20 sec[Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
<b>Device power-up delay</b>	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.
<b>Mass Storage Devices</b>	Auto[Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.


# ECM-ADLS User's Manual

## 3.6.2.10 Network Stack Configuration



Item	Options	Description
Network Stack	Enabled Disabled[Default]	Enable/Disable UEFI Network Stack.


## 3.6.2.11 NVMe Configuration

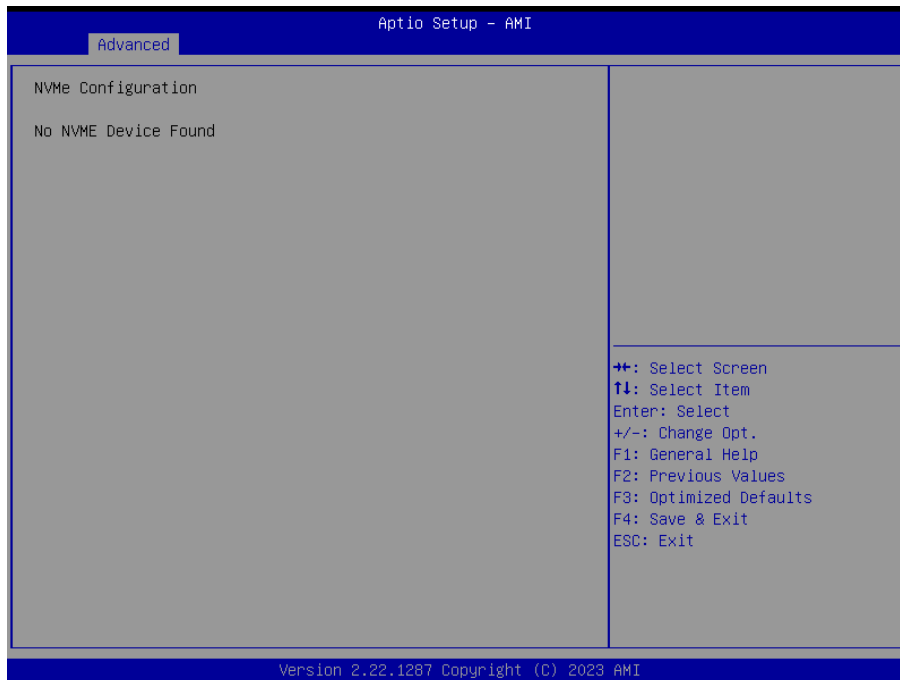

### 3.6.3 Chipset




#### 3.6.3.1 System Agent (SA) Configuration

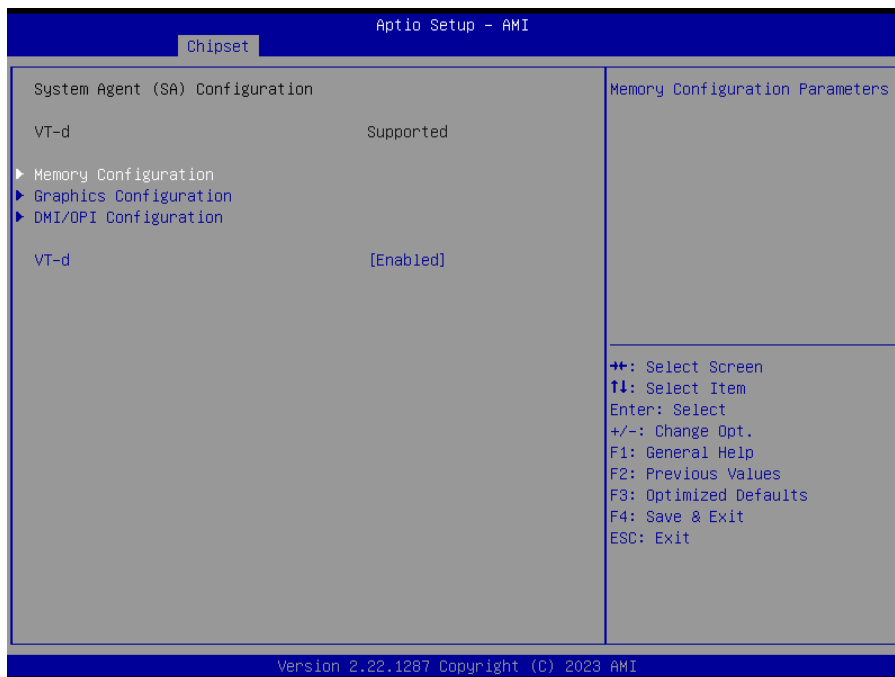

Item	Option	Description
VT-d	Enabled[Default] Disabled	VT-d capability.

3.6.3.1.1 Memory Configuration

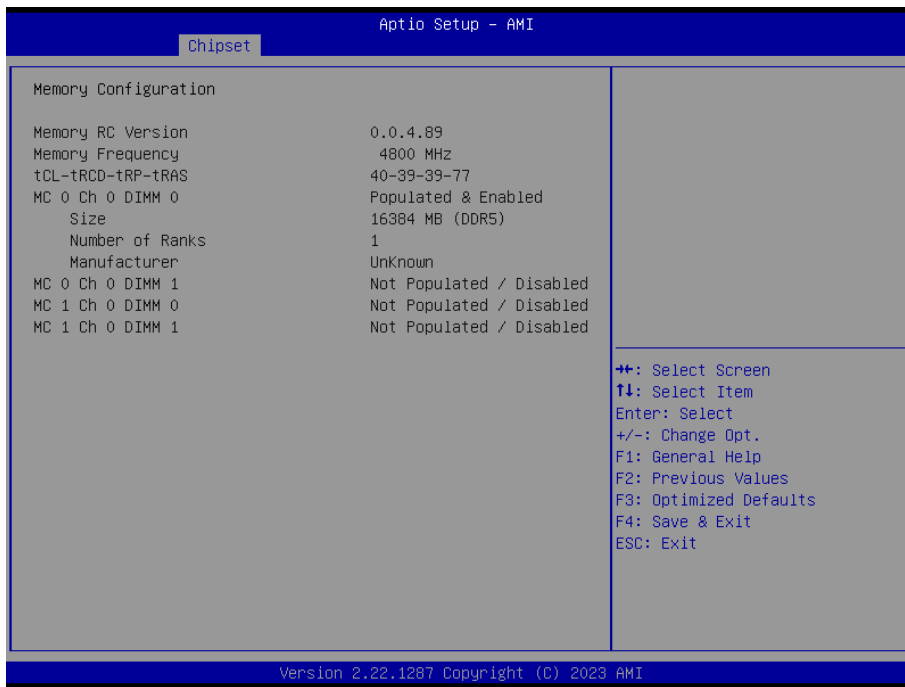


3.6.3.1.2 Graphics Configuration




Item	Option	Description
Primary Display	Auto[Default] IGFX	Select which of IGFX Graphics device should be Primary Display.
GTT Size	2MB 4MB 8MB[Default]	Select the GTT Size.



### 3.6.3.1.3 DMI/OPI Configuration

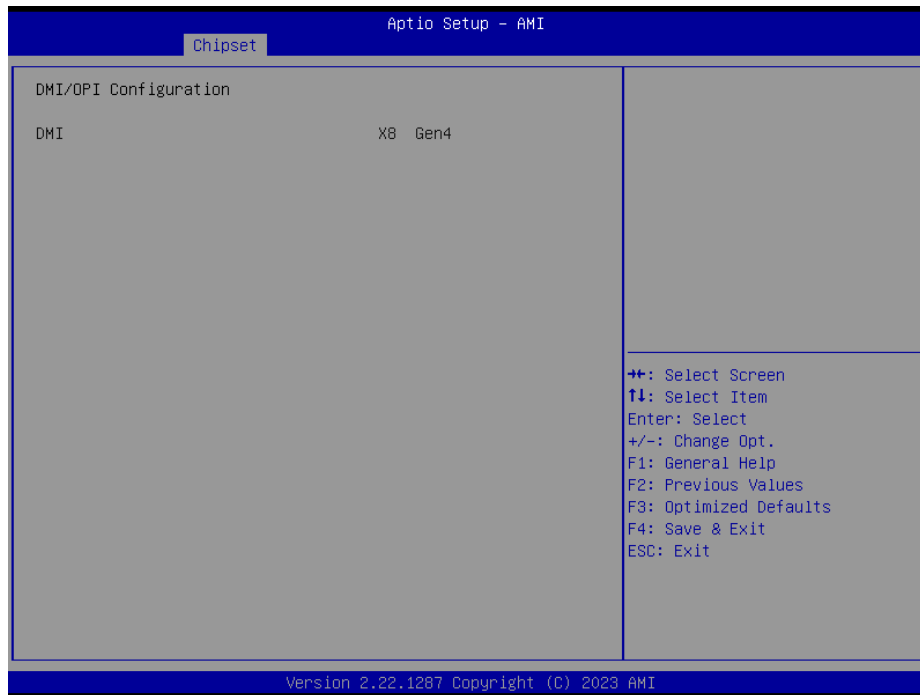


### 3.6.3.2 PCH-IO Configuration

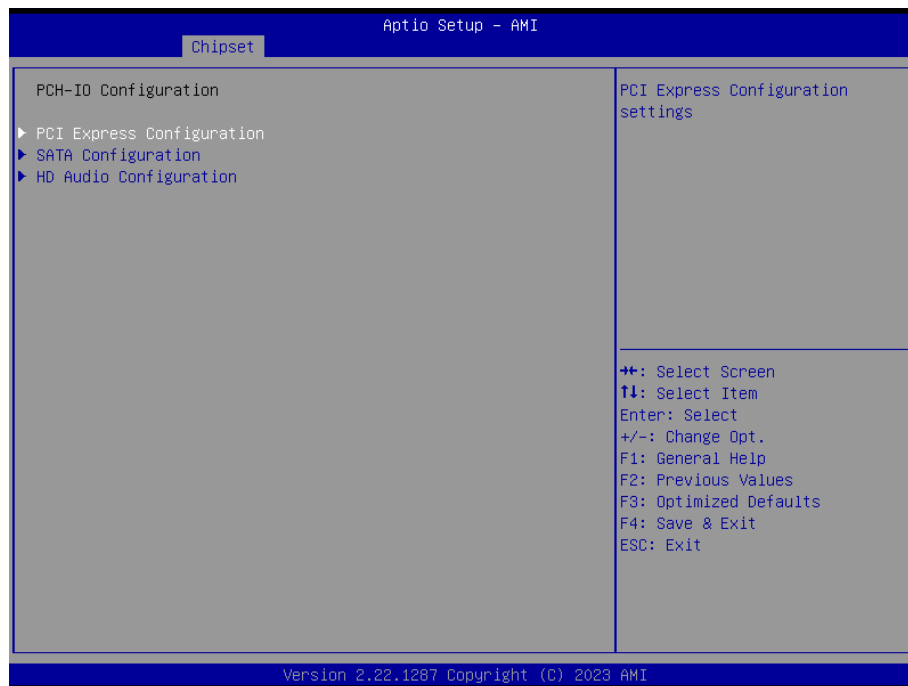

# ECM-ADLS User's Manual

## 3.6.3.2.1 PCI Express Configuration

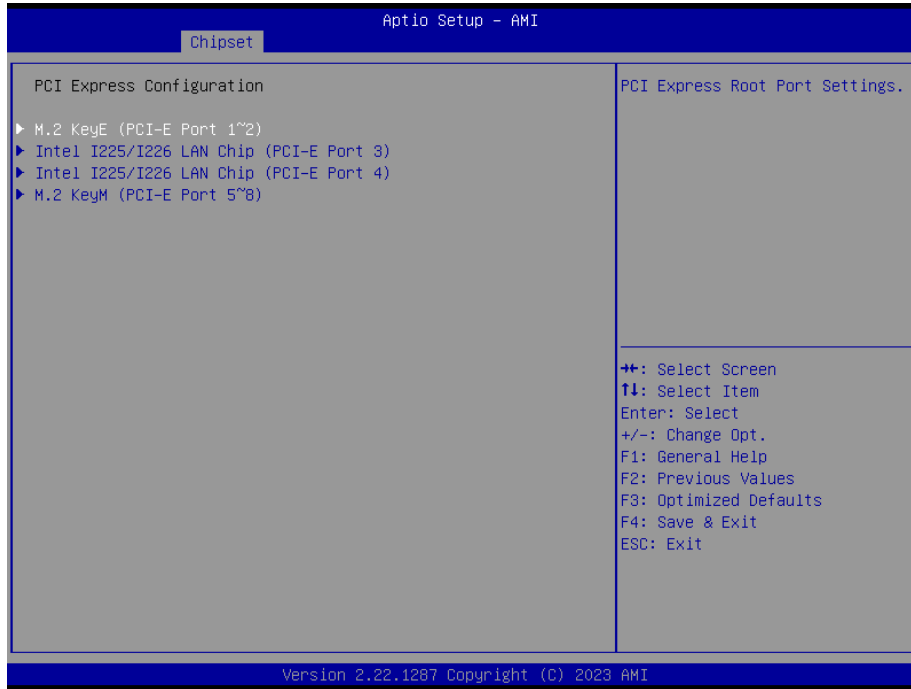

### 3.6.3.2.1.1 M.2 KeyE (PCI-E Port 1~2)



Item	Option	Description
<b>M.2 KeyE (PCI-E Port 1~2)</b>	Enabled <b>[Default]</b> , Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled <b>[Default]</b> , L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.

<b>L1 Substates</b>	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
<b>PTM</b>	Disabled Enabled[Default],	Enable/Disable Precision Time Measurement.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.
<b>Detect Timeout</b>	0	The number of milliseconds reference code will wait for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.

### 3.6.3.2.1.2 Intel I225/I226 LAN Chip (PCI-E Port 3)




Item	Option	Description
<b>Intel I225/I226 LAN Chip (PCI-E Port 3)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
<b>PTM</b>	Disabled Enabled[Default],	Enable/Disable Precision Time Measurement.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2	Configure PCIe Speed.

## ECM-ADLS User's Manual

	Gen3	
<b>Detect Timeout</b>	0	The number of milliseconds reference code will wait for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.

### 3.6.3.2.1.3 Intel I225/I226 LAN Chip (PCI-E Port 4)

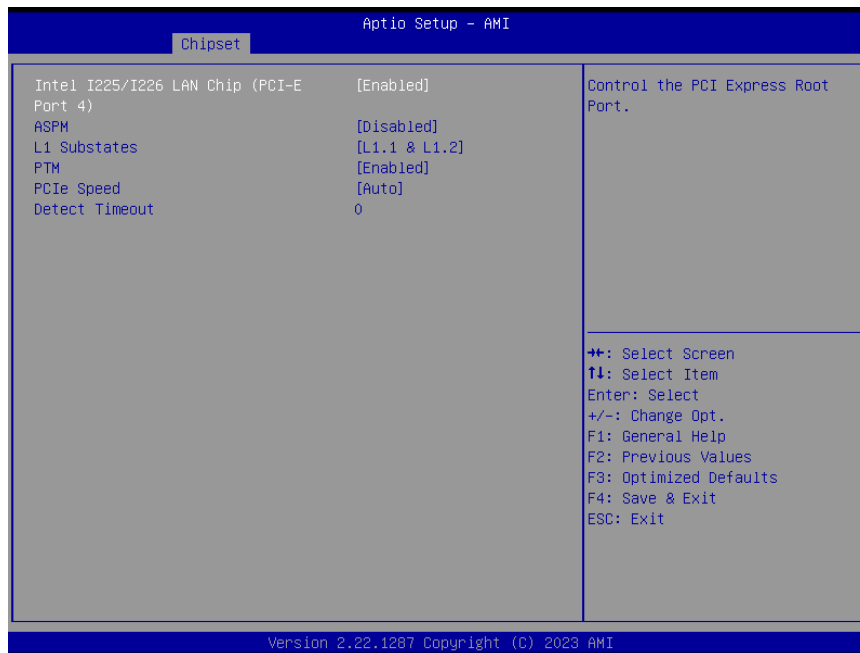


Item	Option	Description
<b>Intel I225/I226 LAN Chip (PCI-E Port 4)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
<b>PTM</b>	Disabled Enabled[Default],	Enable/Disable Precision Time Measurement.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.
<b>Detect Timeout</b>	0	The number of milliseconds reference code will wait for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.

### 3.6.3.2.1.4 M.2 KeyM (PCI-E Port 5~8)




Item	Option	Description
<b>M.2 KeyM (PCI-E Port 5~8)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled, L1.1 L1.1 & L1.2[Default]	PCI Express L1 Substates settings.
<b>PTM</b>	Disabled Enabled[Default],	Enable/Disable Precision Time Measurement.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.
<b>Detect Timeout</b>	0	The number of milliseconds reference code will wait for link to exit Detect state for enabled ports before assuming there is no device and potentially disabling the port.

3.6.3.2.2 SATA Configuration

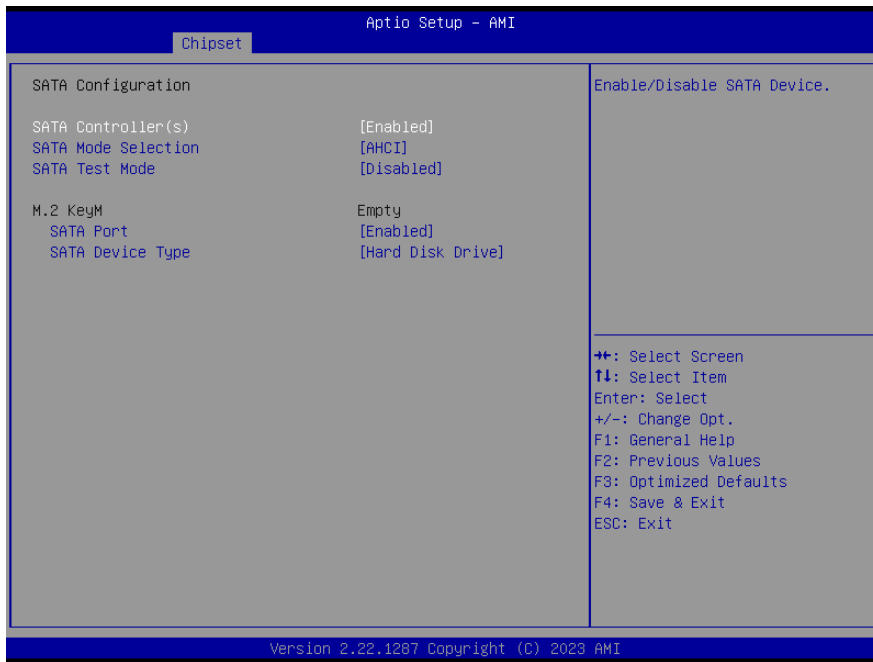


Item	Options	Description
<b>SATA Controller(s)</b>	Enabled[ <b>Default</b> ] Disabled,	Enable/Disable SATA Device.
<b>SATA Mode Selection</b>	AHCI[ <b>Default</b> ]	Determines how SATA controller(s) operate.
<b>SATA Test Mode</b>	Enabled Disabled[ <b>Default</b> ]	Test Mode Enable/Disable (Loop Back).
<b>SATA Port</b>	Disabled Enabled[ <b>Default</b> ]	Enable or Disable SATA Port.
<b>SATA Device Type</b>	Hard Disk Drive[ <b>Default</b> ] Solid State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.

### 3.6.3.2.3 HD Audio Configuration

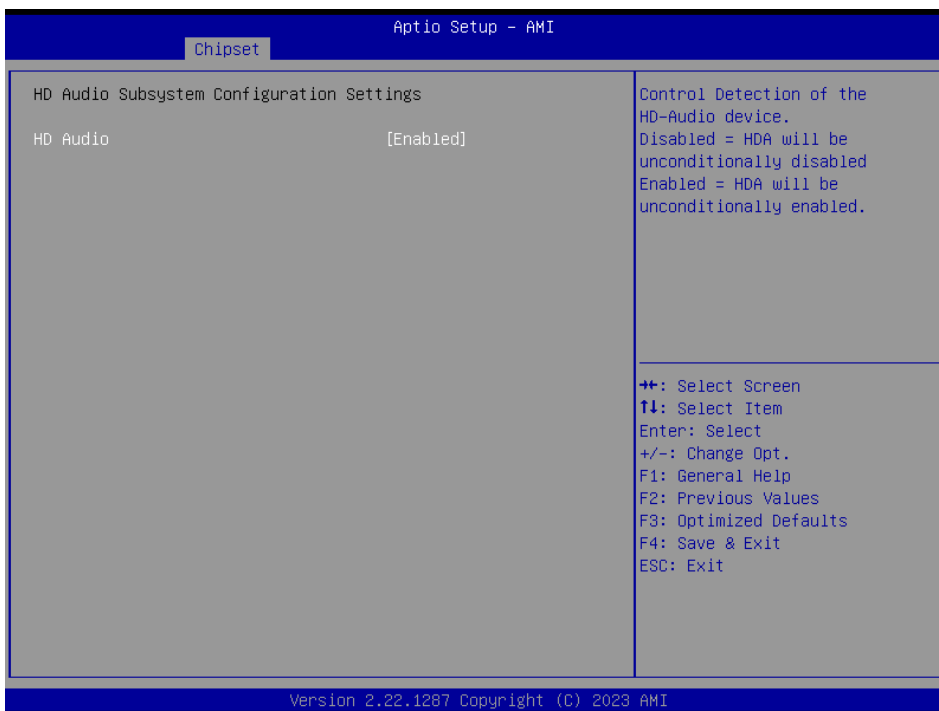

Item	Option	Description
HD Audio	Disabled Enabled[Default]	Control Detection of the HD-Audio device. Disable = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.

### 3.6.3.3 Board Configuration

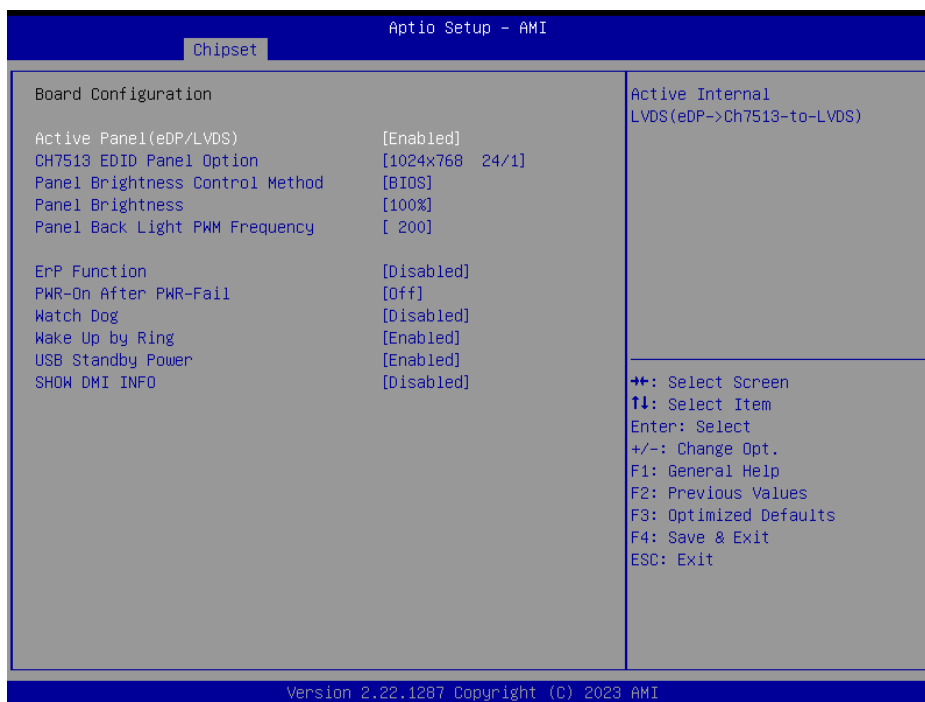


## ECM-ADLS User's Manual

Item	Option	Description
<b>Active Panel(eDP/LVDS)</b>	Disabled Enabled <b>[Default]</b>	Active Internal LVDS(eDP->Ch7511-to-LVDS).
<b>CH7513 EDID Panel Option</b>	1024x768 24/1 <b>[Default]</b> 800x600 18/1 1024x768 18/1 1366x768 18/1 1024x600 18/1 1280x800 18/1 1920x1200 24/2 1920x1080 18/2 1440x900 18/2 1600x1200 24/2 1366x768 24/1 1920x1080 24/2 7513-eDP	Port-EDP to LVDS(Chrotel 7513) Panel EDID Option.
<b>Panel Brightness Control Method</b>	BIOS <b>[Default]</b> OS Driver	Panel Brightness Control Method. 1.BIOS 2.OS Driver.
<b>Panel Brightness</b>	00% 25% 50% 75% 100% <b>[Default]</b>	Select Panel(eDP/LVDS) back light PWM duty.
<b>Panel Back Light PWM Frequency</b>	200 <b>[Default]</b> 300 400 500 700 1k 2k 3k 5k 10k 20k	Select Panel(eDP/LVDS) back light PWM Frequency.
<b>ErP Function</b>	Disabled <b>[Default]</b> Enabled	ErP Function (Deep S5).
<b>PWR-On After PWR-Fail</b>	Off <b>[Default]</b> On Last state	AC loss resume.
<b>Watch Dog</b>	Disabled <b>[Default]</b> 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
<b>Wake Up by Ring</b>	Disabled Enabled <b>[Default]</b>	Wake Up by Ring from S3/S4/S5.
<b>USB Standby Power</b>	Disabled	Enable/Disabled USB Standby Power



	Enabled[Default]	during S3/S4/S5.
SHOW DMI INFO	Disabled[Default] Enabled	SHOW DMI INFO.

### 3.6.4 Security

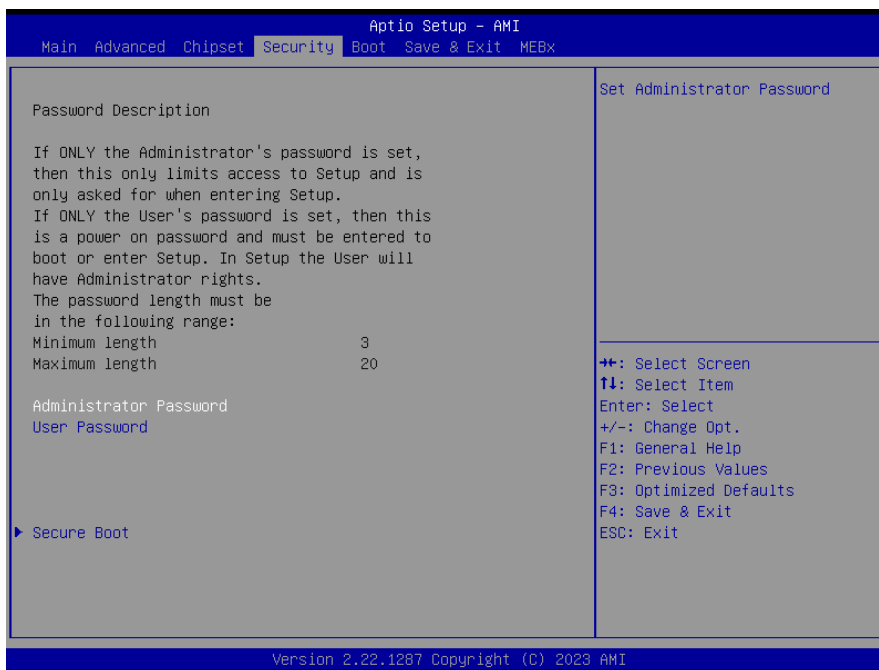


- **Administrator Password**

Set setup Administrator Password


- **User Password**

Set User Password

3.6.4.1 Secure Boot

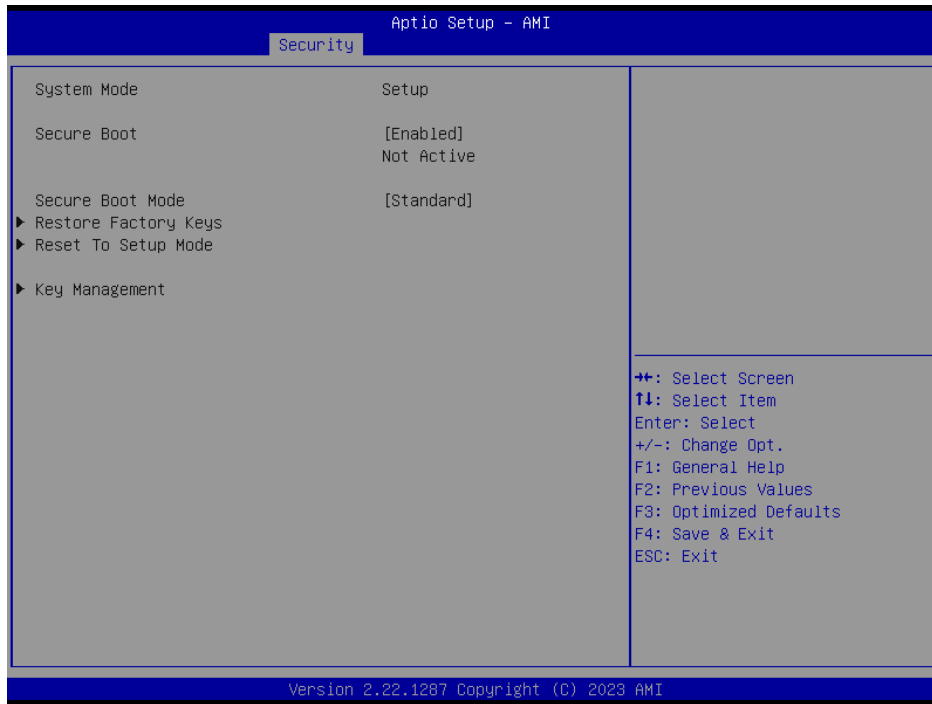



3.6.5 Boot

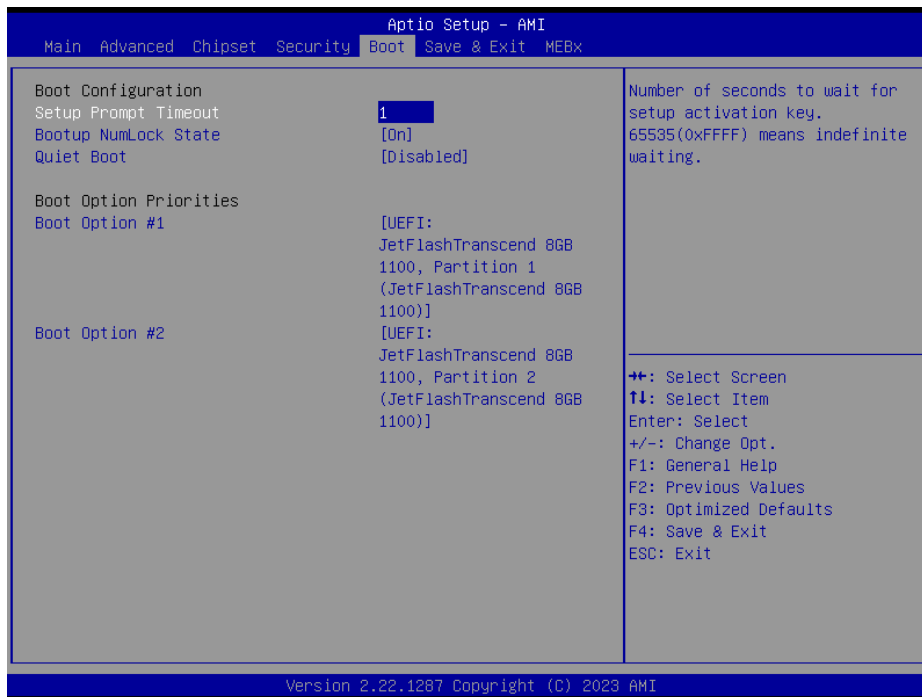

Item	Option	Description
Setup Prompt Timeout	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default]	Select the keyboard NumLock state

	Off	
<b>Quiet Boot</b>	Disabled[Default] Enabled	Enables or disables Quiet Boot option
<b>Boot Option #1/2</b>	Set the system boot order.	

### 3.6.6 Save and exit

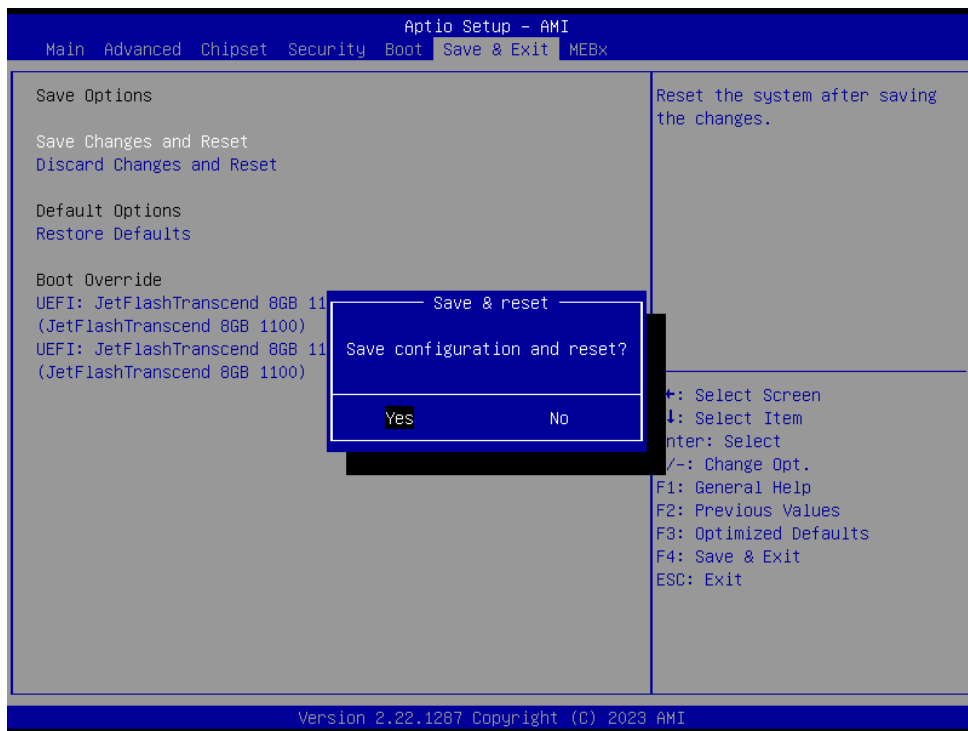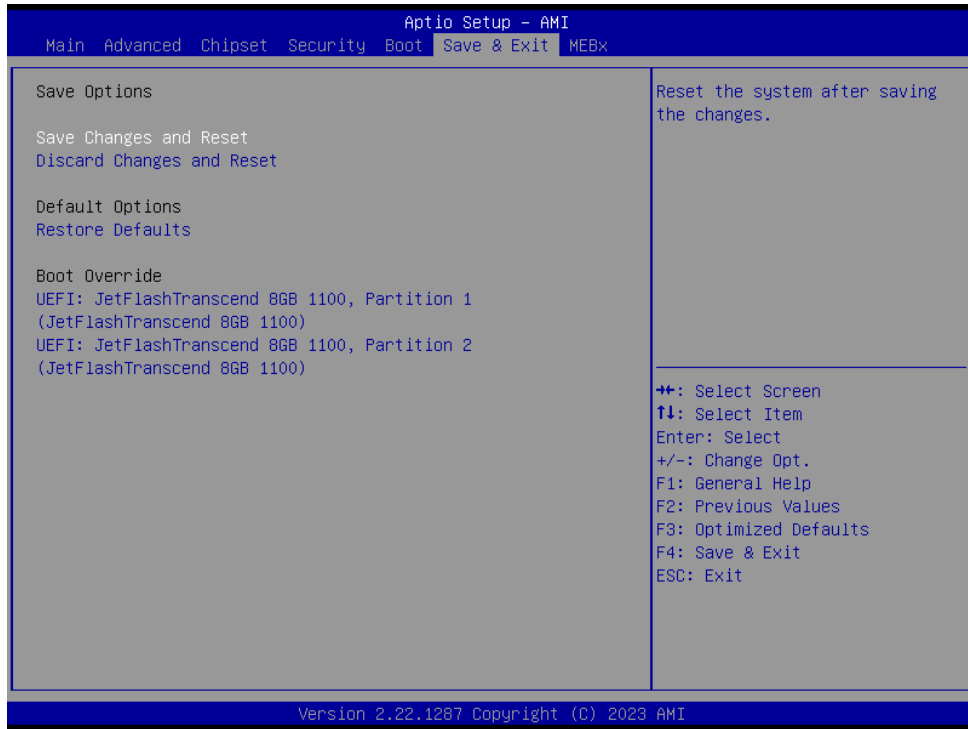

### **3.6.6.1 *Save Changes and Reset***

Reset the system after saving the changes.

### **3.6.6.2 *Discard Changes and Reset***

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

### **3.6.6.3 *Restore Defaults***

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

### **3.6.6.4 *Launch EFI Shell from filesystem device***

Attempts to Launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.

# 4. Drivers Installation

---



**Note:** Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

## 4.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.



**Note:** The installation procedures and screen shots in this section are based on Windows 11 operation system. If the warning message appears while the installation process, click Continue to go on.



**Step 3. Click Install.**



**Step1. Click Next.**



**Step 4. Click Finish to complete setup.**



**Step 2. Click Accept.**


## 4.2 Install VGA Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 11 operation system. If the warning message appears while the installation process, click Continue to go on.

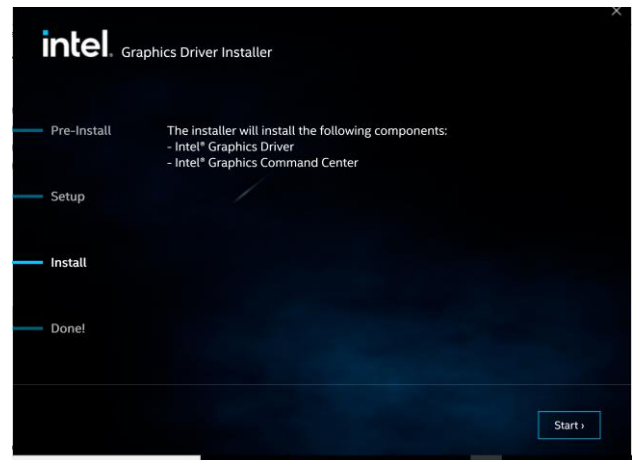


**Step 3. Click Start.**



**Step 1. Click Begin installation.**

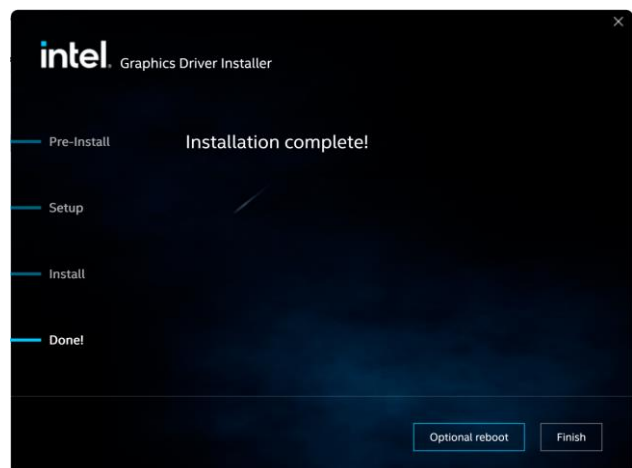

**Step 4. Complete setup.**

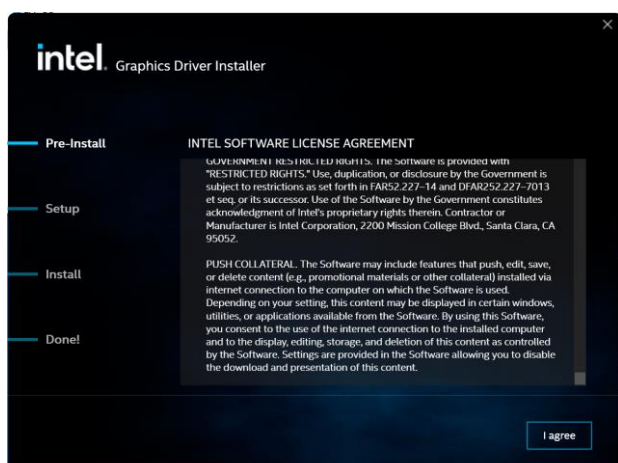

**Step 2.**  
Click **I agree** to accept license agreement.


## 4.3 Install ME Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 11 operation system. If the warning message appears while the installation process, click Continue to go on.

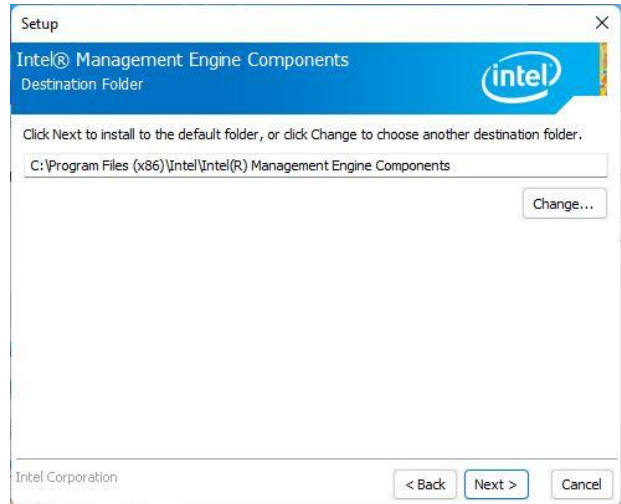


**Step 3. Click Next.**

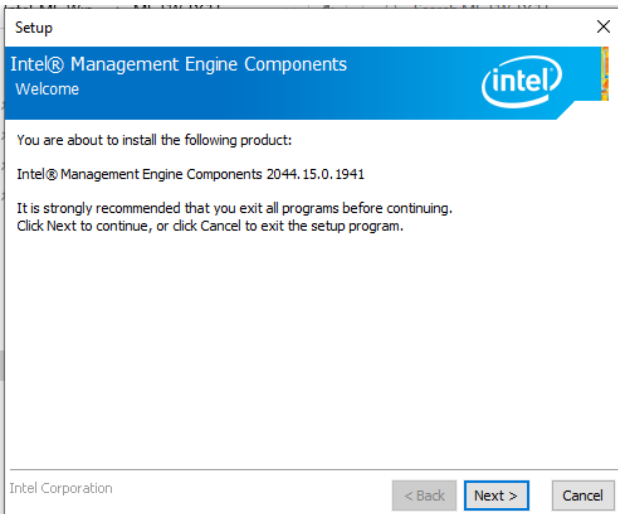

**Step 1. Click Next** to continue setup.

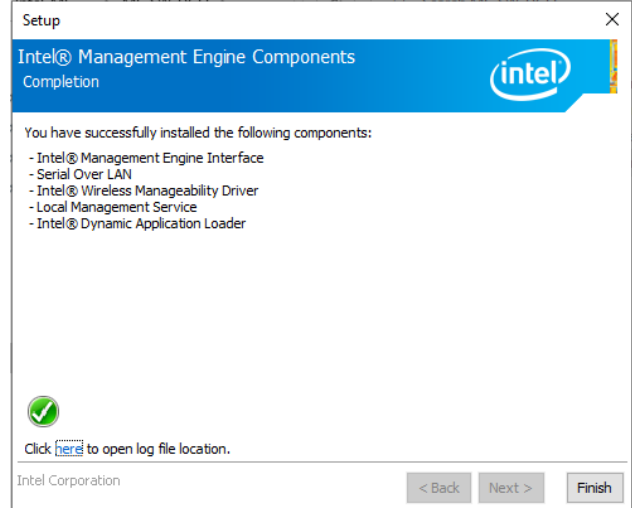

**Step 4. Click Finish** to complete setup.

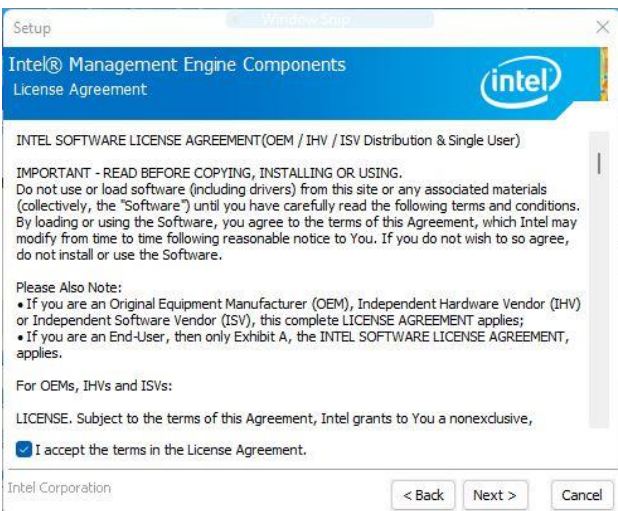

**Step 2. Click Next.**




## 4.4 Install LAN Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalu.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 11 operation system. If the warning message appears while the installation process, click Continue to go on.

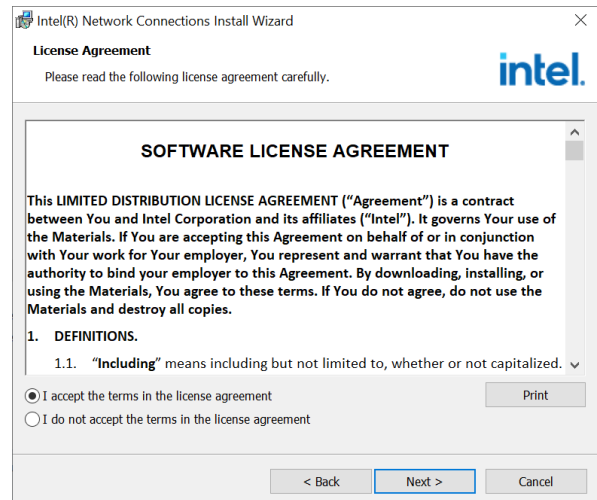


**Step 3. Click Next.**

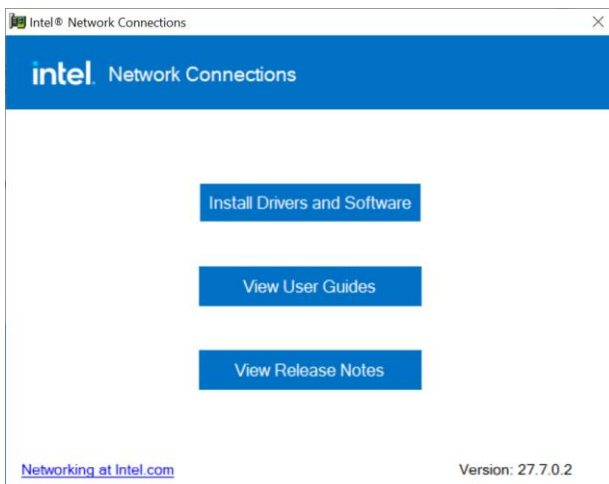


**Step 1. Click Install Drivers and Software.**

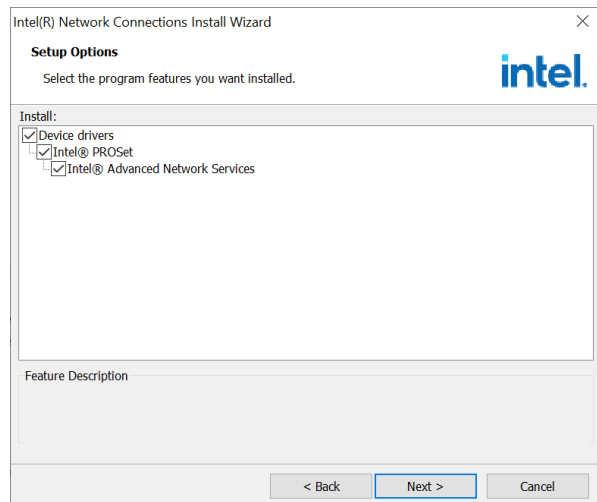

**Step 4. Click Next.**

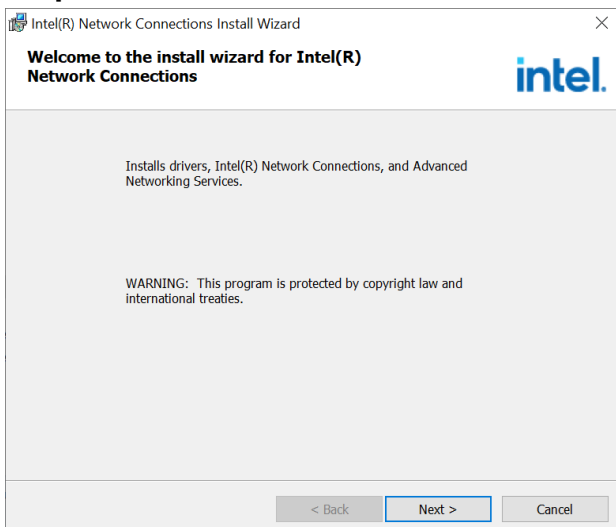


**Step 2. Click Next.**

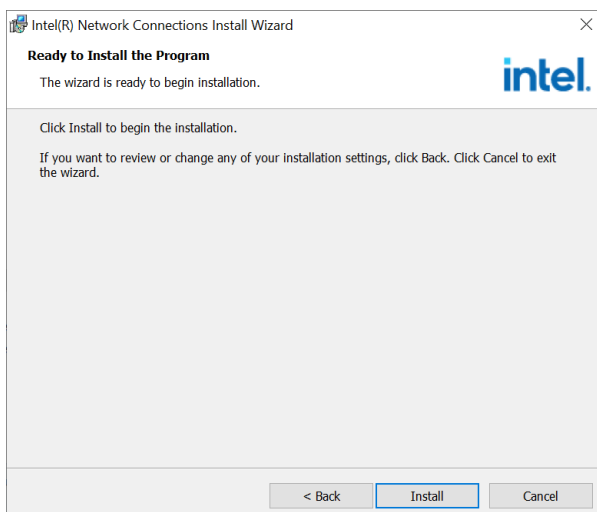

**Step 5. Click Install.**

## ECM-ADLS User's Manual

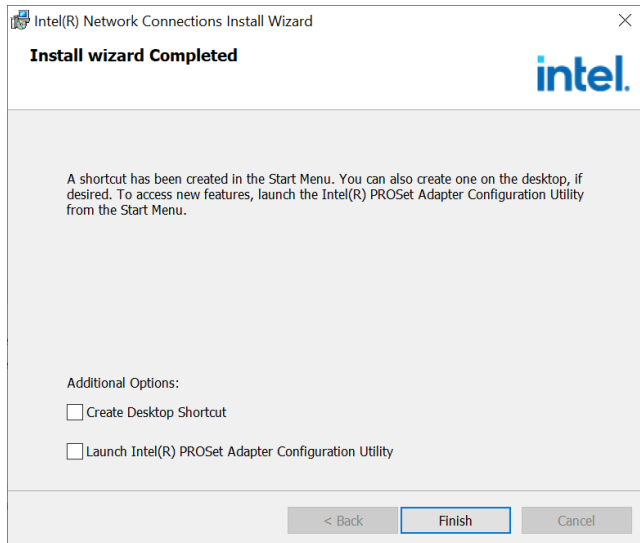

**Step 6.** Click **Finish** to complete setup.


## 4.5 Install Serial IO Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalu.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 11 operation system. If the warning message appears while the installation process, click Continue to go on.

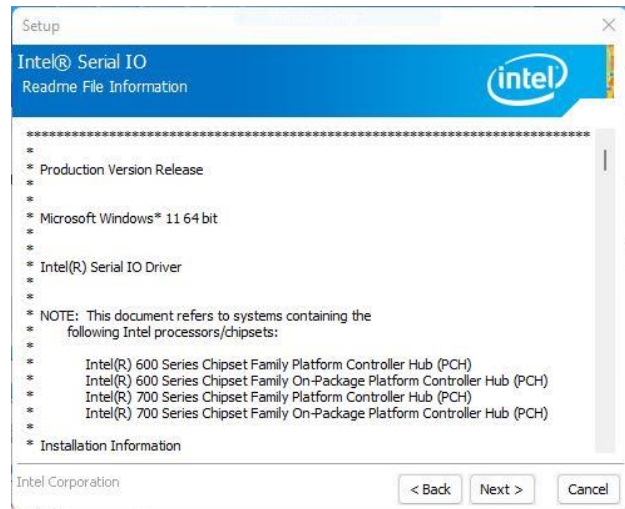


**Step 3. Click Next.**




**Step 1. Click Next.**

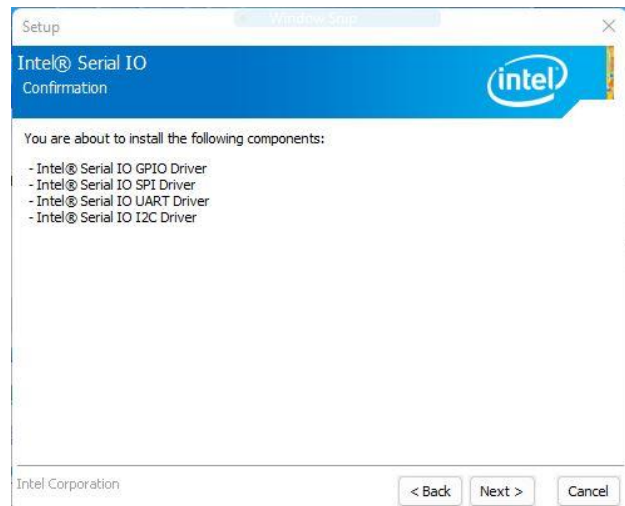

**Step 4. Click Next.**

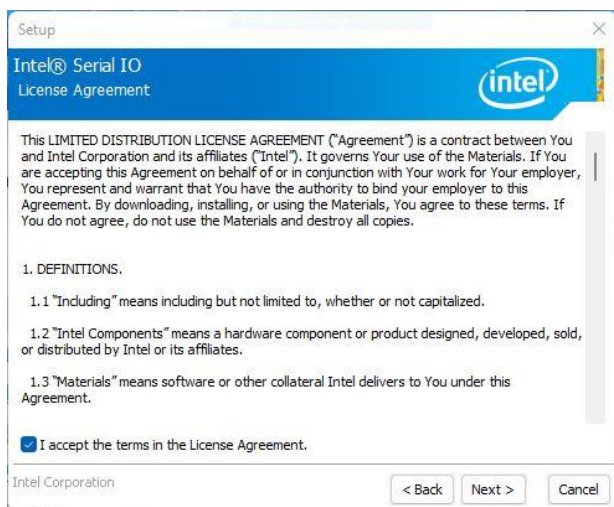

**Step 2. Click Next.**

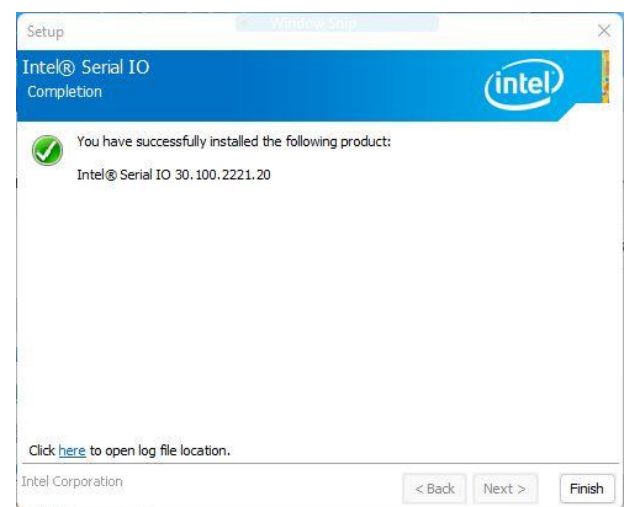

**Step 5. Click Finish to complete setup.**

## 4.6 Install Audio Driver (For Realtek ALC888S)


All drivers can be found on the Avalue

Official Website:


<http://www.avalue.com.tw>.



**Note:** The installation procedures and screen shots in this section are based on Windows 11 operation system.

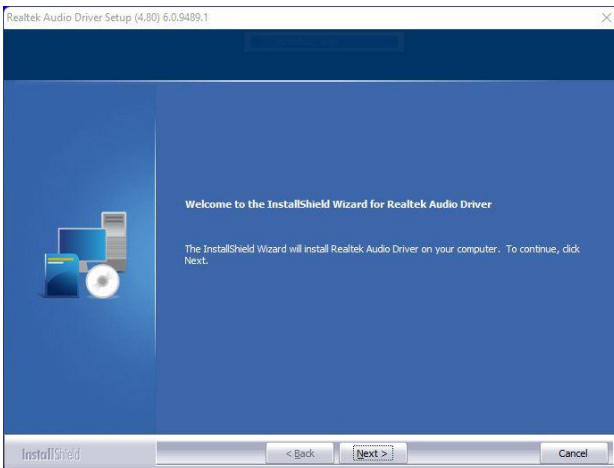

**Step 1.** Click **Next** to continue setup.



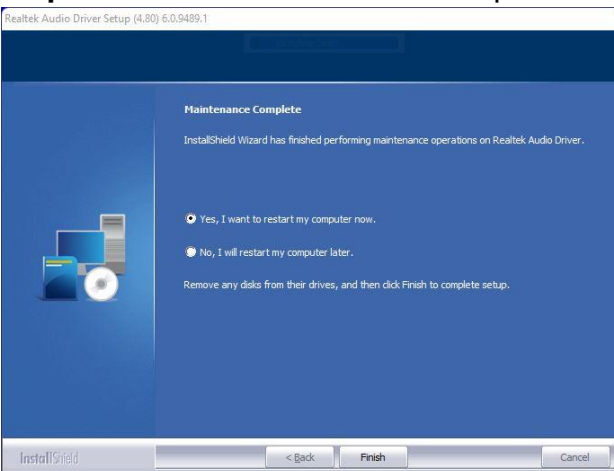


**Step 2.** Click **Finish** to complete the setup.

# 5. Mechanical Drawing

---

# ECM-ADLS User's Manual

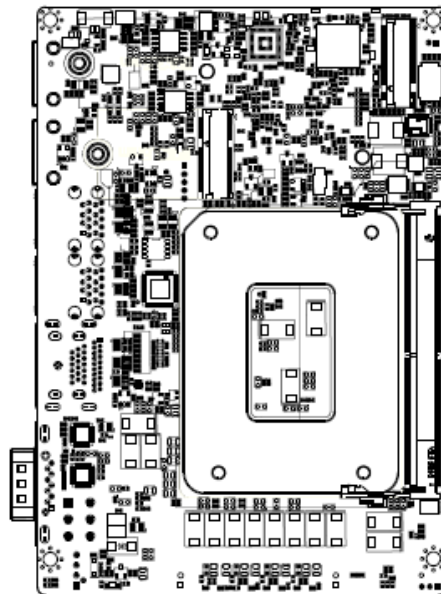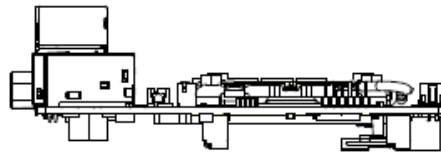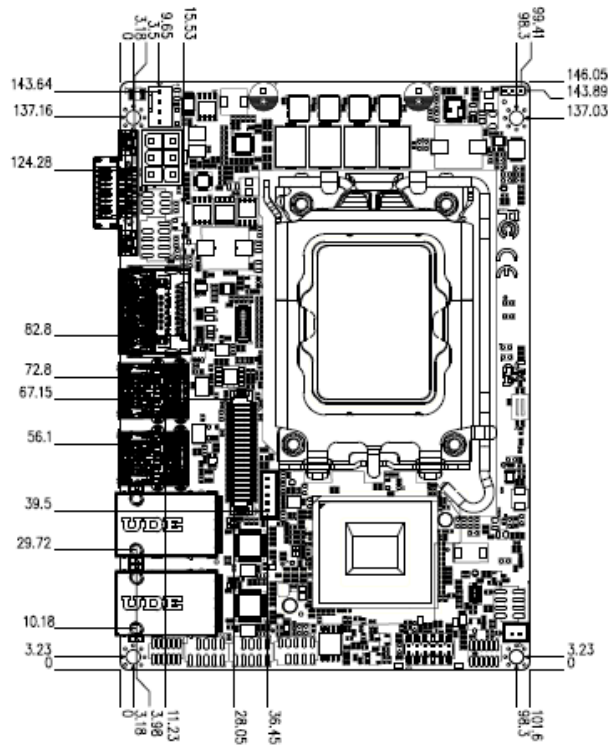

Unit: mm

**Thermal Solutions:**

ECM-ADLS standard package include cooler, please follow below for assembly.

