


OFP-07W33

System dust cover with panel mount SOP

2024/3/21

Empowering a
SMART FUTURE



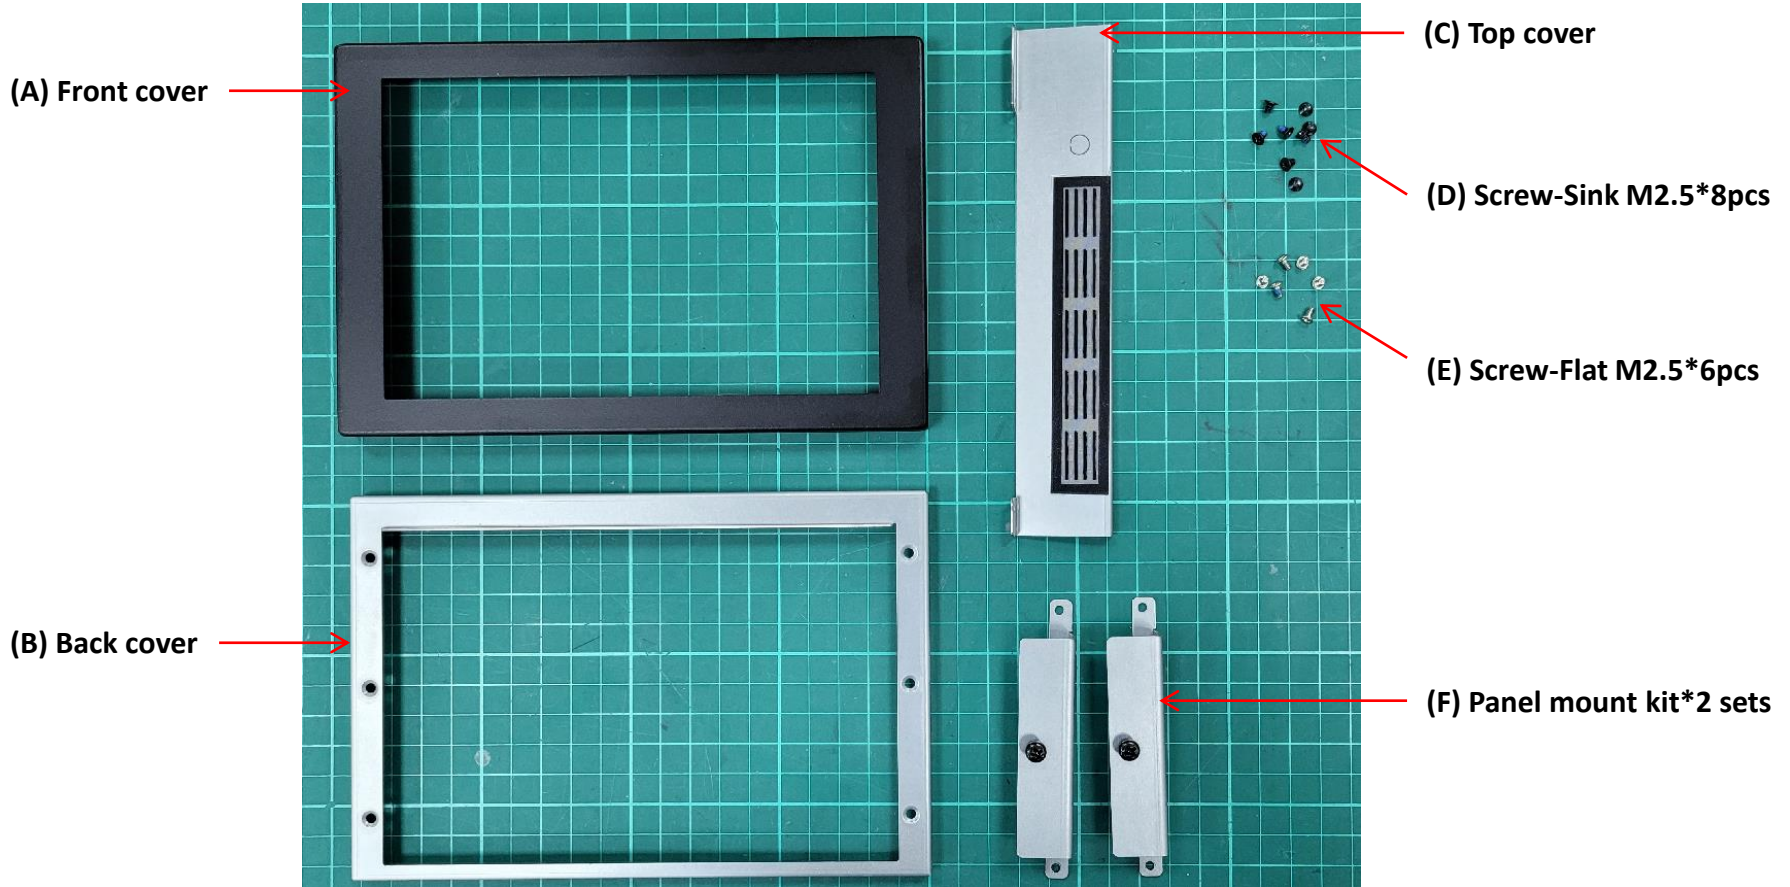


System Dust Cover SOP



Step1. Remove screws*2 from OFP-07W33 (please refer to red circle in below photo)




Step2. Assemble (C) Top cover with Step1 screws*2 and (E) Screw-Flat M2.5*2

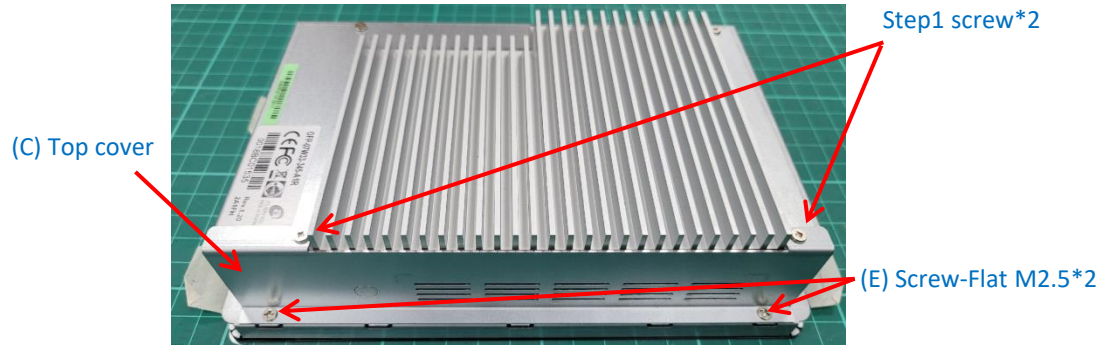

Step3. Fasten (B) Back cover with (D) Screw-Sink M2.5*6



Step4. Assemble (A) Front cover with (D) Screw-Sink M2.5*6

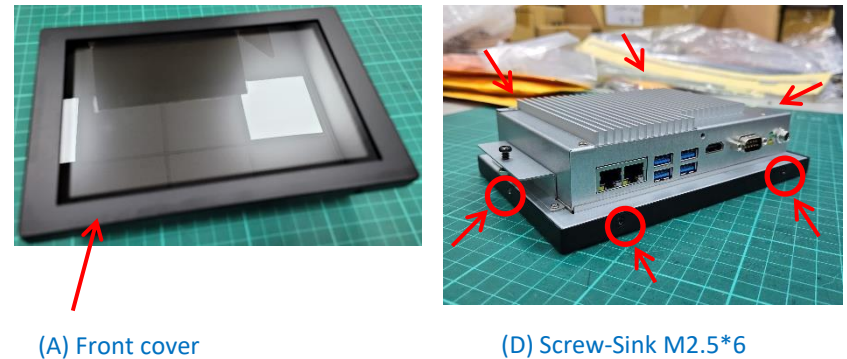



Step1. After finished OFP-07W33 with System Dust Cover, assemble right/left panel mount kit with **(E) Screw-Flat M2.5*2**




(F) Panel mount kit*2 sets



(E) Screw-Flat M2.5*2
(Both right/left sides)

Step2. Fasten/Loosen system on wall or cabinet through adjusting M4 screws in **(F) Panel mount kit**.

M4 screws in (F) Panel mount kit

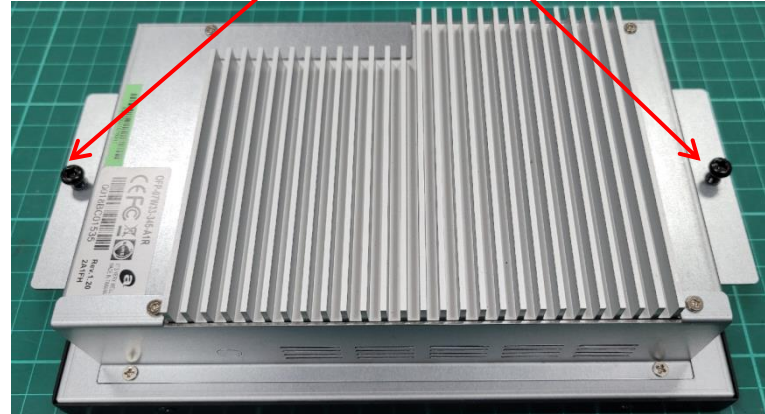

Empowering a
SMART FUTURE

Thank You For Listening

