




1. Assemble the mainboard with M3\*14L copper studs.

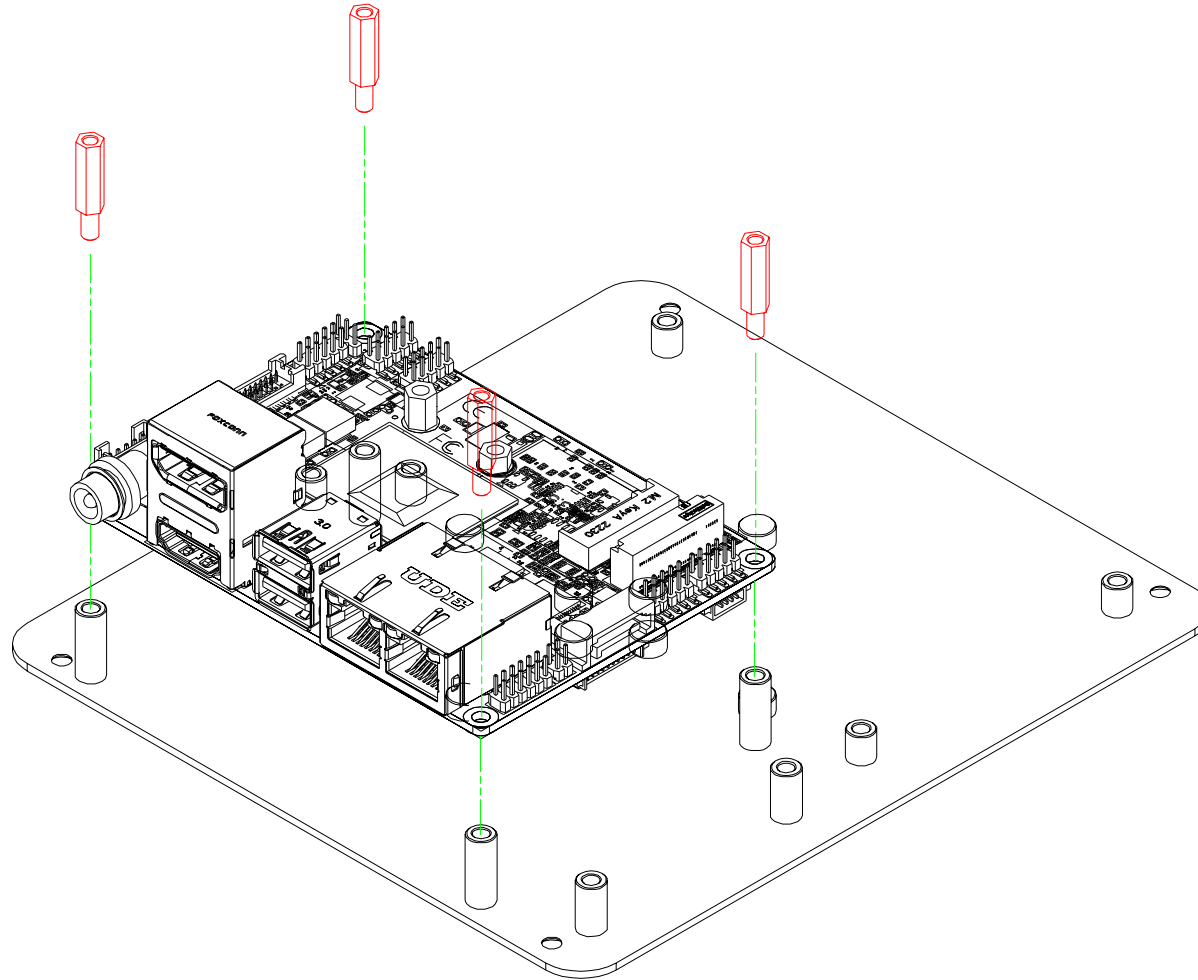

2. Remove the releasing paper from the thermal pad before assemble the heatsink to the mainboard.

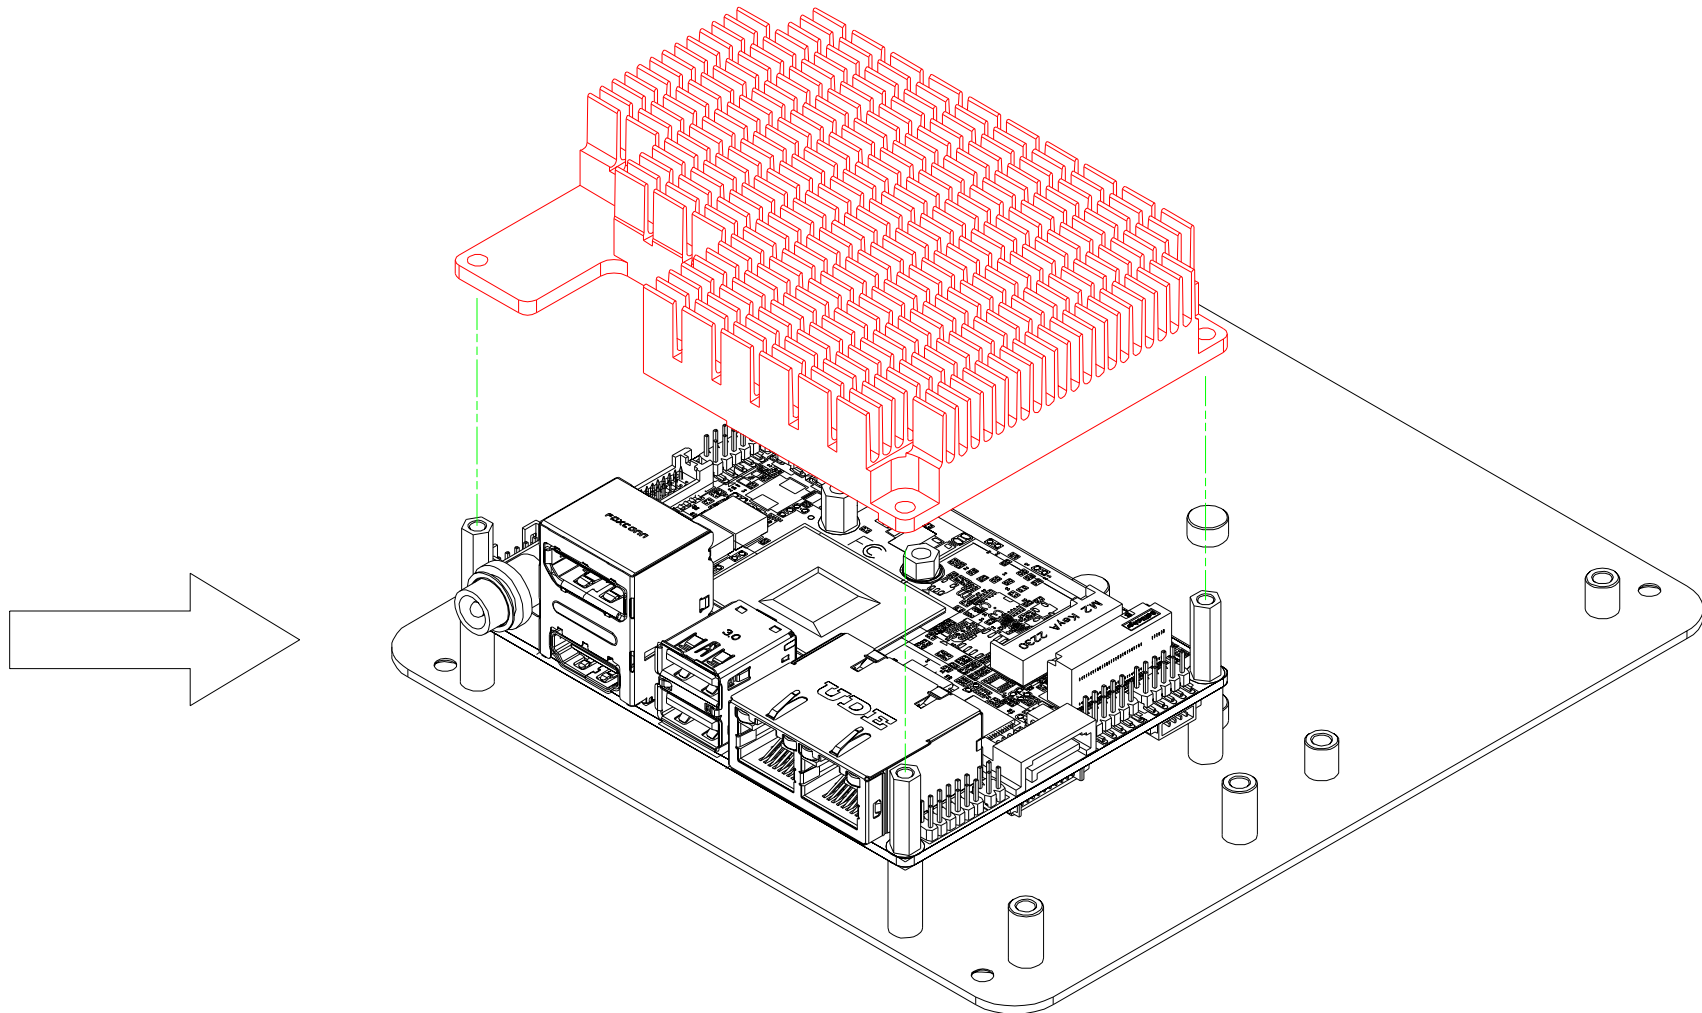

3. Use M3\*6L screws to assemble the heatsink to the mainboard.

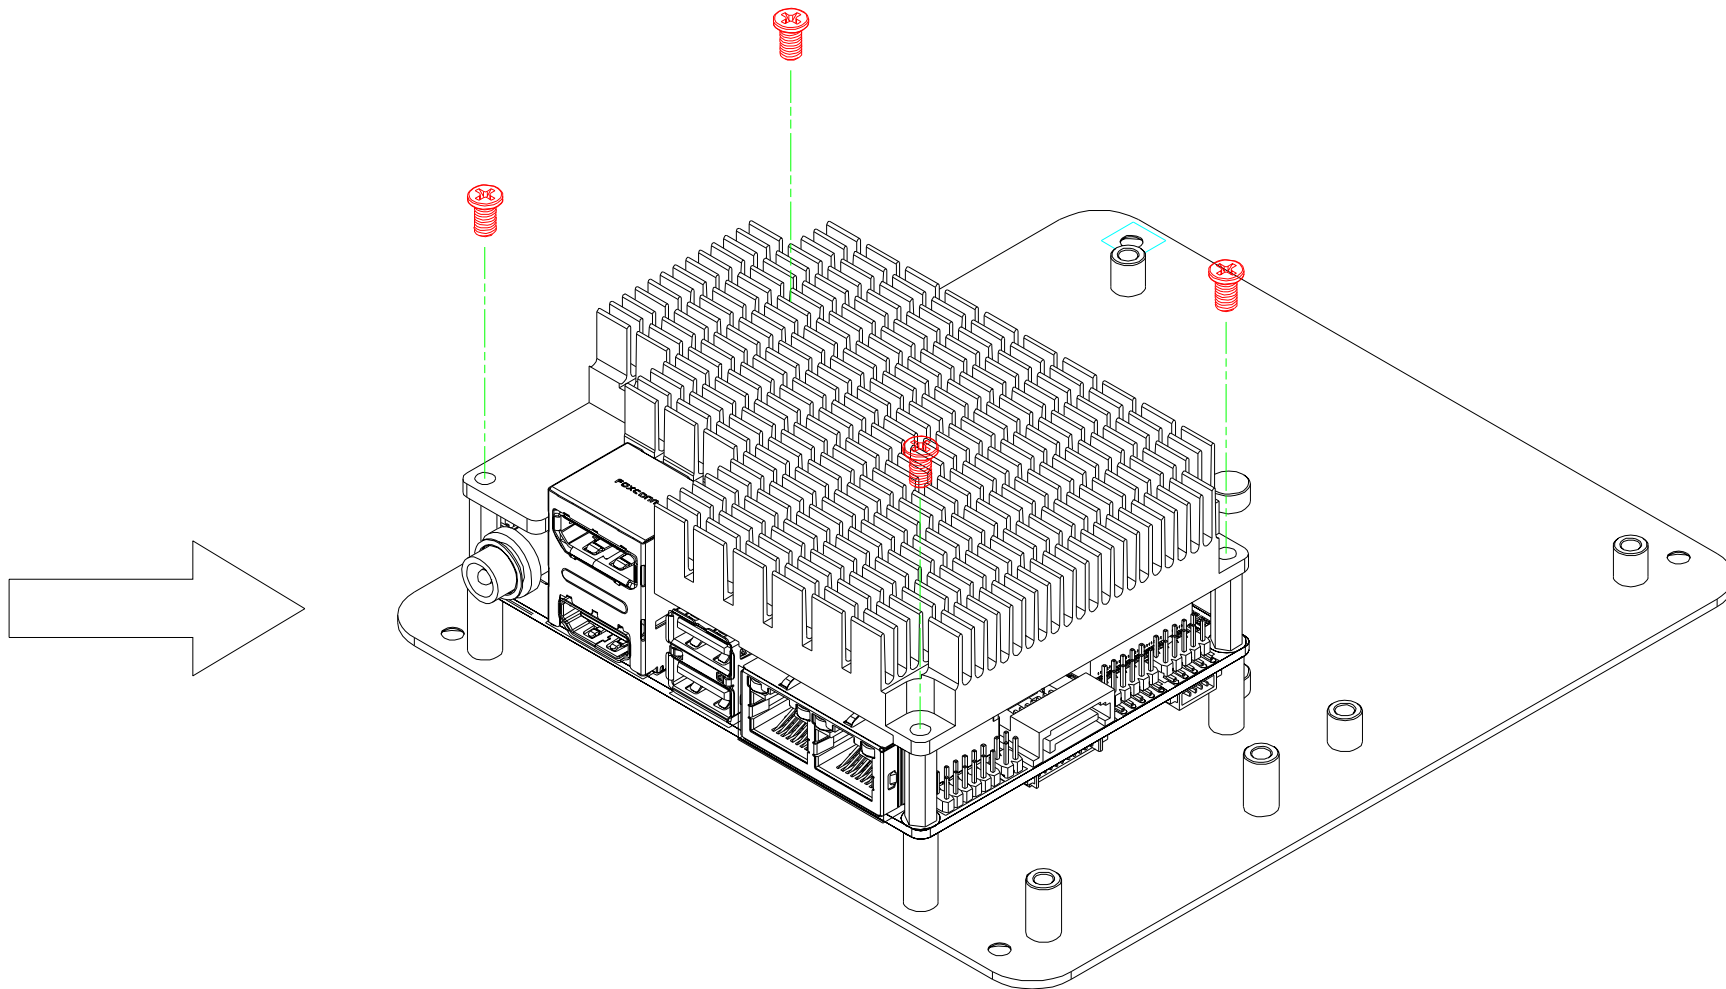

## 4.Heatsink assembled to the mainboard.

