




1. Assemble the mainboard with M3*14L copper studs.

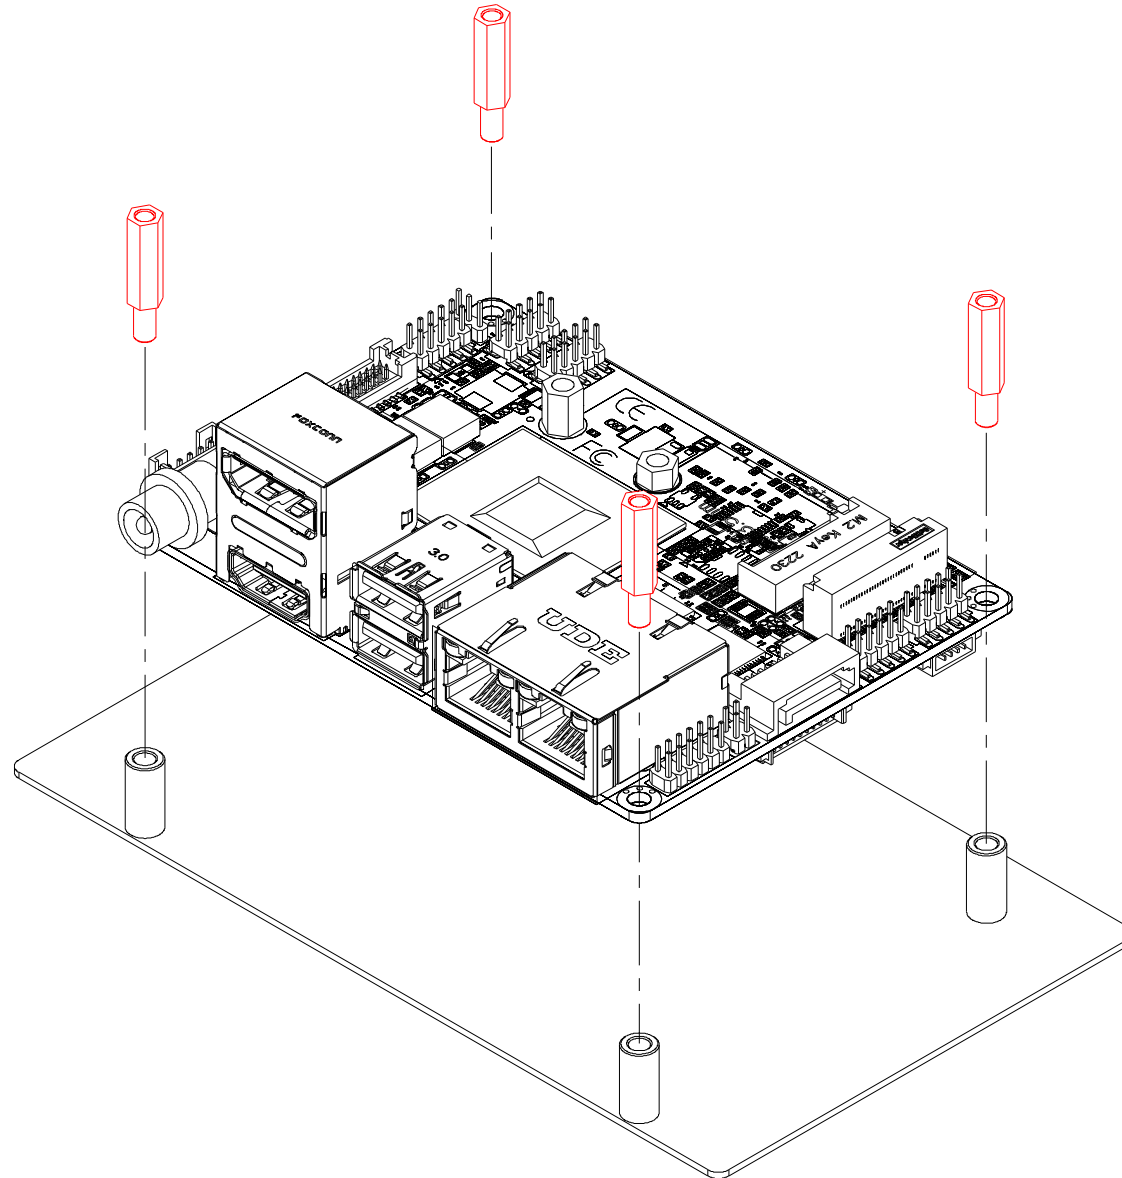

2. Remove the releasing paper from the thermal pad before assemble the heatspreader to the mainboard.

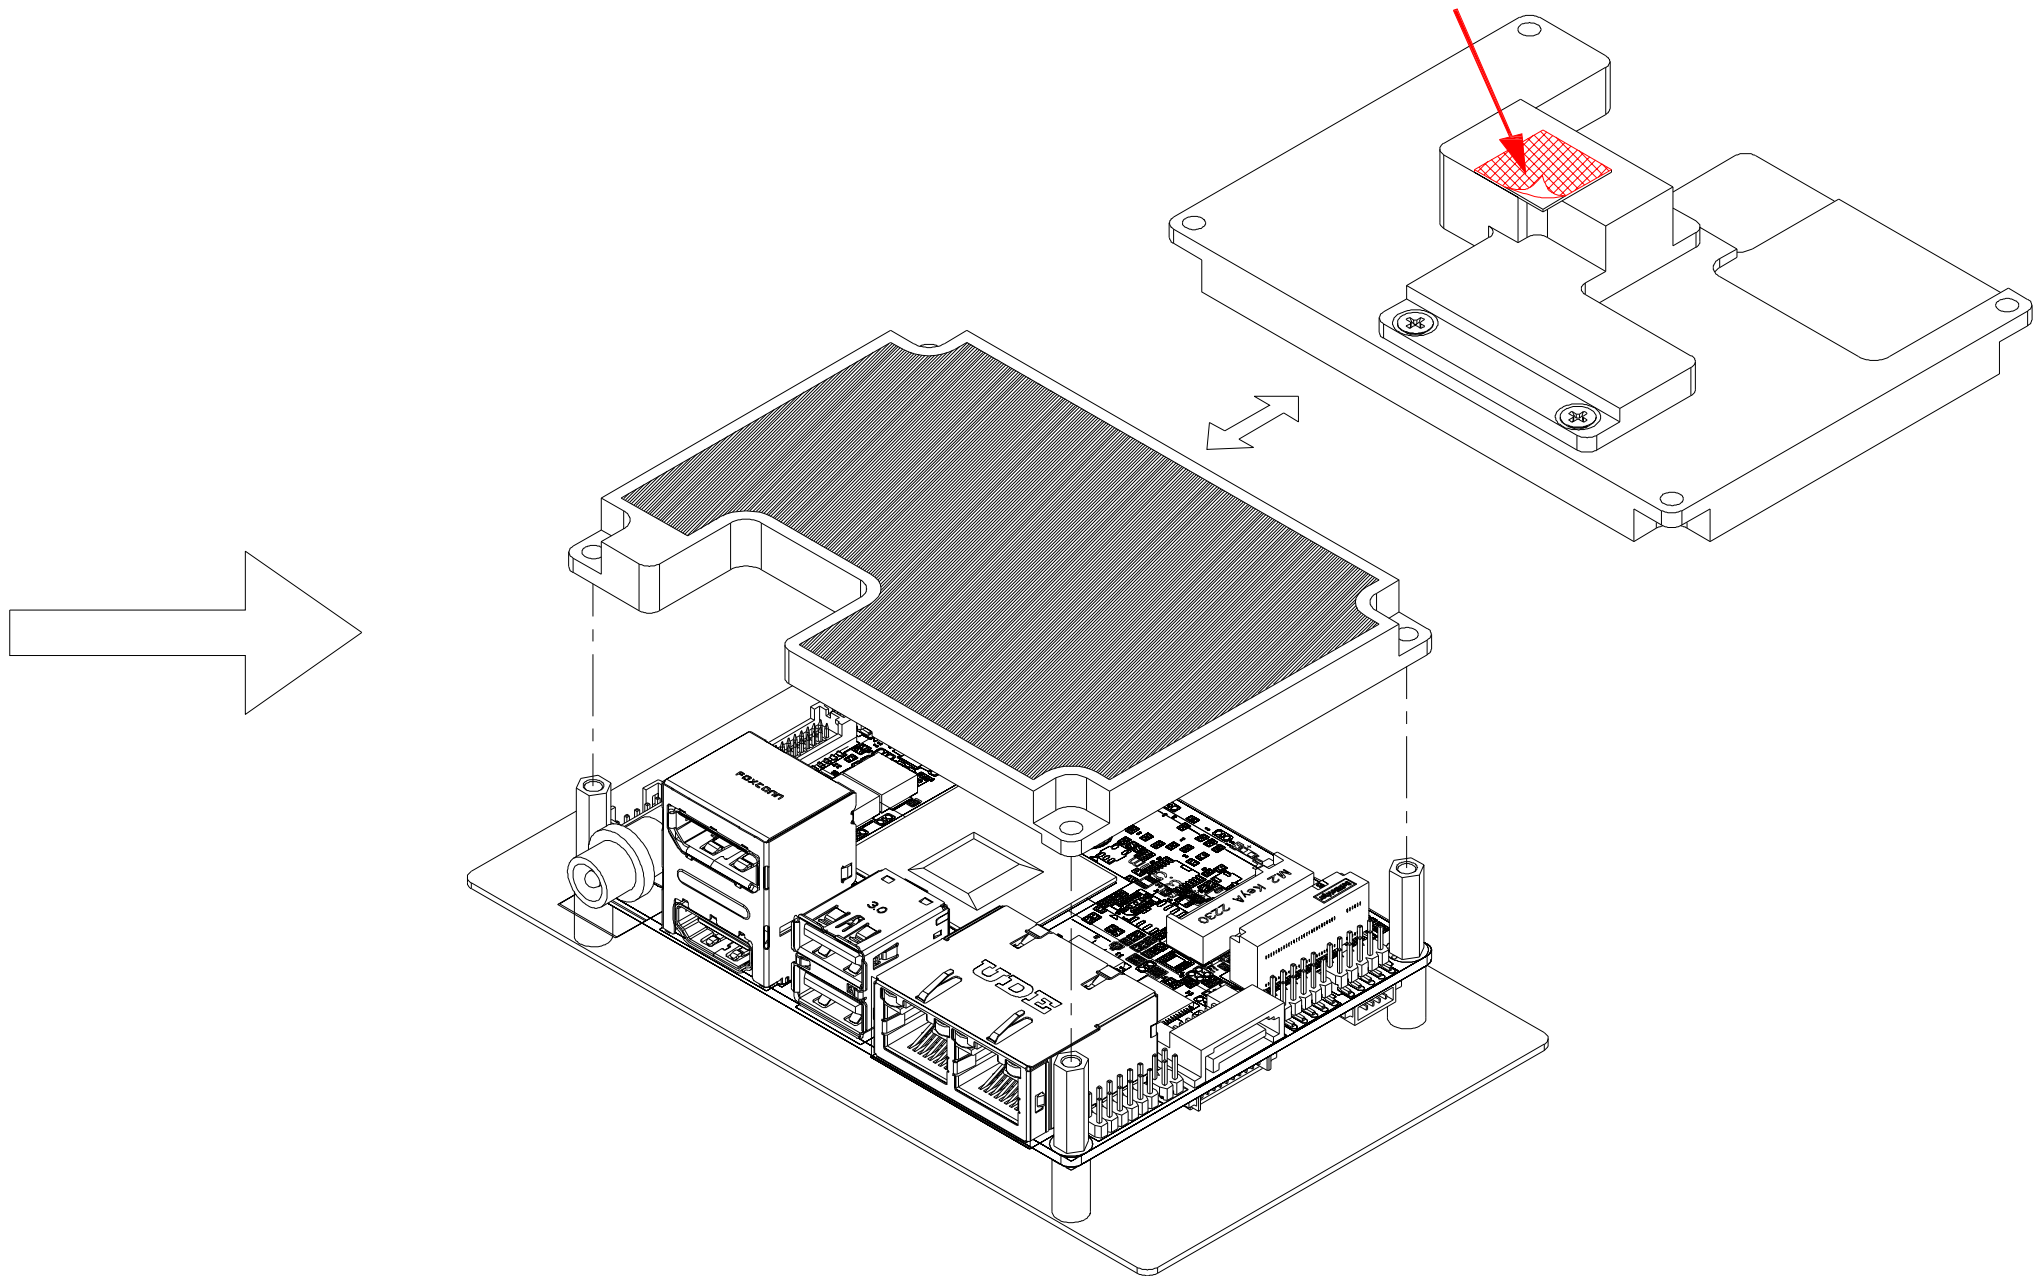

3. Use M3*6L screws to assemble the heatspreader to the mainboard

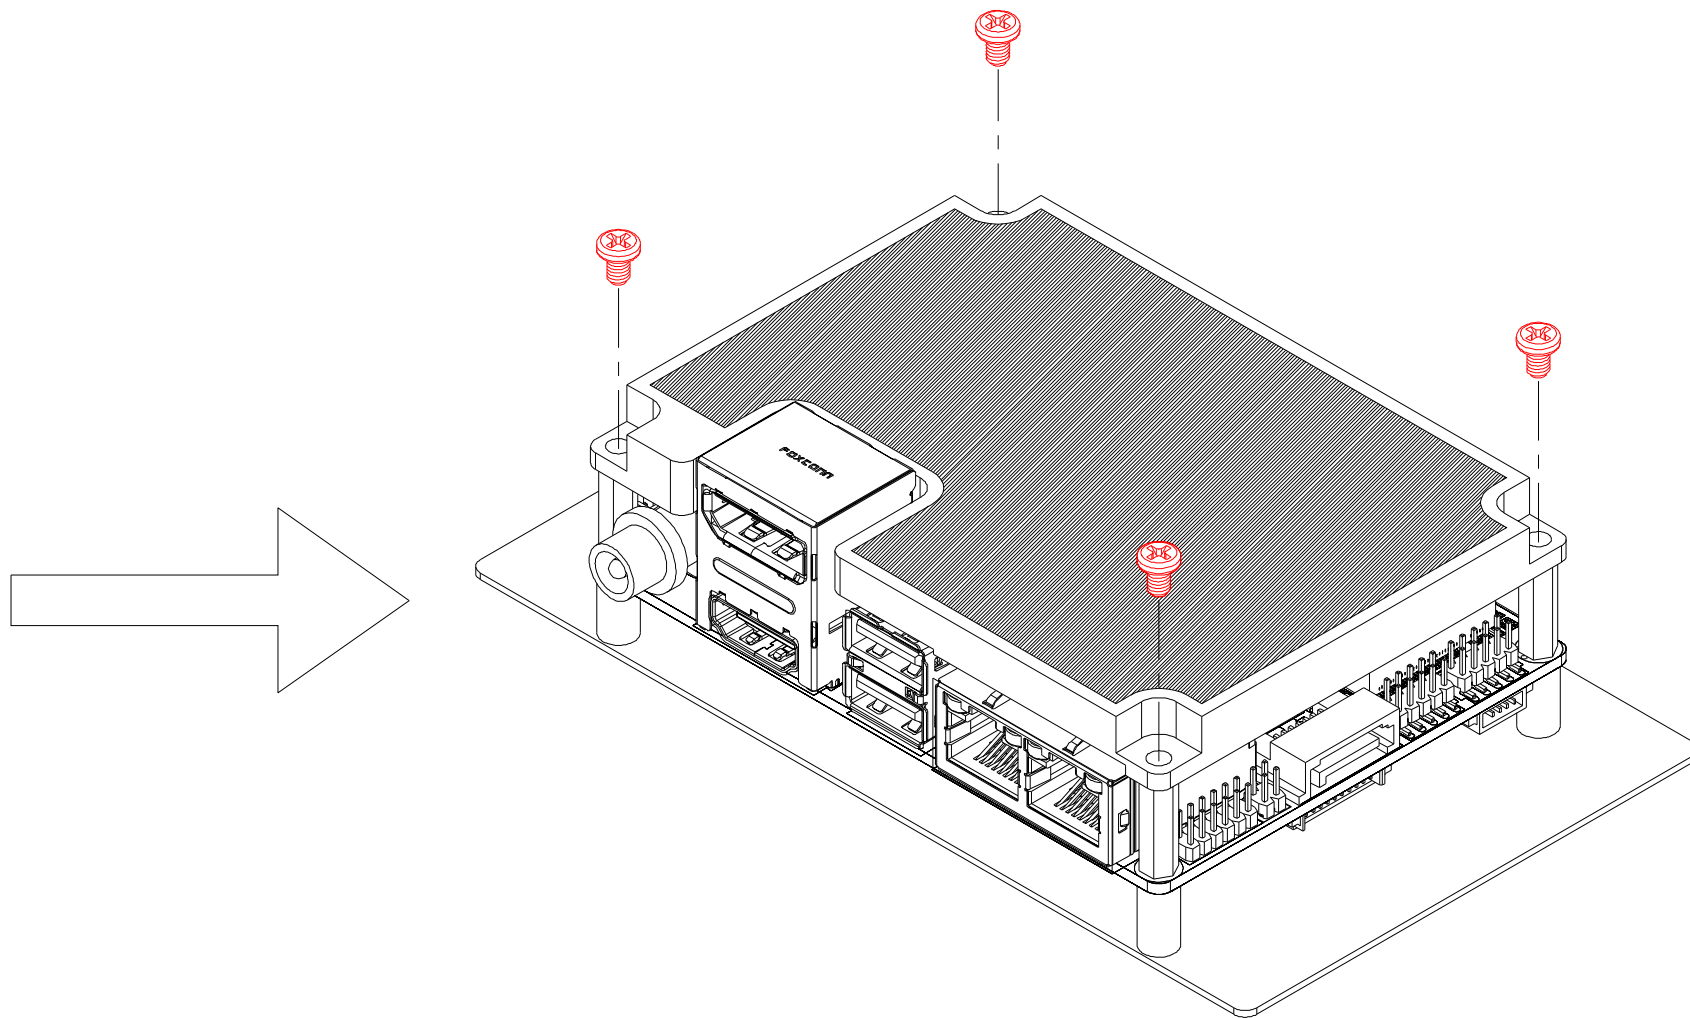

4. Heatspreader assembled to the mainboard

