

# ECM-EHL3

Intel® Elkhart Lake 3.5" Micro Module

## User's Manual

---

3<sup>rd</sup> Ed –07 May 2024

## FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

## Notice

This guide is designed for experienced users to setup the system within the shortest time. For detailed information, please always refer to the electronic user's manual.

## Copyright Notice

Copyright © 2024 Avalue Technology Inc., ALL RIGHTS RESERVED.

No part of this document may be reproduced, copied, translated, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the prior written permission of the original manufacturer.

## Trademark Acknowledgement

Brand and product names are trademarks or registered trademarks of their respective owners.

## Disclaimer

Avalue Technology Inc. reserves the right to make changes, without notice, to any product, including circuits and/or software described or contained in this manual in order to improve design and/or performance. Avalue Technology assumes no responsibility or liability for the use of the described product(s), conveys no license or title under any patent, copyright, or masks work rights to these products, and makes no representations or warranties that

these products are free from patent, copyright, or mask work right infringement, unless otherwise specified. Applications that are described in this manual are for illustration purposes only. Avalue Technology Inc. makes no representation or warranty that such application will be suitable for the specified use without further testing or modification.

### Life Support Policy

Avalue Technology's PRODUCTS ARE NOT FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE PRIOR WRITTEN APPROVAL OF Avalue Technology Inc.

As used herein:

1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into body, or (b) support or sustain life and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.
2. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

### A Message to the Customer

#### *Avalue Customer Services*

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

#### *Technical Support*

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

[www.avalue.com](http://www.avalue.com)

## ECM-EHL3 User's Manual

### *Product Warranty*

Avalue warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Avalue, or which have been subject to misuse, abuse, accident or improper installation. Avalue assumes no liability under the terms of this warranty as a consequence of such events. Because of Avalue's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If any of Avalue's products is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time, and freight. Please consult your dealer for more details. If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU type and speed, Avalue's products model name, hardware & BIOS revision number, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information available.
3. If your product is diagnosed as defective, obtain an RMA (return material authorization) number from your dealer. This allows us to process your good return more quickly.
4. Carefully pack the defective product, a complete Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

# Content

<b>1. Getting Started</b> .....	<b>8</b>
1.1 Safety Precautions .....	8
1.2 Packing List.....	8
1.3 Document Amendment History .....	9
1.4 Manual Objectives.....	10
1.5 System Specifications .....	11
1.6 Architecture Overview—Block Diagram .....	15
<b>2. Hardware Configuration</b> .....	<b>16</b>
2.1 Product Overview.....	17
2.2 Jumper and Connector List.....	18
2.3 Setting Jumpers & Connectors .....	20
2.3.1 eDP/LVDS mode selector (JEDPSW1).....	20
2.3.2 Clear CMOS (JRTC1) .....	20
2.3.3 AT/ATX Input power select (JAT1).....	21
2.3.4 LCD inverter connector (BKL1) .....	21
2.3.5 Serial port 1 connector (JCOM1) .....	22
2.3.6 Serial port 2 connector (JCOM2) .....	22
2.3.7 Serial port 3/4/5/6 connector (JCOM3) .....	23
2.3.8 General purpose I/O connector (JDIO1) .....	24
2.3.9 SATA Power connector (SATA_PWR1).....	24
2.3.10 USB2.0 connector (JUSB1) .....	25
2.3.11 USB2.0 connector (JUSB2) .....	25
2.3.12 BIOS SPI connector (BIOS_SPI1).....	26
2.3.13 Battery connector (BAT1) .....	26
2.3.14 Front Panel connector (JFP1).....	27
2.3.15 PC Buzzer connector (JBZ1) .....	27
2.3.16 EC Debug eSPI connector (JESPI1) .....	28
2.3.17 Audio connector (JAUDIO1) .....	28
2.3.17.1 Signal Description – Audio connector (JAUDIO1).....	28
2.3.18 LVDS connector (LVDS1) .....	29
2.3.19 AMP connector (JAMP1) .....	30
2.3.20 SIM card slot (NSIM2).....	30
2.3.21 EDP connector (EDP1).....	31
<b>3. BIOS Setup</b> .....	<b>32</b>
3.1 Introduction .....	33
3.2 Starting Setup .....	33

## ECM-EHL3 User's Manual

3.3	Using Setup .....	34
3.4	Getting Help .....	35
3.5	In Case of Problems .....	35
3.6	BIOS setup .....	36
3.6.1	Main Menu .....	36
3.6.1.1	System Language .....	37
3.6.1.2	System Date .....	37
3.6.1.3	System Time .....	37
3.6.2	Advanced Menu .....	37
3.6.2.1	CPU Configuration .....	38
3.6.2.2	Power & Performance .....	39
3.6.2.2.1	CPU – Power Management Control .....	39
3.6.2.2.2	GT – Power Management Control .....	41
3.6.2.3	PCH-FW Configuration .....	42
3.6.2.3.1	Firmware Update Configuration .....	42
3.6.2.3.2	PTT Configuration .....	43
3.6.2.4	Trusted Computing .....	43
3.6.2.5	APCI Settings .....	44
3.6.2.6	IT5571 Super IO Configuration .....	45
3.6.2.6.1	Serial Port 1 Configuration .....	46
3.6.2.6.2	Serial Port 2 Configuration .....	47
3.6.2.7	HW Monitor .....	48
3.6.2.8	NCT5124DSEC Super IO Configuration .....	48
3.6.2.8.1	Serial Port 3 Configuration .....	49
3.6.2.8.2	Serial Port 4 Configuration .....	49
3.6.2.8.3	Serial Port 5 Configuration .....	50
3.6.2.8.4	Serial Port 6 Configuration .....	50
3.6.2.9	S5 RTC Wake Settings .....	51
3.6.2.10	Serial Port Console Redirection .....	52
3.6.2.11	USB Configuration .....	52
3.6.2.12	Network Stack Configuration .....	53
3.6.2.13	NVMe Configuration .....	54
3.6.3	Chipset .....	54
3.6.3.1	System Agent (SA) Configuration .....	55
3.6.3.1.1	Memory Configuration .....	55
3.6.3.1.2	Graphics Configuration .....	56
3.6.3.2	PCH-IO Configuration .....	57
3.6.3.2.1	PCI Express Configuration .....	57
3.6.3.2.2	SATA Configuration .....	64
3.6.3.2.3	USB Configuration .....	65

3.6.3.2.4	HD Audio Configuration .....	66
3.6.3.3	Board & Panel Configuration .....	66
3.6.4	Security .....	68
3.6.4.1	Secure Boot .....	69
3.6.4.1.1	Key Management .....	70
3.6.5	Boot .....	70
3.6.6	Save and exit .....	71
3.6.6.1	Save Changes and Exit .....	72
3.6.6.2	Discard Changes and Reset .....	72
3.6.6.3	Restore Defaults .....	72
3.6.6.4	Restore User Defaults .....	72
<b>4.</b>	<b>Drivers Installation .....</b>	<b>73</b>
4.1	Install Chipset Driver .....	74
4.2	Install ME Driver .....	75
4.3	Install VGA Driver .....	76
4.4	Install Audio Driver .....	78
4.5	Install Ethernet Driver .....	79
4.6	Install HID Driver .....	81
<b>5.</b>	<b>Mechanical Drawing .....</b>	<b>82</b>

# 1. Getting Started

## 1.1 Safety Precautions

### Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

### Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

## 1.2 Packing List

Before you begin installing your single board, please make sure that the following materials have been shipped:

- 1 x 3.5" ECM-EHL3 Micro Module
- 1 x CPU Heatsink
- 1 x Cable set contains the followings:
  - 1 x Serial ATA cable (7-pin, standard)
  - 1 x Wire SATA power cable (15-pin, 2P/2.0mm)
  - 1 x Flat cable 9P(M)-PHD 10P/2.0mm)
- 3M foam (VHB-4622 10mm\*20mm\*1.1mm)
- 1 x M.2 Module mounting bracket screw set



---

If any of the above items is damaged or missing, contact your retailer.

---



### 1.3 Document Amendment History

Revision	Date	By	Comment
1 <sup>st</sup>	September 2022	Avalue	Initial Release
2 <sup>nd</sup>	December 2022	Avalue	Update Mechanical Drawing
3 <sup>rd</sup>	May 2024	Avalue	Update 2.2 Jumper and Connector List

This manual describes in details Avalue Technology ECM-EHL3 Single Board.

We have tried to include as much information as possible but we have not duplicated information that is provided in the standard IBM Technical References, unless it proved to be necessary to aid in the understanding of this board.

We strongly recommend that you study this manual carefully before attempting to set up ECM-EHL3 or change the standard configurations. Whilst all the necessary information is available in this manual we would recommend that unless you are confident, you contact your supplier for guidance.

Please be aware that it is possible to create configurations within the CMOS RAM that make booting impossible. If this should happen, clear the CMOS settings, (see the description of the Jumper Settings for details).

If you have any suggestions or find any errors regarding this manual and want to inform us of these, please contact our Customer Service department with the relevant details.

## 1.5 System Specifications

System	
<b>CPU</b>	Onboard Intel® Pentium®/Celeron®/Atom™ SoC BGA Processor (Elkhart Lake Platform 4.5~12W)- (with CPU Bottom Mounted)
<b>BIOS</b>	AMI uEFI BIOS, 256Mbit SPI Flash ROM (Winbond W25R256JVEIQ)
<b>I/O Chip</b>	EC ITE IT5571
<b>Memory</b>	One 260-pin DDR4 3200 MHz SO-DIMM socket, supports up to 32GB Max
<b>Watchdog Timer</b>	H/W Reset, 1sec. – 65535sec./min.1sec. or 1min. step
<b>H/W Status Monitor</b>	CPU temperature monitoring Voltages monitoring CPU fan speed control
<b>TPM</b>	Onboard NuvoTon NPCT754AADYX support TPM 2.0, co-lay Infineon SLB 9670
Expansion	
<b>M.2</b>	1 x M.2 Type M support 2260/2242 (with 1 x PCI-e x2 signal) , standard package with 60 to 42 bracket + screw set 1 x M.2 Type B 3042/2242 (with SATA and USB3.0/USB2.0, with 1 x SIM card slot, support WWAN+GNSS or SSD) standard package with 52 to 42 bracket + screw set. * Only supports one SIM card (co-lay 1 x 10pin FPC connector for uSIM card adapter) * Does not support I2S and PCM functions 1 x M.2 Type E 2230 support WiFi module (1 x PCI-e x 1 & USB2.0 Signal) * Does not support PCM/I2S and UART functions
Storage	
<b>M.2</b>	1 x M.2 Type M support 2260/2242 (with 1 x PCI-e x2 signal) , standard package with 60 to 42 bracket + screw set 1 x M.2 Type B 3042/2242 (with SATA and USB3.0/USB2.0, with 1 x SIM card slot, support WWAN+GNSS or SSD) standard package with 52 to 42 bracket + screw set.
<b>SATA</b>	1 x SATA III
Edge I/O	
<b>LAN</b>	1 x Intel® I226LM 2.5 Gigabit Ethernet (LAN1) 2 x Intel® I210AT (Co-lay I210IT/I211AT) Gigabit Ethernet (LAN2,3)
<b>USB 2.0</b>	Double deck USB2.0 Type A
<b>USB 3.1</b>	2 x USB3.2 GEN2 x1
<b>DP</b>	2 x DP++
<b>DC Input</b>	Screw type DC Jack

## ECM-EHL3 User's Manual

	(co-lay with Phoenix connector)
<b>LED Indicator</b>	Power LED /HDD LED at IO
<b>Onboard I/O</b>	
<b>COM</b>	COM 1 & COM2: - COM 1 & COM2 support RS232/422/485 connector RS422/485 by BIOS setting. - 2 x 2 x 5 pin, pitch 2.00mm connector support RS-232/422/485 connector COM3 to 6: - 1 x 2 x 20 pin, pitch 2.00mm connector for COM3~6: support RS-232 connector
<b>USB 2.0</b>	2 x 2 x 5 pin, pitch 2.00mm connector (or pin header) for 4 USB2.0
<b>GPIO</b>	1 x 2 x 6 pin, pitch 2.00mm connector for GPIO
<b>SATA Power</b>	1 x SATA Power, pitch 2.00mm connector, must support 3.5"HDD
<b>Buzzer</b>	1 x buzzer connector
<b>Front Panel</b>	1 x 2 x 5 pin, pitch 2.00mm connector for front panel
<b>RTC Battery</b>	1 x 2 Pin Pitch 1.25mm horizontal type battery connector (CR2032 Battery)
<b>AT/ATX Selector</b>	1 x 1 x 3 pin pitch 2.00mm connector for AT/ATX jumper
<b>Clear CMOS</b>	1 x 1 x 3 pin pitch 2.00mm connector
<b>LVDS</b>	1 x 2 x 20 pin, pitch 1.25mm connector for LVDS
<b>LCD Backlight Brightness</b>	1 x 1 x 5 pin, pitch 2.00mm connector for LCD Backlight Brightness
<b>LCD Inverter</b>	1 x 1 x 5 pin, pitch 2.00mm Wafer connector for LCD inverter backlight (5V/12V)
<b>eDP</b>	1 x 1 x 40 pin, pitch 0.5mm IPEX connector for eDP
<b>BIOS SPI</b>	1 x 2 x 4 pin, pitch 1.00mm connector for BIOS SPI
<b>EC Debug /eSPI</b>	1 x 2 x 6 pin, pitch 1.00mm for EC Debug eSPI
<b>Audio</b>	1 x 2 x 6 pin, pitch 2.00mm connector for front Audio
<b>Power Input Connector</b>	Screw type DC Jack co-lay Phoenix connector.
<b>Amp Connector</b>	1 x 4 pin, pitch 2.00mm header for 3W x 2 Speaker
<b>Display</b>	
<b>Graphic Chipset</b>	Intel® UHD Graphics for 10th Gen Intel® Processors
<b>Spec. &amp; Resolution</b>	2 x DP++: max 4096 x 2160@60 Hz LVDS: 1920 x 1080 Dual channel 18/24-bits LVDS (Chrontel CH7511B-BFI eDP to LVDS) 1 x eDP 4096 x 2160@60 Hz share with LVDS by switch IC
<b>Multiple Display</b>	Triple Display 2x DP++, 1 x 2CH LVDS/eDP(default LVDS)
<b>Audio</b>	
<b>Audio Codec</b>	Realtek ALC888s co lay ALC897
<b>Amplifier</b>	ALC105 4Ω/3W per channel Amplifier

<b>Ethernet</b>	
<b>LAN Chip</b>	1 x Intel® I226LM 2.5 Gigabit Ethernet 2 x Intel® I210AT (Co-lay I210IT/I211AT) Gigabit Ethernet
<b>LAN Spec.</b>	1 x 2.5G Gigabit Ethernet 2 x 10/100/1000 Base-Tx GbE compatible
<b>Mechanical &amp; Environmental</b>	
<b>Power Requirement</b>	DC in +9V ~ +36V
<b>ACPI</b>	Single power ATX Support S0, S3, S4, S5 ACPI 6.1 Compliant
<b>Power Mode</b>	AT / ATX mode Switchable Through Jumper
<b>Operating Temp.</b>	0~60°C (32~140°F) with 0.5m/s air flow.
<b>Storage Temp.</b>	-40~ +75°C
<b>Operating Humidity</b>	40°C @ 95% Relative Humidity, Non-condensing
<b>Size (L x W)</b>	5.7" x 4" (146mm x 101mm)
<b>Weight</b>	0.40kg
<b>Vibration Test</b>	<p><u>Package Vibration Test</u> Reference IEC60068-2-64 Testing procedures Test Fh: Vibration broadband random Test</p> <ol style="list-style-type: none"> <li>1. PSD: 0.026G<sup>2</sup>/Hz, 2.16 Grms</li> <li>2. Non-operation mode</li> <li>3. Test Frequency: 5-500Hz</li> <li>4. Test Axis: X,Y and Z axis</li> <li>5. 30 min. per each axis</li> <li>6. IEC 60068-2-64 Test:Fh</li> </ol> <p><u>Random Vibration Operation</u> Reference IEC60068-2-64 Testing procedures Test Fh : Vibration broadband random Test</p> <ol style="list-style-type: none"> <li>1. PSD: 0.00454G<sup>2</sup>/Hz, 1.5 Grms</li> <li>2. Operation mode</li> <li>3. Test Frequency : 5-500Hz</li> <li>4. Test Axis : X,Y and Z axis</li> <li>5. 30 minutes per each axis</li> <li>6. IEC 60068-2-64 Test:Fh</li> </ol> <p><u>Random Vibration Non Operation</u> Reference IEC60068-2-64 Testing procedures</p>

## ECM-EHL3 User's Manual

	Test Fh : Vibration broadband random Test 1. PSD: 0.01818G <sup>2</sup> /Hz, 3.0 Grms 2. Non Operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 minutes per each axis 6. IEC 60068-2-64 Test:Fh
<b>Drop Test</b>	<u>Packing Drop</u> Reference ISTA 2A, Method : IEC-60068-2-32 Test: Ed Drop Test 1 One corner , three edges, six faces 2 ISTA 2A, IEC-60068-2-32 Test:Ed
<b>OS Support</b>	Win10 64bit, Linux




**Note:** Specifications are subject to change without notice.

### User condition suggestion:

1. NSIM1 and NSIM2 can't be using at the same time, user need to choose either one.

## 1.6 Architecture Overview—Block Diagram

The following block diagram shows the architecture and main components of ECM-EHL3


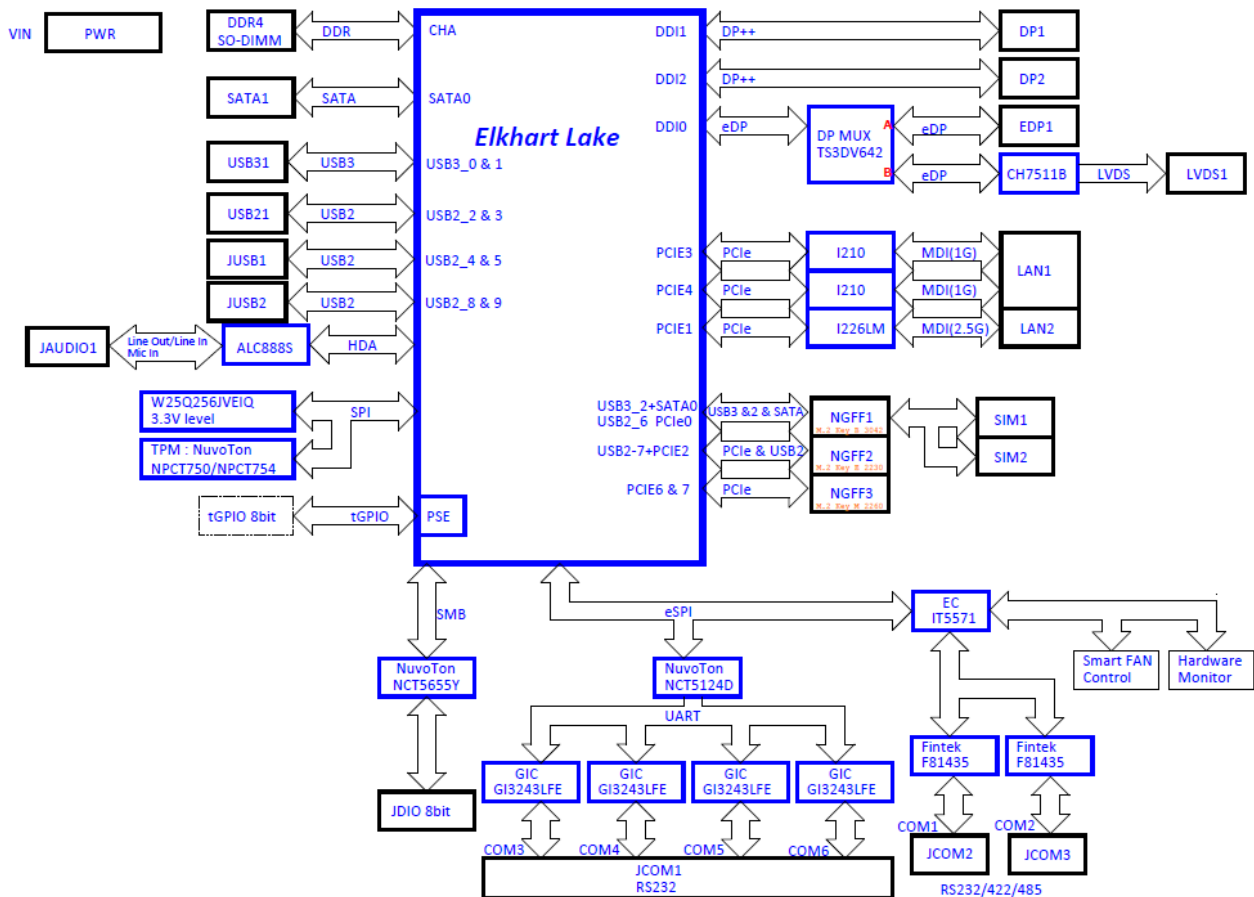


# 2. Hardware Configuration

---




## 2.1 Product Overview

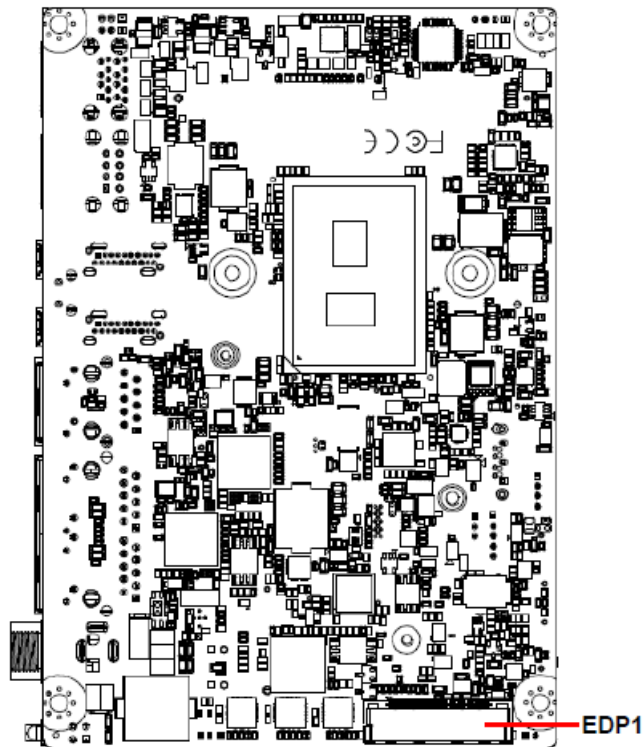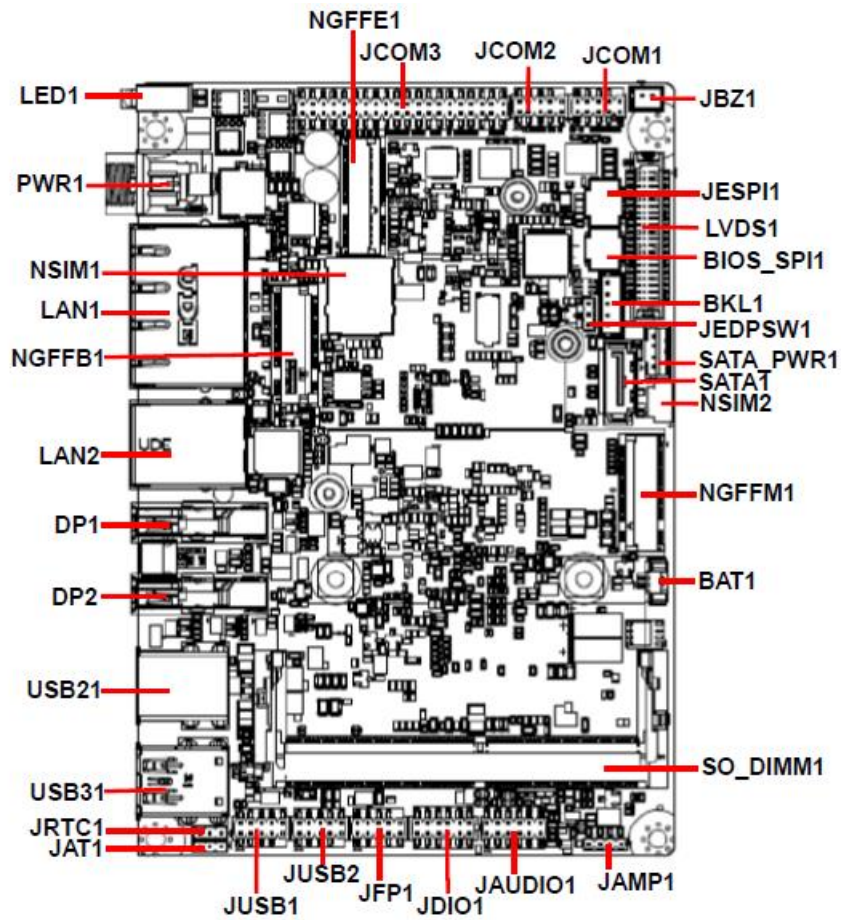

## 2.2 Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

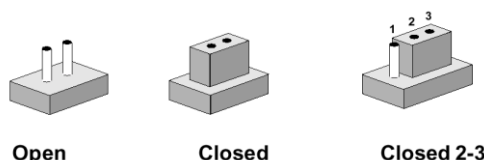

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

### Jumpers

Label	Function	Note
JEDPSW1	eDP/LVDS mode selector	3 x 1 header, pitch 2.00mm
JAT1	AT/ATX Input power select	3 x 1 header, pitch 2.00mm
JRTC1	Clear CMOS	3 x 1 header, pitch 2.00mm


### Connectors

Label	Function	Note
BKL1	LCD inverter connector	5 x 1 wafer, pitch 2.00mm Matching Connector: JST PHR-5
JCOM1	Serial Port 1 connector	5 x 2 header, pitch 2.00mm
JCOM2	Serial Port 2 connector	5 x 2 header, pitch 2.00mm
JCOM3	Serial Port 3/4/5/6 connector	20 x 2 header, pitch 2.00mm
JDIO1	General purpose I/O connector	6 x 2 header, pitch 2.00mm


<b>NGFFB1</b>	M.2 KEY-B 3042/2242 connector	
<b>NGFFE1</b>	M.2 KEY-E 2230 connector	
<b>NGFFM1</b>	M.2 KEY-M 2260/2242 connector	
<b>LED1</b>	HDD/Power LED indicator	
<b>JFP1</b>	Front Panel connector	5 x 2 header, pitch 2.00mm
<b>USB21</b>	2 x USB2.0 connector	
<b>USB31</b>	2 x USB3.2 connector	
<b>JUSB1</b>	USB2.0 connector	5 x 2 header, pitch 2.00mm
<b>JUSB2</b>	USB2.0 connector	5 x 2 header, pitch 2.00mm
<b>JBZ1</b>	PC Buzzer connector	2 x 1 wafer, pitch 2.00mm
<b>LAN1</b>	2 x RJ-45 Ethernet	
<b>LAN2</b>	RJ-45 Ethernet	
<b>BAT1</b>	Battery connector	2 x 1 wafer, pitch 1.25mm
<b>JAUDIO1</b>	Audio connector	6 x 2 header, pitch 2.00mm
<b>PWR1</b>	Power connector	
<b>BIOS_SPI1</b>	BIOS SPI connector	5 x 2 header, pitch 1.00mm
<b>LVDS1</b>	LVDS connector	DIN 40-pin wafer, pitch 1.25mm Matching Connector: Hirose DF13-40DS-1.25C
<b>SATA_PWR1</b>	SATA Power connector	2 x 1 wafer, pitch 2.00mm
<b>SATA1</b>	Serial ATA connector	
<b>DP1</b>	DP connector	
<b>DP2</b>	DP connector	
<b>SO_DIMM1</b>	DDR4 SODIMM socket	
<b>JAMP1</b>	AMP connector	4 x 1 header, pitch 2.00mm
<b>JESPI1</b>	EC Debug eSPI connector	6 x 2 wafer, pitch 1.00mm
<b>NSIM1</b>	SIM card slot	
<b>NSIM2</b>	SIM card slot	10 x 1 FPC, pitch 0.50 mm
<b>EDP1</b>	EDP connector	40 x 1 wafer, pitch 0.50mm

## 2.3 Setting Jumpers & Connectors


### 2.3.1 eDP/LVDS mode selector (JEDPSW1)

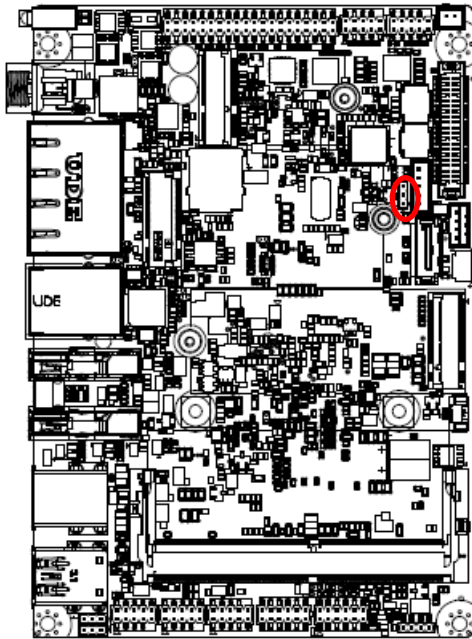

eDP\*

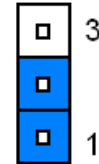


LVDS

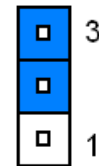


\* Default


### 2.3.2 Clear CMOS (JRRTC1)

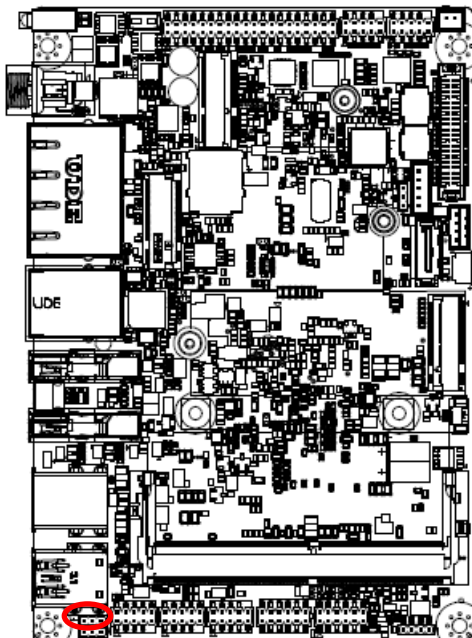

Normal\*



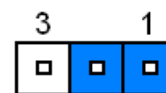


Clear CMOS

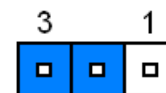


\* Default

### 2.3.3 AT/ATX Input power select (JAT1)

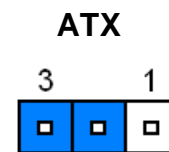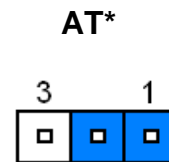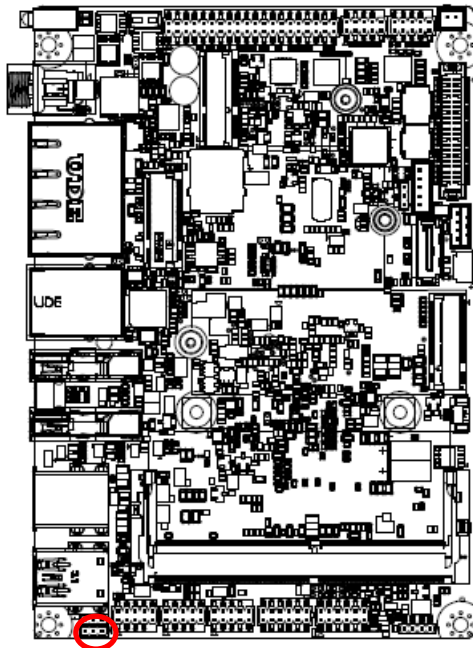



\* Default

### 2.3.4 LCD inverter connector (BKL1)

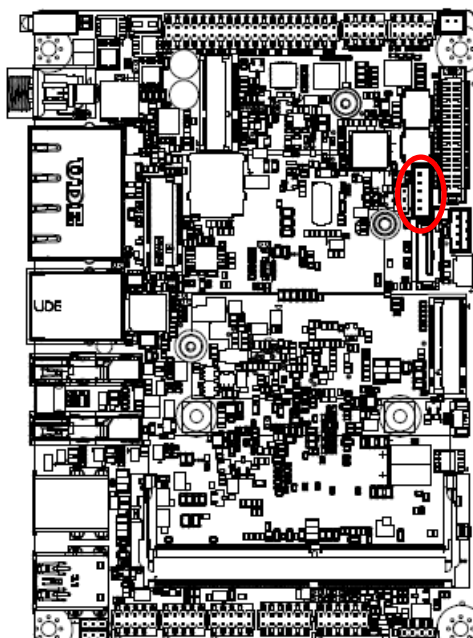



Signal	PIN
+5V	5
LVDS_BRI	4
LVDS_BKLEN	3
GND	2
+12V	1

2.3.5 Serial port 1 connector (JCOM1)

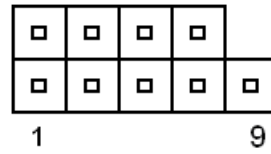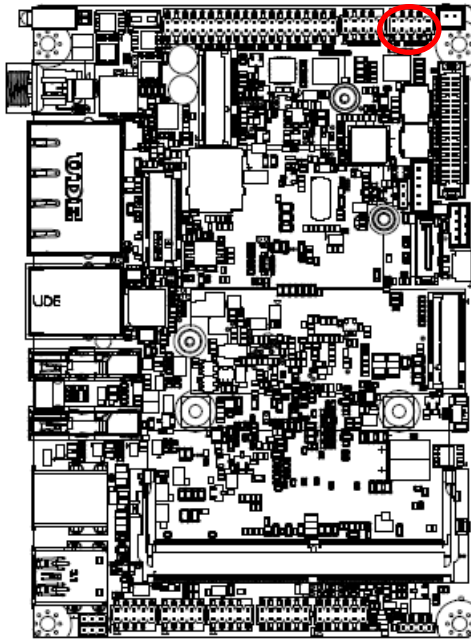


Signal	PIN	PIN	Signal
COM_DCD#_TXN_1	1	2	COM_RXD_TXP_1
COM_TXD_RXP_1	3	4	COM_DTR#_RXN_1
GND	5	6	COM_DSR#_1
COM_RTS#_1	7	8	COM_CTS#_1
COM_RI#_1	9		

2.3.6 Serial port 2 connector (JCOM2)

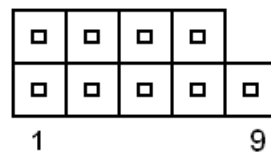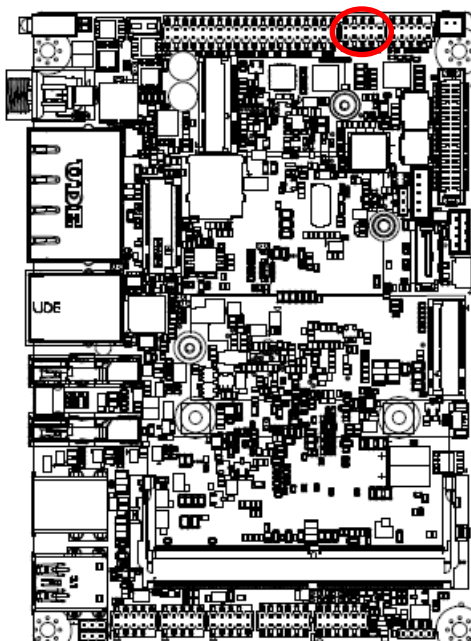


Signal	PIN	PIN	Signal
COM_DCD#_TXN_2	1	2	COM_RXD_TXP_2
COM_TXD_RXP_2	3	4	COM_DTR#_RXN_2
GND	5	6	COM_DSR#_2
COM_RTS#_2	7	8	COM_CTS#_2
COM_RI#_2	9		

2.3.7 Serial port 3/4/5/6 connector (JCOM3)

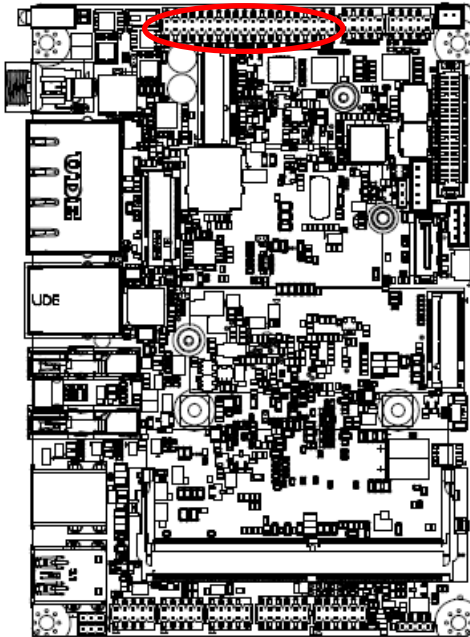



Signal	PIN	PIN	Signal
COM_DCD#_3	1	2	COM_RXD_3
COM_TXD_3	3	4	COM_DTR#_3
GND	5	6	COM_DSR#_3
COM_RTS#_3	7	8	COM_CTS#_3
COM_RI#_3	9	10	GND
COM_DCD#_4	11	12	COM_RXD_4
COM_TXD_4	13	14	COM_DTR#_4
GND	15	16	COM_DSR#_4
COM_RTS#_4	17	18	COM_CTS#_4
COM_RI#_4	19	20	GND
COM_DCD#_5	21	22	COM_RXD_5
COM_TXD_5	23	24	COM_DTR#_5
GND	25	26	COM_DSR#_5
COM_RTS#_5	27	28	COM_CTS#_5
COM_RI#_5	29	30	GND
COM_DCD#_6	31	32	COM_RXD_6
COM_TXD_6	33	34	COM_DTR#_6
GND	35	36	COM_DSR#_6
COM_RTS#_6	37	38	COM_CTS#_6
COM_RI#_6	39	40	GND

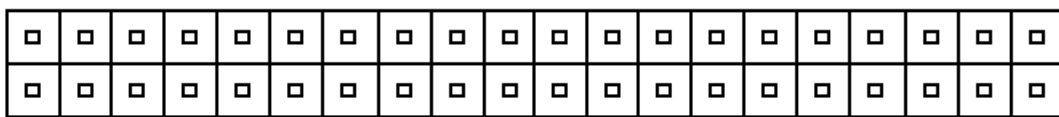

1


39

2.3.8 General purpose I/O connector (JDIO1)

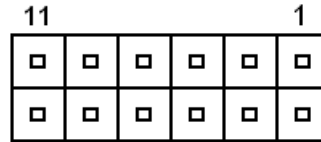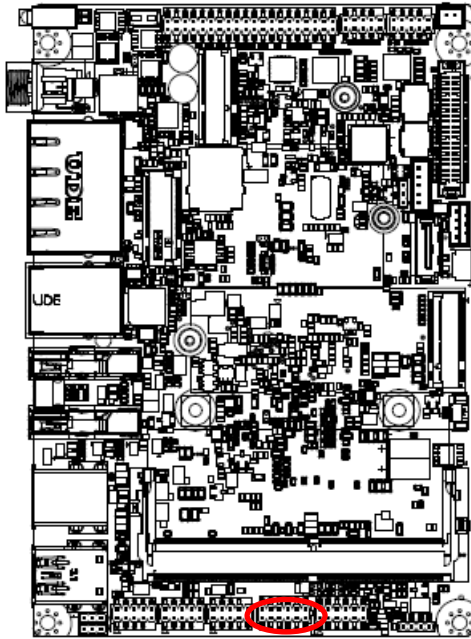

Signal	PIN	PIN	Signal
DIO_GP20_TGPI4	1	2	DIO_GP10_TGPI0
DIO_GP21_TGPI5	3	4	DIO_GP11_TGPI1
DIO_GP22_TGPI6	5	6	DIO_GP12_TGPI2
DIO_GP23_TGPI7	7	8	DIO_GP13_TGPI3
SMB_SCL_S0	9	10	SMB_SDA_S0
GND	11	12	+5V



2.3.9 SATA Power connector (SATA\_PWR1)

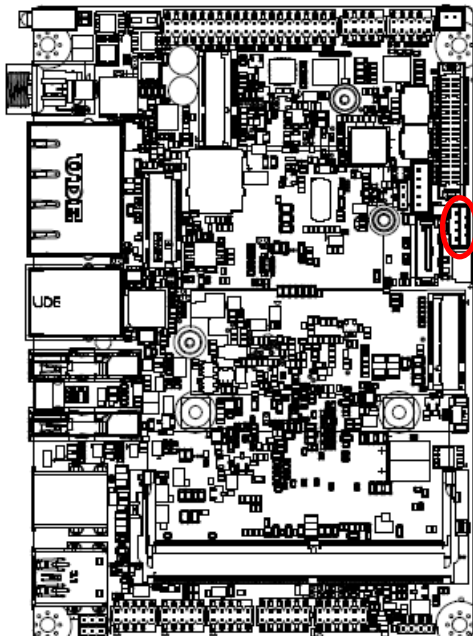

Signal	PIN
+12V	4
GND	3
GND	2
+5V	1





2.3.10 USB2.0 connector (JUSB1)

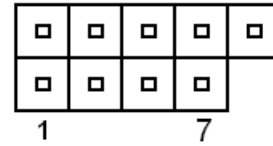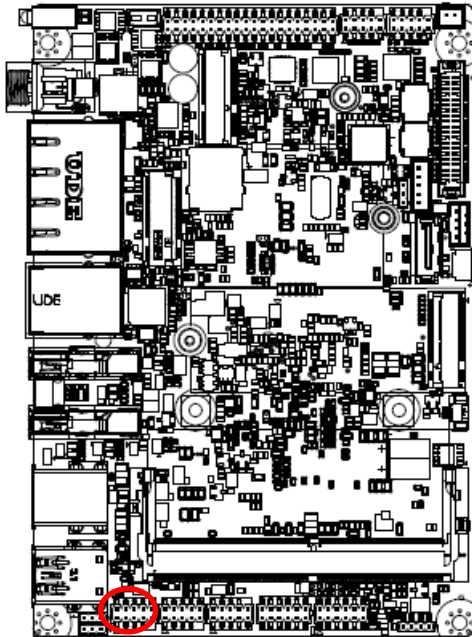



Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN4	3	4	USB_R_DN5
USB_R_DP4	5	6	USB_R_DP5
GND	7	8	GND
		10	NC

2.3.11 USB2.0 connector (JUSB2)

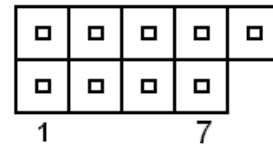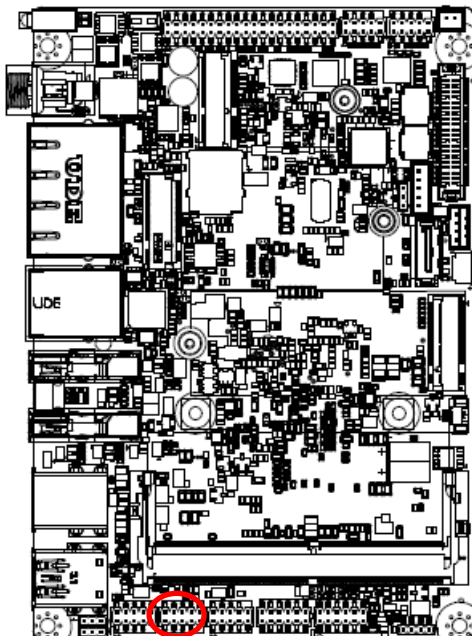


Signal	PIN	PIN	Signal
+5VSB	1	2	+5VSB
USB_R_DN8	3	4	USB_R_DN9
USB_R_DP8	5	6	USB_R_DP9
GND	7	8	GND
		10	NC

2.3.12 BIOS SPI connector (BIOS\_SPI1)

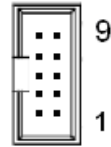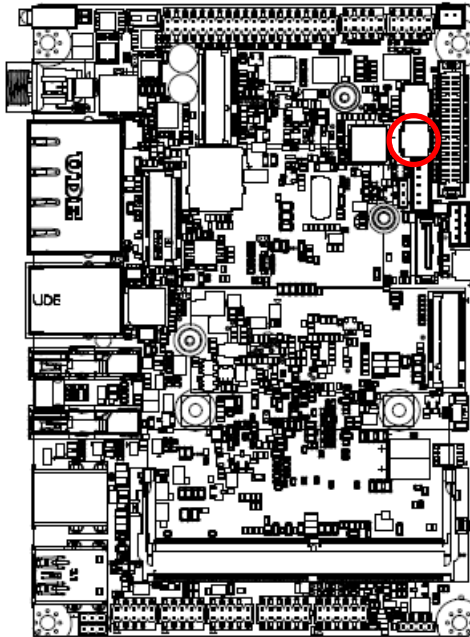



Signal	PIN	PIN	Signal
EC_SMDAT_DBG	10	9	EC_SMCLK_DBG
SPI_WP#	8	7	SPI_HOLD#
SPI_MOSI	6	5	SPI_MISO
SPI_CLK	4	3	SPI_CS0#
GND	2	1	+V3.3A_SPI

2.3.13 Battery connector (BAT1)

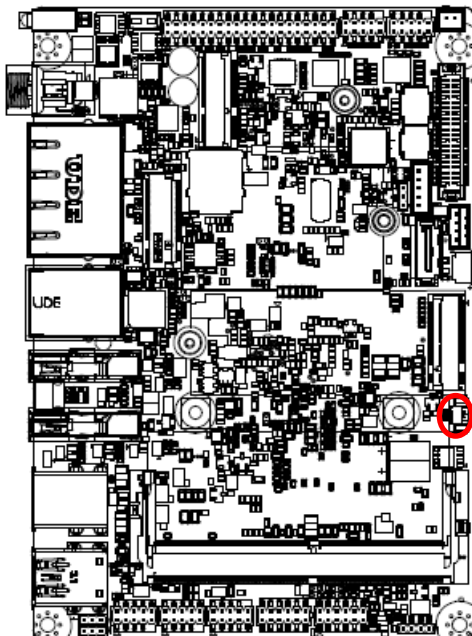


Signal	PIN
GND	2
+RTCBATT	1

### 2.3.14 Front Panel connector (JFP1)

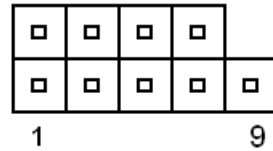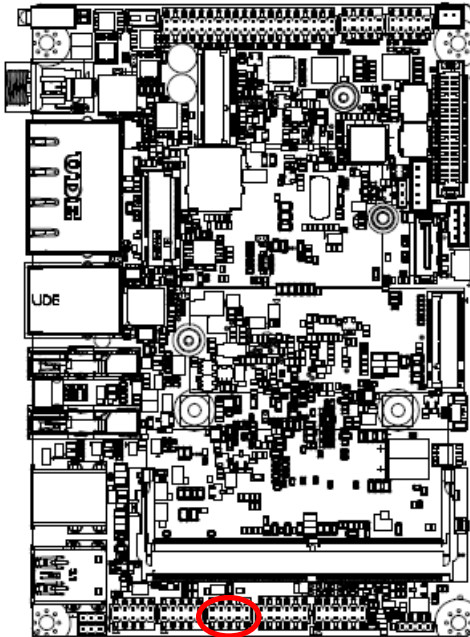



Signal	PIN	PIN	Signal
FP_HDD_LED+	1	2	FP_PWR_LED+
HDD_LED#	3	4	PWR_LED#
FP_RST	5	6	FP_PWRBTN
GND	7	8	GND
NC	9		

### 2.3.15 PC Buzzer connector (JBZ1)

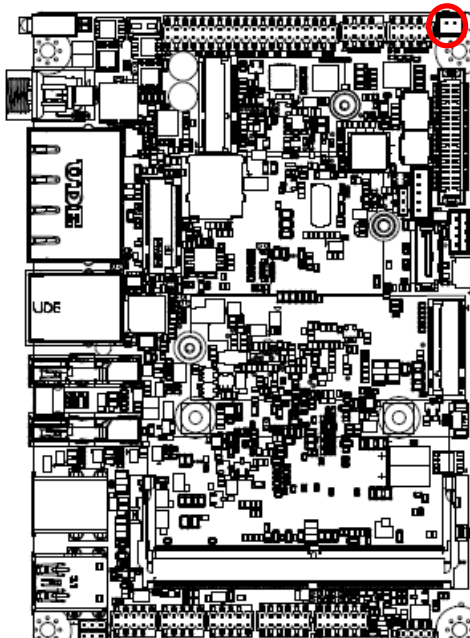



Signal	PIN
SOC_SPKR_R	1
+5V	2

2.3.16 EC Debug eSPI connector (JESPI1)

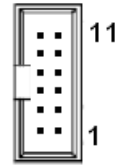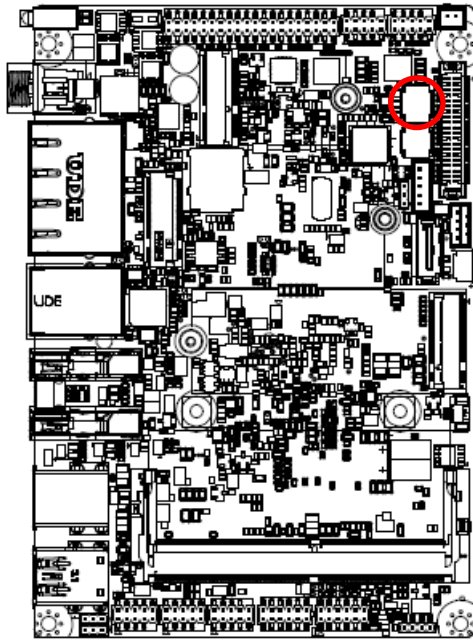

Signal	PIN	PIN	Signal
ESPI_ALERT#2	12	11	ESPI_RST
GND	10	9	ESPI_CS2#_R
CN_ESPI_CLK	8	7	CN_ESPI_IO3
ESPI_CS#	6	5	CN_ESPI_IO2
PLT_RST_BUF#	4	3	CN_ESPI_IO1
+3.3V	2	1	CN_ESPI_IO0

2.3.17 Audio connector (JAUDIO1)

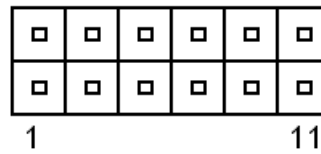
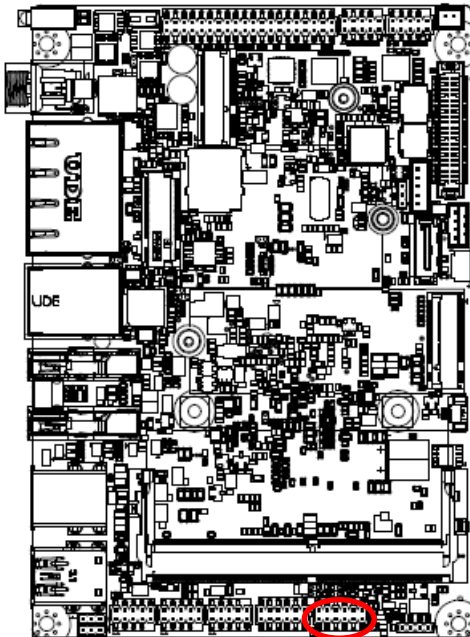


Signal	PIN	PIN	Signal
FRONT-R-OUT	1	2	FRONT-L-OUT
HD_AGND	3	4	HD_AGND
LINE1-R-IN	5	6	LINE1-L-IN
MIC1-R-IN	7	8	MIC1-L-IN
FRONT-JD	9	10	LINE1-JD
MIC1-JD	11	12	HD_AGND

2.3.17.1 Signal Description – Audio connector (JAUDIO1)



Signal	Signal Description
LINE1-JD	AUDIO IN (LINE_RIN/LIN)sense pin
FRONT-JD	AUDIO Out(ROUT/LOUT) sense pin
MIC1-JD	MIC IN (MIC_RIN/LIN) sense pin

2.3.18 LVDS connector (LVDS1)

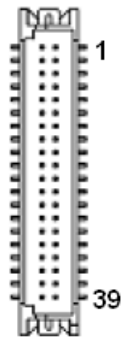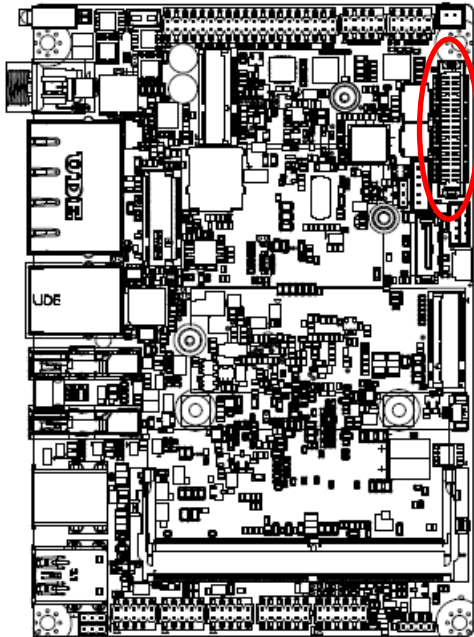



Signal	PIN	PIN	Signal
+5V	2	1	+3.3V
+5V	4	3	+3.3V
+5V	6	5	+3.3V
GND	8	7	GND
LVDS_DATA0_P	10	9	LVDS_DATA1_P
LVDS_DATA0_N	12	11	LVDS_DATA1_N
GND	14	13	GND
LVDS_DATA2_P	16	15	LVDS_DATA3_P
LVDS_DATA2_N	18	17	LVDS_DATA3_N
GND	20	19	GND
LVDS_DATA4_P	22	21	LVDS_DATA5_P
LVDS_DATA4_N	24	23	LVDS_DATA5_N
GND	26	25	GND
LVDS_DATA6_P	28	27	LVDS_DATA7_P
LVDS_DATA6_N	30	29	LVDS_DATA7_N
GND	32	31	GND
LVDS_CLK1_P	34	33	LVDS_CLK2_P
LVDS_CLK1_N	36	35	LVDS_CLK2_N
GND	38	37	GND
+12V	40	39	+12V

2.3.19 AMP connector (JAMP1)

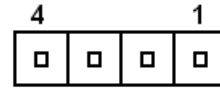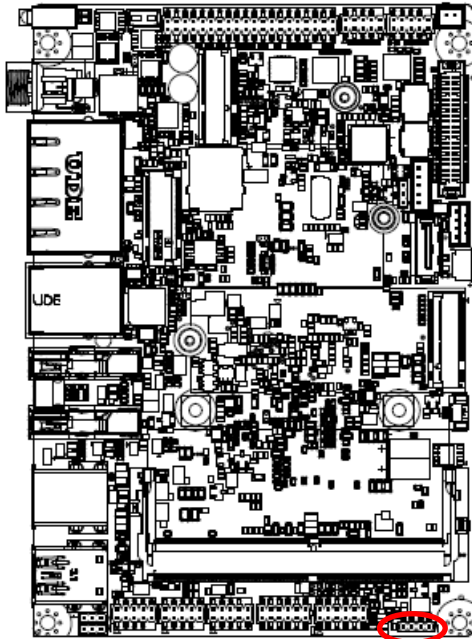



Signal	PIN
AMP_LOUT+	1
AMP_LOUT-	2
AMP_ROUT+	3
AMP_ROUT-	4

2.3.20 SIM card slot (NSIM2)

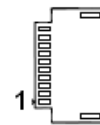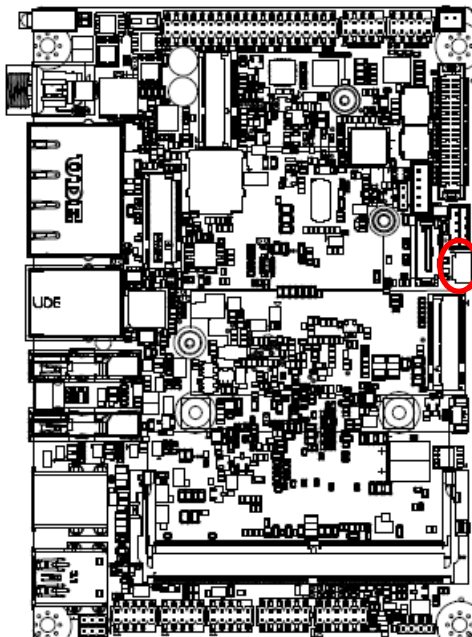

Signal	PIN
NC	10
SIM_DET_R	9
GND	8
UIM_DATA	7
UIM_CLK	6
GND	5
+VPP_UIM	4
UIM_RESET#	3
GND	2
+VCC_UIM	1

2.3.21 EDP connector (EDP1)

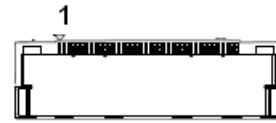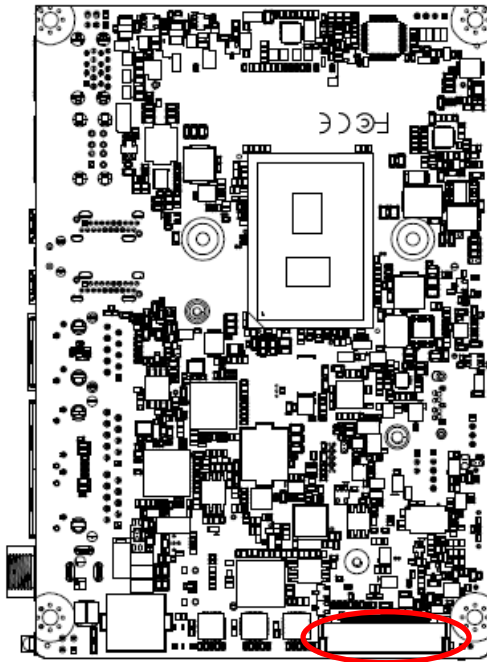

Signal	PIN
NC	1
GND	2
EDP_TXN_3	3
EDP_TXP_3	4
GND	5
EDP_TXN_2	6
EDP_TXP_2	7
GND	8
EDP_TXN_1	9
EDP_TXP_1	10

Signal	PIN
GND	11
EDP_TXN_0	12
EDP_TXP_0	13
GND	14
EDP_AUX_P	15
EDP_AUX_N	16
GND	17
+VeDP	18
+VeDP	19
+VeDP	20
+VeDP	21
NC	22
GND	23
GND	24
GND	25
GND	26
EDPP_HPD	27
GND	28
GND	29
GND	30
GND	31
BKLEN	32
EDPBRIGHT	33
eDP_CTRL_CLK	34
eDP_CTRL_DATA	35
+12V	36
+12V	37
+12V	38
+12V	39
NC	40

# 3. BIOS Setup

---



### 3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

### 3.2 Starting Setup

AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <ESC> or <Del> immediately after switching the system on, or

By pressing the <ESC> or <Del> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

**Press <ESC> or <Del> to enter SETUP**

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

### 3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



**Note:** Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

### 3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the <Enter> key again.

### 3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.


The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

### 3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

#### 3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

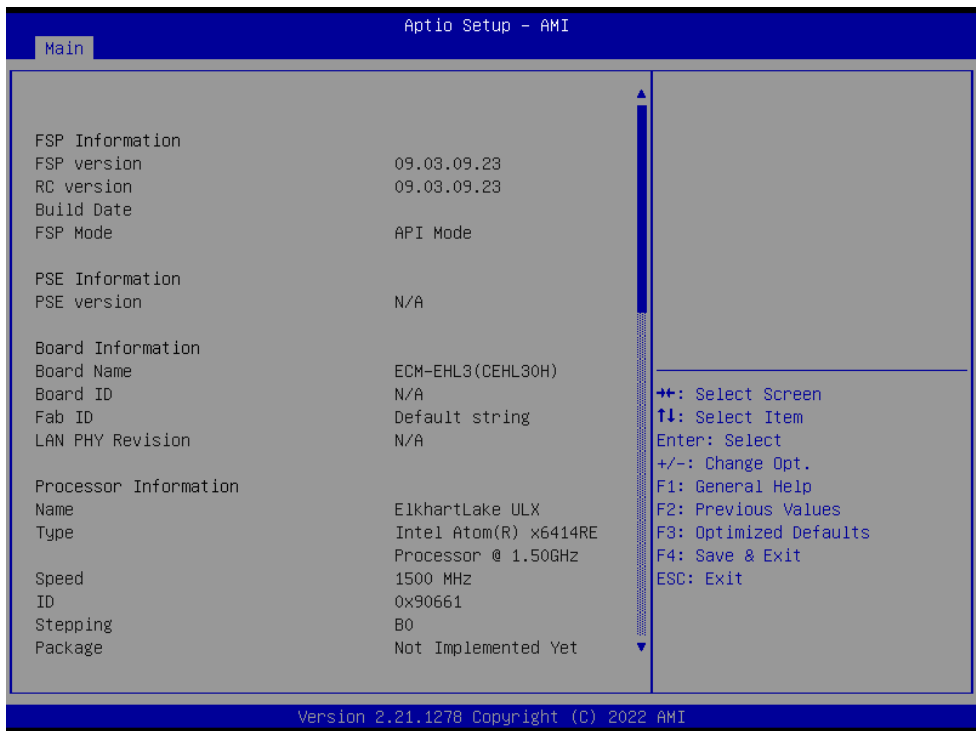

### 3.6.1.1 System Language

This option allows choosing the system default language.

### 3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

### 3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.




**Note:** The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.

Visit the Avalue website ([www.avalu.com](http://www.avalu.com)) to download the latest product and BIOS information.


## 3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

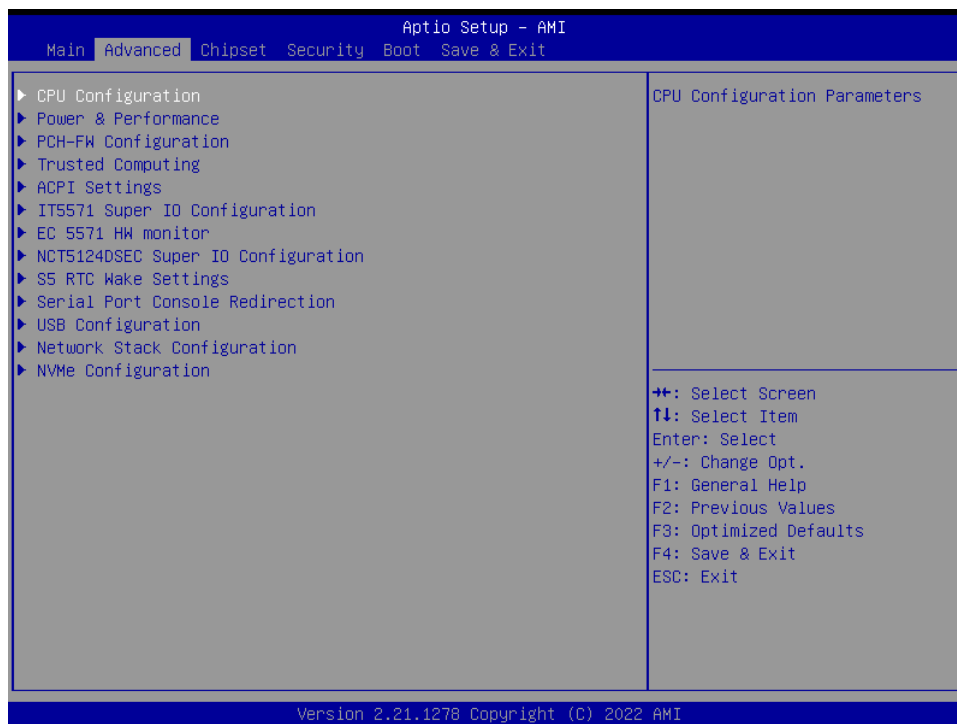

3.6.2.1 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

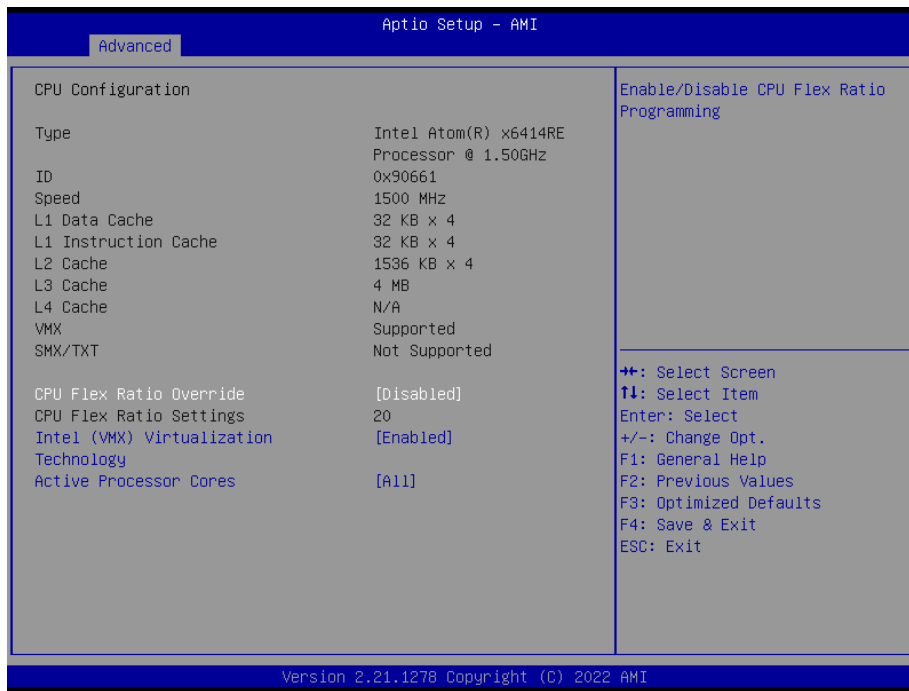


Item	Options	Description
<b>CPU Flex Ratio Override</b>	Disabled[Default] Enabled	Enable/Disable CPU Flex Ratio Programming.
<b>Intel (VMX) Virtualization Technology</b>	Disabled Enabled[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
<b>Active Processor Cores</b>	All[Default] 1 2 3 4 5 6 7 8	Number of cores to enable in each processor package.

### 3.6.2.2 Power & Performance




#### 3.6.2.2.1 CPU – Power Management Control

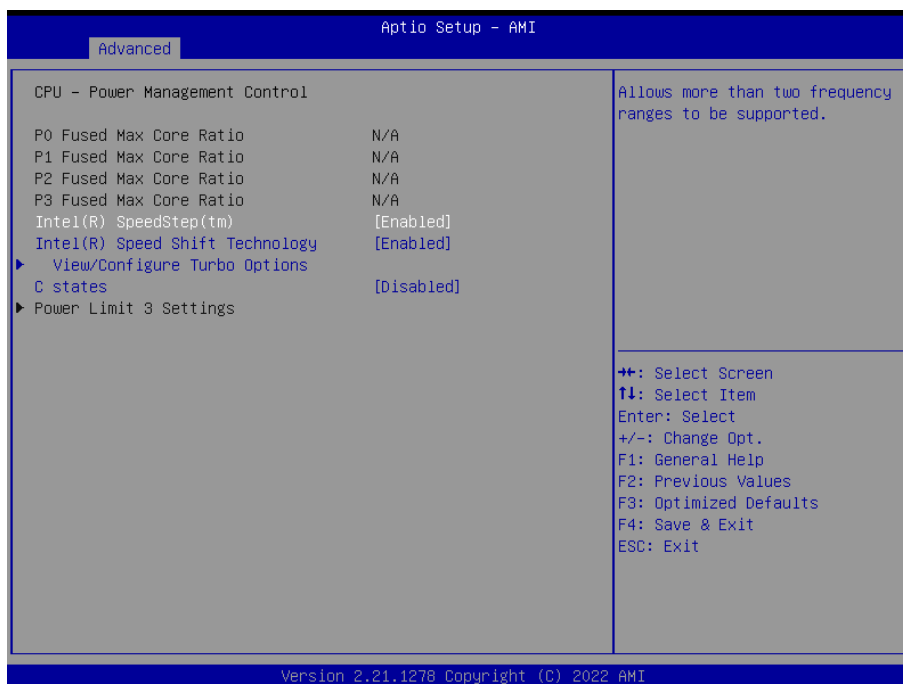

Item	Option	Description
Intel® SpeedStep™	Enabled[Default], Disabled	Allows more than two frequency ranges to be supported.
Intel® Speed Shift Technology	Enabled[Default], Disabled	Enable/Disable Intel® Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.

<b>C States</b>	Enabled Disabled[ <b>Default</b> ],	Enable/Disable CPU Power Management. Allows CPU to go to C states when it's not 100% utilized.
-----------------	--	--


### 3.6.2.2.1.1 View/Configure Turbo Options

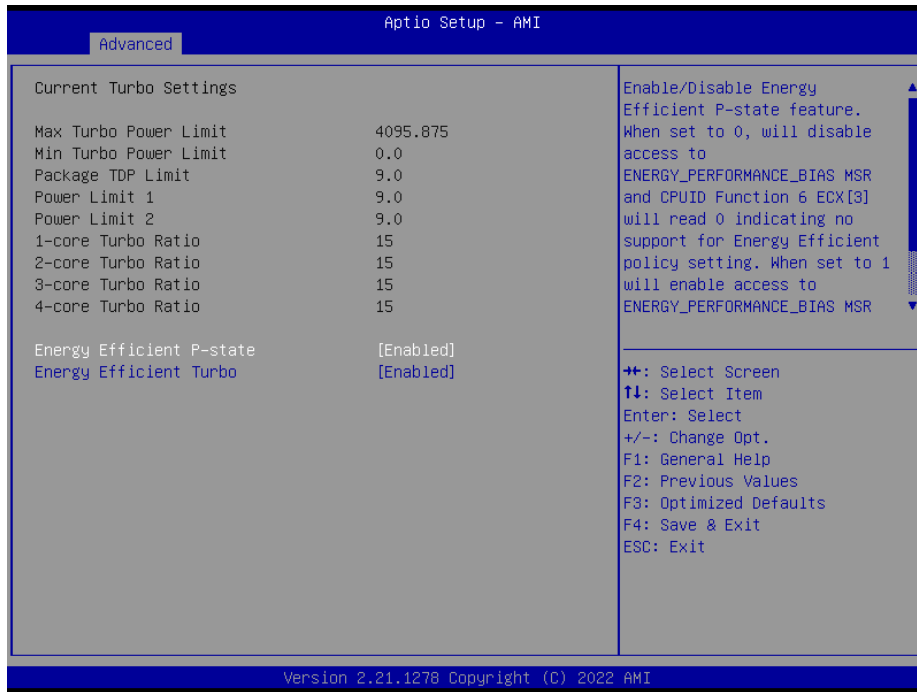

Item	Option	Description
<b>Energy Efficient P-state</b>	Disabled Enabled[ <b>Default</b> ]	Enable/Disable Energy Efficient P-state feature. When set to 0, will disable access to ENERGY_PERFORMANCE_BIAS MSR and CPUID Function 6 ECX[3] will read 0 indicating no support for Energy Efficient policy setting. When set to 1 will enable access to ENERGY_PERFORMANCE_BIAS MSR 1B0h.
<b>Energy Efficient Turbo</b>	Disabled Enabled[ <b>Default</b> ]	Enable/Disable Energy Efficient Turbo Feature. This feature will opportunistically lower the turbo frequency to increase efficiency. Recommended only to disable in overclocking situations where turbo frequency must remain constant. Otherwise, leave enabled.




### 3.6.2.2.2 GT – Power Management Control

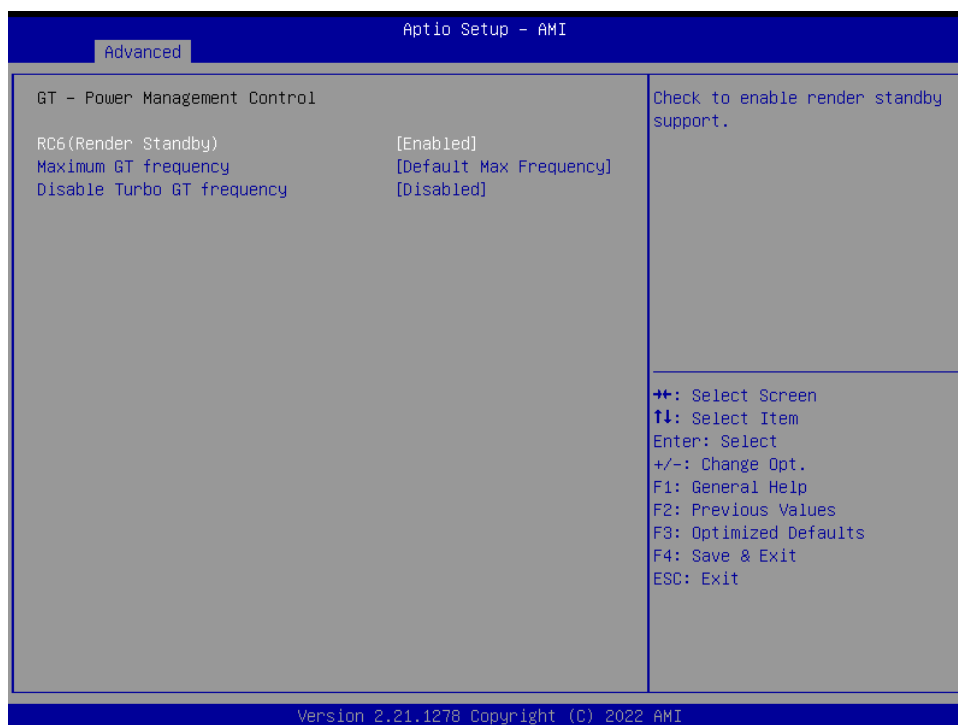


Item	Option	Description
<b>RC6(Render Standby)</b>	Enabled[ <b>Default</b> ], Disabled	Check to enable render standby support.
<b>Maximum GT frequency</b>	Default Max Frequency[ <b>Default</b> ] 100Mhz/150Mhz/200Mhz/250Mhz/300Mhz /350Mhz/400Mhz/450Mhz/500Mhz/550Mhz /600Mhz/650Mhz/700Mhz/750Mhz/800Mhz /850Mhz/900Mhz/950Mhz/1000Mhz/1050Mhz /1100Mhz/1150Mhz/1200Mhz	Auto Updated.
<b>Disable Turbo GT frequency</b>	Enabled Disabled[ <b>Default</b> ]	Enabled: Disables Turbo GT frequency. Disabled: GT frequency is not limited.

3.6.2.3 PCH-FW Configuration

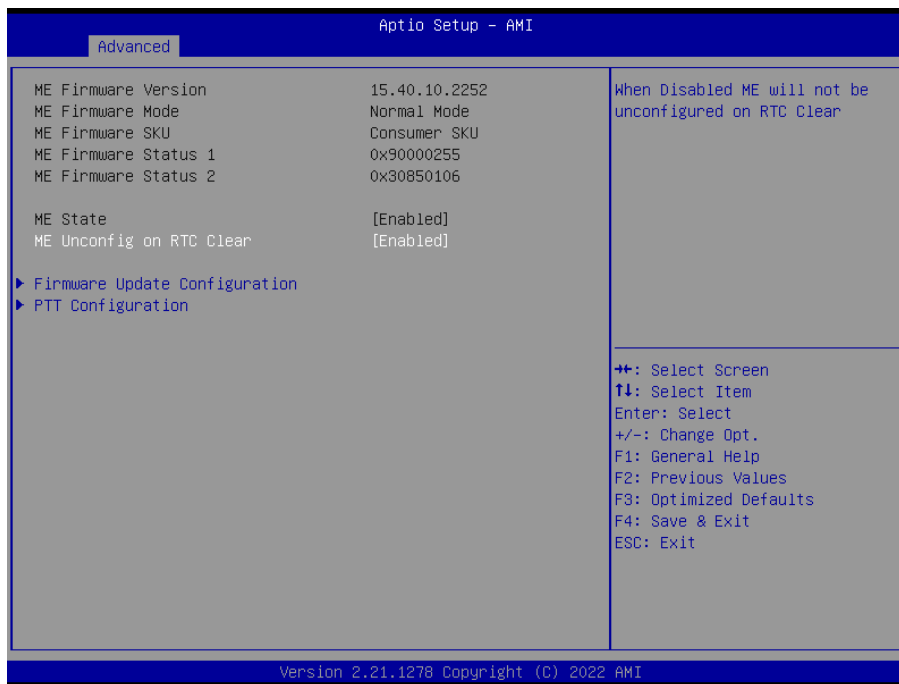


Item	Options	Description
ME Unconfig on RTC Clear	Disabled, Enabled[Default]	When Disabled ME will not be unconfigured on RTC Clear.

3.6.2.3.1 Firmware Update Configuration

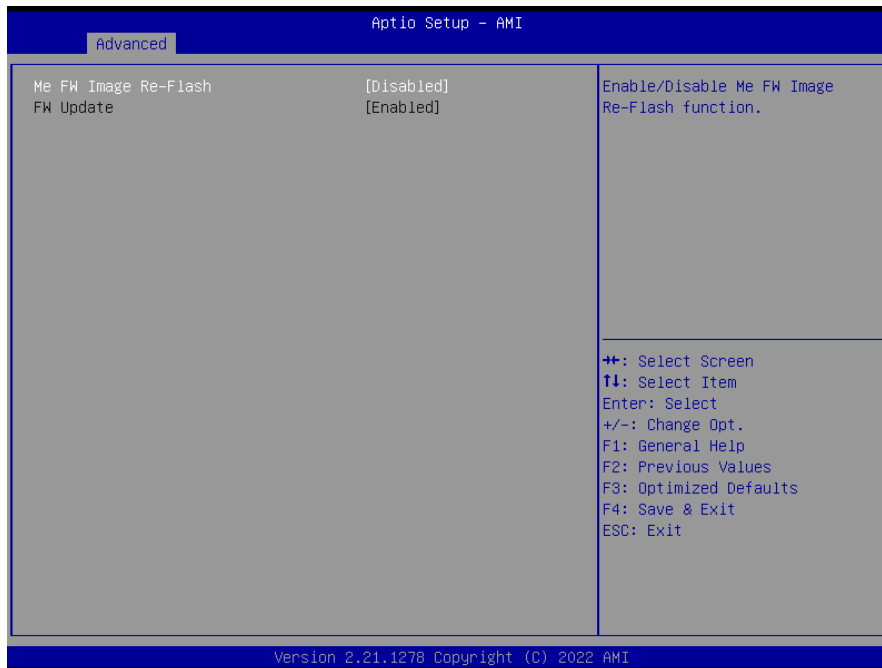

Item	Option	Description
ME FW Image Re-Flash	Disabled [Default], Enabled	Enable/Disable Me FW Image Re-Flash function.

### 3.6.2.3.2 PTT Configuration

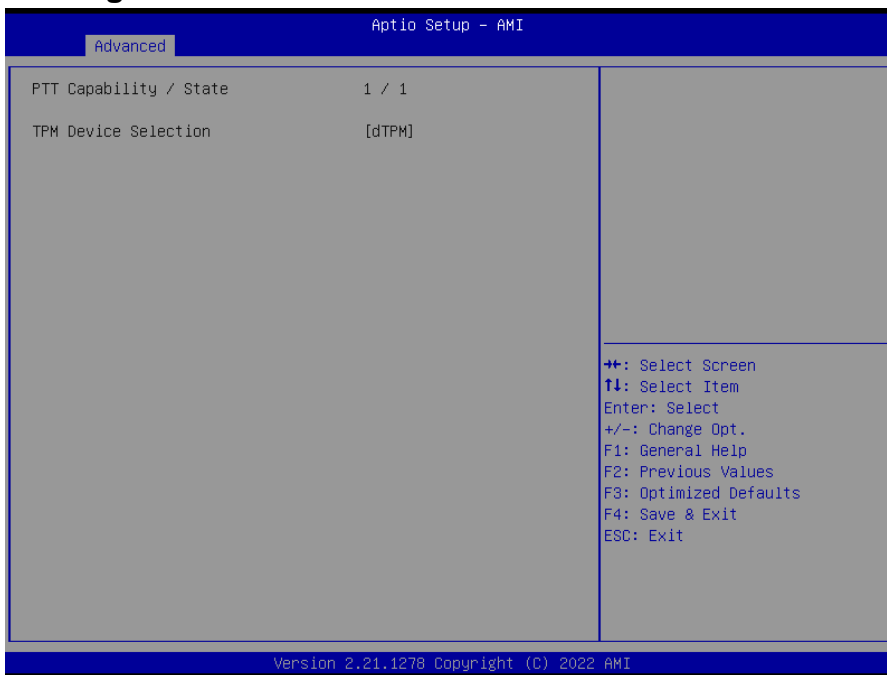


### 3.6.2.4 Trusted Computing



Item	Options	Description
<b>Security Device Support</b>	Disable, Enable <b>[Default]</b>	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

3.6.2.5 APCI Settings

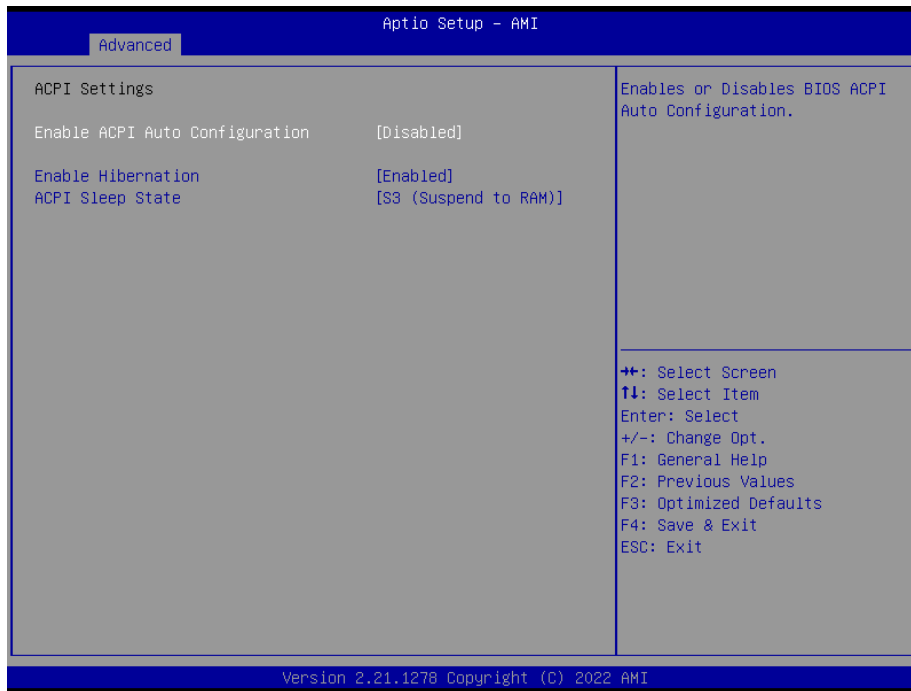

Item	Options	Description
<b>Enable ACPI Auto Configuration</b>	Disabled[Default], Enabled	Enables or Disables BIOS ACPI Auto Configuration.
<b>Enable Hibernation</b>	Disabled Enabled[Default],	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some OS.
<b>ACPI Sleep State</b>	Suspend Disabled, S3 (Suspend to RAM)[Default]	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.


### 3.6.2.6 IT5571 Super IO Configuration

You can use this item to set up or change the IT5571 Super IO configuration for serial ports. Please refer to 3.6.2.6.1 ~ 3.6.2.6.2 for more information.




Item	Description
<b>Serial Port 1 Configuration</b>	Set Parameters of Serial Port 1 (COMA).
<b>Serial Port 2 Configuration</b>	Set Parameters of Serial Port 2 (COMB).

3.6.2.6.1 Serial Port 1 Configuration

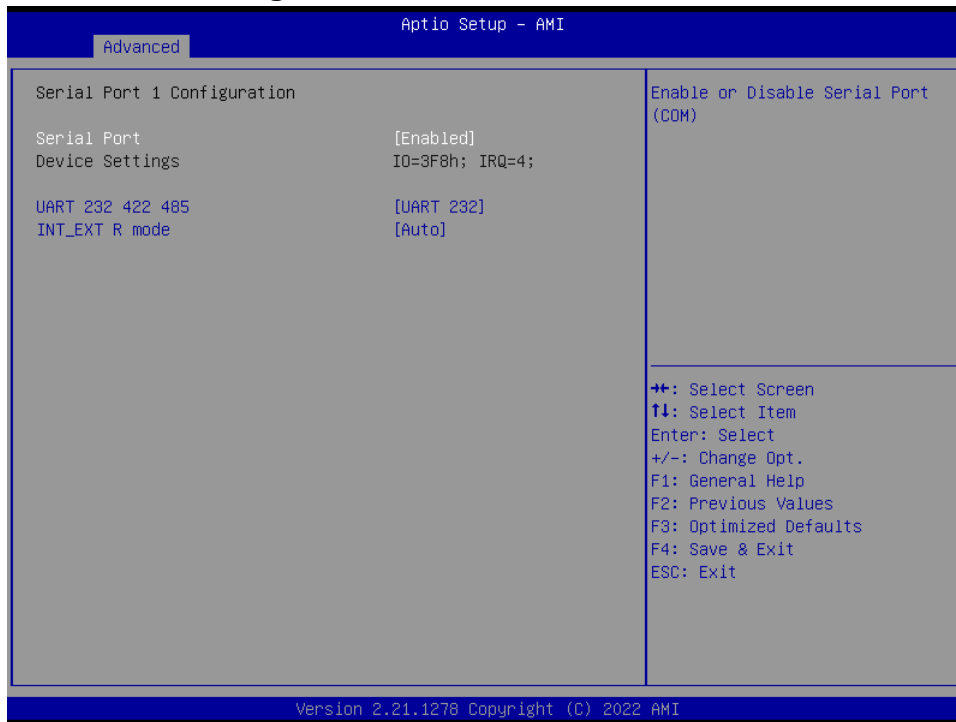


Item	Option	Description
Serial Port 1	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default], UART 422 UART 485	Change the Serial Port as RS232/422/485.
INT_EXT R mode	Auto[Default] Non INT+EXT R EXT R INT R INT+EXT R	Enable switches for internal and external resistors.

### 3.6.2.6.2 Serial Port 2 Configuration

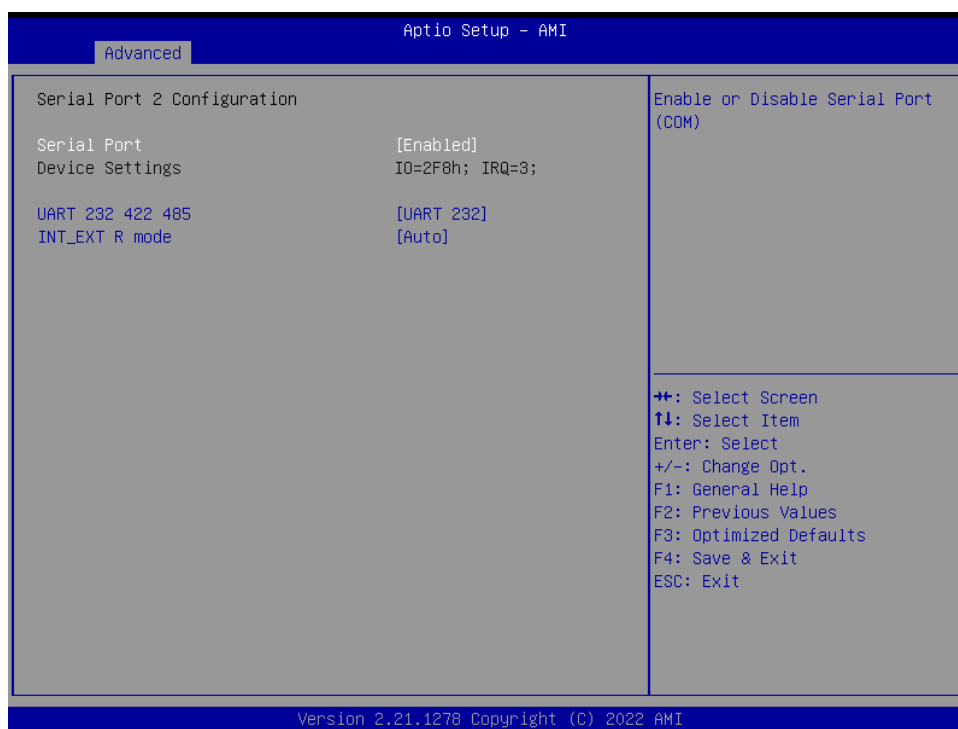

Item	Option	Description
<b>Serial Port 2</b>	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
<b>UART 232 422 485</b>	UART 232[Default], UART 422 UART 485	Change the Serial Port as RS232/422/485.
<b>INT_EXT R mode</b>	Auto[Default] Non INT+EXT R EXT R INT R INT+EXT R	Enable switches for internal and external resistors.

3.6.2.7 HW Monitor

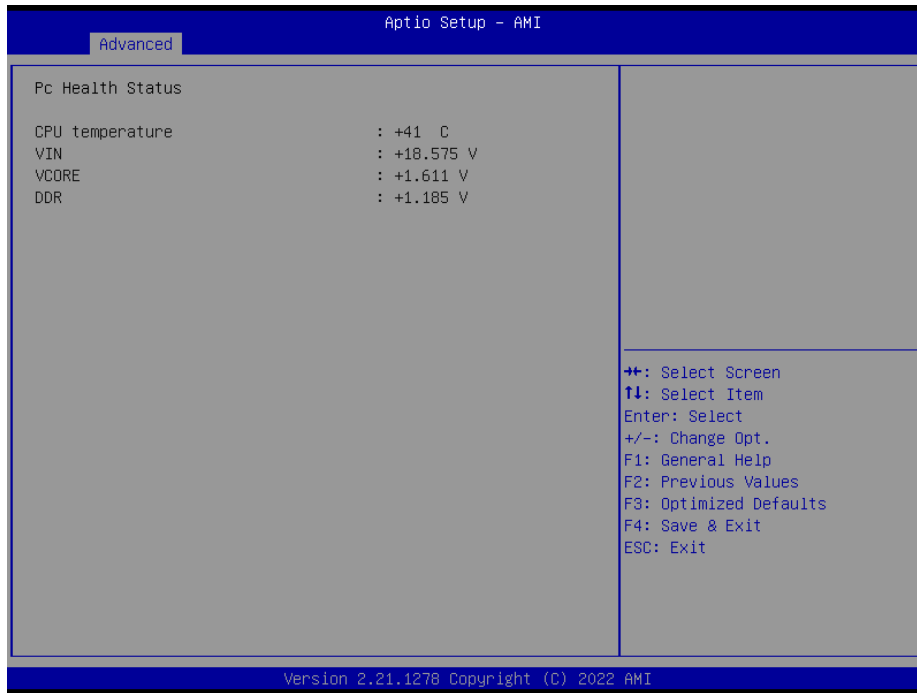

3.6.2.8 NCT5124DSEC Super IO Configuration

You can use this item to set up or change the NCT5124DSEC Super IO configuration for serial ports. Please refer to 3.6.2.8.1 ~ 3.6.2.8.4 for more information.




Item	Description
<b>Serial Port 3 Configuration</b>	Set Parameters of Serial Port 3 (COMA).
<b>Serial Port 4 Configuration</b>	Set Parameters of Serial Port 4 (COMB).



<b>Serial Port 5 Configuration</b>	Set Parameters of Serial Port 5 (COMC).
<b>Serial Port 6 Configuration</b>	Set Parameters of Serial Port 6 (COMD).

### 3.6.2.8.1 Serial Port 3 Configuration

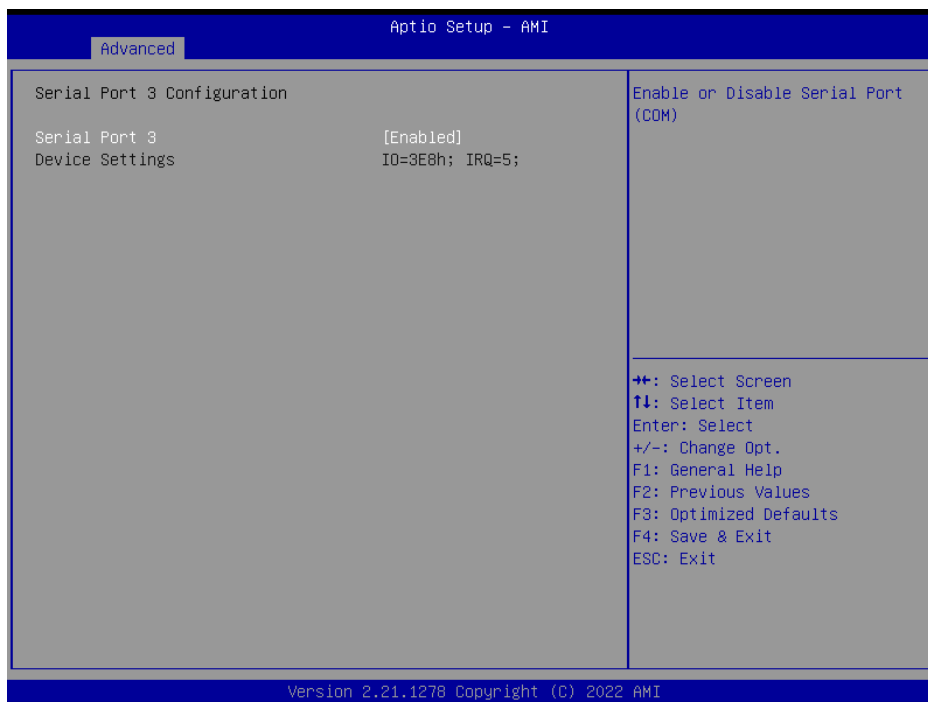


Item	Option	Description
<b>Serial Port 3</b>	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

### 3.6.2.8.2 Serial Port 4 Configuration



Item	Option	Description
Serial Port 4	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

### 3.6.2.8.3 Serial Port 5 Configuration

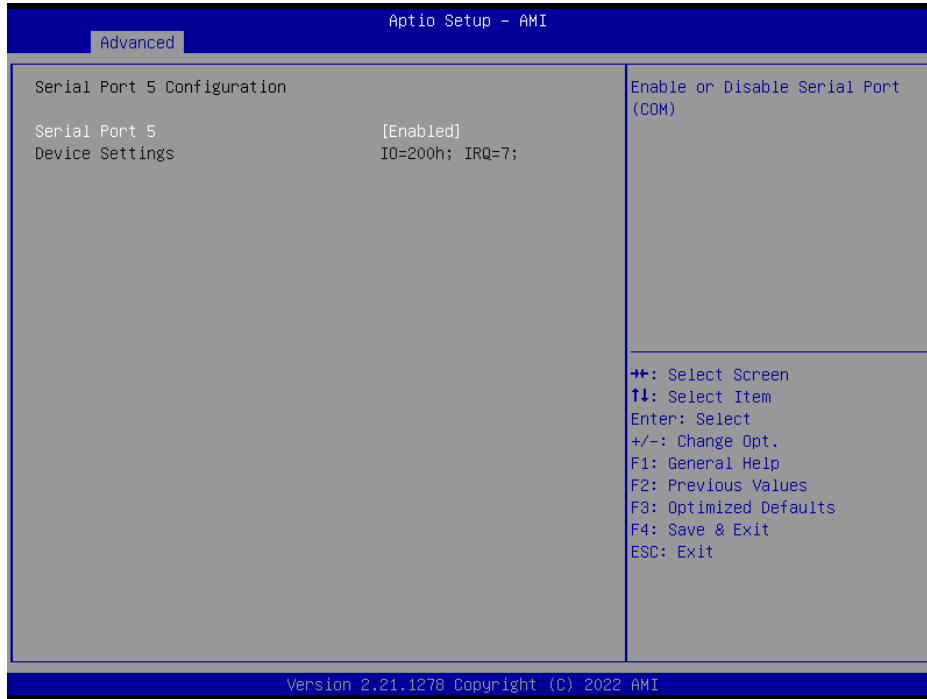


Item	Option	Description
Serial Port 5	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

### 3.6.2.8.4 Serial Port 6 Configuration



Item	Option	Description
Serial Port 6	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).


### 3.6.2.9 S5 RTC Wake Settings

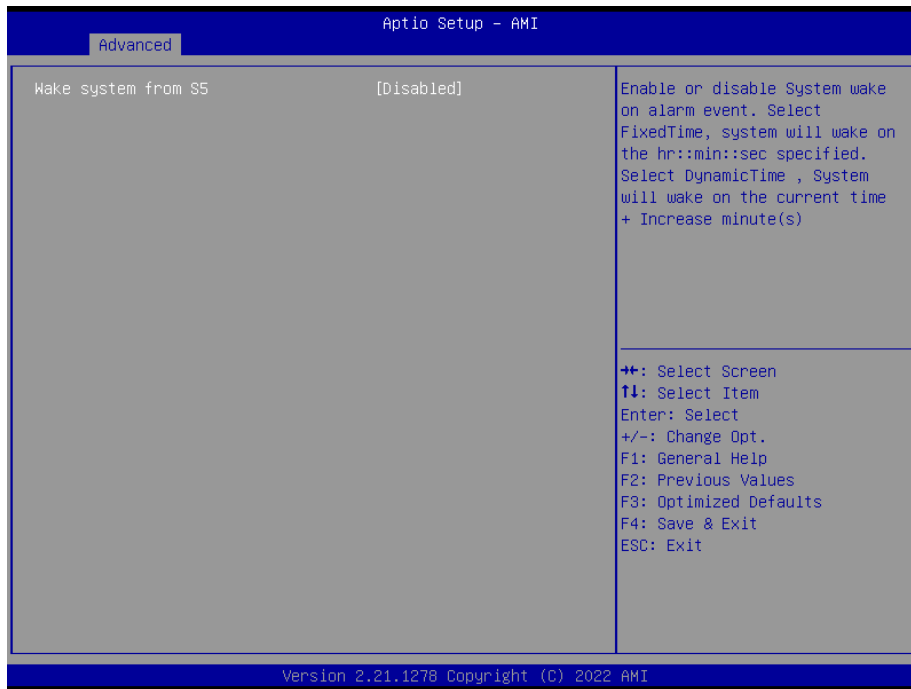

Item	Options	Description
Wake system from S5	Disabled[Default], Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).

# ECM-EHL3 User's Manual


## 3.6.2.10 Serial Port Console Redirection

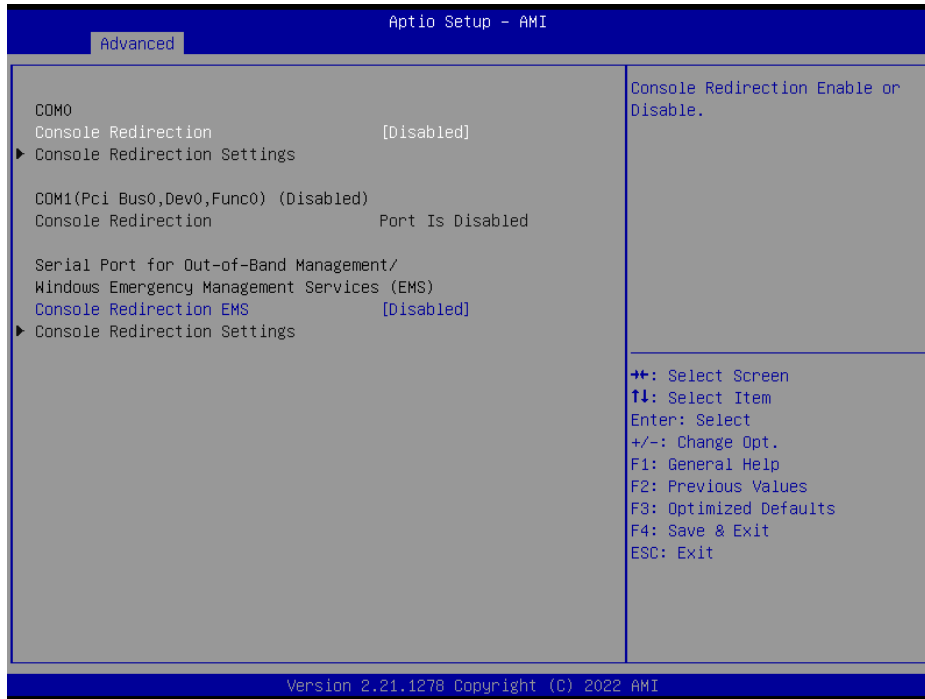

Item	Options	Description
Console Redirection	Disabled[Default], Enabled	Console Redirection Enable or Disable.
Console Redirection EMS	Disabled[Default], Enabled	Console Redirection Enable or Disable.


## 3.6.2.11 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

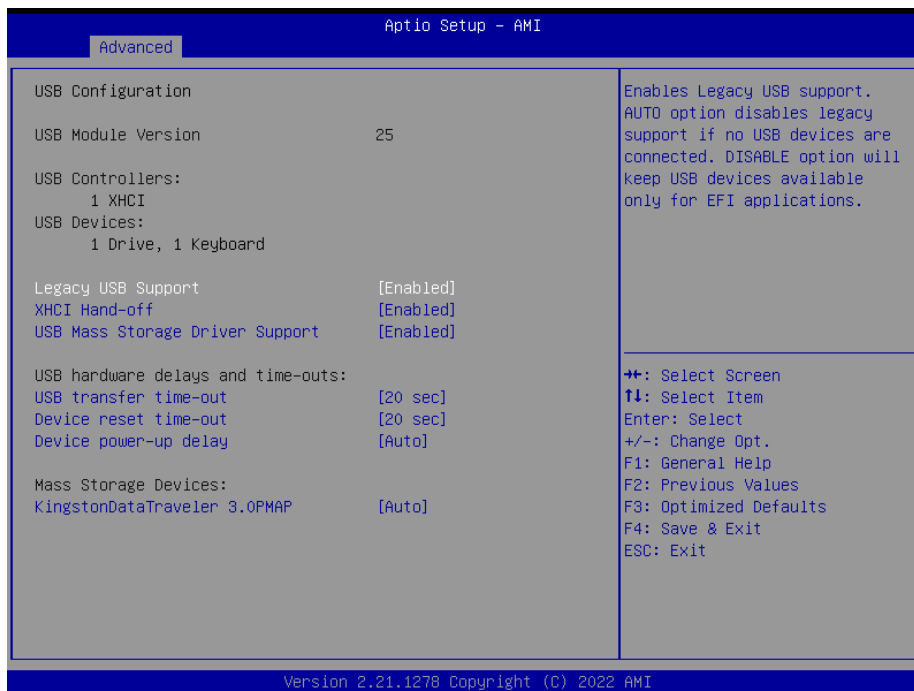

Item	Options	Description
<b>Legacy USB Support</b>	Enabled[Default], Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
<b>XHCI Hand-off</b>	Enabled[Default], Disabled	This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
<b>USB Mass Storage Driver Support</b>	Enabled[Default], Disabled	Enable/Disable USB Mass Storage Driver Support.
<b>USB transfer time-out</b>	1 sec 5 sec 10 sec 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
<b>Device reset time-out</b>	10 sec 20 sec[Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
<b>Device power-up delay</b>	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.
<b>Mass Storage Devices</b>	Auto[Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.


### 3.6.2.12 Network Stack Configuration

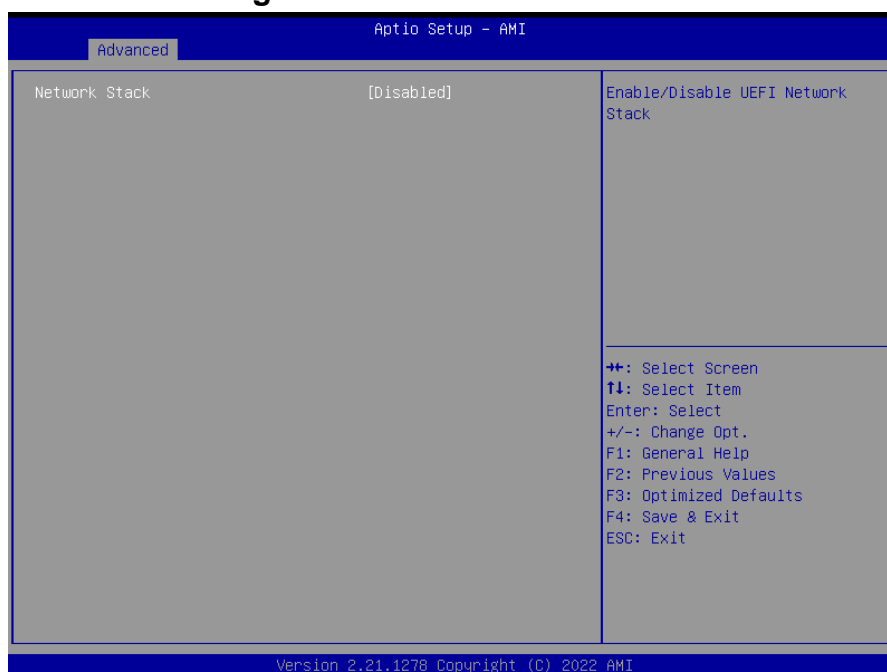

## ECM-EHL3 User's Manual

Item	Options	Description
Network Stack	Enabled Disabled[Default]	Enable/Disable UEFI Network Stack.


### 3.6.2.13 NVMe Configuration

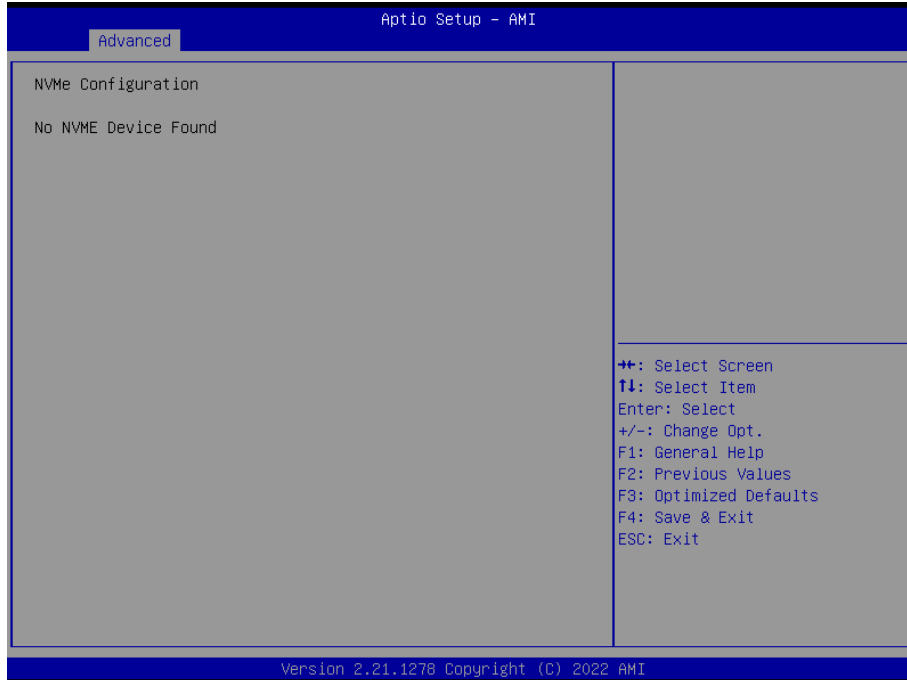

### 3.6.3 Chipset




### 3.6.3.1 System Agent (SA) Configuration

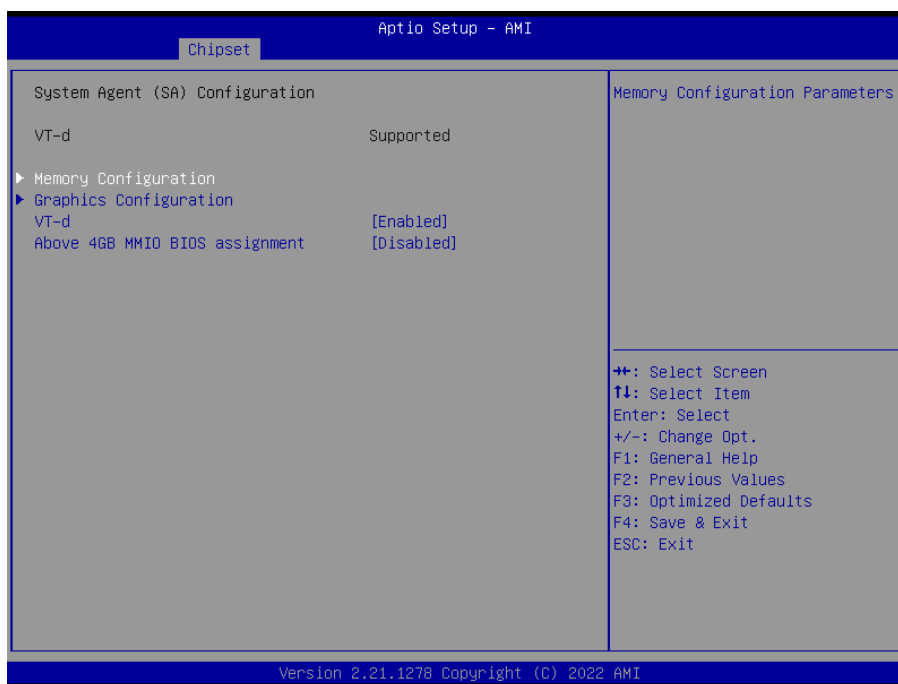


Item	Option	Description
<b>VT-d</b>	Enabled[Default] Disabled	VT-d capability.
<b>Above 4GB MMIO BIOS assignment</b>	Enabled Disabled[Default]	Enable/Disable above 4GB MemoryMappedIO BIOS assignment. This is enabled automatically when Aperture Size is set to 2048MB.

#### 3.6.3.1.1 Memory Configuration

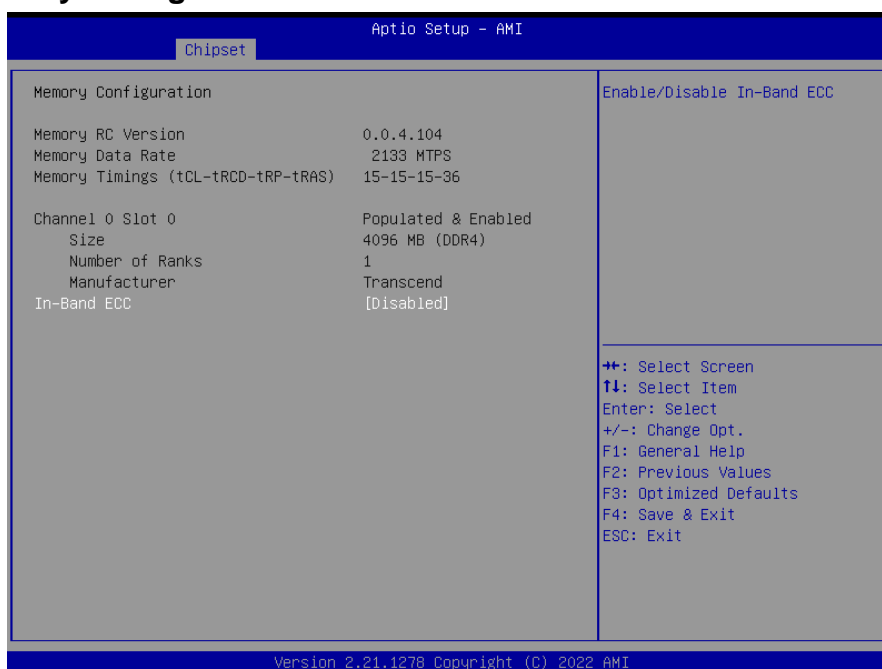

3.6.3.1.2 Graphics Configuration

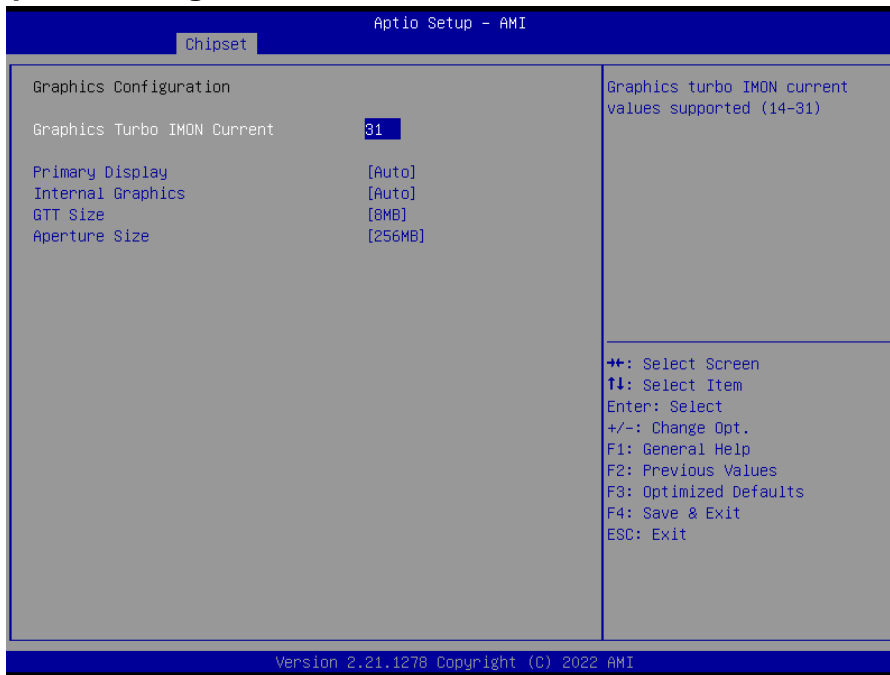


Item	Option	Description
<b>Graphics Turbo IMON Current</b>	14-31 <b>[Default]</b>	Graphics turbo IMON current values supported (14-31).
<b>Primary Display</b>	Auto <b>[Default]</b> IGFX PEG PCI	Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx.
<b>Internal Graphics</b>	Auto <b>[Default]</b> Disabled Enabled	Keep IGFX enabled based on the setup options.
<b>GTT Size</b>	2MB 4MB 8MB <b>[Default]</b>	Select the GTT Size.
<b>Aperture Size</b>	128MB 256MB <b>[Default]</b> 512MB 1024MB	Select the Aperture Size. Note: Above 4GB MMIO BIOS assignment is automatically enabled when selecting 2048MB aperture. To use this feature, please disable CSM Support.




### 3.6.3.2 PCH-IO Configuration



#### 3.6.3.2.1 PCI Express Configuration

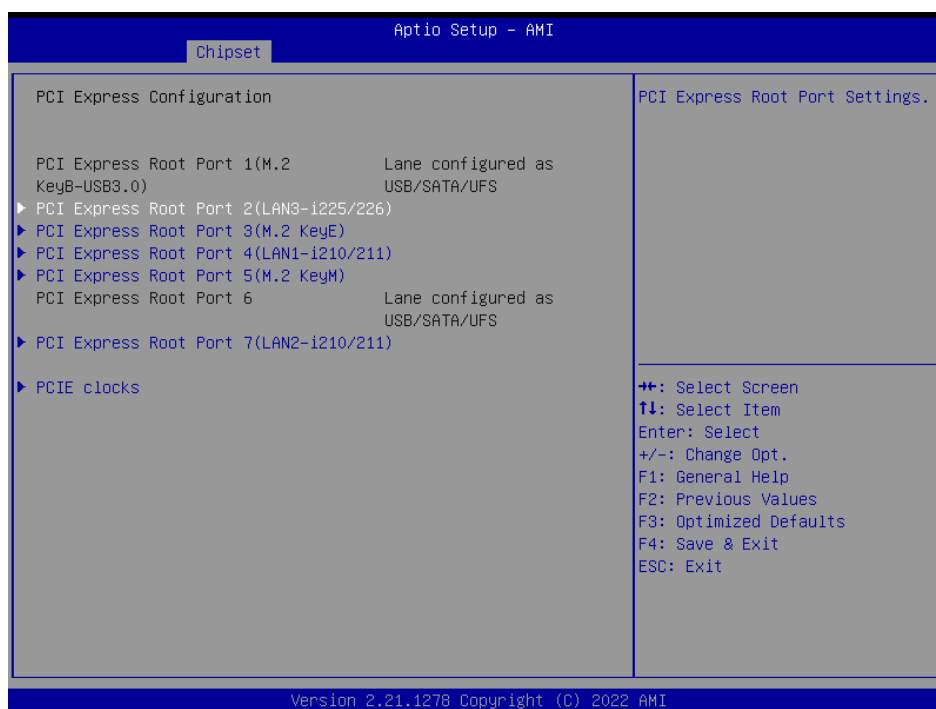

3.6.3.2.1.1 PCI Express Root Port 2(LAN3-i225/226)

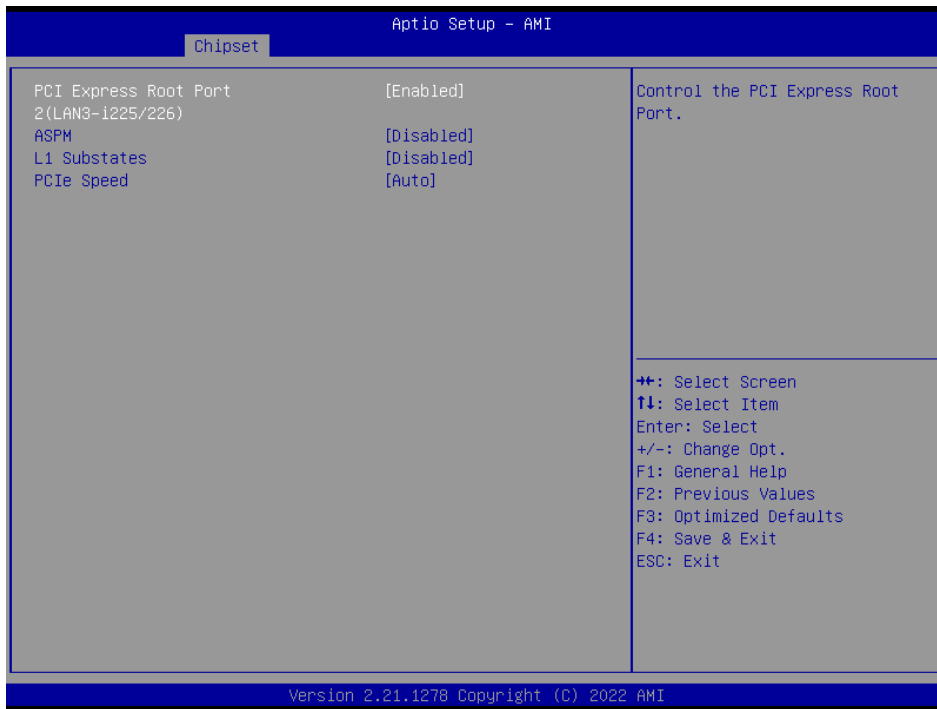


Item	Option	Description
<b>PCI Express Root Port 2(LAN3-i225/226)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled[Default] L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

### 3.6.3.2.1.2 PCI Express Root Port 3(M.2 KeyE)



Item	Option	Description
<b>PCI Express Root Port 3(M.2 KeyE)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled[Default] L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

3.6.3.2.1.3 PCI Express Root Port 4(LAN1-i210/211)

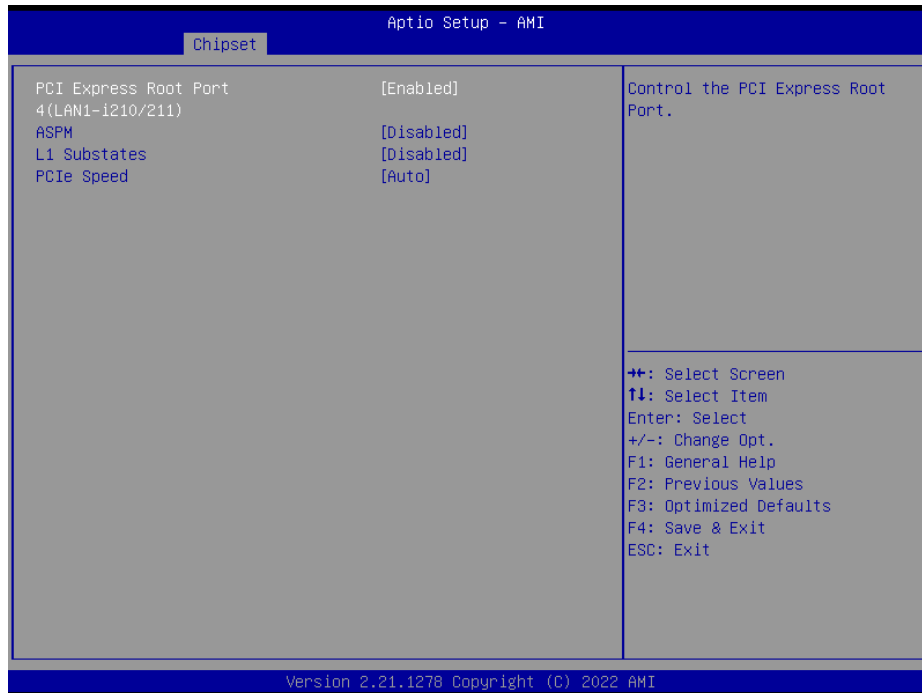


Item	Option	Description
<b>PCI Express Root Port 4(LAN1-i210/211)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled[Default], L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

### 3.6.3.2.1.4 PCI Express Root Port 5(M.2 KeyM)




Item	Option	Description
<b>PCI Express Root Port 5(M.2 KeyM)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled[Default], L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

3.6.3.2.1.5 PCI Express Root Port 7(LAN2-i210/211)

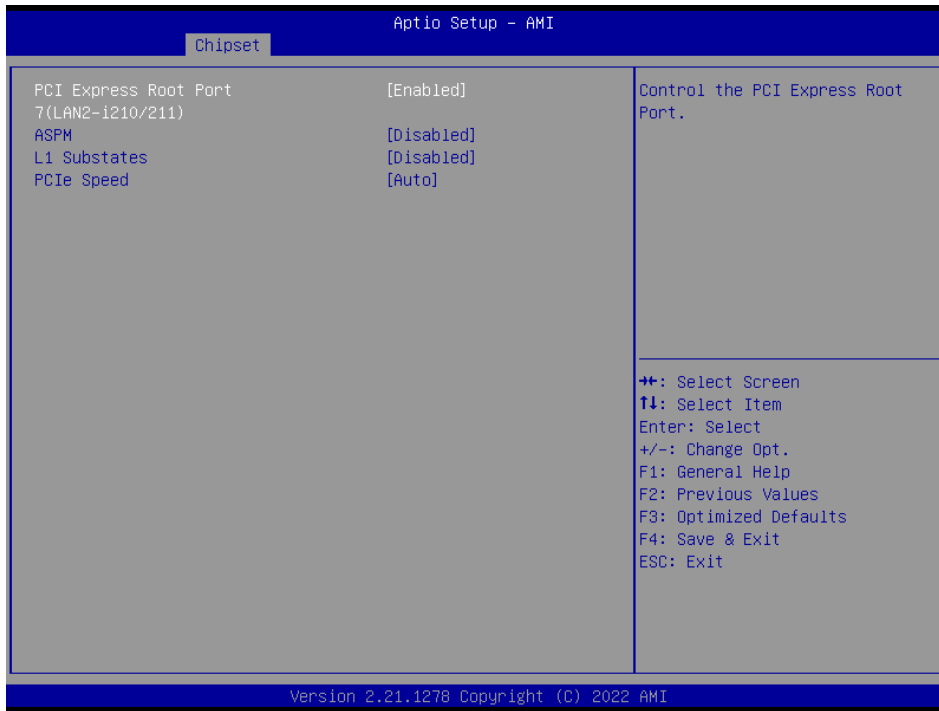

Item	Option	Description
<b>PCI Express Root Port 7(LAN2-i210/211)</b>	Enabled[Default], Disabled	Control the PCI Express Root Port.
<b>ASPM</b>	Disabled[Default], L0s L1 L0sL1 Auto	Set the ASPM Level: Force L0s – Force all links to L0s State AUTO – BIOS auto configure DISABLE – Disables ASPM.
<b>L1 Substates</b>	Disabled[Default], L1.1 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2 Gen3	Configure PCIe Speed.

### 3.6.3.2.1.6 PCIE clocks

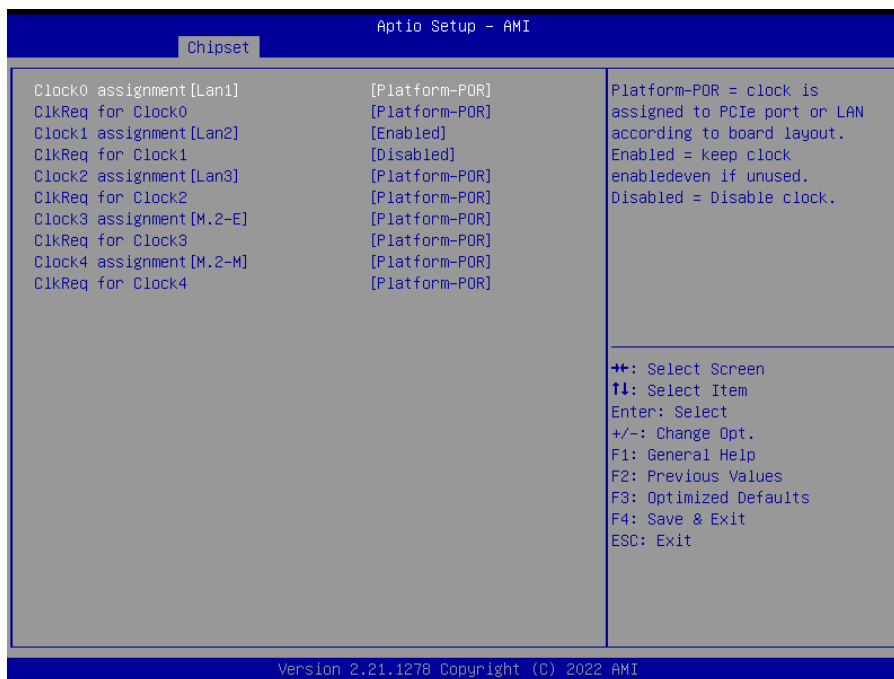


Item	Option	Description
<b>Clock0 assignment[Lan1]</b>	Platform-POR[Default], Enabled Disabled	Platform-POR= clock is assigned to PCIe port or LAN according to board layout. Enabled= keep clock enabled even if unused. Disabled = Disable clock.
<b>ClkReq for Clock0</b>	Platform-POR[Default], Disabled	Platform-POR= CLKREQ signal is assigned to CLKSRC according to board layout. Disabled = CLKREQ will not be used.
<b>Clock1 assignment[Lan2]</b>	Platform-POR Enabled[Default], Disabled	Platform-POR= clock is assigned to PCIe port or LAN according to board layout. Enabled= keep clock enabled even if unused. Disabled = Disable clock.
<b>ClkReq for Clock1</b>	Platform-POR, Disabled[Default]	Platform-POR= CLKREQ signal is assigned to CLKSRC according to board layout. Disabled = CLKREQ will not be used.
<b>Clock2 assignment[LAN3]</b>	Platform-POR[Default] Enabled Disabled	Platform-POR= clock is assigned to PCIe port or LAN according to board layout. Enabled= keep clock enabled even if unused. Disabled = Disable clock.
<b>ClkReq for Clock2</b>	Platform-POR[Default] Disabled	Platform-POR= CLKREQ signal is assigned to CLKSRC according to board layout. Disabled = CLKREQ will not be used.
<b>Clock3 assignment[M.2-E]</b>	Platform-POR[Default], Enabled Disabled	Platform-POR= clock is assigned to PCIe port or LAN according to board layout. Enabled= keep clock enabled even if unused. Disabled = Disable clock.

## ECM-EHL3 User's Manual

<b>ClkReq for Clock3</b>	Platform-POR[ <b>Default</b> ], Disabled	Platform-POR= CLKREQ signal is assigned to CLKSRC according to board layout. Disabled = CLKREQ will not be used.
<b>Clock3 assignment[M.2-M]</b>	Platform-POR[ <b>Default</b> ], Enabled Disabled	Platform-POR= clock is assigned to PCIe port or LAN according to board layout. Enabled= keep clock enabledeven if unused. Disabled = Disable clock.
<b>ClkReq for Clock4</b>	Platform-POR[ <b>Default</b> ], Disabled	Platform-POR= CLKREQ signal is assigned to CLKSRC according to board layout. Disabled = CLKREQ will not be used.

### 3.6.3.2.2 SATA Configuration

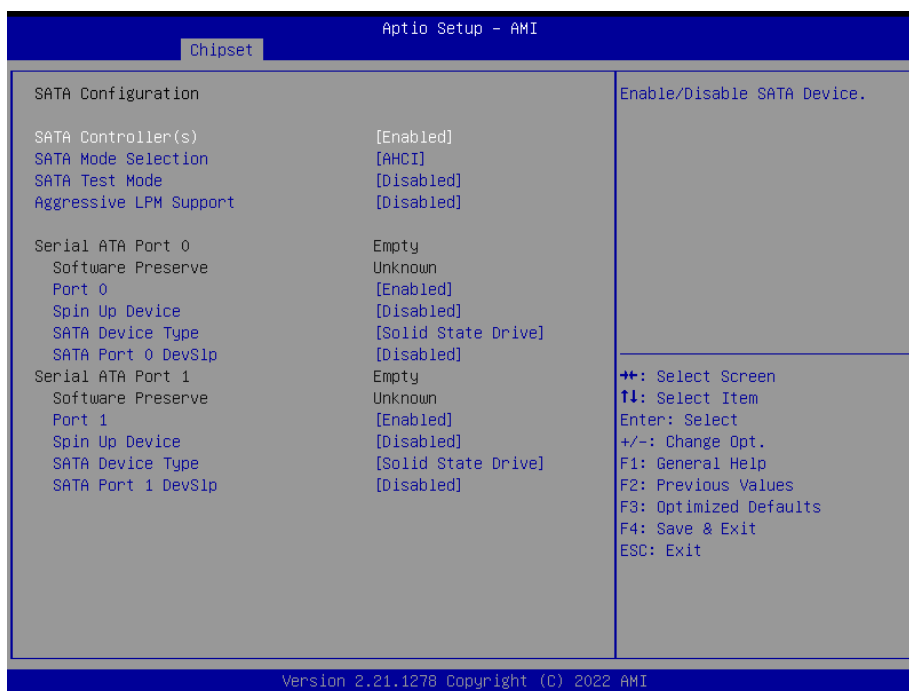


Item	Options	Description
<b>SATA Controller(s)</b>	Enabled[ <b>Default</b> ] Disabled,	Enable/Disable SATA Device.
<b>SATA Mode Selection</b>	AHCI[ <b>Default</b> ],	Determines how SATA controller(s) operate.
<b>SATA Test Mode</b>	Enabled Disabled[ <b>Default</b> ]	Test Mode Enable/Disable (Loop Back).
<b>Aggressive LPM Support</b>	Enabled Disabled[ <b>Default</b> ]	Enable PCH to aggressively enter link power state.
<b>Port 0</b>	Enabled[ <b>Default</b> ] Disabled	Enable or Disable SATA Port.
<b>Spin Up Device</b>	Enabled Disabled[ <b>Default</b> ]	If enabled for any of ports Staggerred Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.



<b>SATA Device Type</b>	Hard Disk Drive Solid State Drive[Default]	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.
<b>SATA Port 0 DevSlp</b>	Disabled[Default] Enabled	Enable/Disable SATA Port 0 DevSlp. For DevSlp to work, both hard drive and SATA port need to support DevSlp function, otherwise an unexpected behaviour might happen. Please check board design before enabling it.
<b>Port 1</b>	Enabled[Default] Disabled	Enable or Disable SATA Port.
<b>Spin Up Device</b>	Enabled Disabled[Default]	If enabled for any of ports Staggerred Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.
<b>SATA Device Type</b>	Hard Disk Drive Solid State Drive[Default]	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.
<b>SATA Port 1 DevSlp</b>	Disabled[Default] Enabled	Enable/Disable SATA Port 1 DevSlp. For DevSlp to work, both hard drive and SATA port need to support DevSlp function, otherwise an unexpected behaviour might happen. Please check board design before enabling it.

### 3.6.3.2.3 USB Configuration

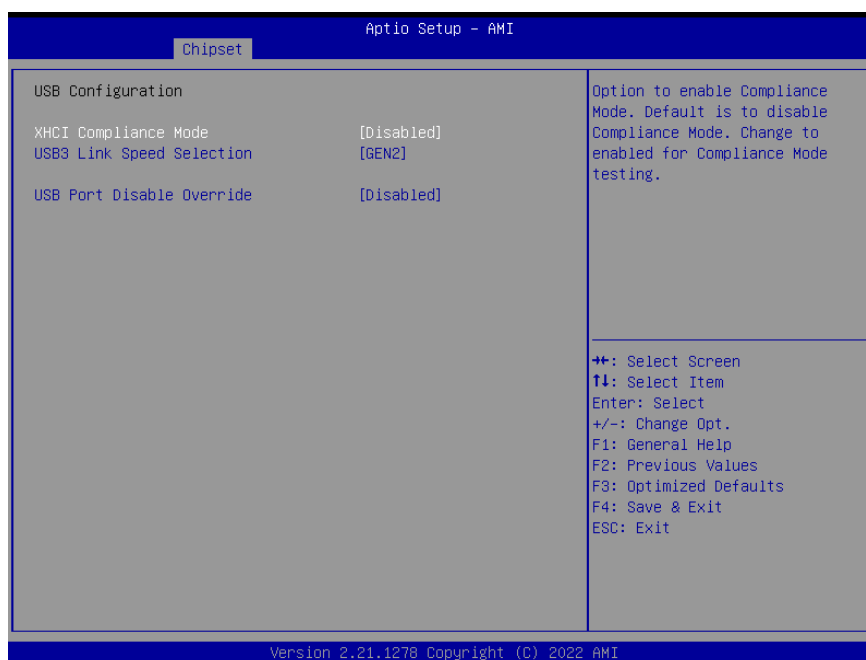

Item	Options	Description
<b>XHCI Compliance Mode</b>	Disabled[Default] Enabled	Option to enable Compliance Mode. Default is to disable Compliance Mode. Change to enabled for Compliance Mode testing.

## ECM-EHL3 User's Manual


<b>USB3 Link Speed Selection</b>	GEN1 GEN2[Default],	This option is to select USB3 Link Speed GEN1 or GEN2.
<b>USB Port Disable Override</b>	Disabled[Default] Select-Per-Pin	Selectively Enable/Disable the corresponding USB port from reporting a Device Connection to the controller.

### 3.6.3.2.4 HD Audio Configuration



Item	Option	Description
<b>HD Audio</b>	Disabled Enabled[Default]	Control Detection of the HD-Audio device. Disable = HDA will be unconditionally disabled Enabled = HDA will be unconditionally enabled.

### 3.6.3.3 Board & Panel Configuration

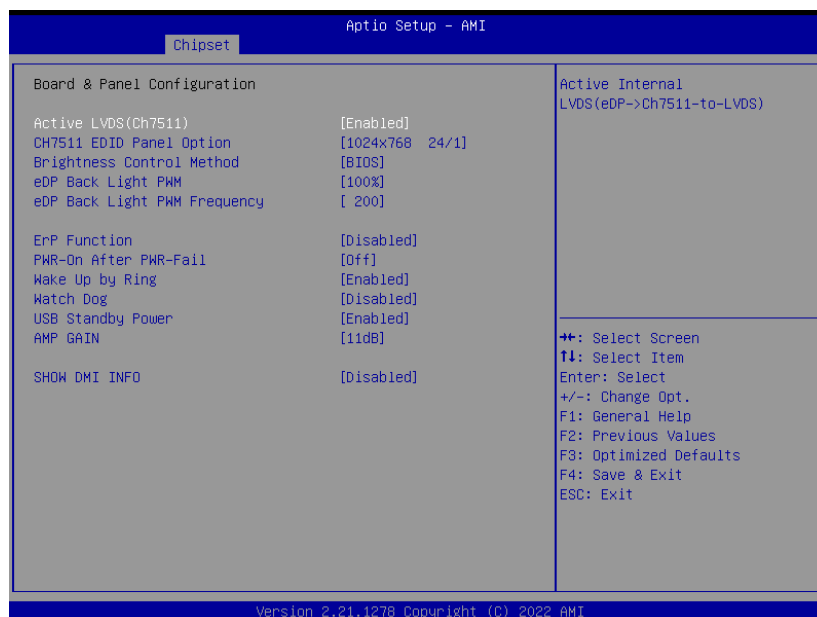


Item	Option	Description
Active LVDS(Ch7511)	Disabled Enabled[Default]	Active Internal LVDS(eDP->Ch7511-to-LVDS).
CH7511 EDID Panel Option	1024x768 24/1[Default] 800x600 18/1 1024x768 18/1 1366x768 18/1 1024x600 18/1 1280x800 18/1 1920x1200 24/2 1920x1080 18/2 1280x1024 24/2 1440x900 18/2 1600x1200 24/2 1366x768 24/1 1920x1080 24/2 1680x1050 24/2	Port-EDP to LVDS(Chrotel 7511) Panel EDID Option.
Brightness Control Method	BIOS[Default] OS Driver	eDP Brightness Control Method. 1.BIOS 2.OS Driver.
eDP Back Light PWM	00% 25% 50% 75% 100%[Default]	Select eDP back light PWM duty.
eDP Back Light PWM Frequency	200[Default] 300 400 500 700 1k 2k 3k 5k 10k 20k	Select eDP back light PWM Frequency.
ErP Function	Disabled[Default] Enabled	ErP Function (Deep S5).
PWR-On After PWR-Fail	Off[Default] On Last state	AC loss resume.
Wake Up by Ring	Disabled Enabled[Default]	Wake Up by Ring from S3/S4/S5.
Watch Dog	Disabled[Default] 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.

## ECM-EHL3 User's Manual

<b>USB Standby Power</b>	Disabled Enabled[ <b>Default</b> ]	Enable/Disabled USB Standby Power during S3/S4/S5.
<b>AMP GAIN</b>	25dB 19dB 14dB 11dB[ <b>Default</b> ]	Codec amp gain(db).
<b>SHOW DMI INFO</b>	Disabled[ <b>Default</b> ] Enabled	SHOW DMI INFO.

### 3.6.4 Security

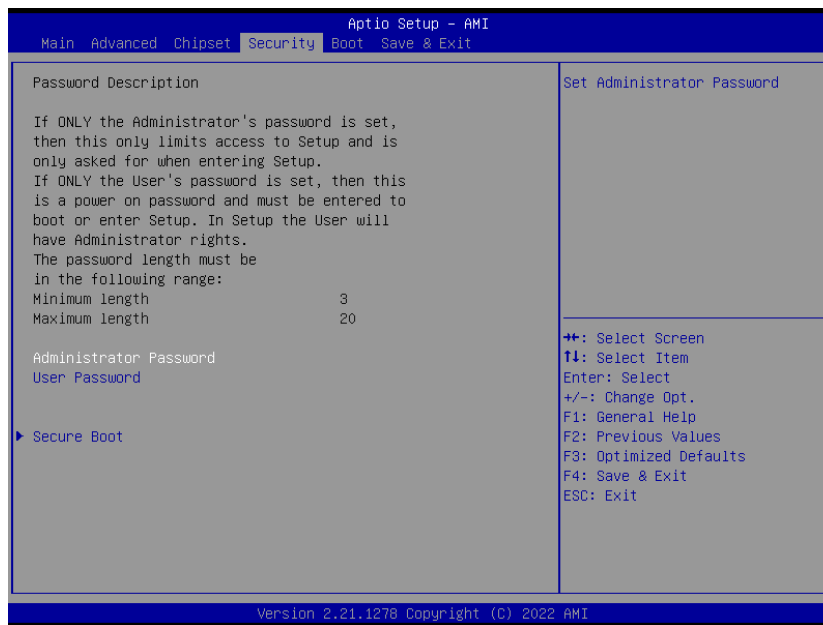


- **Administrator Password**

Set setup Administrator Password

- **User Password**

Set User Password


### 3.6.4.1 Secure Boot

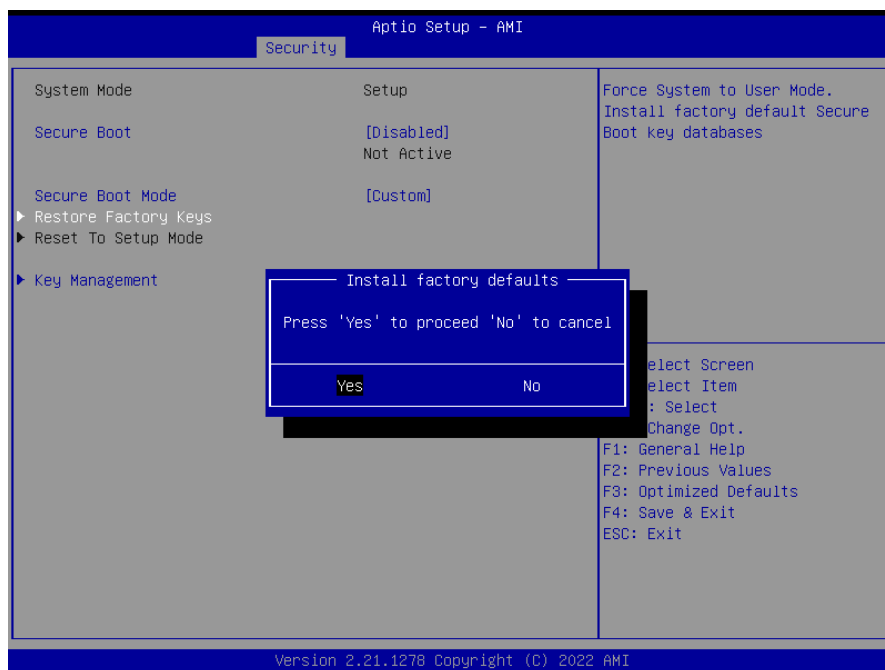

Item	Option	Description
<b>Secure Boot</b>	Disabled[Default] Enabled	Secure Boot feature is Active if Secure Boot is Enable, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.
<b>Secure Boot Mode</b>	Standard Custom[Default]	Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.

# ECM-EHL3 User's Manual

## 3.6.4.1.1 Key Management

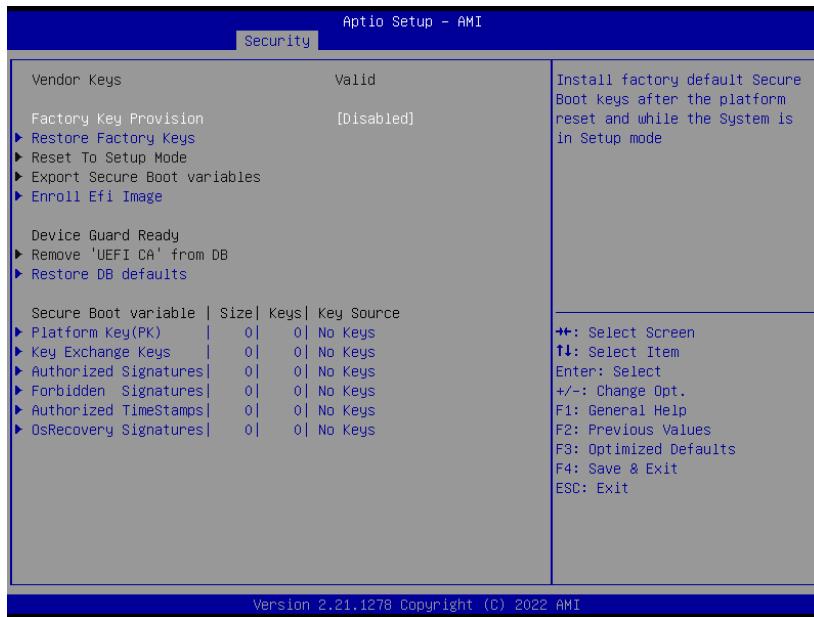

Item	Option	Description
Factory Key Provision	Disabled[Default] Enabled	Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.



## 3.6.5 Boot



Item	Option	Description
Setup Prompt Timeout	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
Bootup NumLock State	On[Default] Off	Select the keyboard NumLock state

<b>Quiet Boot</b>	Disabled[Default] Enabled	Enables or disables Quiet Boot option
<b>Fast Boot</b>	Disabled[Default] Enabled	Enables or disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.
<b>Boot Option #1/#2</b>	Set the system boot order.	

### 3.6.6 Save and exit

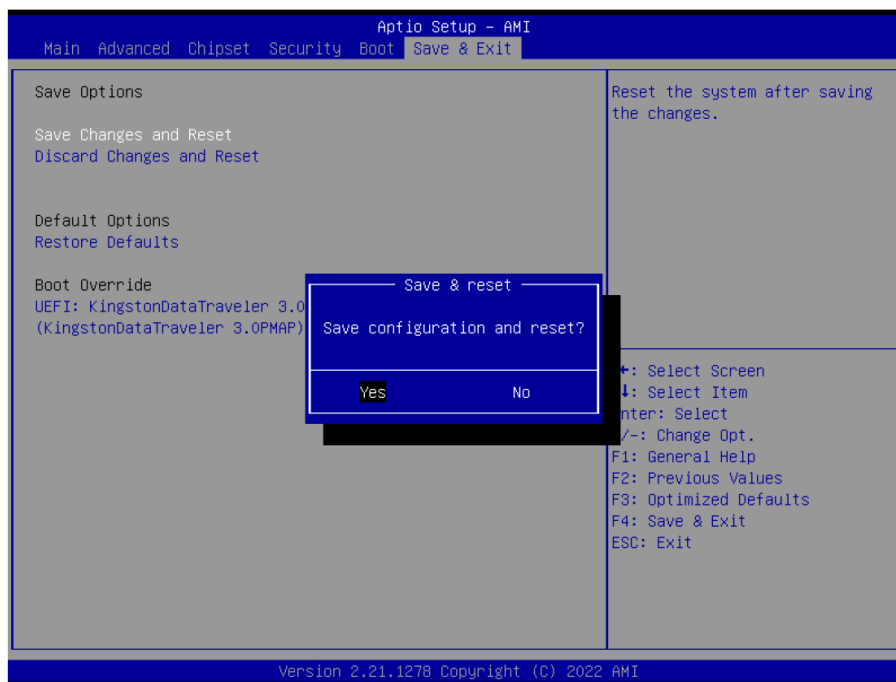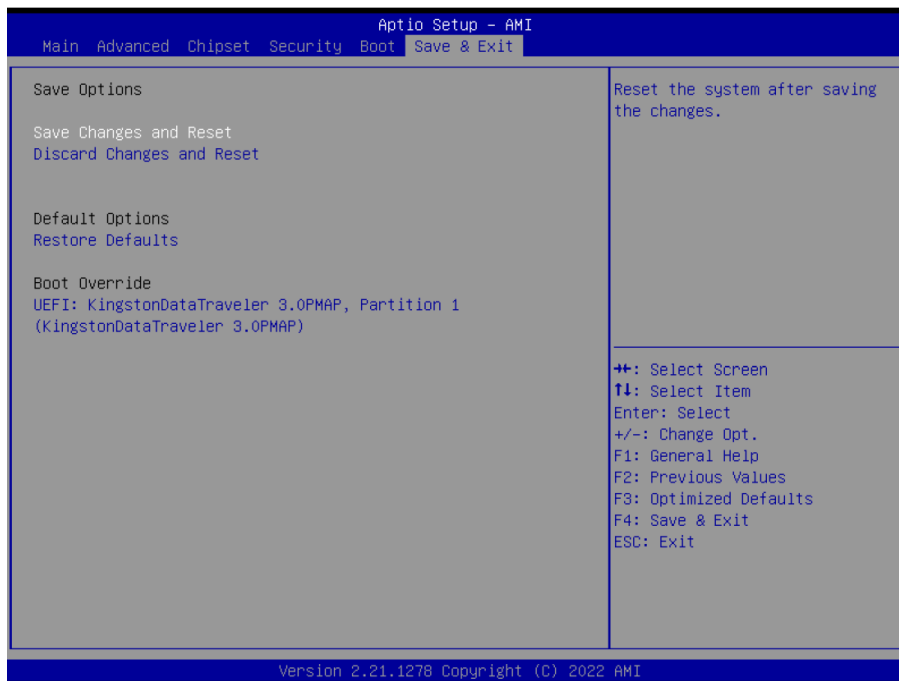

### **3.6.6.1 *Save Changes and Exit***

Use the save changes and reset option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

### **3.6.6.2 *Discard Changes and Reset***

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

### **3.6.6.3 *Restore Defaults***

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

### **3.6.6.4 *Restore User Defaults***

This option restores all BIOS settings to the user defaults. This option is useful for restoring previously preserved custom BIOS setup configurations.



# 4. Drivers Installation

---



**Note:** Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.

## 4.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:  
[www.avalue.com](http://www.avalue.com).



**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.



**Step 3. Click Install.**



**Step1. Click Next.**



**Step 4. Setup completed.**




**Step 2. Click Accept.**

## 4.2 Install ME Driver

All drivers can be found on the Avalue Official Website:  
[www.avalue.com](http://www.avalue.com).




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

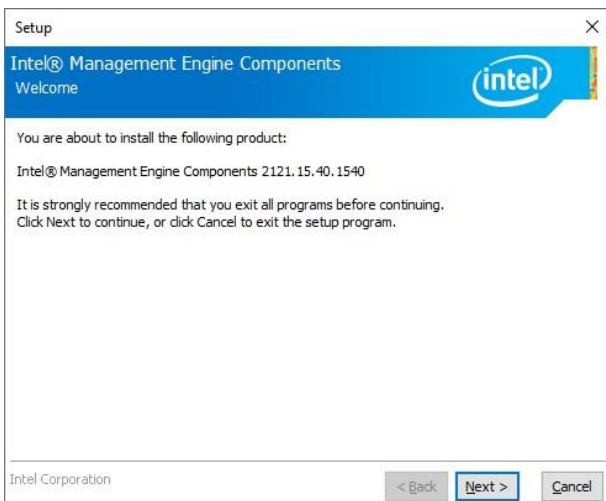


**Step 1.** Click **Next** to start installation.




**Step 2.** Click **Next**.

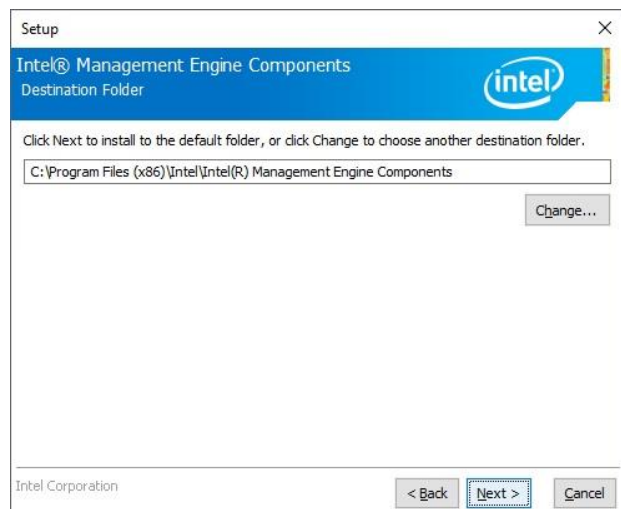

**Step 3.** Click **Next** to continue installation.

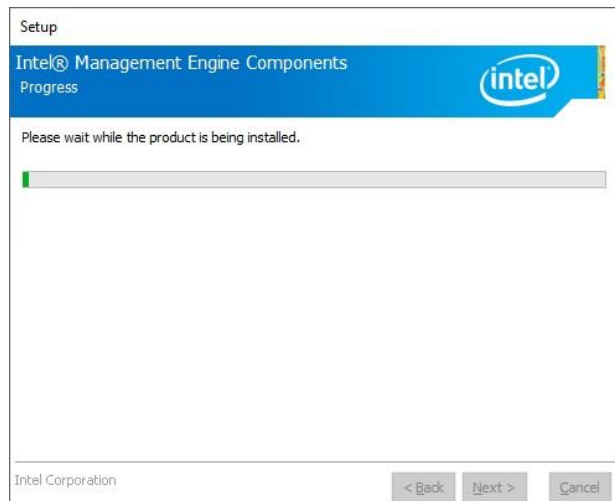

**Step 4.** Installing.

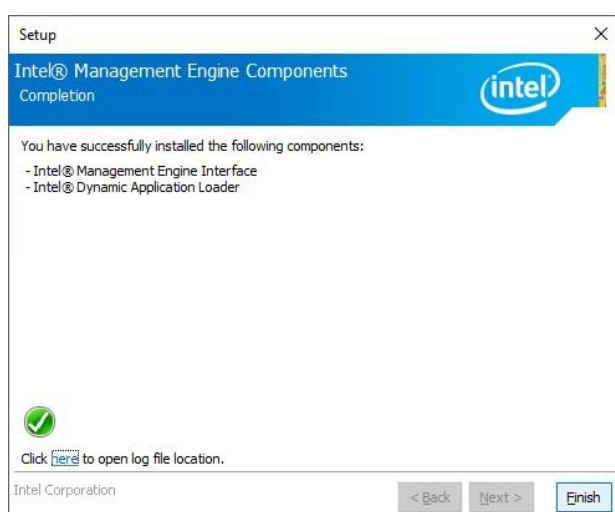

**Step 5.** Click **Finish** to complete setup.


## 4.3 Install VGA Driver

All drivers can be found on the Avalue Official Website:

[www.avalue.com](http://www.avalue.com).




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

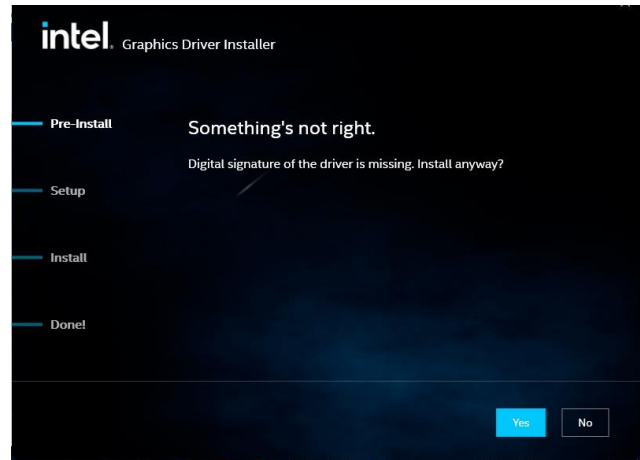


**Step 3. Click Yes.**




**Step 1. Click Begin installation.**

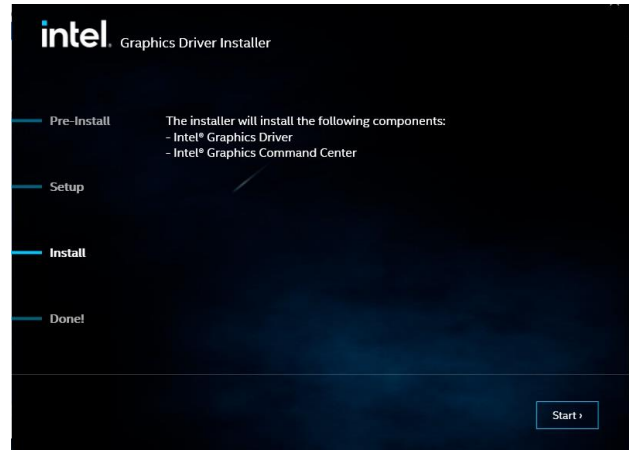


**Step 4. Click Start.**

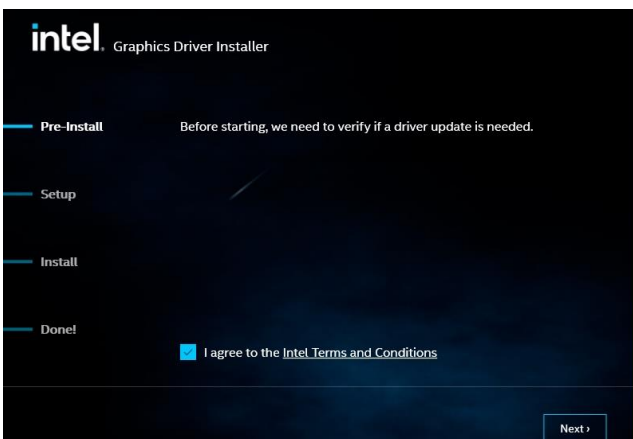


**Step 2. Click Next.**

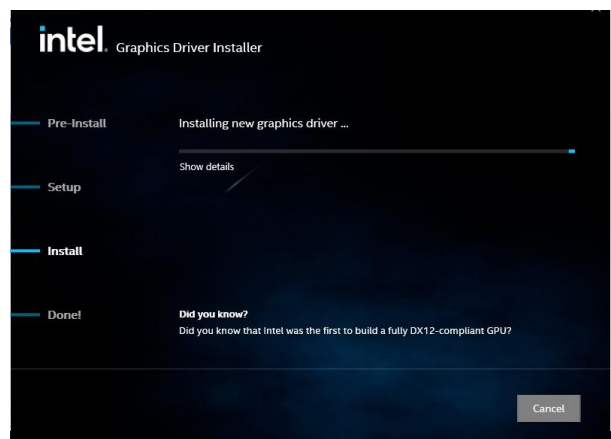

**Step 5. Installing.**

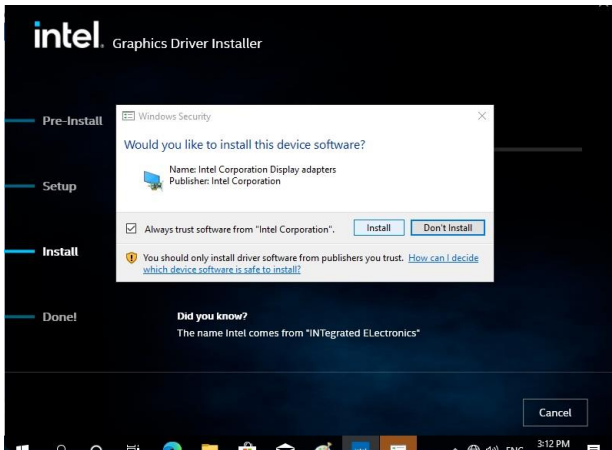

Step 6. Click Install.

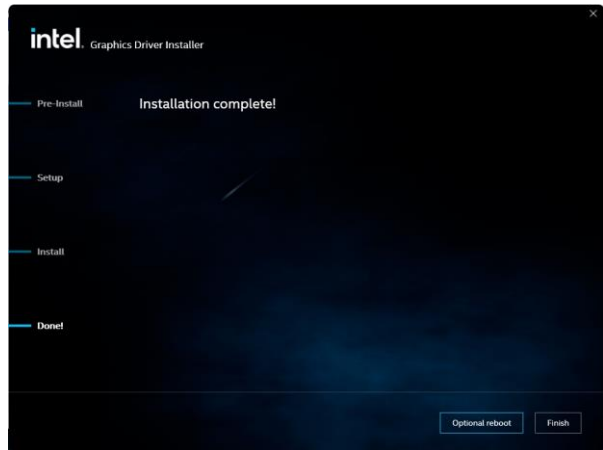


Step 7. Setup completed.

## 4.4 Install Audio Driver


All drivers can be found on the Avalue Official Website:  
[www.avalue.com](http://www.avalue.com).




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

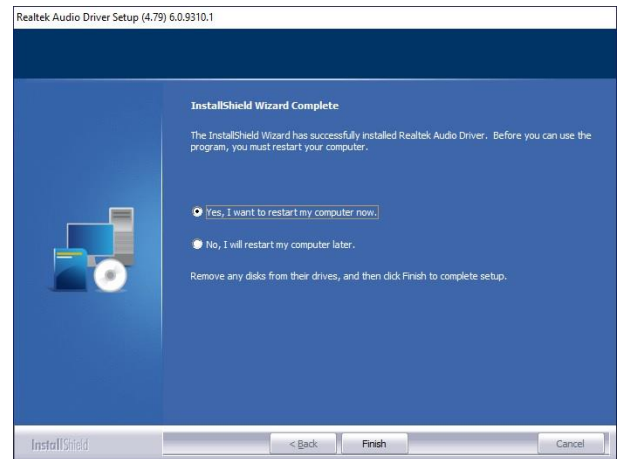

**Step 3.** Click **Finish** to complete setup.

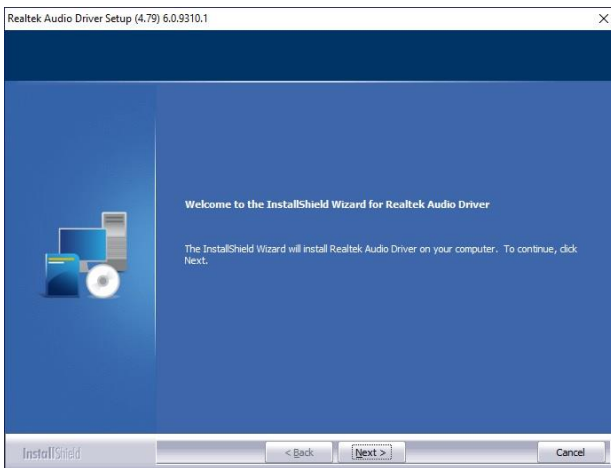

**Step 1.** Click **Next**.

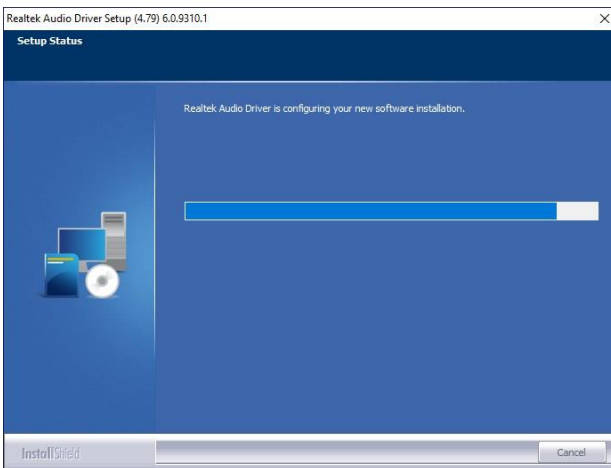

**Step 2.** Installing.


## 4.5 Install Ethernet Driver

All drivers can be found on the Avalue Official Website:


[www.avalue.com](http://www.avalue.com).




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

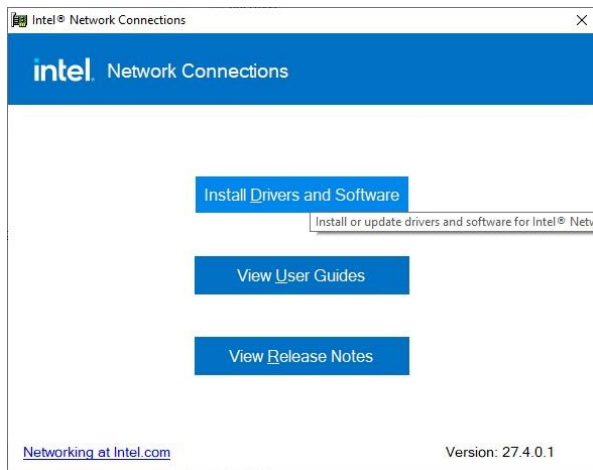


**Step 1. Click Install Drivers and Software** to continue installation.

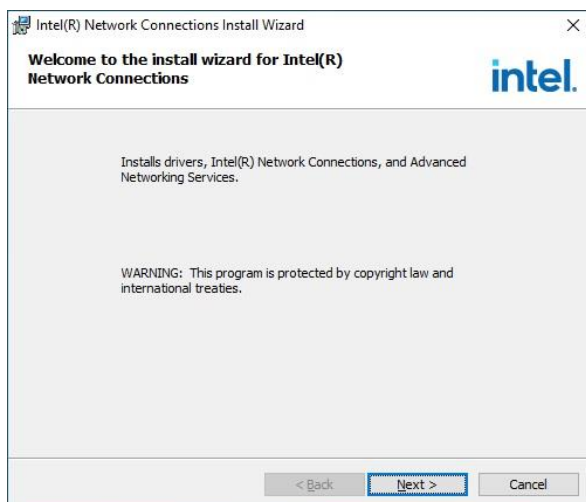


**Step 2. Click Next.**

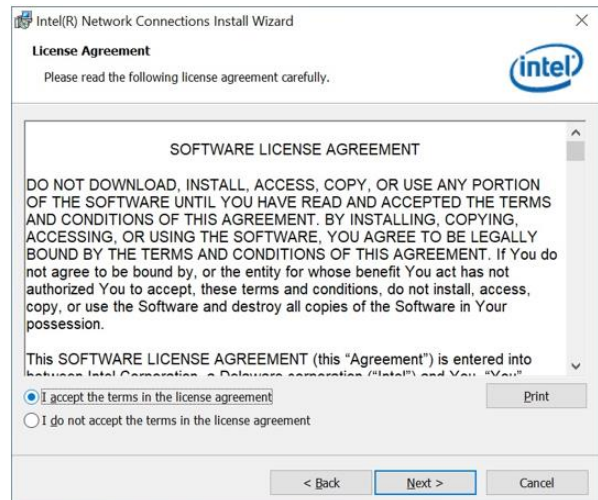

**Step 3. Click Next.**

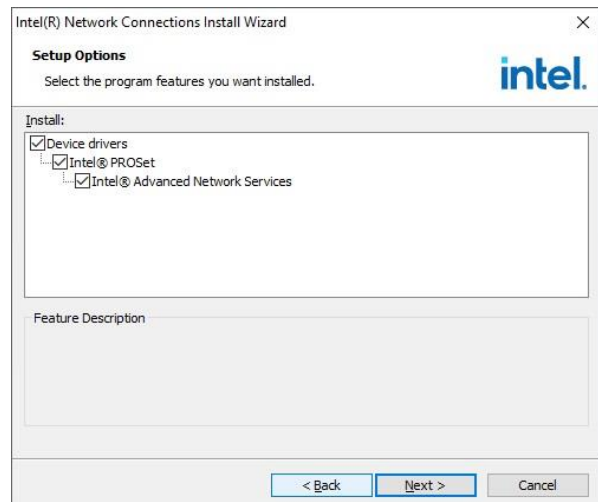


**Step 4. Click Next.**

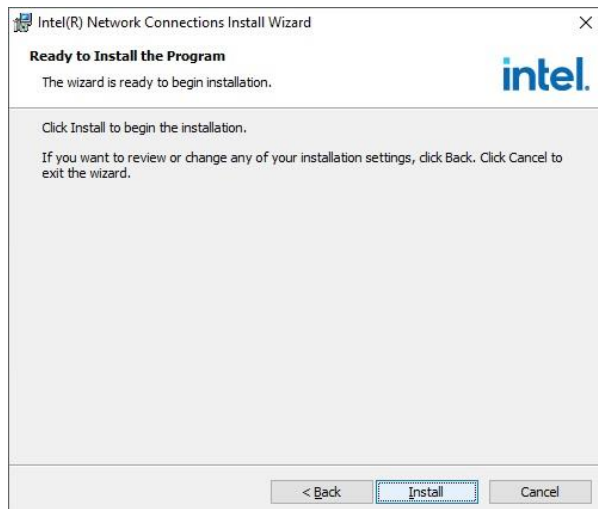


**Step 5. Click Install.**

# ECM-EHL3 User's Manual

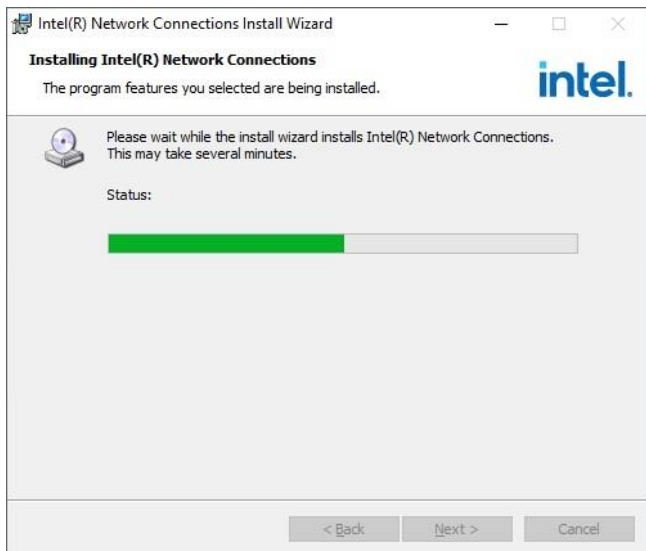

**Step 6. Install.**

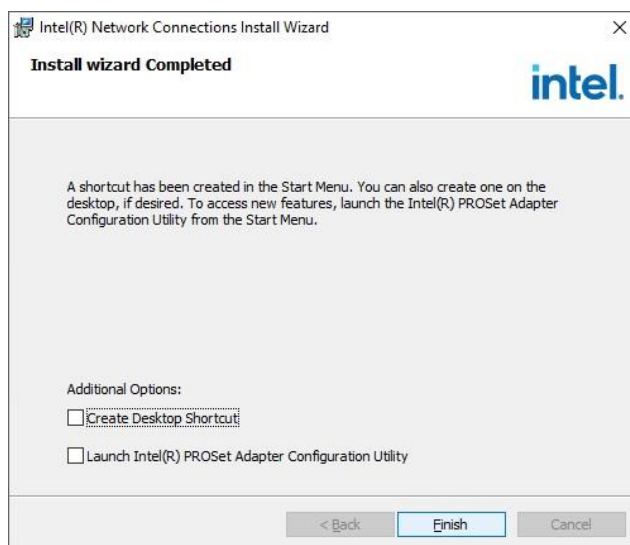

**Step 7. Click Finish to complete setup.**




## 4.6 Install HID Driver


All drivers can be found on the Avalue Official Website:  
[www.avalue.com](http://www.avalue.com).




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

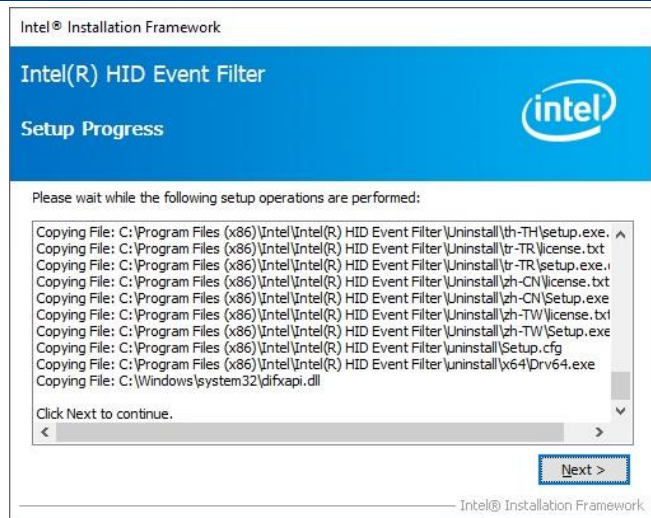


**Step 3. Click Next.**

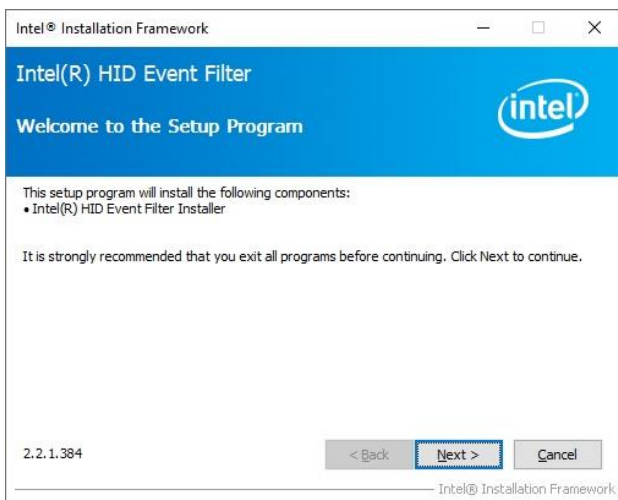

**Step 1. Click Next** to continue installation.

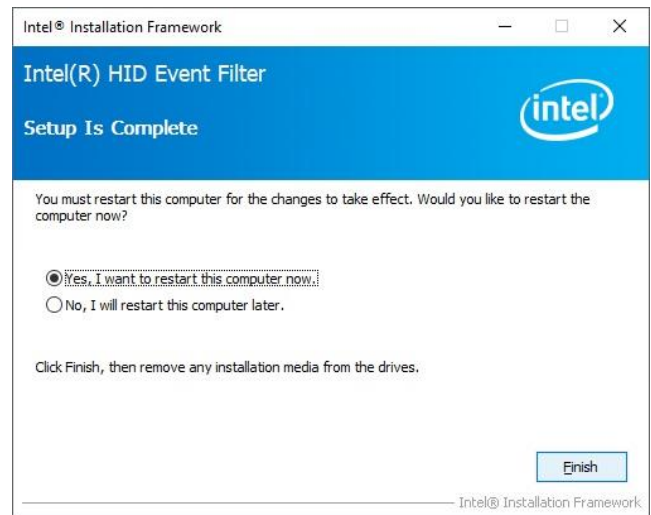


**Step 4. Click Finish** to complete setup.

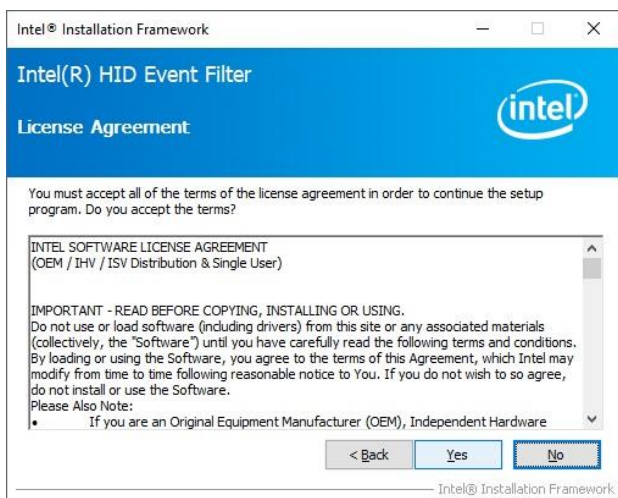

**Step 2. Click Yes.**

# 5. Mechanical Drawing

---

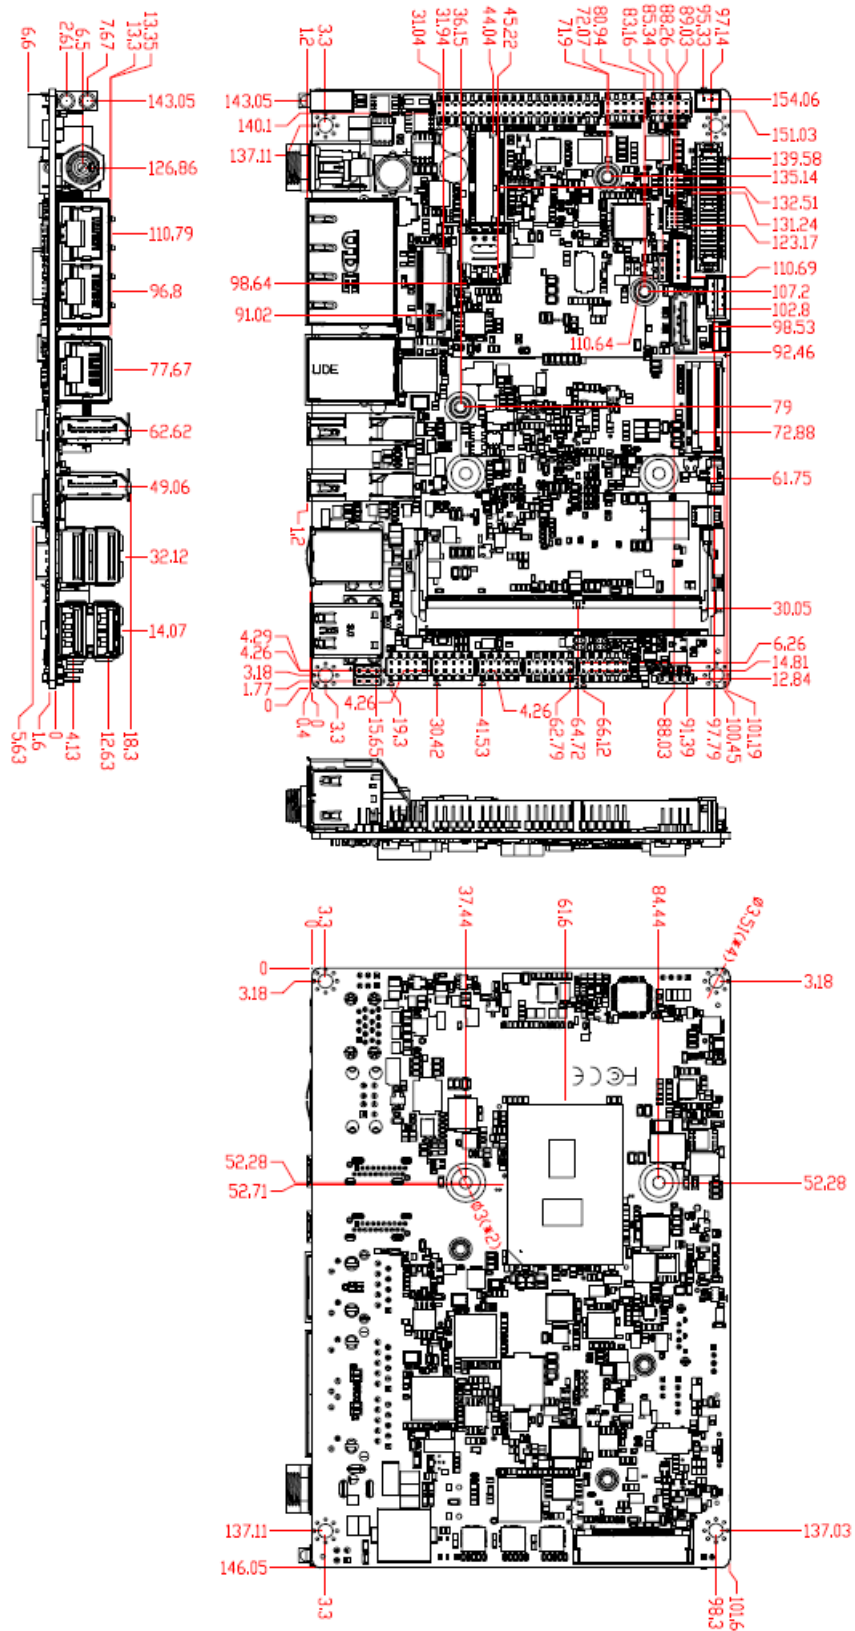

Unit: mm

