

# NUC-APL

# NUC-APL-Slim

Intel® Celeron SoC Processor Apollo Lake NUC System

Intel® Celeron SoC Processor Apollo Lake NUC Slim System

## Quick Reference Guide

5<sup>th</sup> Ed – 17 January 2023

### Copyright Notice

Copyright © 2023 Avalue Technology Inc., ALL RIGHTS RESERVED.

Part No. E2017JAI0A4R

## FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.

(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

## A Message to the Customer

### *Avalue Customer Services*

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

### *Technical Support*

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

# Content

<b>1. Getting Started</b>	<b>6</b>
1.1 Safety Precautions	6
1.2 Packing List	6
1.3 System Specifications	7
1.4 System Overview	10
1.4.1 NUC-APL Front View	10
1.4.2 NUC-APL Rear View	10
1.4.3 NUC-APL-Slim Front View	11
1.4.4 NUC-APL-Slim Rear View	11
1.5 System Dimensions	12
1.5.1 NUC-APL Front & Top view	12
1.5.2 NUC-APL-Slim Front & Top view	13
<b>2. Hardware Configuration</b>	<b>14</b>
2.1 NUC-APL connector mapping	15
2.1.1 Serial Port connector 1 (COM1)	15
2.1.2 Serial Port connector 2 (COM2)	15
2.2 NCM-APL Overviews	16
2.3 NCM-APL Jumper & Connector list	17
2.4 NCM-APL Jumpers & Connectors settings	18
2.4.1 AT/ATX Input power select (JAT1)	18
2.4.2 Clear CMOS (JBAT1)	18
2.4.3 LPC port connector (JLPC1)	19
2.4.4 VGA connector (JVGA1)	19
2.4.5 BIOS SPI connector (JBIOS_SPI1)	20
2.4.6 EC Debug connector (JEC_ROM1)	20
2.4.7 Serial port 1 connector (JCOM1)	21
2.4.8 Serial port 2 connector (JCOM2)	21
2.4.9 Serial port 2 in RS-422/485 mode (J422_485_1)	22
2.4.10 Front Panel connector (JFP1)	22
2.4.11 Battery connector 1 (JBAT1)	23
2.4.12 Power connector (PWR1)	23
2.4.13 SATA Power connector (SATA_PWR1)	24
2.4.14 Display DVI connector (JDPDV11)	24
2.5 Installing Hard Disk & Memory	25
2.6 Installing M.2 card devices	27

## NUC-APL/NUC-APL-Slim

2.7	Installing VESA Mounting .....	28
2.8	Installing Din Rail Mounting .....	29
<b>3</b>	<b>BIOS Setup .....</b>	<b>30</b>
3.1	Introduction.....	31
3.2	Starting Setup.....	31
3.3	Using Setup .....	32
3.4	Getting Help.....	33
3.5	In Case of Problems .....	33
3.6	BIOS setup .....	34
3.6.1	Main Menu .....	34
3.6.1.1	System Language.....	35
3.6.1.2	System Date .....	35
3.6.1.3	System Time.....	36
3.6.2	Advanced Menu .....	36
3.6.2.1	Trusted Computing .....	37
3.6.2.2	ACPI Settings .....	37
3.6.2.3	IT8528 Super IO Configuration.....	39
3.6.2.3.1	Serial Port 1 Configuration .....	40
3.6.2.3.2	Serial Port 2 Configuration .....	40
3.6.2.3.3	Serial Port Configuration .....	41
3.6.2.4	Hardware Monitor .....	42
3.6.2.5	S5 RTC Wake Settings.....	42
3.6.2.6	Serial Port Console Redirection .....	43
3.6.2.6.1	Legacy Console Redirection Settings .....	43
3.6.2.7	CPU Configuration.....	44
3.6.2.7.1	Socket 0 CPU Information.....	45
3.6.2.7.2	CPU Power Management Configuration .....	45
3.6.2.8	Network Stack Configuration .....	46
3.6.2.9	NVMe Configuration .....	46
3.6.2.10	USB Configuration.....	47
3.6.2.11	Security Configuration .....	48
3.6.3	Chipset .....	48
3.6.3.1	North Bridge.....	49
3.6.3.2	South Bridge .....	49
3.6.3.3	South Cluster Configuration .....	50
3.6.3.3.1	HD-Audio Configuration.....	50
3.6.3.3.2	PCI Express Configuration .....	51
3.6.3.3.2.1	PCI Express Root Port 3(LAN1).....	51
3.6.3.3.2.2	PCI Express Root Port 4(LAN2).....	52
3.6.3.3.2.3	PCI Express Root Port 5(M.2 KeyE) .....	53

## 4 NUC-APL/NUC-APL-Slim Quick Reference Guide

3.6.3.3.4 USB Configuration.....	55
3.6.3.4 Board Configuration.....	56
3.6.4 Security .....	57
3.6.4.1 Secure Boot .....	58
3.6.4.1.1 Key Management .....	59
3.6.5 Boot.....	60
3.6.6 Save and exit .....	61
3.6.6.1 Save Changes and Reset.....	61
3.6.6.2 Discard Changes and Reset.....	62
3.6.6.3 Restore Defaults .....	62
3.6.6.4 Launch EFI Shell from filesystem device .....	62
<b>4. Drivers Installation.....</b>	<b>63</b>
4.1 Install Chipset Driver .....	64
4.2 Install TXE Driver.....	65
4.3 Install VGA Driver .....	66
4.4 Install Audio Driver (For Realtek ALC888S) .....	67
4.5 Install Gigabit Driver .....	68
4.6 Install Serial IO Driver.....	69

# 1. Getting Started

## 1.1 Safety Precautions

### Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

### Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

## 1.2 Packing List

- 1 x NUC-APL/NUC-APL-Slim Intel® Apollo Lake Fanless NUC System
- Other major components include the followings:
  - Screw kit/Adapter/NUC-APL VESA/Din Rail kit



---

If any of the above items is damaged or missing, contact your retailer.

---

## 1.3 System Specifications

System	
CPU	Intel® Celeron® Processor J3455/N3350
Memory	1 x 204-pin SODIMM Socket Up to 8GB DDR3L 1866MHz SDRAM
BIOS	AMI BIOS, 128Mbit SPI Flash ROM
Watchdog Timer	H/W Reset, 1sec. ~ 65535sec and 1sec. or 1min./step
H/W Status Monitor	Monitoring CPU Temperature, Voltage with Auto Throttling Control
Board	NCM-APL
Expansion	
Expansion	<p><b>NUC-APL</b></p> <p>1 x M.2 (Key-B, 2242/3042, PCIe, SATA, USB 3.0, USB 2.0, SIM Slot)</p> <p>1 x M.2 (Key-E, 2230, PCIe, USB2.0)</p> <p><b>NUC-APL-Slim</b></p> <p>1 x M.2 (Key-B, 2242/3042, PCIe, SATA, USB 3.0, USB 2.0)</p> <p>1 x M.2 (Key-E, 2230, PCIe, USB2.0)</p>
Storage	
Solid State Drive	<p><b>NUC-APL</b></p> <p>1 x 2.5" Drive Bay, 1 x M.2 (Key-B, 2242, SATA)</p> <p><b>NUC-APL-Slim</b></p> <p>1 x M.2 (Key-B, 2242, SATA)</p>
External I/O	
Serial Port	<p><b>NUC-APL</b></p> <p>1 x RS232, 1 x RS-232/ 422/ 485 (BIOS&amp;Cable)</p> <p><b>NUC-APL-Slim</b></p> <p>1 x RS-232/ 422/ 485 (BIOS&amp;Cable)</p>
USB Port	4 x USB 3.0
Display Port	<p><b>NUC-APL</b></p> <p>2 x HDMI, 1 x DP (DVI-I/VGA Factory Option)</p> <p><b>NUC-APL-Slim</b></p> <p>2 x HDMI, *1 x DP/DVI-I/VGA (Factory Option)</p> <p><i>*The DP/DVI-I/VGA is an option which will replace the location of COM</i></p>
Audio Port	1 x Audio Jack (Line-out + MIC Combo)
Wireless LAN Antenna	2 x Antenna Mounting with Dust Cover
Switch	1 x Power Switch
Display	

## NUC-APL/NUC-APL-Slim

<b>Chipset</b>	Processor Graphics Intel® HD Graphics 500
<b>Resolution</b>	<p><b>NUC-APL</b> 2 x HDMI 1.4b: 3840x2160@30Hz 1 x DP (DVI-I/VGA Factory Option): 1920 x 1080@60Hz</p> <p><b>NUC-APL-Slim</b> 2 x HDMI, *1 x DP/DVI-I/VGA (Factory Option) <i>*The DP/DVI-I/VGA is an option which will replace the location of COM</i></p>
<b>Triple Display</b>	<p><b>NUC-APL (Triple Display)</b> 2 x HDMI, 1 x DP (DVI-I/VGA Factory Option)</p> <p><b>NUC-APL-Slim (Dual Display)</b> 2 x HDMI, *1 x DP/DVI-I/VGA (Factory Option) <i>* The DP/DVI-I/VGA is an option which will replace the location of COM</i></p>
<b>System Control</b>	
<b>LED Indicator</b>	2 x LED for Power On/Off & Storage Access
<b>Audio</b>	
<b>Chipset</b>	Realtek ALC888S
<b>Audio Interface</b>	1 x Audio Jack (Line-out + MIC Combo)
<b>Ethernet</b>	
<b>Chipset</b>	Realtek RTL8111E Gigabit Ethernet
<b>Ethernet Interface</b>	10/100/1000 Base-Tx Gigabit Ethernet Compatible
<b>Lan Port</b>	2 x RJ45 w/LED
<b>Mechanical</b>	
<b>Power Requirement</b>	Power Input: Typical +12V
<b>ACPI</b>	Single power ATX Support S0, S3, S4, S5 ACPI 5.0 Compliant
<b>Power Type</b>	AT/ ATX (ATX is default setting)
<b>Operating Temperature</b>	<p><b>NUC-APL</b> With extended temperature peripherals -10°C ~ 50°C (14°F ~ 122°F) with 0.2m/s air flow With extended temperature peripherals -10°C ~ 60°C (14°F ~ 140°F) with 0.5m/s air flow</p> <p><b>NUC-APL-Slim</b> -10°C ~ 40°C (14°F ~ 104°F) with 0.2m/s air flow -10°C ~ 50°C (14°F ~ 122°F) with 0.5m/s air flow</p>
<b>Storage Temperature</b>	-20°C ~ 60°C (-4°F ~ 140°F)
<b>Operating Humidity</b>	40°C @ 90% Relative Humidity, Non-condensing
<b>Net Weight</b>	<p><b>NUC-APL</b> 0.85KG (1.87lbs)</p>




	<b>NUC-APL-Slim</b> 0.72KG (1.59lbs)
<b>Construction</b>	Aluminum + Metal
<b>Mounting Kit</b>	VESA/ Din Rail kit
<b>Dimension (L x W x H)</b>	<b>NUC-APL</b> 115mm x 111mm x 58mm (4.53" x 4,37" x 2.28")
	<b>NUC-APL-Slim</b> 115mm x 111mm x 45mm (4.53" x 4,37" x 1.77")
<b>Vibration Protection</b>	With SSD: 5G, IEC 60068-2-64, Random, 10~ 500Hz, 30min/Axis, 3 Axis
<b>Shock Protection</b>	With SDD: 55G, IEC 60068-2-27, Half Sine, 11ms,Z Axis
<b>Drop</b>	ISTA 2A, IEC-60068-2-32 Test : Ed, 1corner, 3 Edges, 6 Faces
<b>Certification</b>	
<b>Certification Information</b>	<b>NUC-APL</b> CE/ FCC Class A
	<b>NUC-APL-Slim</b> CE/ FCC Class A
<b>Software Support</b>	
<b>OS Information</b>	Win 10, Linux
<b>Power Requirement</b>	
<b>Adapter</b>	Input: 100 ~ 240Vdc/ 50 ~ 60Hz
	Output: 12V/ 5A AC-DC 60W Adapter




**Note:** Specifications are subject to change without notice.

## 1.4 System Overview

### 1.4.1 NUC-APL Front View

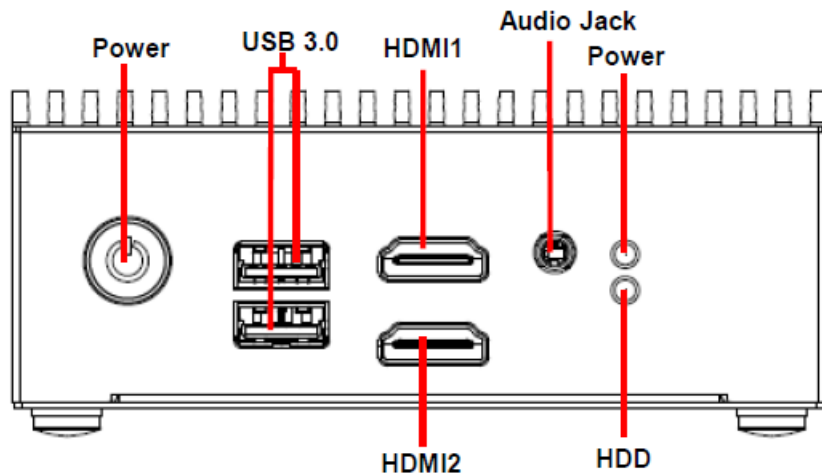

### 1.4.2 NUC-APL Rear View

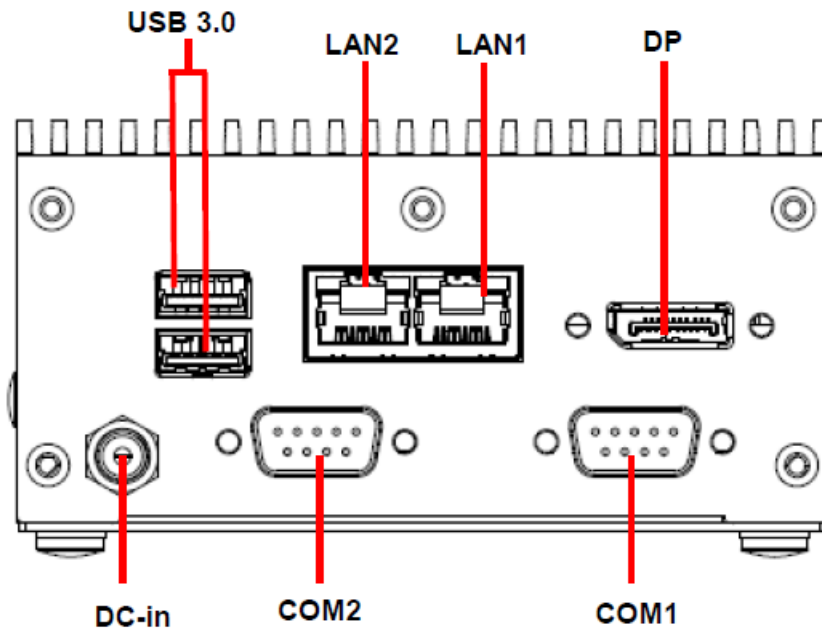


### Connectors


Label	Function	Note
Power	Power on button	
USB 3.0	4 x USB 3.0 connector	
HDMI1/2	2 x HDMI connector	
Audio Jack	Line-out + MIC Combo	
HDD	HDD Indicator	
LAN1/2	2 x RJ-45 Ethernet connector	
COM1	Serial port connector 1	
COM2	Serial port connector 2	
DC-in	DC power-in connector	

DP DP connector

### 1.4.3 NUC-APL-Slim Front View

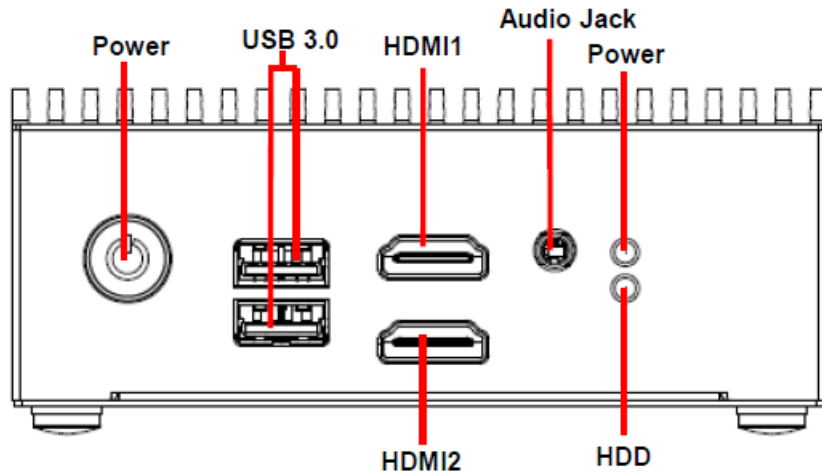

### 1.4.4 NUC-APL-Slim Rear View

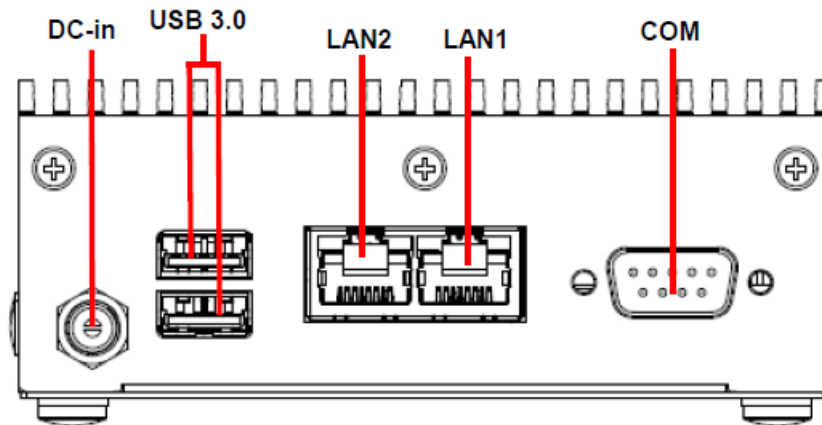


## Connectors

Label	Function	Note
Power	Power on button	
USB 3.0	4 x USB 3.0 connector	
HDMI1/2	2 x HDMI connector	
Audio Jack	Line-out + MIC Combo	
HDD	HDD Indicator	
LAN1/2	2 x RJ-45 Ethernet connector	
COM	Serial port connector	
DC-in	DC power-in connector	


## 1.5 System Dimensions

### 1.5.1 NUC-APL Front & Top view

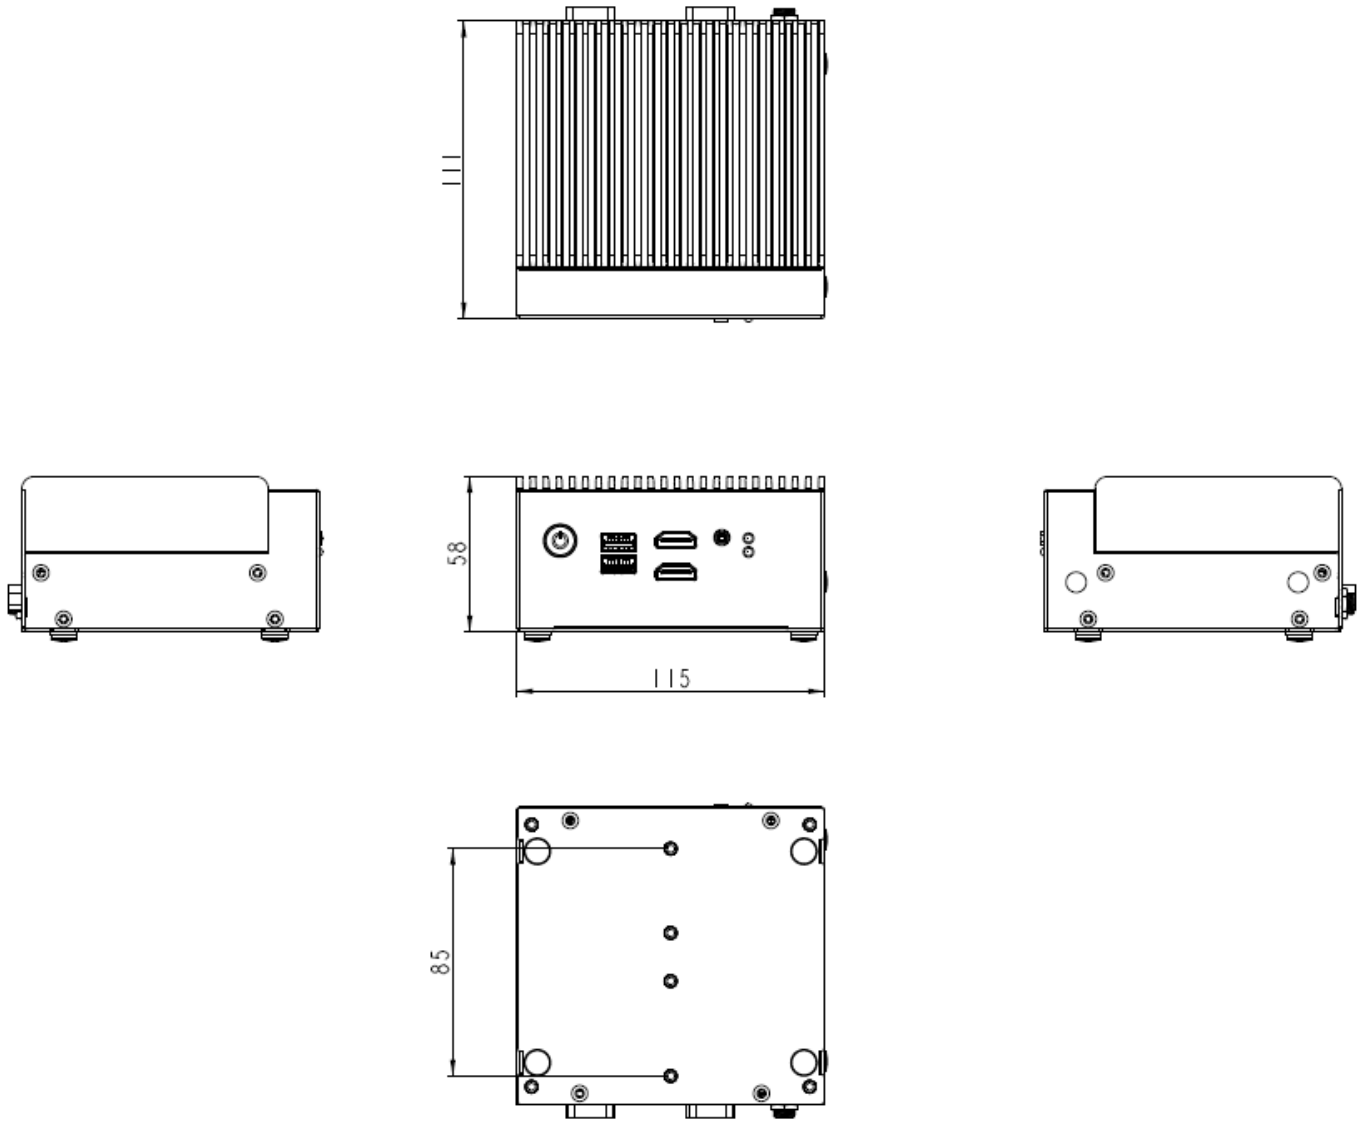

(Unit: mm)

1.5.2 NUC-APL-Slim Front & Top view

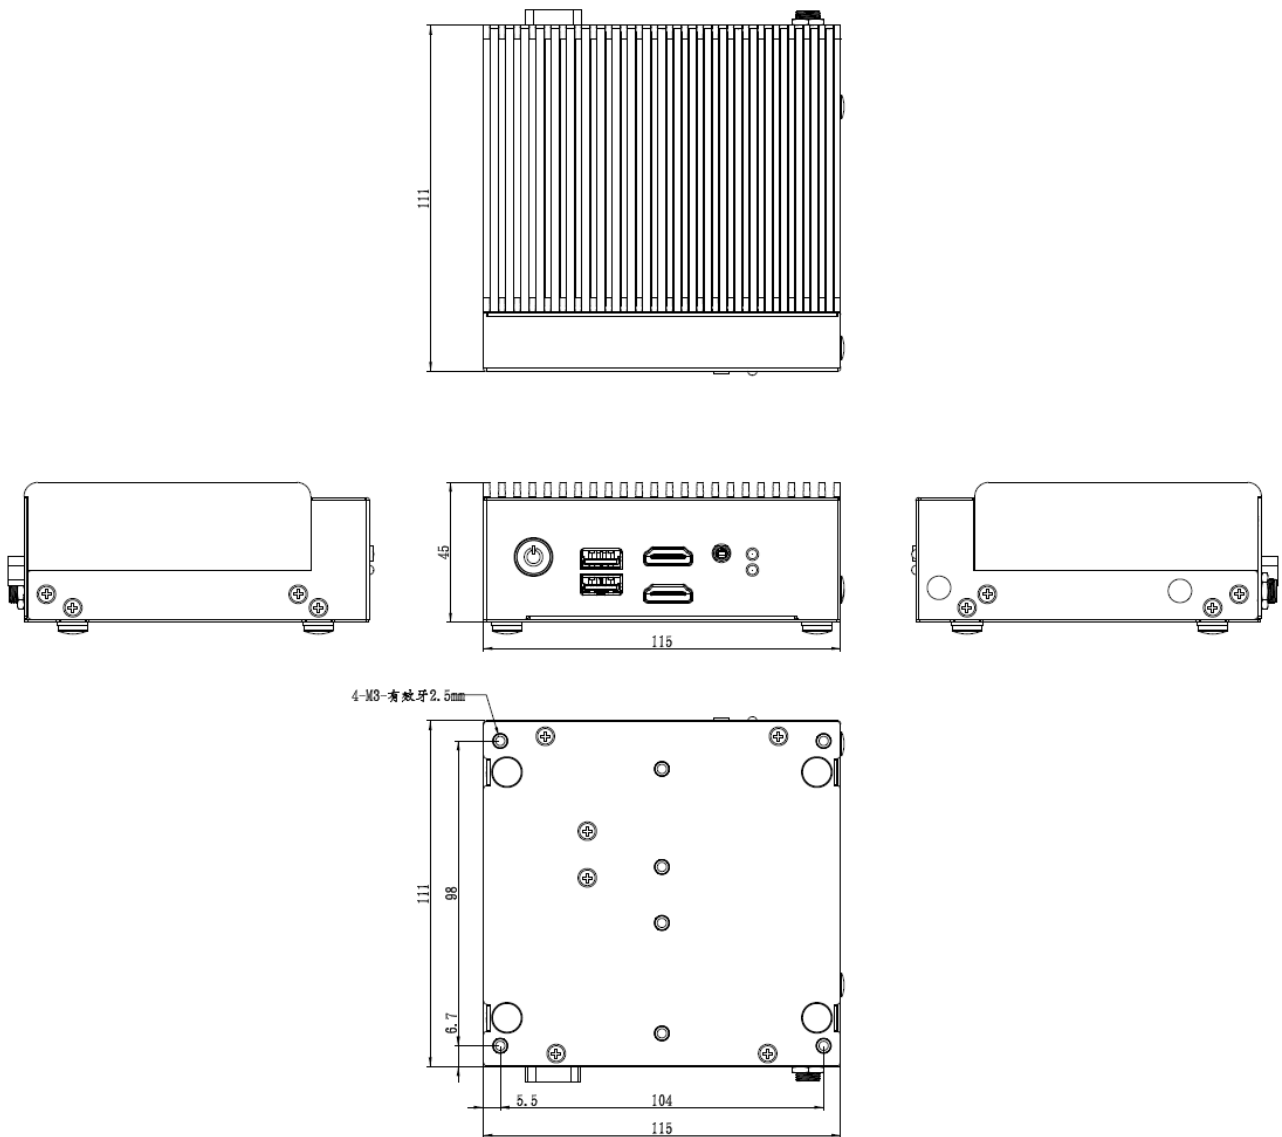

(Unit: mm)

# 2. Hardware Configuration

## Jumper and Connector Setting, Driver and BIOS Installing

For advanced information, please refer to:

- 1- NCM-APL included in this manual.





**Note:** If you need more information, please visit our website:

<http://www.avalue.com.tw>



## 2.1 NUC-APL connector mapping

### 2.1.1 Serial Port connector 1 (COM1)

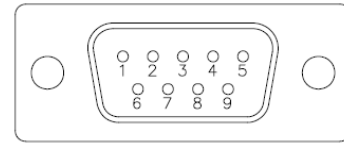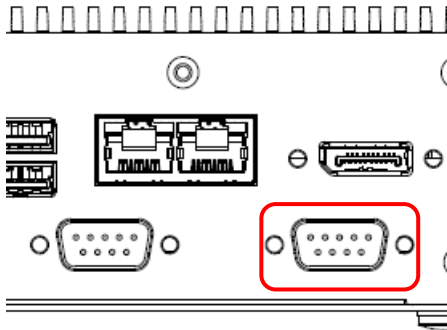

Signal	PIN	PIN	Signal
NDCD#	1	6	NDSR#
NRXD	2	7	NRTS#
NTXD	3	8	NCTS#
NDTR#	4	9	NRI#
GND	5		

### 2.1.2 Serial Port connector 2 (COM2)

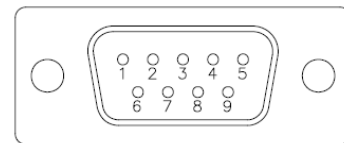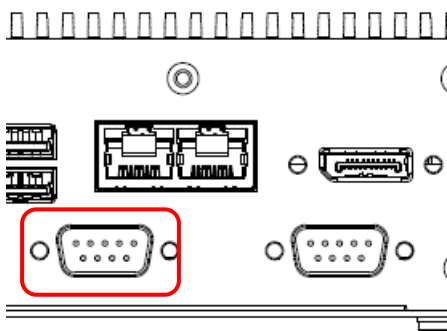

#### In RS-232 Mode

Signal	PIN	PIN	Signal
NDCD#	1	6	NDSR#
NRXD	2	7	NRTS#
NTXD	3	8	NCTS#
NDTR#	4	9	NRI#
GND	5		


#### In RS-485 Mode

Signal	PIN	PIN	Signal
DATA1-	1	6	NC
DATA1+	2	7	NC
NC	3	8	NC
NC	4	9	NC
GND	5		

#### In RS-422 Mode

Signal	PIN	PIN	Signal
TxD1-	1	6	NC
TxD1+	2	7	NC
RxD1+	3	8	NC
RxD1-	4	9	NC
GND	5		

## 2.2 NCM-APL Overviews

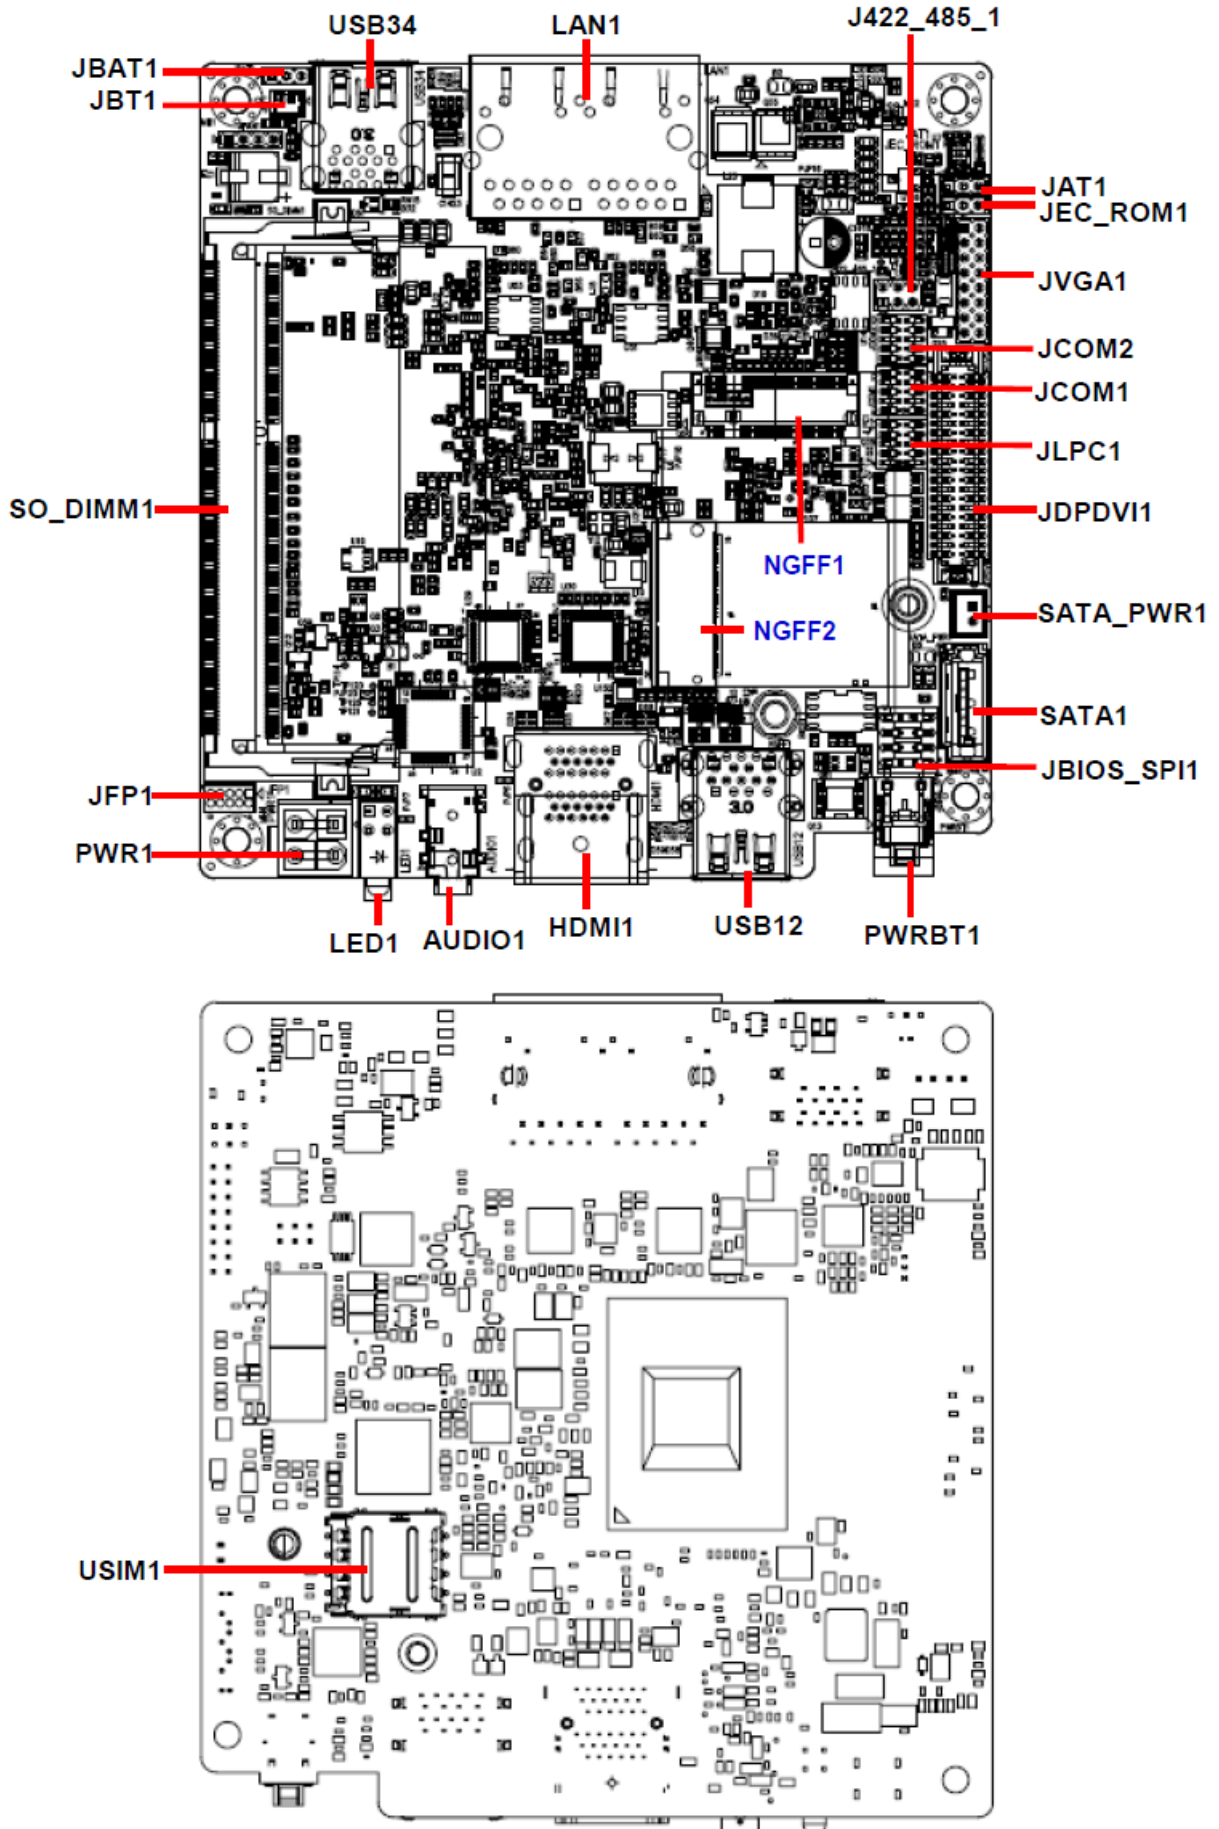



## 2.3 NCM-APL Jumper & Connector list

### Jumpers



Label	Function	Note
JAT1	AT/ATX Input power select	3 x 1 header, pitch 2.00mm
JBAT1	Clear CMOS	3 x 1 header, pitch 2.00mm

### Connectors

Label	Function	Note
JCOM1	Serial Port 1 connector	5 x 2 header, pitch 1.27mm
JCOM2	Serial Port 2 connector	5 x 2 header, pitch 1.27mm
J422_485_1	Serial port 2 in RS-422/485 mode	6 x 2 wafer, pitch 2.00mm
NGFF1	M.2 KEY-B 2242/3042 connector	
NGFF2	M.2 KEY-E 2230 connector	
LED1	HDD/Power LED indicator	
JFP1	Front Panel connector	5 x 2 header, pitch 1.27mm
USB12/34	4 x USB3.0 connector	
JVGA1	VGA connector	8 x 2 header, pitch 2.00mm
JDPDVI1	Display DVI connector	20 x 2 wafer, pitch 1.25mm
LAN1	RJ-45 Ethernet	
JBT1	Battery connector	2 x 1 wafer, pitch 1.25mm
JLPC1	LPC port connector	5 x 2 header, pitch 1.27mm
PWR1	Power connector	2 x 2 wafer, pitch 4.20mm
JEC_ROM1	EC Debug connector	3 x 1 header, pitch 2.00mm
SATA_PWR1	SATA Power connector	2 x 1 wafer, pitch 2.00mm
SATA1	Serial ATA connector	
HDMI1	HDMI connector	
SO_DIMM1	DDR3L SODIMM socket	
JBIOS_SPI1	BIOS SPI connector	4 x 2 header, pitch 2.00mm
PWRBT1	Power Button	
AUDIO1	Audio connector	
USIM1	SIM card slot	



## 2.4 NCM-APL Jumpers & Connectors settings

### 2.4.1 AT/ATX Input power select (JAT1)

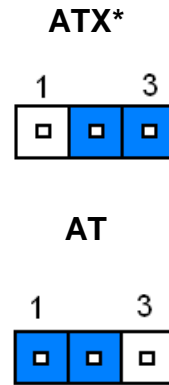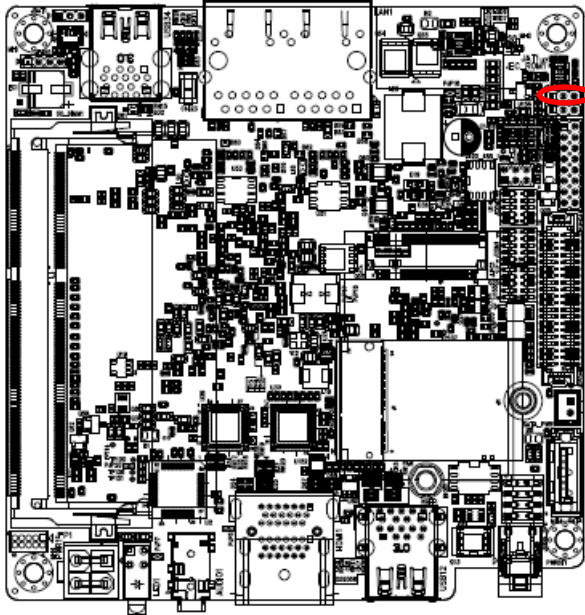



\*Default

### 2.4.2 Clear CMOS (JBAT1)

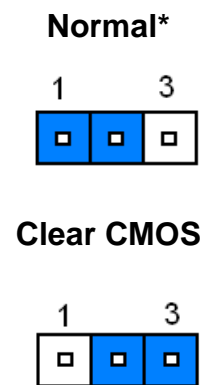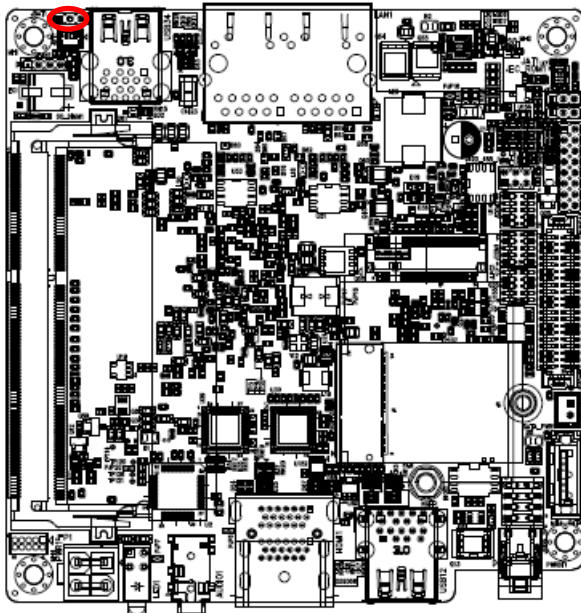



\*Default

### 2.4.3 LPC port connector (JLPC1)

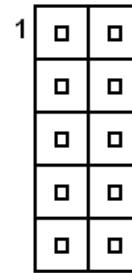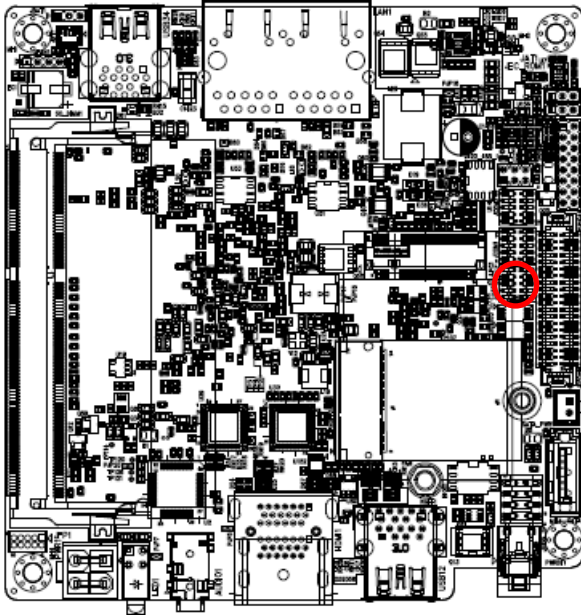



Signal	PIN	PIN	Signal
LPC_AD0	1	2	+3.3V
LPC_AD1	3	4	PLT_RST_BUF#
LPC_AD2	5	6	LPC_FRAME#
LPC_AD3	7	8	LPC1_PORT80_CLK
LPC_SERIRQ	9	10	GND

### 2.4.4 VGA connector (JVGA1)

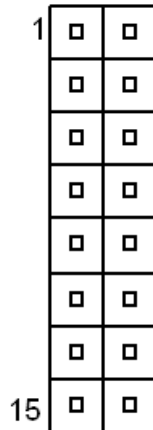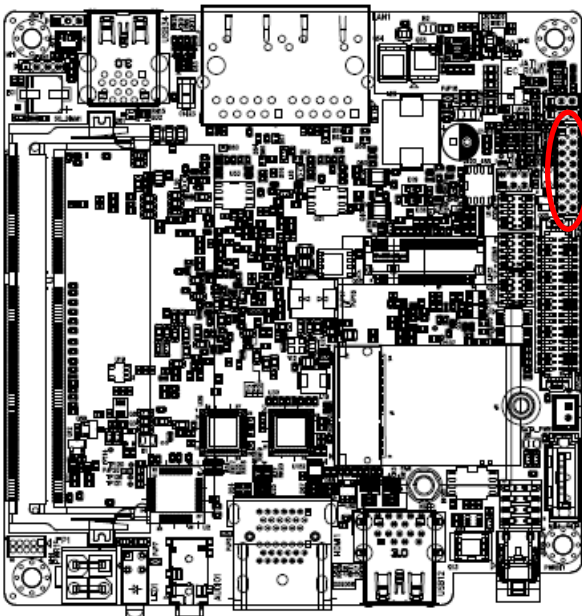



Signal	PIN	PIN	Signal
+5V	1	2	RED
GND	3	4	GREEN
GND	5	6	BLUE
SD_VGA	7	8	GND
VHSYNC	9	10	GND
VVSYNC	11	12	GND
SC_VGA	13	14	GND
GND	15	16	GND

2.4.5 BIOS SPI connector (JBIOS\_SPI1)

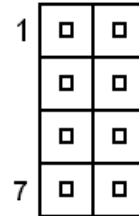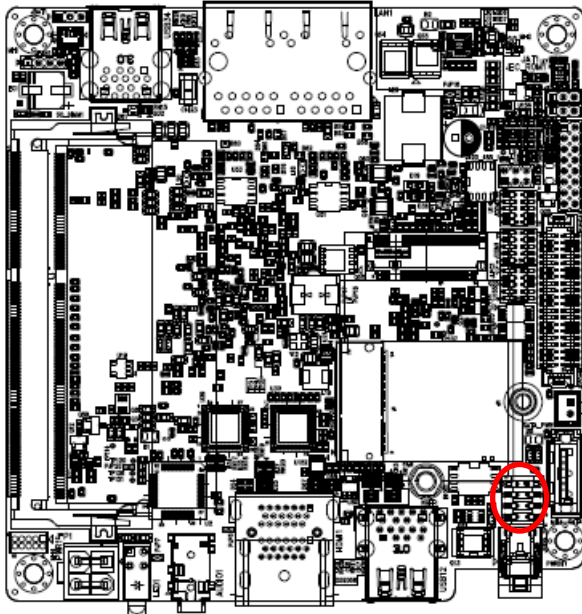



Signal	PIN	PIN	Signal
+1.8VSB	1	2	GND
SPI_CS#0	3	4	SPI_CLK
SPI_MISO	5	6	SPI_MOSI
SPI_HOLD#	7	8	SPI_WP#

2.4.6 EC Debug connector (JEC\_ROM1)

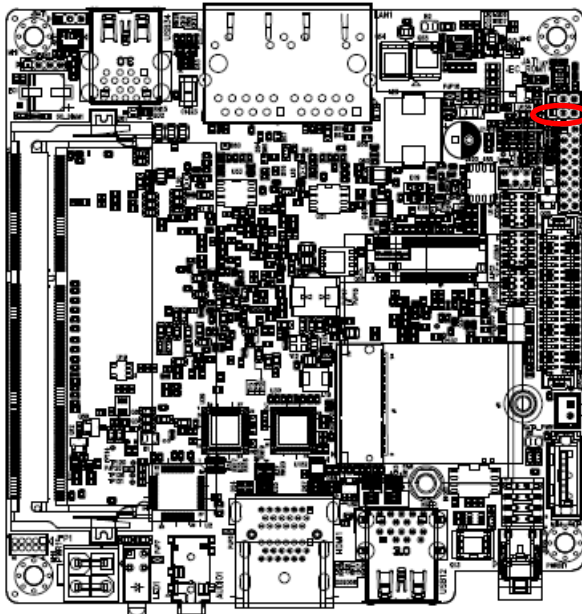



Signal	PIN
EC_SMCLK_DEBUG	1
EC_SMDAT_DEBUG	2
GND	3

### 2.4.7 Serial port 1 connector (JCOM1)

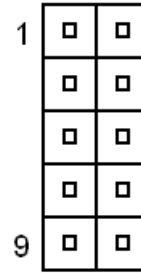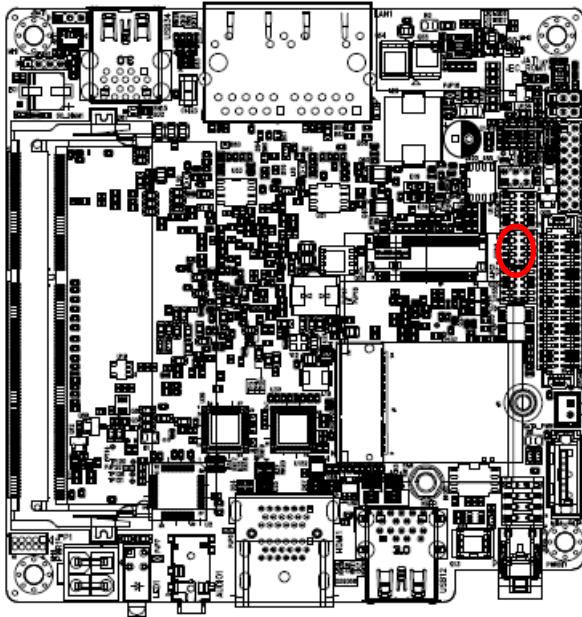

Signal	PIN	PIN	Signal
NDCDA#_1	1	2	NRXDA_1
NTXDA_1	3	4	NDTRA#_1
GND	5	6	NDSRA#_1
NRTSA#_1	7	8	NCTSA#_1
NRIA#_1	9	10	NC



### 2.4.8 Serial port 2 connector (JCOM2)

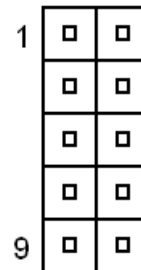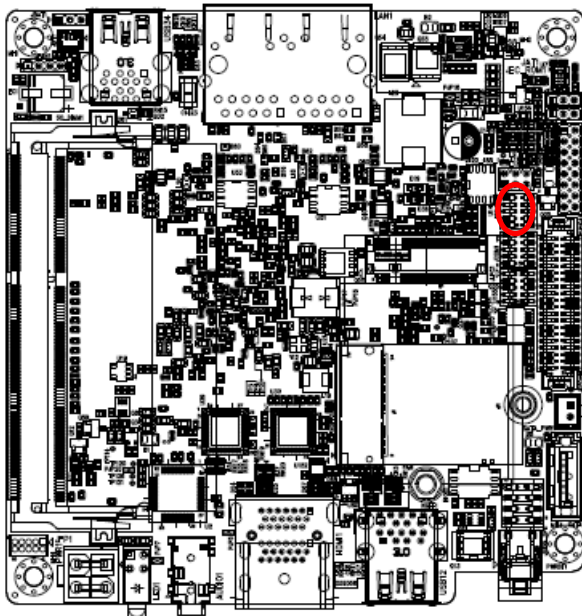

Signal	PIN	PIN	Signal
NDCDA#_2	1	2	NRXDA_2
NTXDA_2	3	4	NDTRA#_2
GND	5	6	NDSRA#_2
NRTSA#_2	7	8	NCTSA#_2
NRIA#_2	9	10	NC





2.4.9 Serial port 2 in RS-422/485 mode (J422\_485\_1)

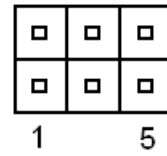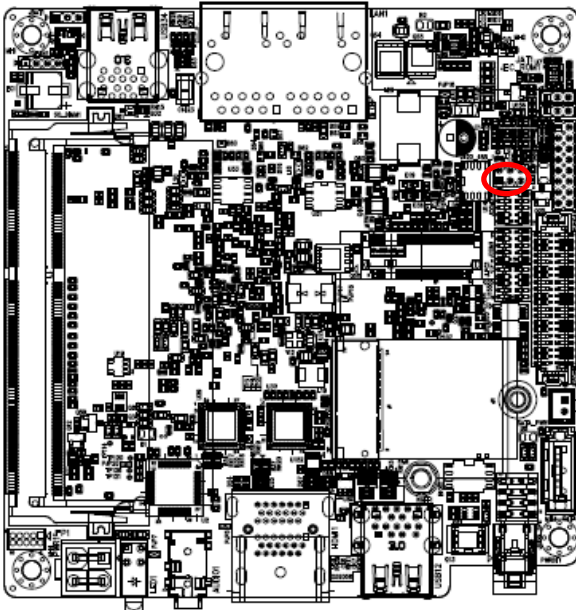


Signal	PIN	PIN	Signal
485TX1-	1	2	485TX1+
485RX1+	3	4	485RX1-
+V5SC1_422485	5	6	GND

2.4.10 Front Panel connector (JFP1)

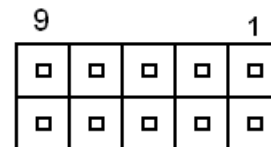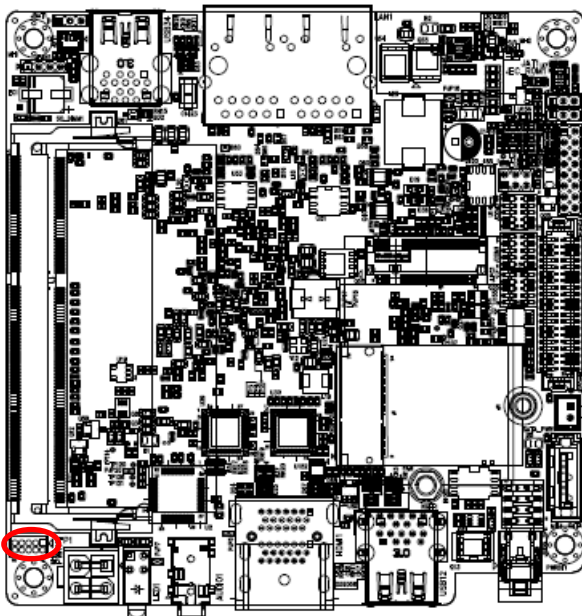



Signal	PIN	PIN	Signal
PWRBT_FP#	1	2	GND
RSTBTNP#	3	4	GND
FP_PWR_LED+	5	6	PWR_LED#
HDD_LED#	7	8	+5V
CASE_OPEN#	9	10	GND

2.4.11 Battery connector 1 (JBT1)

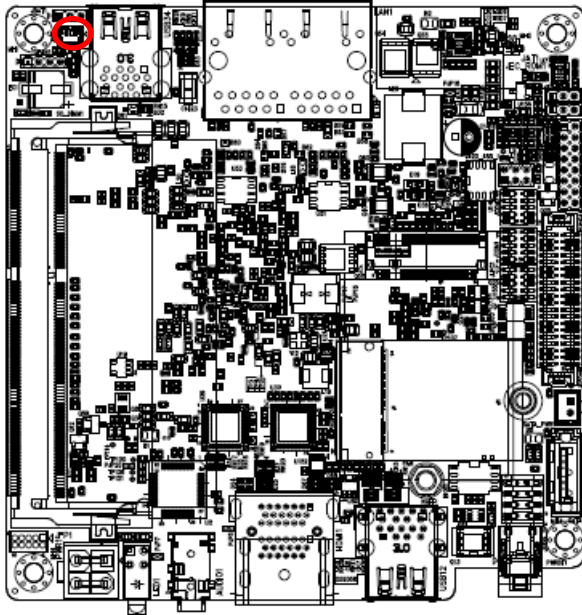


Signal	PIN
+RTCBATT	1
GND	2

2.4.12 Power connector (PWR1)

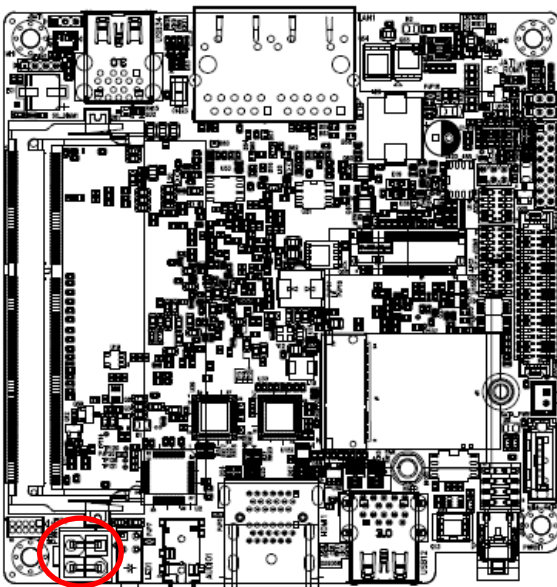



Signal	PIN	PIN	Signal
+12V	3	1	GND
+12V	4	2	GND

2.4.13 SATA Power connector (SATA\_PWR1)

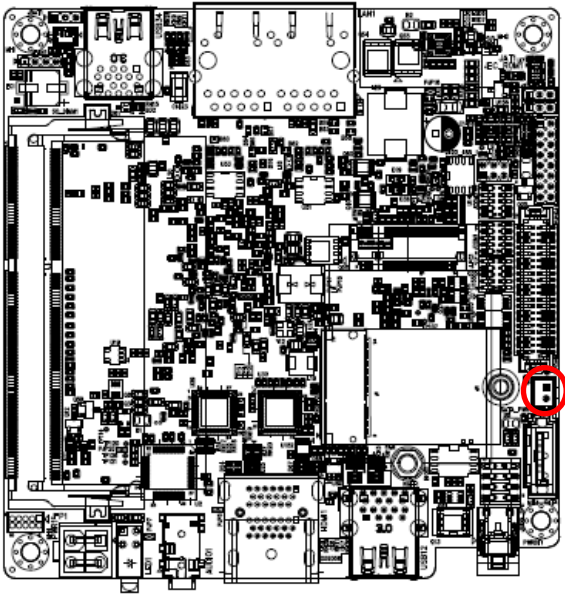

Signal	PIN
GND	1
SATA_PWR	2


2.4.14 Display DVI connector (JDPDV1)

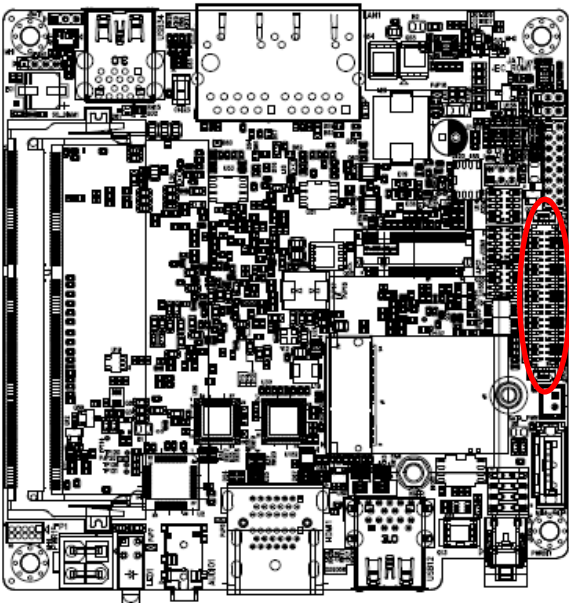


Signal	PIN	PIN	Signal
+5V	2	1	+3.3V
GND	4	3	GND
DP0P	6	5	DP2P
DP0N	8	7	DP2N
GND	10	9	GND
DP1P	12	11	DP3P
DP1N	14	13	DP3N
GND	16	15	GND
DPAUXP	18	17	HPD_DPTX
DPAUXN	20	19	DPCONFIG1
GND	22	21	DPCONFIG2
HMTX0+	24	23	GND
HMTX0-	26	25	HMTXC+
DVIG1	28	27	HMTXC-
HMTX1+	30	29	DVIG3
HMTX1-	32	31	SC_HMTX
DVIG2	34	33	SD_HMTX
HMTX2+	36	35	HPD_HMTX
HMTX2-	38	37	DVIG4
GND	40	39	GND




## 2.5 Installing Hard Disk & Memory

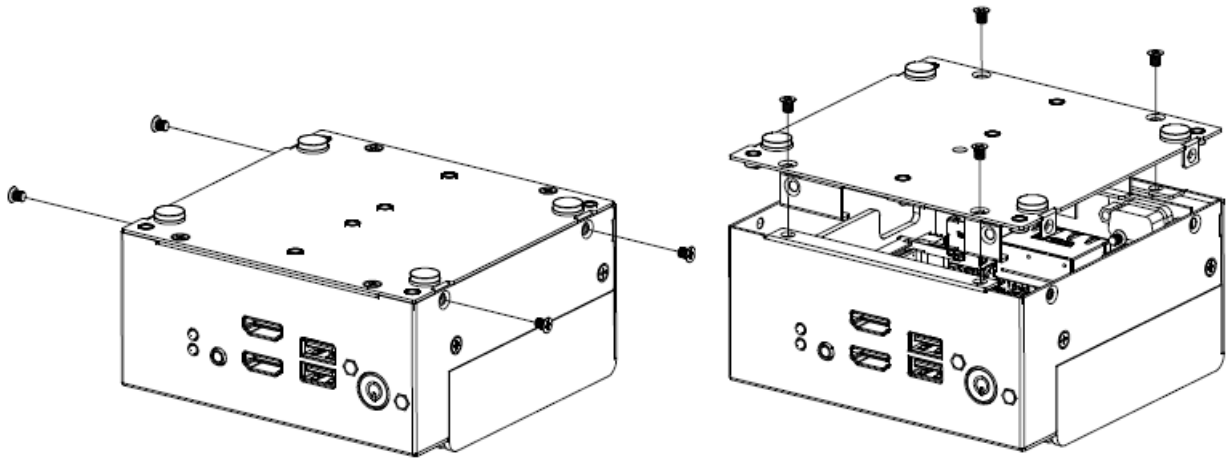

**Step 1.** For HDD/SSD installation, remove four screws from side and bottom of system.

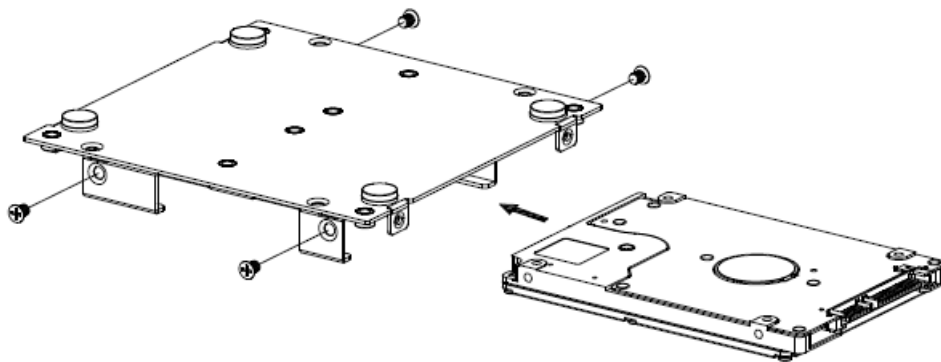


**Step 2.** Install HDD/SSD then fix HDD/SSD with four M3\*4L screws.

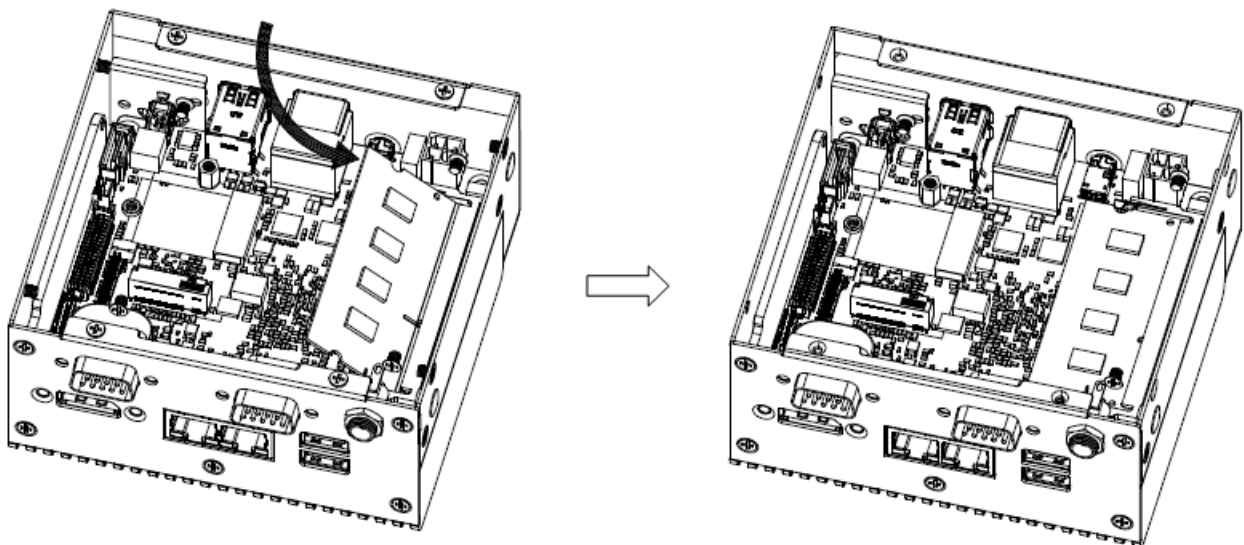

**Step 3.** For Memory installation, properly install the memory module and press until properly seated.


## NUC-APL/NUC-APL-Slim

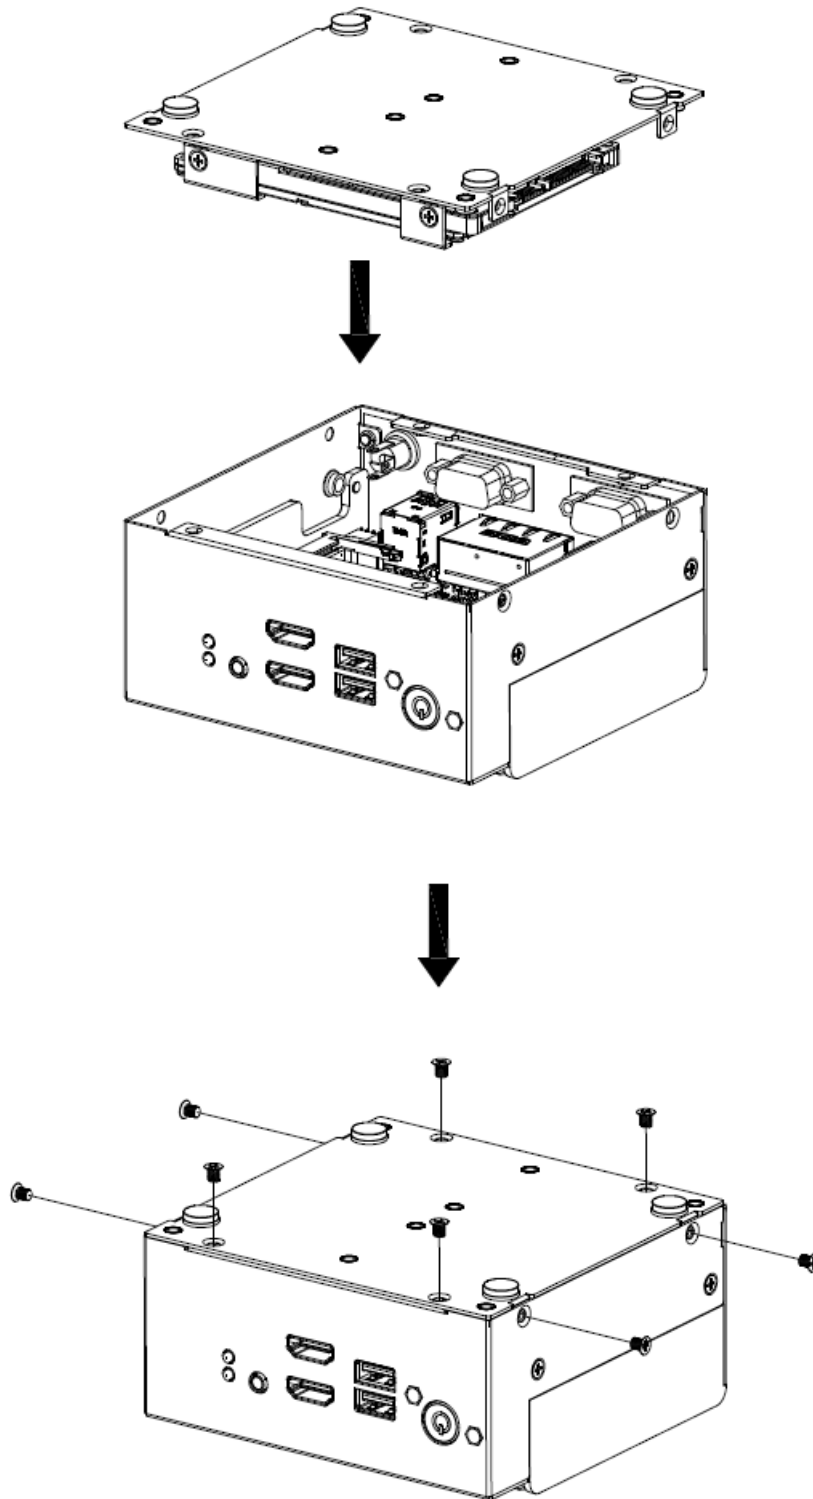

**Step 4.** Put the bottom back and fix with screws that were originally on the side of the system.


## 2.6 Installing M.2 card devices

IMS M3\*4L Screw

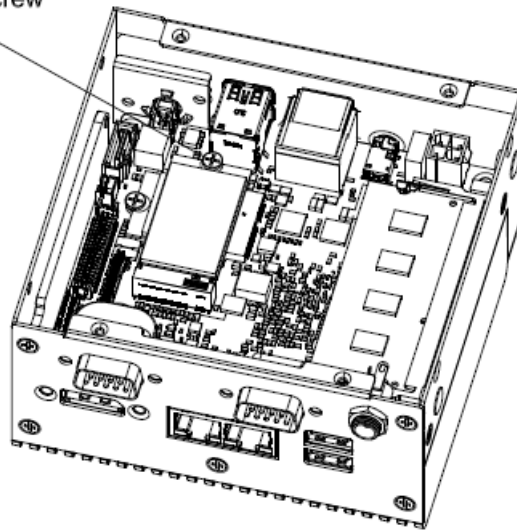

Fix M.2 B-Key with four M3\*4L screw


IMS M3\*4L Screw

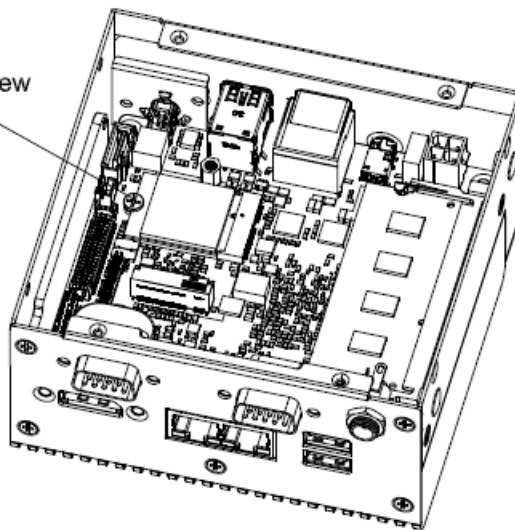


Fix M.2 E-Key with four M3\*4L screw

**Step 1.** Fix M.2 card using the screw in the Accessory Kit.


## 2.7 Installing VESA Mounting

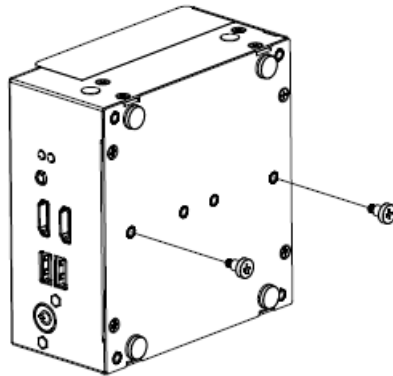

**Step 1.** Insert and fasten two M3\*L11.1 screw on the bottom.

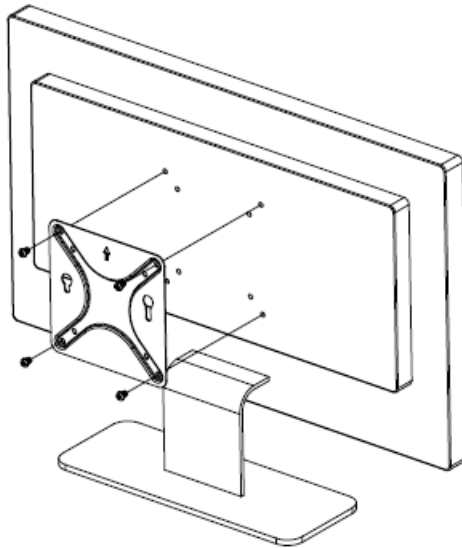


**Step 2.** Fix with four M4\*6mm screws on the monitor (or wall).

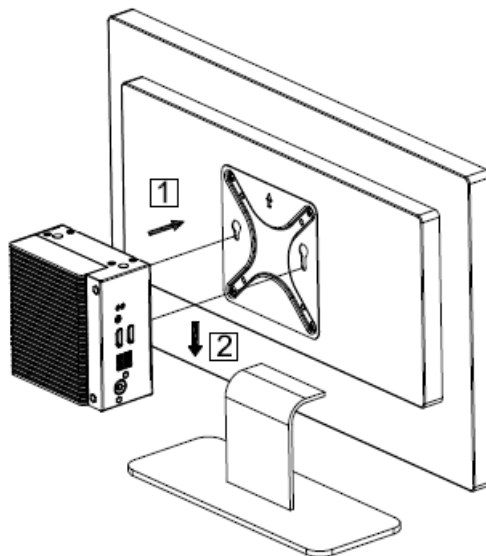

**Step 3.** Slide the system onto the VESA mount bracket.

## 2.8 Installing Din Rail Mounting

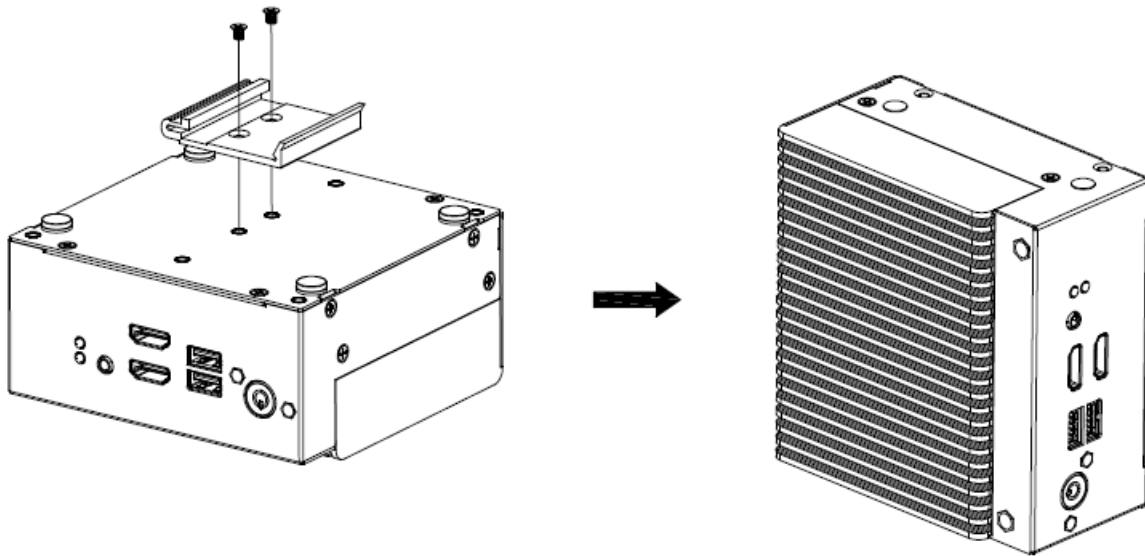

**Step 1.** Fix with two M3\*4 screws on the system.

# 3. BIOS Setup

---

### 3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

### 3.2 Starting Setup

The AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <Del> or <ESC> immediately after switching the system on, or

By pressing the <Del> or <ESC> key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

**Press <Del> or <ESC> to enter SETUP**

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys. If you do not press the keys at the correct time and the system does not boot, an error message will be displayed and you will again be asked to.

**Press F1 to Continue, DEL to enter SETUP**

### 3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values.
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



**Note:** Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “>” pointer marks all sub menus.



### 3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or <Enter> key again.

### 3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.

The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.


## 3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

### 3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

## NUC-APL

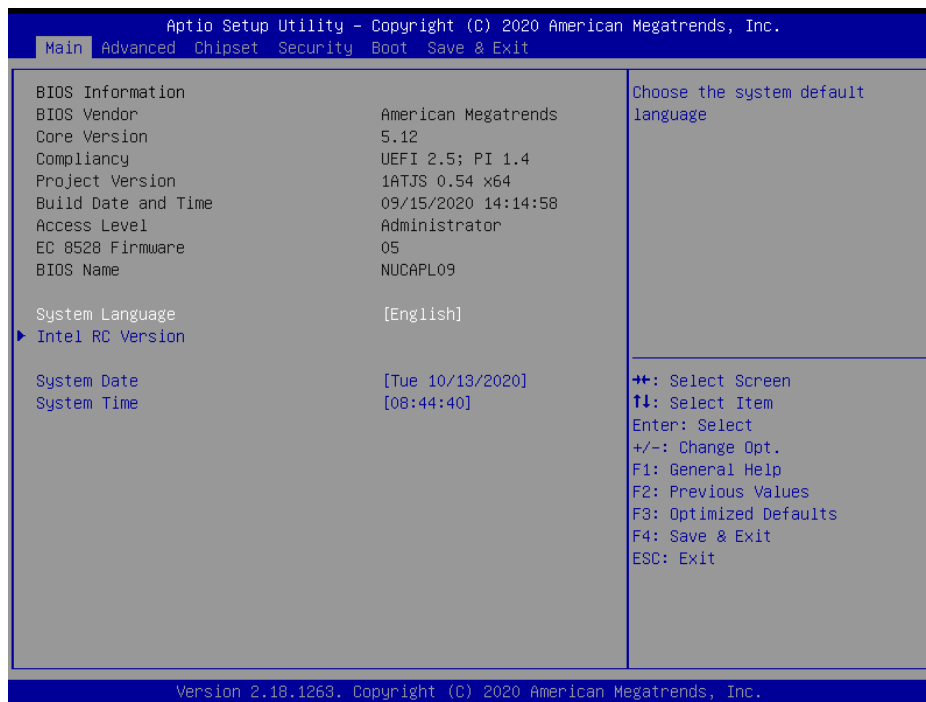

NUC-APL-Slim



**3.6.1.1 System Language**

This option allows choosing the system default language.

**3.6.1.2 System Date**

Use the system date option to set the system date. Manually enter the day, month and year.

## 3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.




**Note:** The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.


Visit the Avalue website ([www.avalue.com.tw](http://www.avalue.com.tw)) to download the latest product and BIOS information.

## 3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

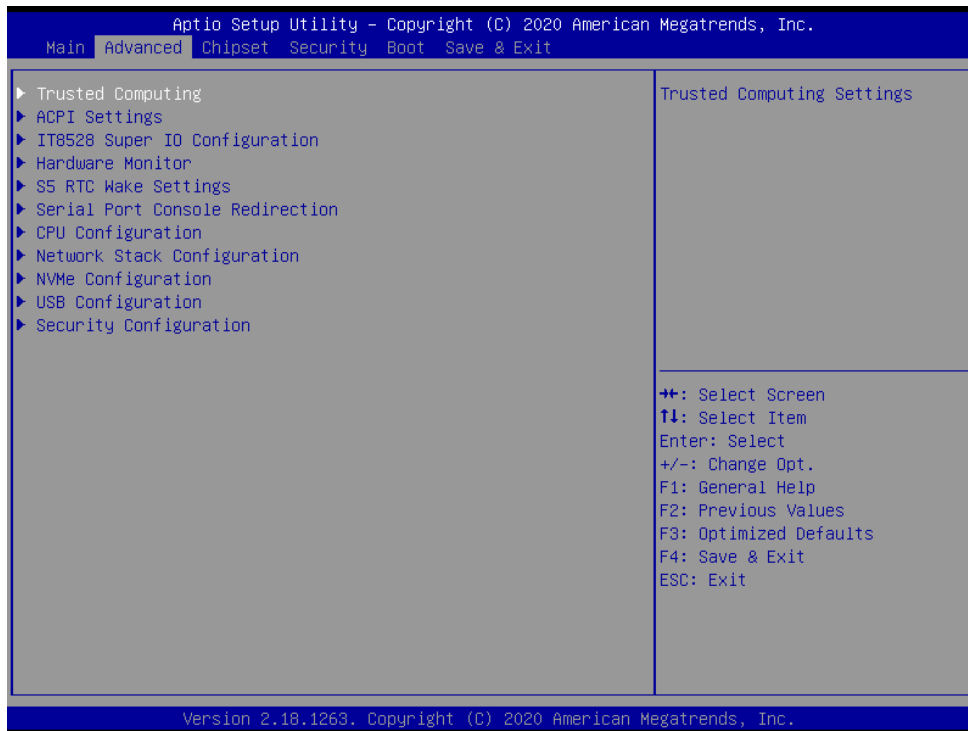

### 3.6.2.1 Trusted Computing

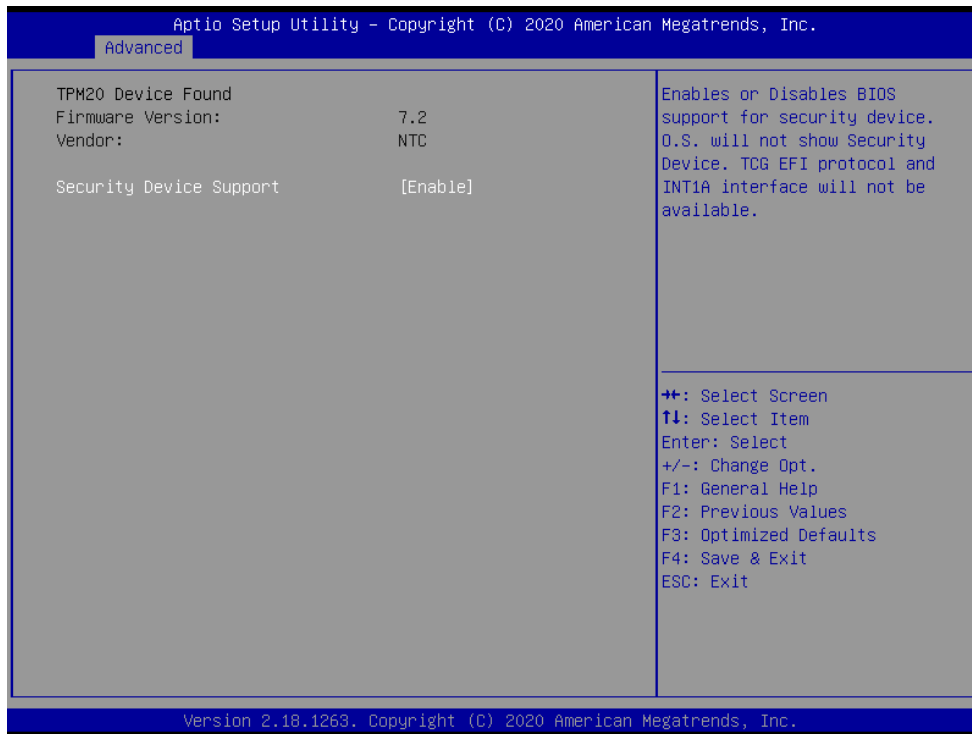

Item	Options	Description
<b>Security Device Support</b>	Disable, Enable[Default]	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

### 3.6.2.2 ACPI Settings




## NUC-APL/NUC-APL-Slim

Item	Options	Description
<b>Enable Hibernation</b>	Disabled Enabled[ <b>Default</b> ],	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.
<b>ACPI Sleep State</b>	Suspend Disabled, S3 (Suspend to RAM) [ <b>Default</b> ]	Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.
<b>ErP Function</b>	Disabled[ <b>Default</b> ] Enabled	ErP Function(Deep S5).
<b>PWR-On After PWR-Fail</b>	Off[ <b>Default</b> ] On Last state	AC loss resume.
<b>Watch Dog</b>	Disabled[ <b>Default</b> ], 30 sec 40 sec 50 sec 1 min 2 min 10 min 30 min	Select WatchDog.
<b>USB Standby Power Setting</b>	Disabled Enabled[ <b>Default</b> ],	Enabled/Disabled USB Standby Power during S3/S4/S5.
<b>Wake Up by Ring</b>	Disabled Enabled[ <b>Default</b> ],	Wake Up by Ring from S3/S4/S5.

### 3.6.2.3 IT8528 Super IO Configuration

#### NUC-APL

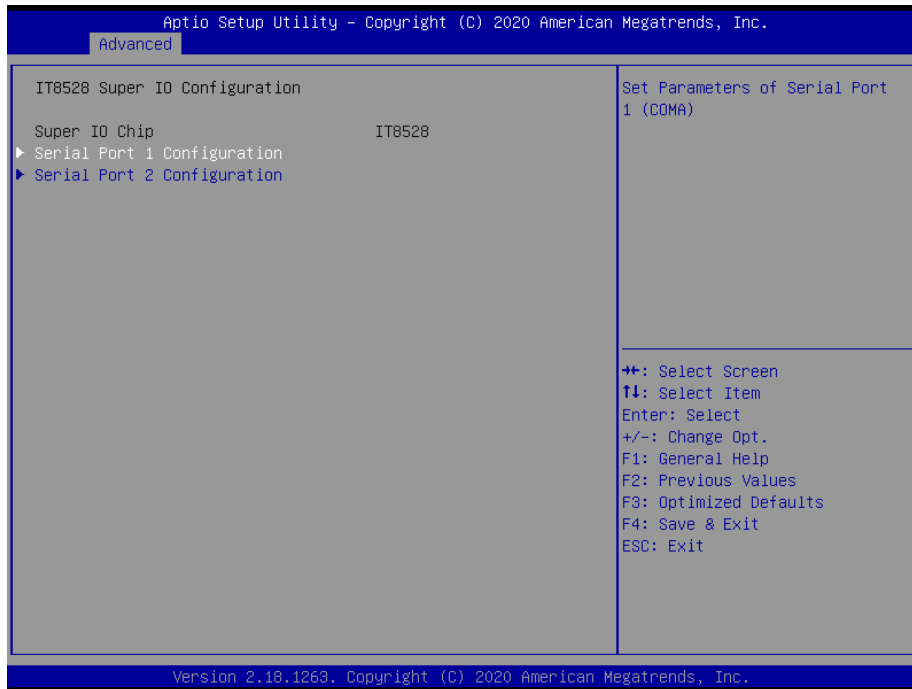

Item	Description
<b>Serial Port 1 Configuration</b>	Set Parameters of Serial Port 1 (COMA).
<b>Serial Port 2 Configuration</b>	Set Parameters of Serial Port 2 (COMB).

#### NUC-APL-Slim




## NUC-APL/NUC-APL-Slim

Item	Description
Serial Port Configuration	Set Parameters of Serial Port (COM).


### NUC-APL

#### 3.6.2.3.1 Serial Port 1 Configuration

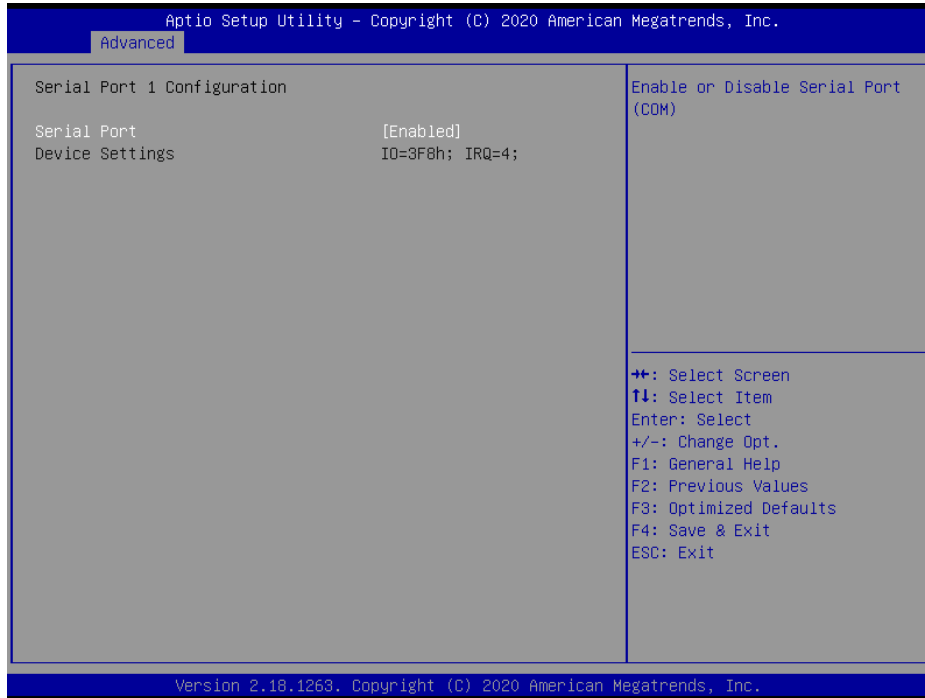

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).

#### 3.6.2.3.2 Serial Port 2 Configuration

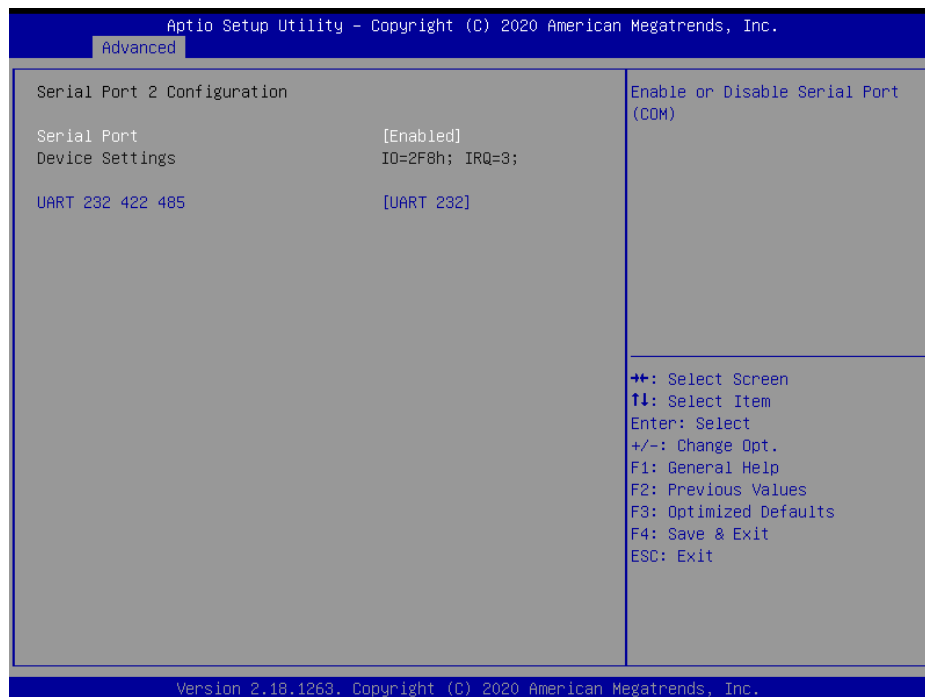




Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default] UART 422 UART 485	Change the Serial Port as RS232/422/485.

## NUC-APL-Slim


### 3.6.2.3.3 Serial Port Configuration

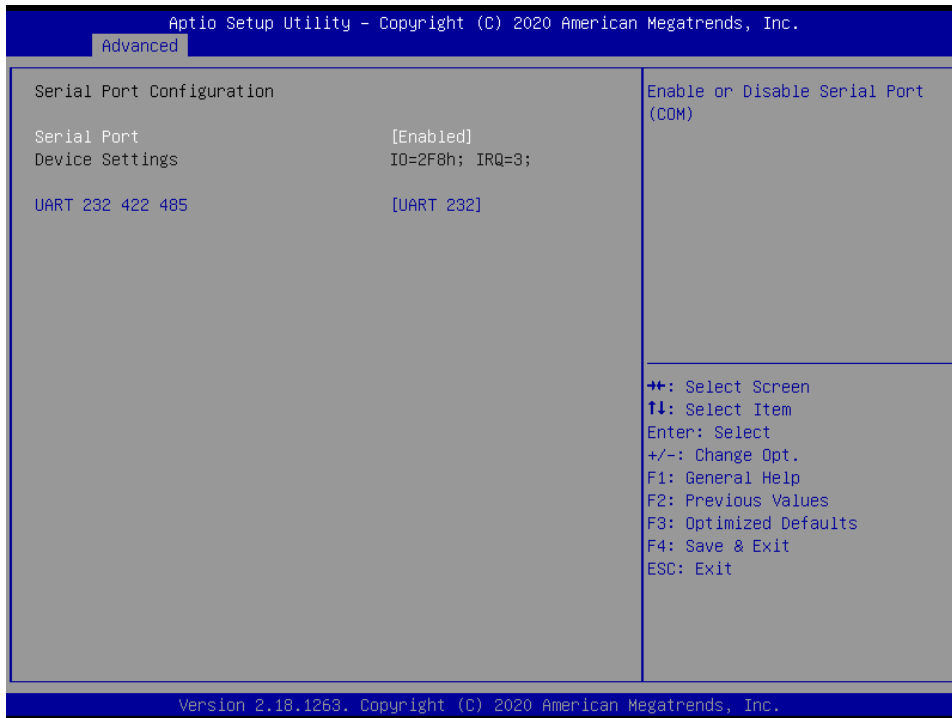

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).
UART 232 422 485	UART 232[Default]	Change the Serial Port as RS232/422/485.

# NUC-APL/NUC-APL-Slim

## 3.6.2.4 Hardware Monitor

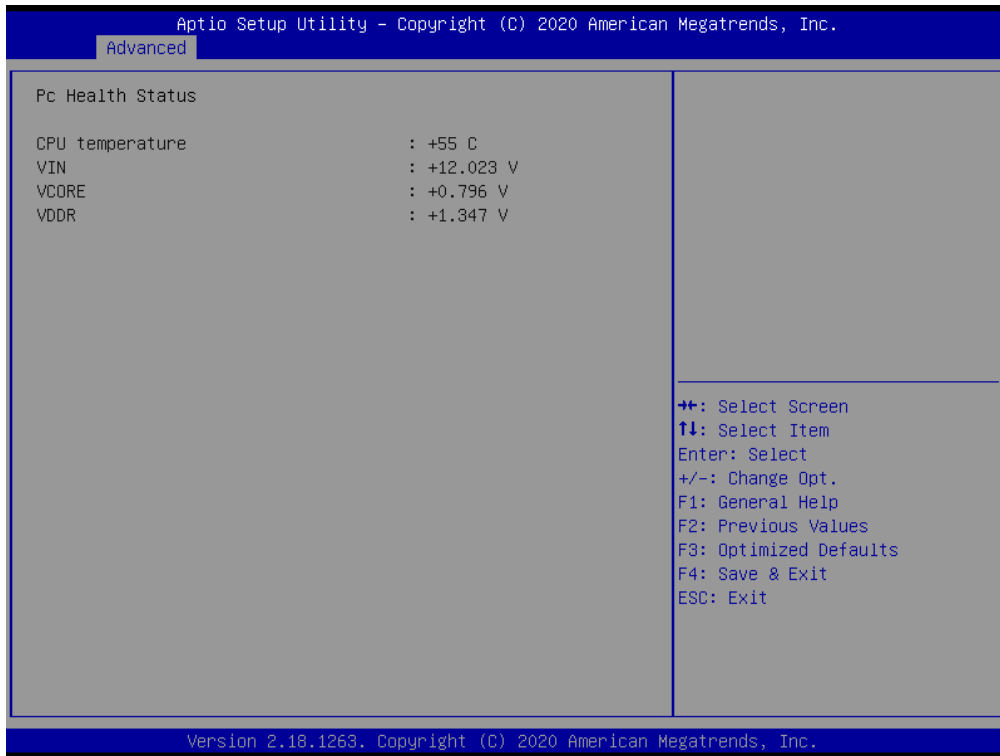


## 3.6.2.5 S5 RTC Wake Settings




Item	Options	Description
<b>Wake system from S5</b>	Disabled[ <b>Default</b> ], Fixed Time Dynamic Time	Enable or disable System wake on alarm event. Select Fixed Time, system will wake on the hr::min::sec specified. Select Dynamic Time, System will wake on the current time + Increase minute(s).

### 3.6.2.6 Serial Port Console Redirection

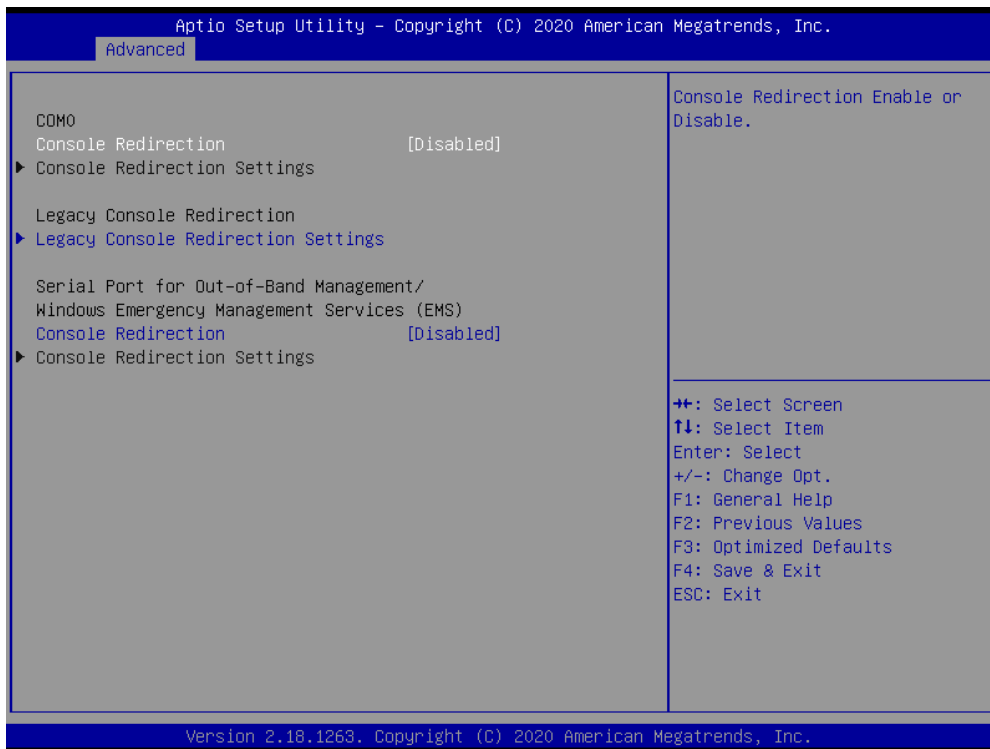

Item	Options	Description
Console Redirection	Disabled[Default], Enabled	Console Redirection Enable or Disable.


#### 3.6.2.6.1 Legacy Console Redirection Settings

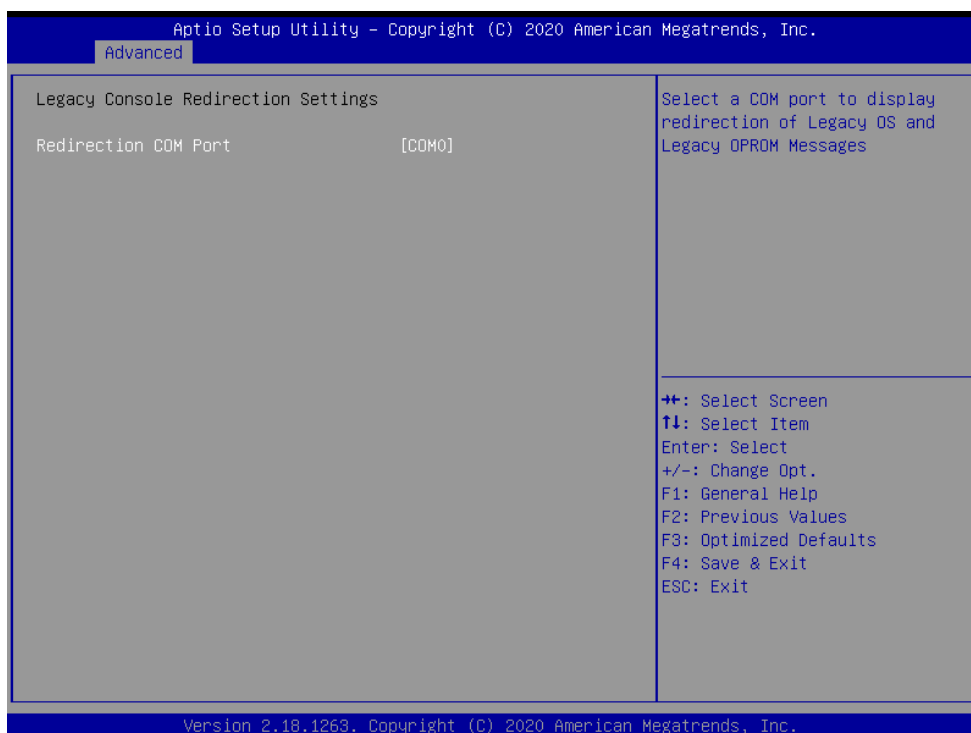

Item	Option	Description
Redirection COM Port	COM0[Default],	Select a COM port to display redirection of Legacy OS and Legacy OPRM Messages.


### 3.6.2.7 CPU Configuration

Use the CPU configuration menu to view detailed CPU specification and configure the CPU.

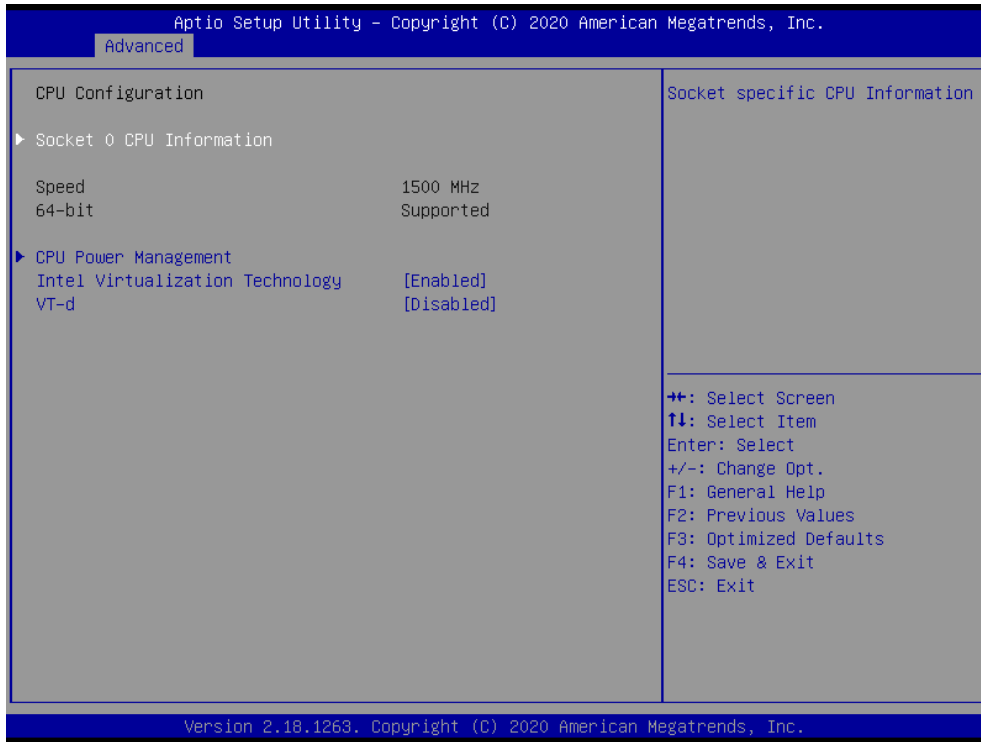


Item	Options	Description
Intel Virtualization Technology	Disabled, Enabled[Default]	When enabled, a VMM can utilize the additional hardware capabilities provided by Virtualization Technology.
VT-d	Disabled[Default], Enabled	Enable/Disable CPU VT-d.

### 3.6.2.7.1 Socket 0 CPU Information

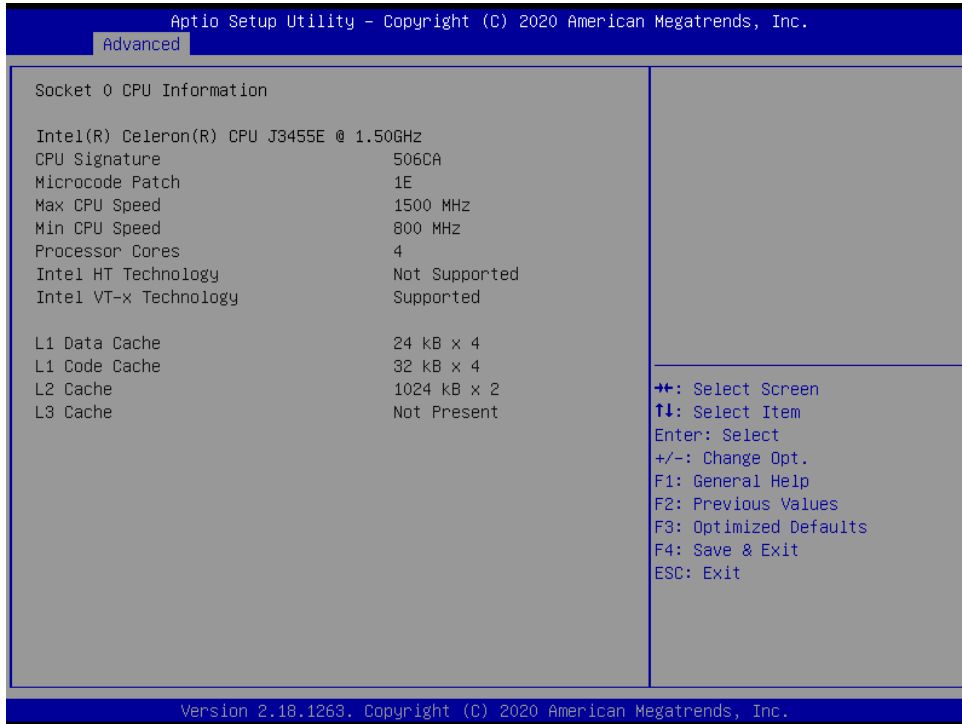

### 3.6.2.7.2 CPU Power Management Configuration

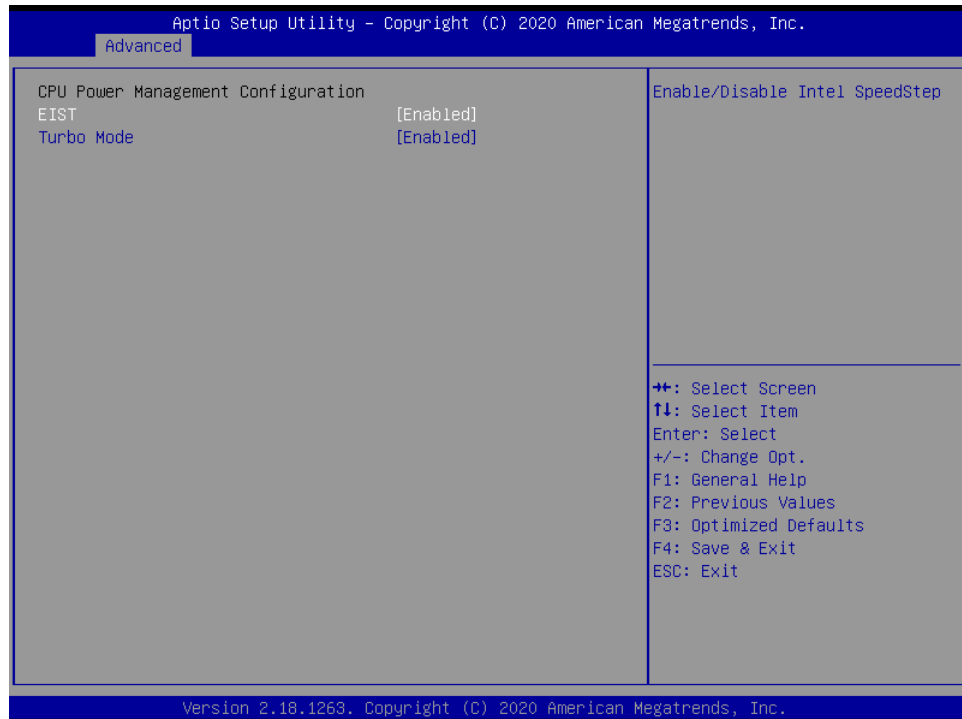


Item	Options	Description
EIST	Disabled, Enabled[Default]	Enable/Disable Intel SpeedStep.
Turbo Mode	Disabled, Enabled[Default]	Turbo Mode.

### 3.6.2.8 Network Stack Configuration




Item	Options	Description
<b>Network Stack</b>	Enabled Disabled[Default],	Enable/Disable UEFI Network Stack.

### 3.6.2.9 NVMe Configuration

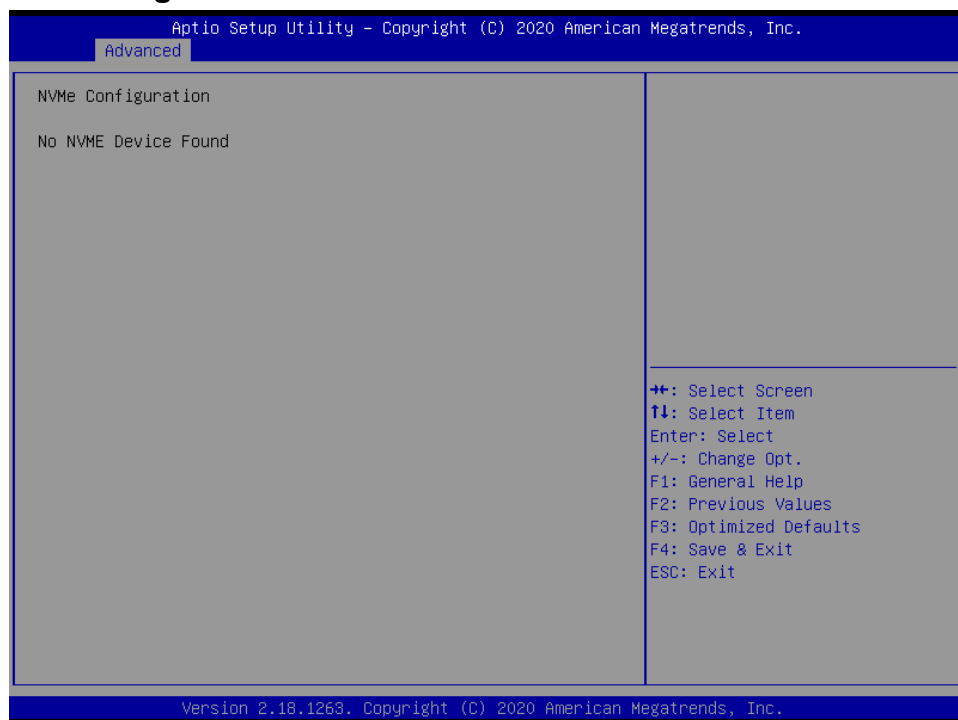


### 3.6.2.10 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

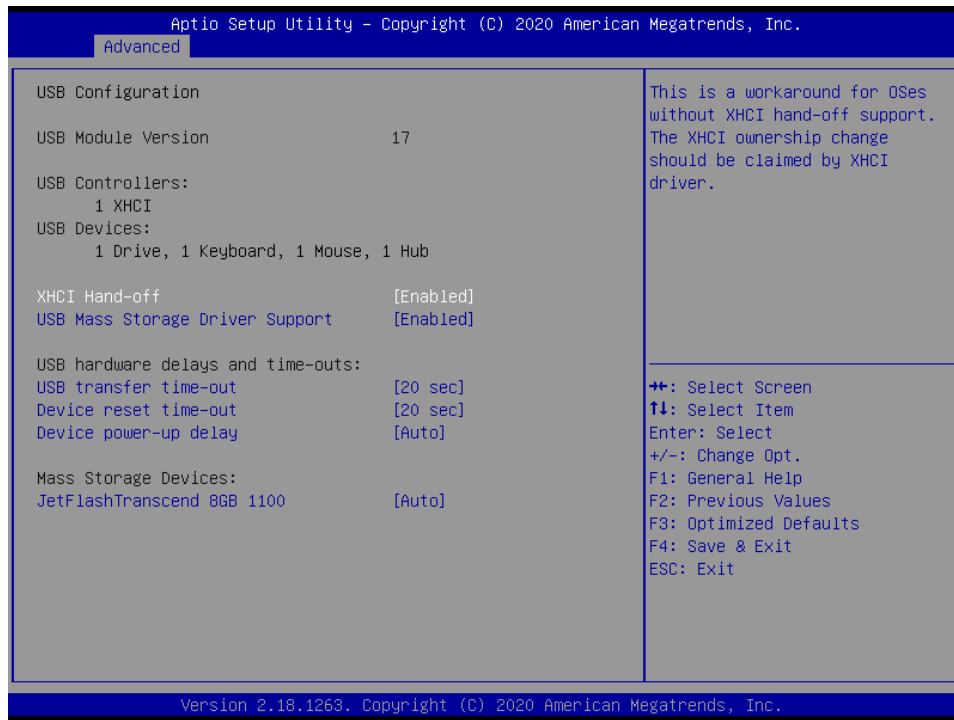


Item	Options	Description
<b>XHCI Hand-off</b>	Enabled[Default] Disabled	This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
<b>USB Mass Storage Driver Support</b>	Enabled[Default] Disabled	Enable/Disable USB Mass Storage Driver Support.
<b>USB transfer time-out</b>	1 sec 5 sec 10 sec 20 sec[Default]	The time-out value for Control, Bulk, and Interrupt transfers.
<b>Device reset time-out</b>	10 sec 20 sec[Default] 30 sec 40 sec	USB mass storage device Start Unit command time-out.
<b>Device power-up delay</b>	Auto[Default] Manual	Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.
<b>Mass Storage Devices</b>	Auto[Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM'. Drives with no media will be emulated according to a drive type.

### 3.6.2.11 Security Configuration

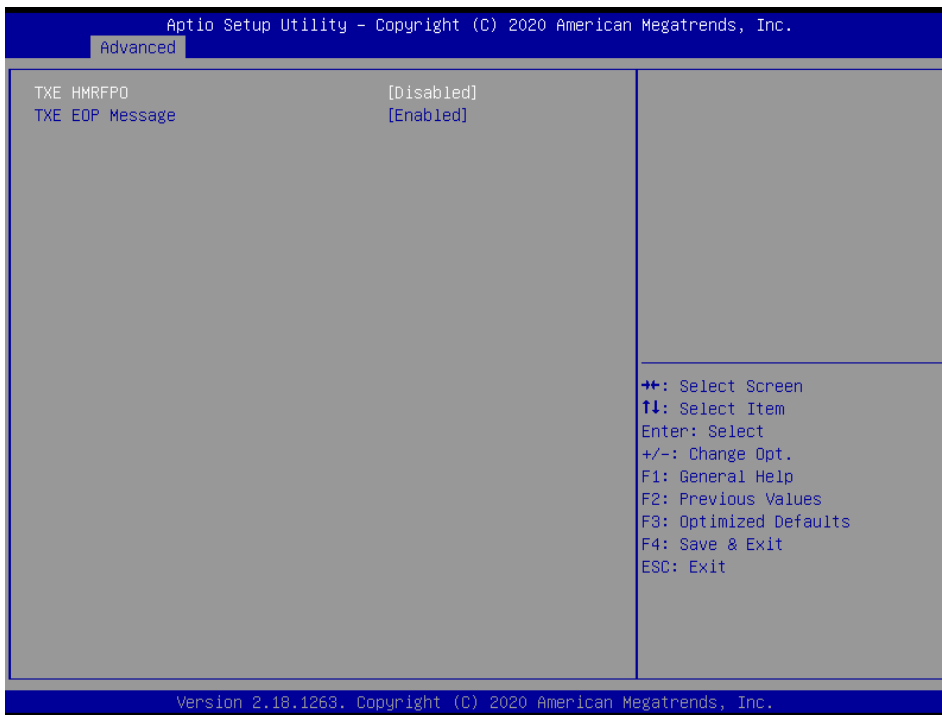


Item	Options	Description
TXE HMRFP0	Disabled[Default] Enabled,	TXE HMRFP0.
TXE EOP Message	Disabled Enabled[Default],	Send EOP Message Before Enter OS.

### 3.6.3 Chipset

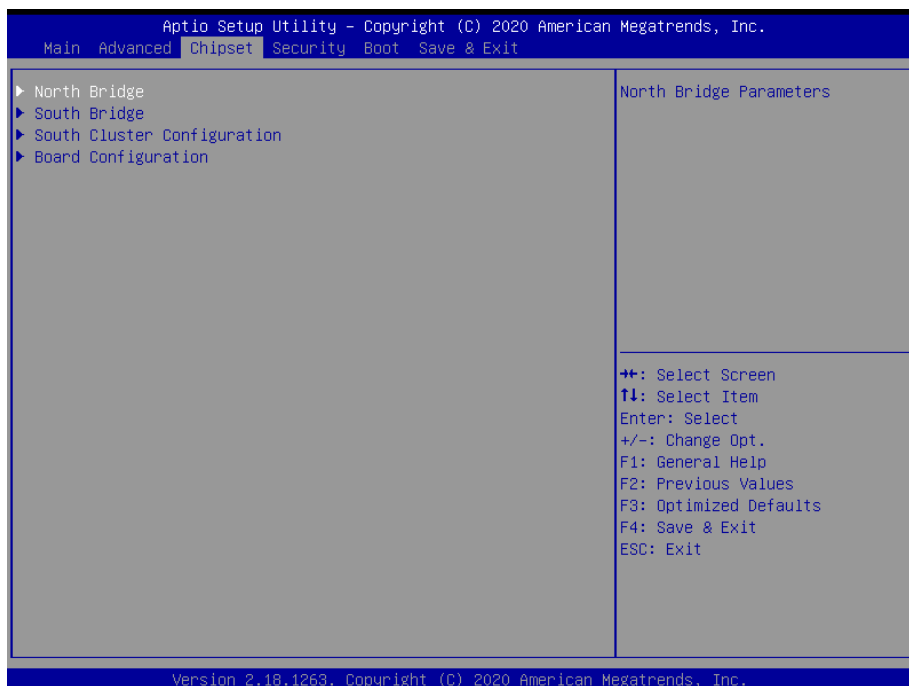




### 3.6.3.1 North Bridge

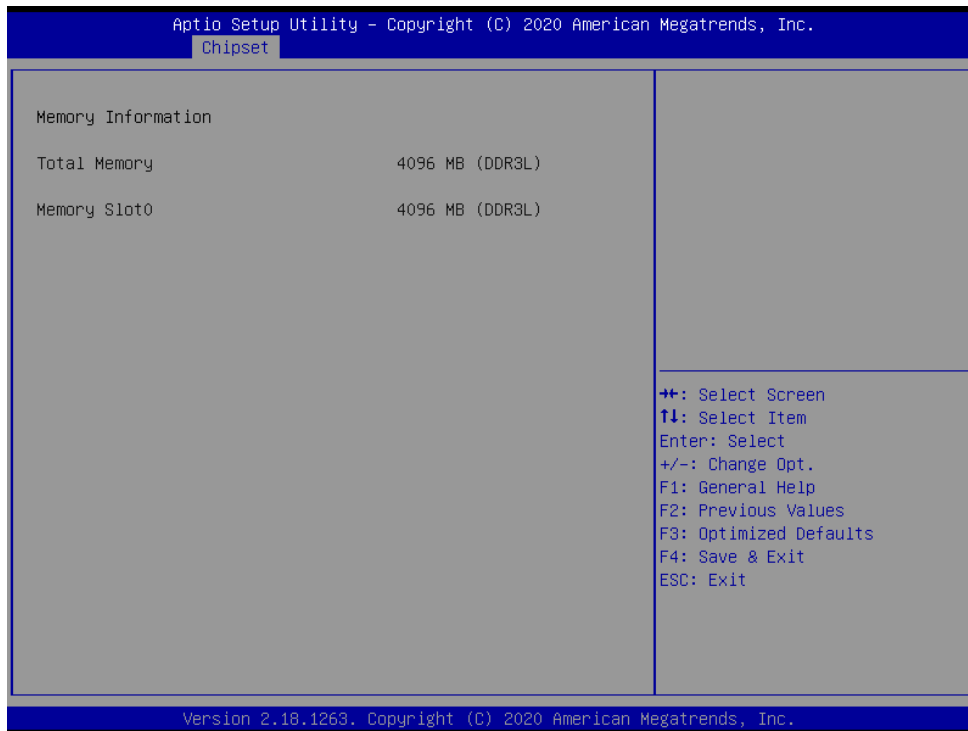


### 3.6.3.2 South Bridge

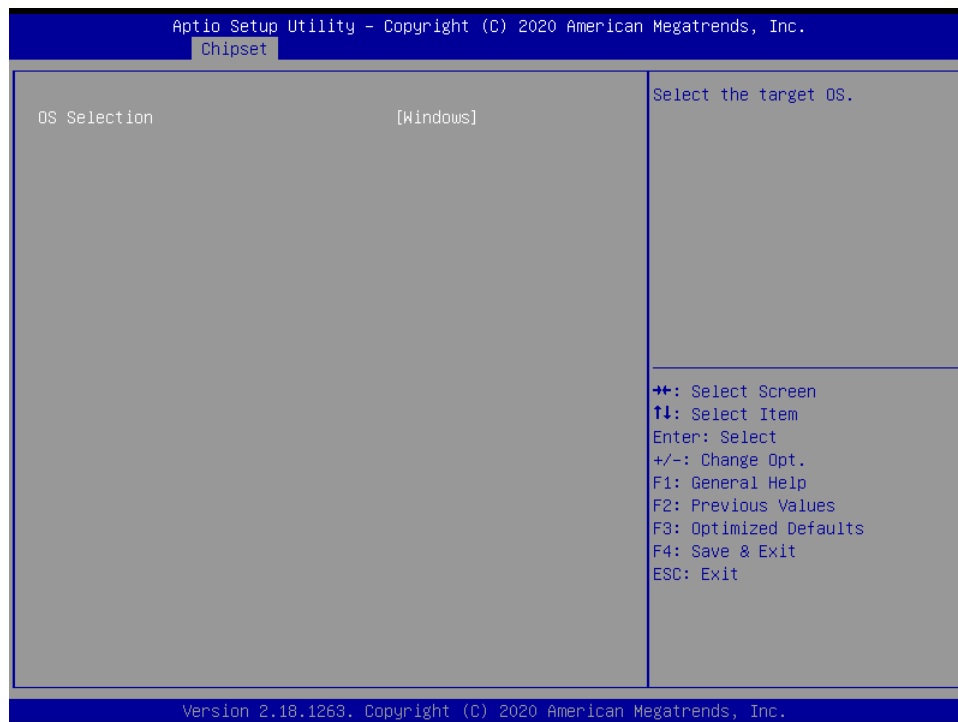


Item	Option	Description
OS Selection	Windows[Default] Intel Linux	Select the target OS.

### 3.6.3.3 South Cluster Configuration

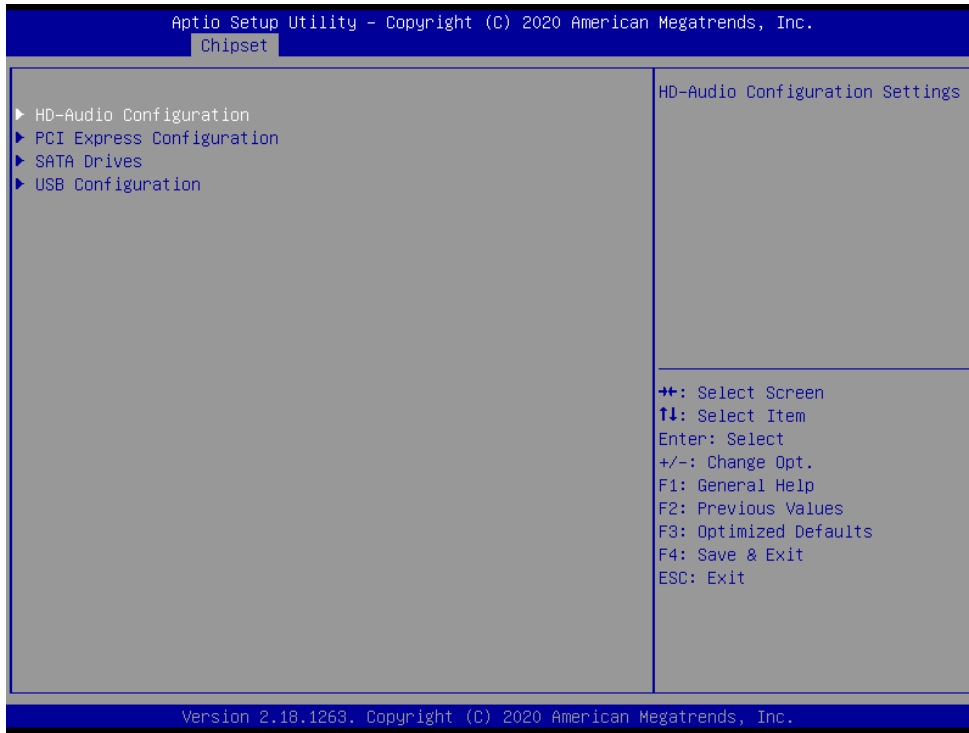


#### 3.6.3.3.1 HD-Audio Configuration

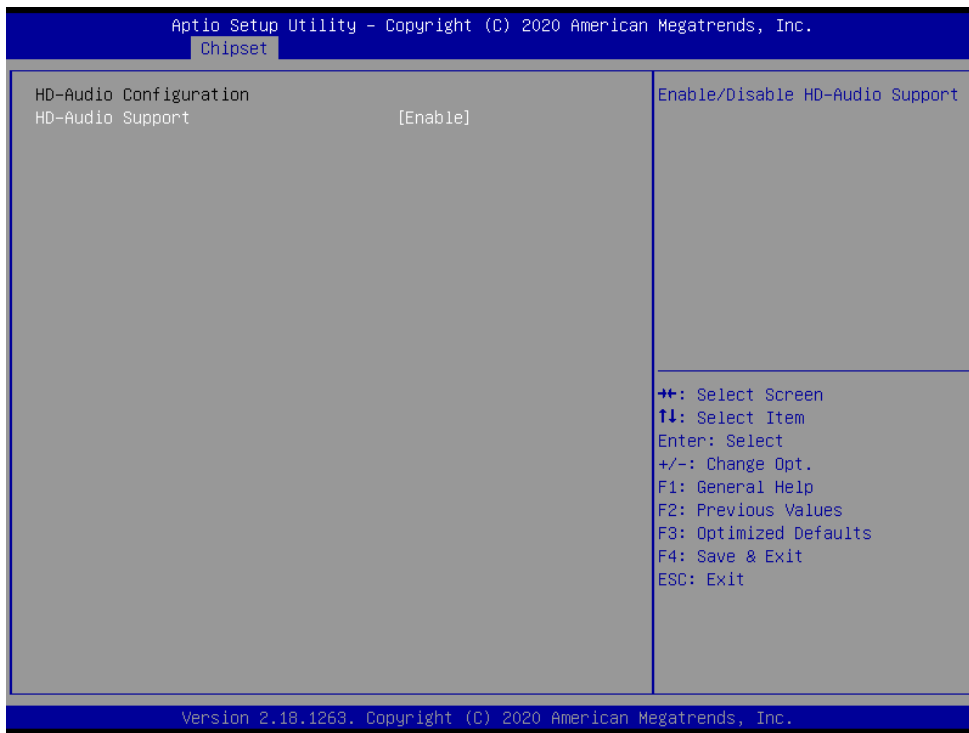


Item	Option	Description
<b>HD-Audio Support</b>	Disable Enable[Default],	Enable/Disable HD-Audio Support.

### 3.6.3.3.2 PCI Express Configuration

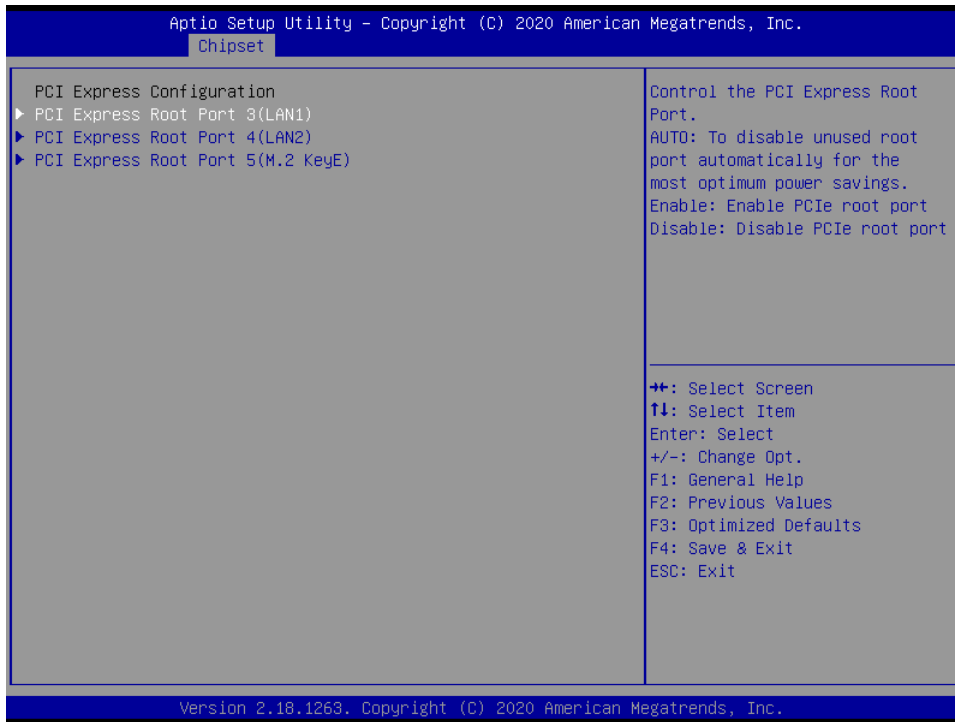

#### 3.6.3.3.2.1 PCI Express Root Port 3(LAN1)

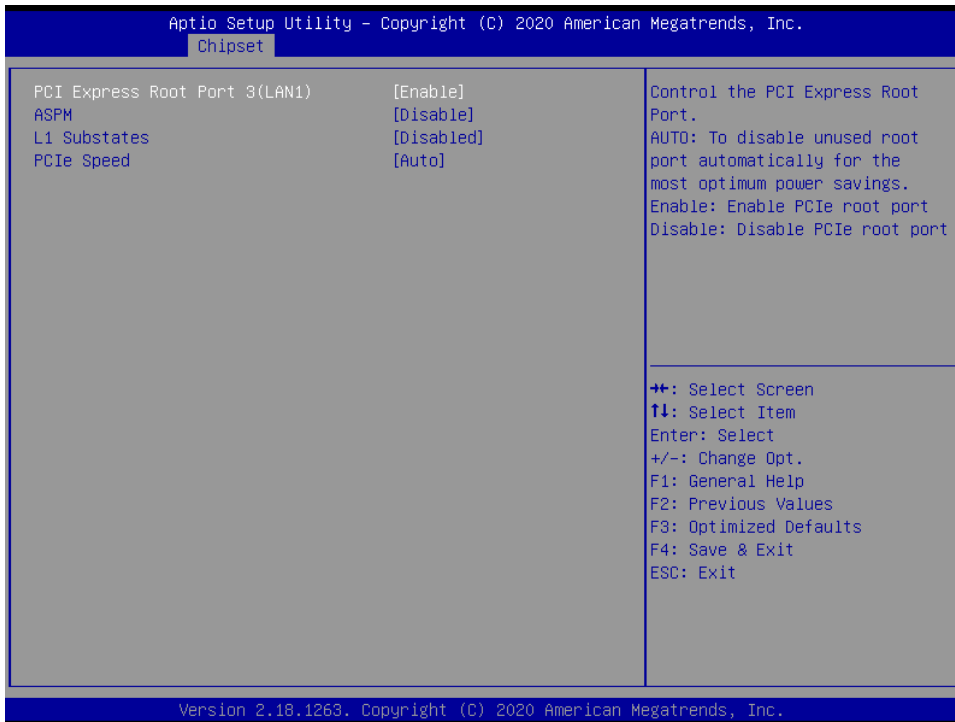


Item	Option	Description
PCI Express Root Port 3(LAN1)	Disable Enable[Default]	Control the PCI Express Root Port. AUTO: To disable unused root port automatically for

## NUC-APL/NUC-APL-Slim

		the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.
<b>ASPM</b>	Disable[Default] L0s L1 L0sL1 Auto	PCI Express Active State Power Management settings.
<b>L1 Substates</b>	Disabled[Default] L1.1 L1.2 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2	Configure PCIe Speed.


### 3.6.3.3.2.2 PCI Express Root Port 4(LAN2)

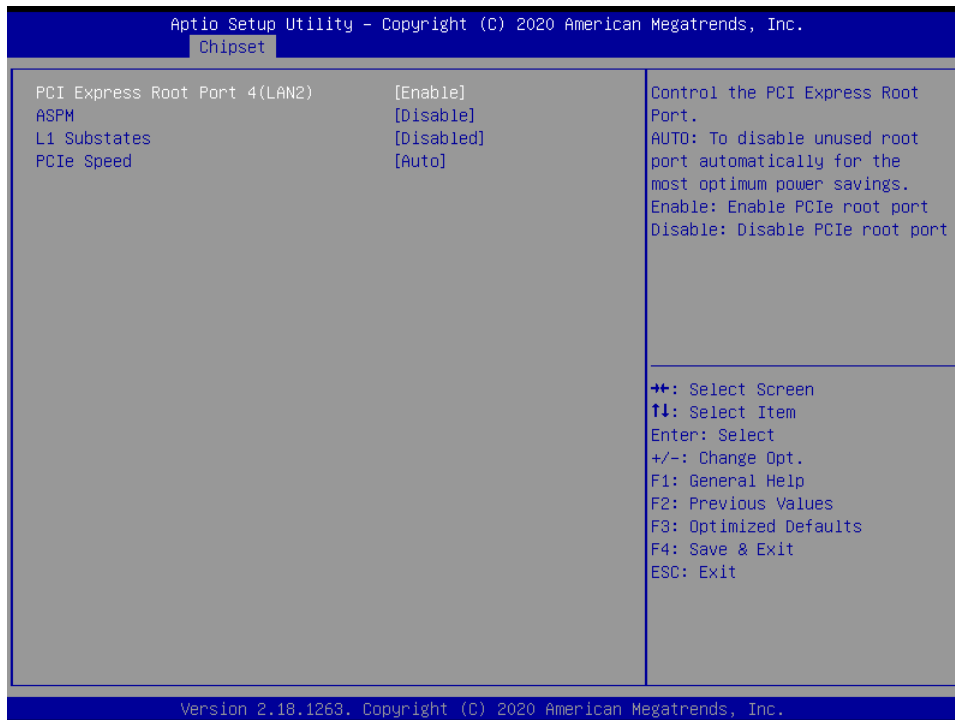

Item	Option	Description
<b>PCI Express Root Port 4(LAN2)</b>	Disable Enable[Default]	Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.
<b>ASPM</b>	Disable[Default] L0s L1 L0sL1 Auto	PCI Express Active State Power Management settings.

<b>L1 Substates</b>	Disabled[Default] L1.1 L1.2 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2	Configure PCIe Speed.

### 3.6.3.3.2.3 PCI Express Root Port 5(M.2 KeyE)

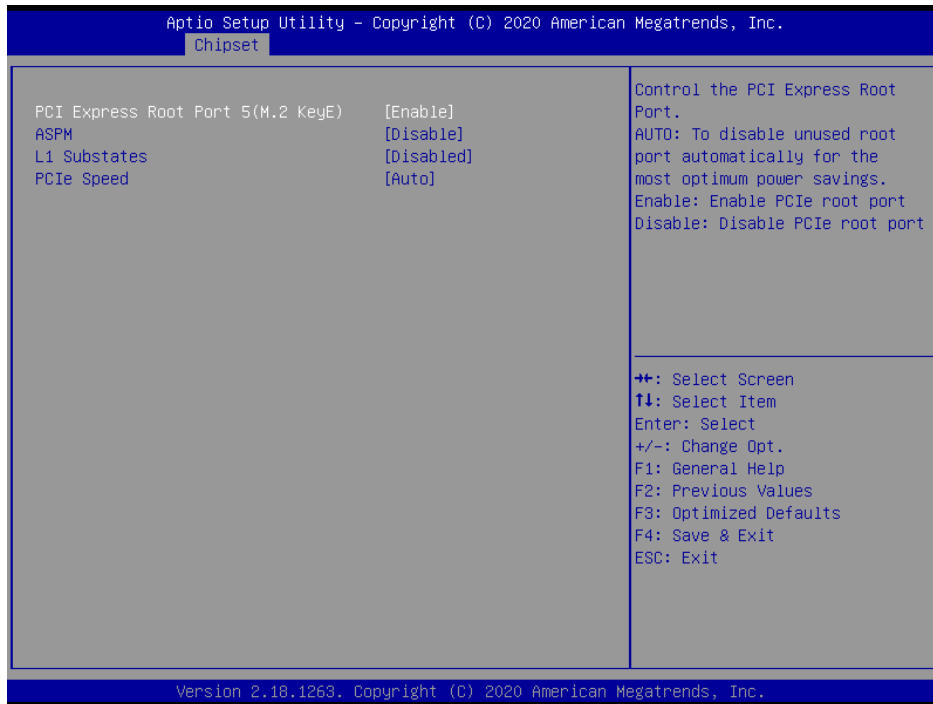


Item	Option	Description
<b>PCI Express Root Port 5(M.2 KeyE)</b>	Disable Enable[Default]	Control the PCI Express Root Port. AUTO: To disable unused root port automatically for the most optimum power savings. Enable: Enable PCIe root port Disable: Disable PCIe root port.
<b>ASPM</b>	Disable[Default] L0s L1 L0sL1 Auto	PCI Express Active State Power Management settings.
<b>L1 Substates</b>	Disabled[Default] L1.1 L1.2 L1.1 & L1.2	PCI Express L1 Substates settings.
<b>PCIe Speed</b>	Auto[Default] Gen1 Gen2	Configure PCIe Speed.

# NUC-APL/NUC-APL-Slim


## 3.6.3.3.3 SATA Drives

### NUC-APL

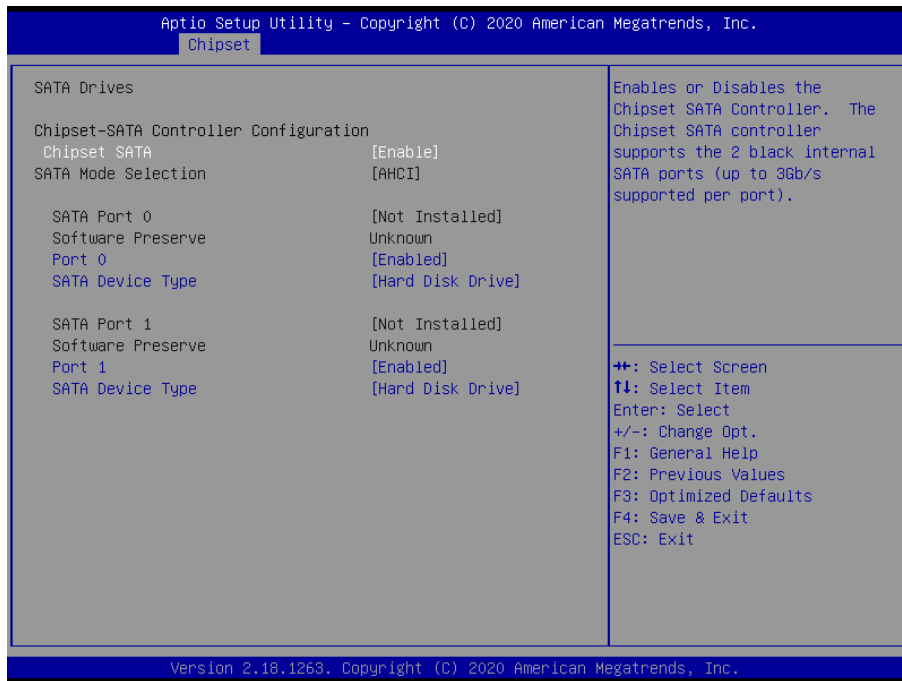


Item	Option	Description
<b>Chipset SATA</b>	Enable[Default] Disable	Enables or Disables the Chipset SATA Controller. The Chipset SATA controller supports the 2 black internal SATA ports (up to 3Gb/s supported per port).
<b>Port 0/1</b>	Disabled Enabled[Default]	Enable or Disable SATA Port.
<b>SATA Device Type</b>	Hard Disk Drive[Default] Solid State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.

### NUC-APL-Slim

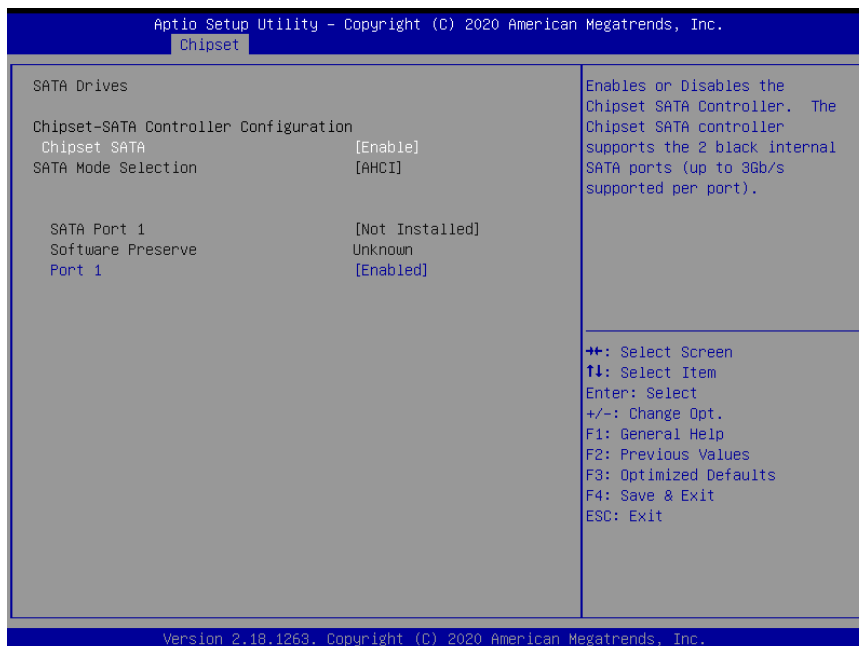

Item	Option	Description
Chipset SATA	Enable[Default] Disable	Enables or Disables the Chipset SATA Controller. The Chipset SATA controller supports the 2 black internal SATA ports (up to 3Gb/s supported per port).
Port 1	Disabled Enabled[Default]	Enable or Disable SATA Port.


### 3.6.3.3.4 USB Configuration

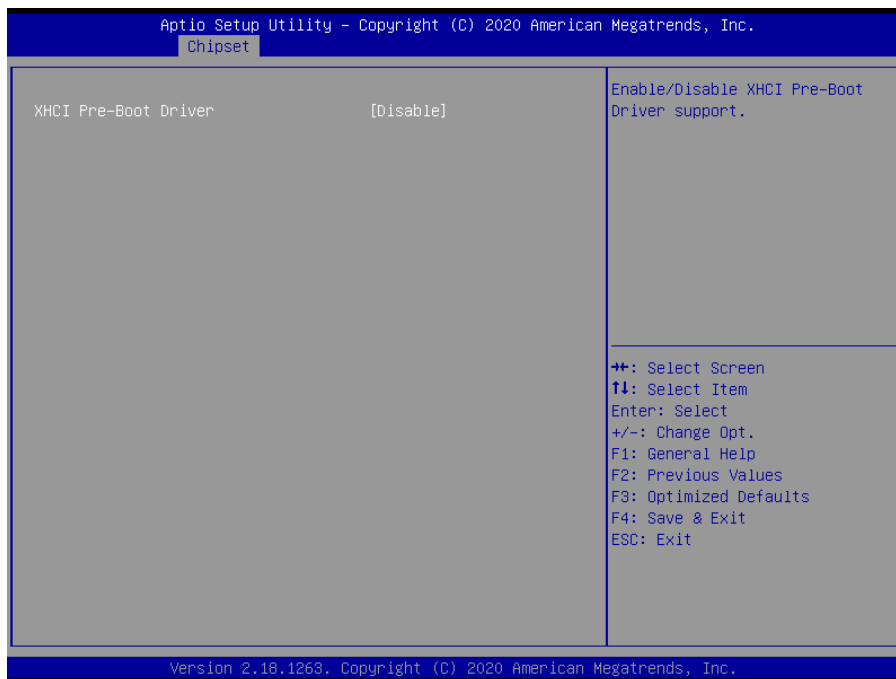

Item	Option	Description
XHCI Pre-Boot Driver	Enable Disable[Default]	Enable/Disable XHCI Pre-Boot Driver support.

3.6.3.4 Board Configuration


NUC-APL

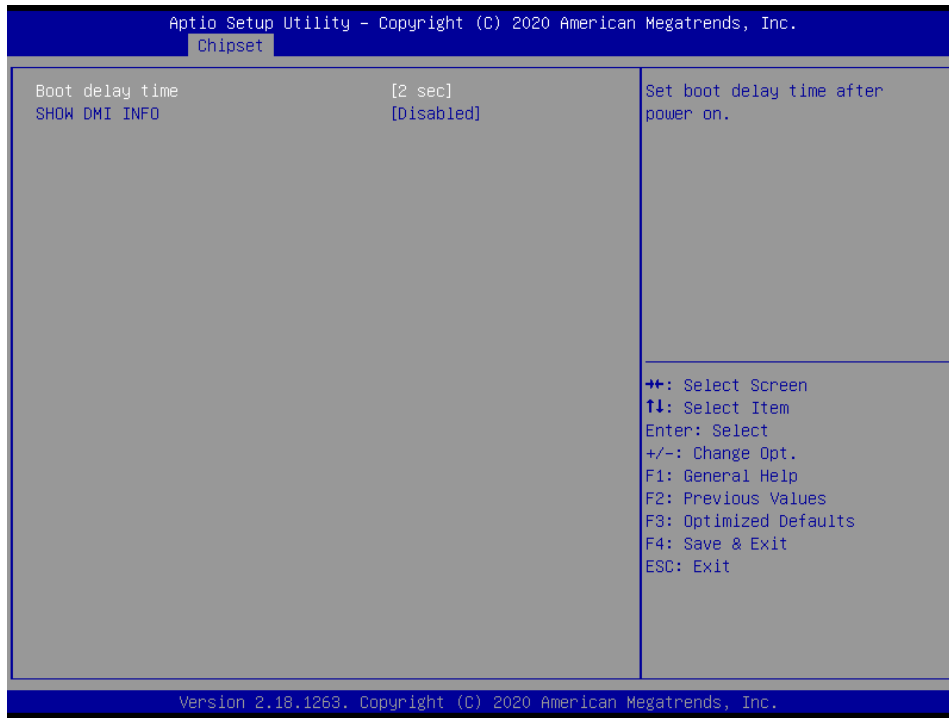

Item	Option	Description
<b>Boot delay time</b>	2 sec <b>[Default]</b>	Set boot delay time after power on.
	3 sec	
	4 sec	
	5 sec	
<b>SHOW DMI INFO</b>	Disabled <b>[Default]</b>	SHOW DMI INFO.
	Enabled	




NUC-APL-Slim

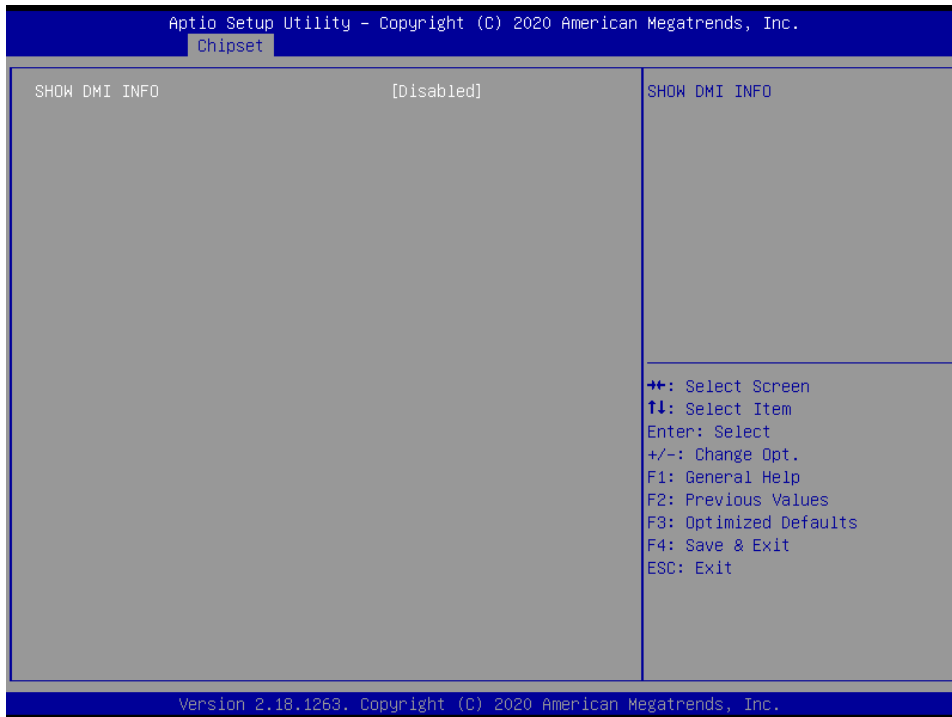

Item	Option	Description
SHOW DMI INFO	Disabled[Default] Enabled	SHOW DMI INFO.

3.6.4 Security

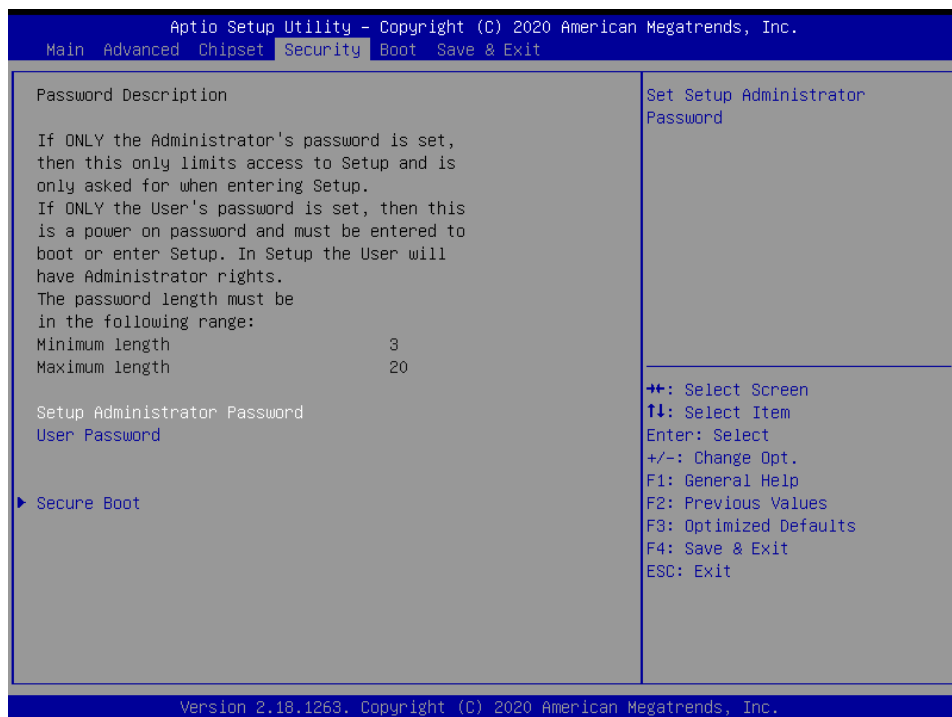

## NUC-APL/NUC-APL-Slim



- **Setup Administrator Password**

Set setup Administrator Password

- **User Password**


Set User Password

### 3.6.4.1 Secure Boot

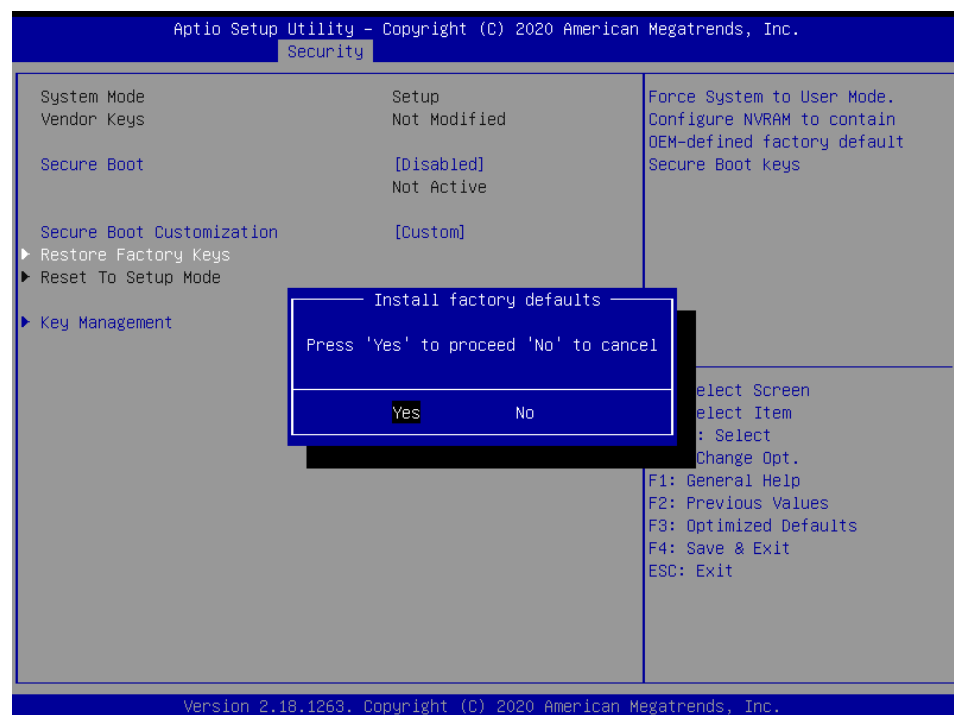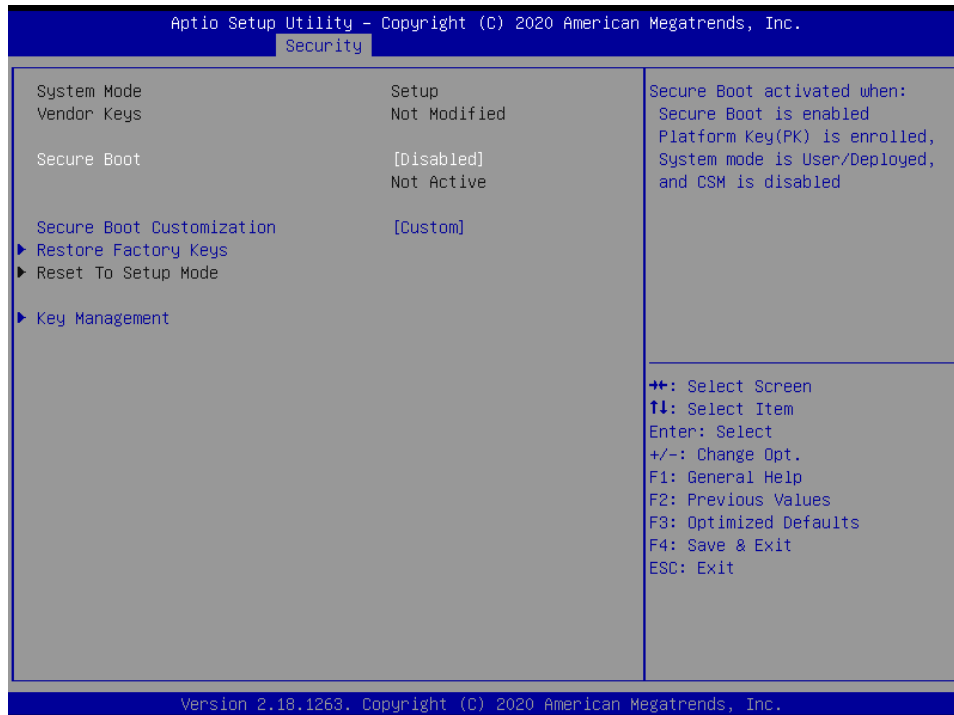


Item	Option	Description
<b>Secure Boot</b>	Disabled[ <b>Default</b> ] Enabled	Secure Boot activated when: Secure Boot is enabled Platform Key(PK) is enrolled, System mode is User/Deployed, and CSM is disabled.
<b>Secure Boot Customization</b>	Standard Custom[ <b>Default</b> ]	Secure Boot mode – Custom_Standard, Set UEFI Secure Boot Mode to STANDARD mode or CUSTOM mode, this change is effect after save. And after reset, the mode will return to STANDARD mode.

### 3.6.4.1.1 Key Management

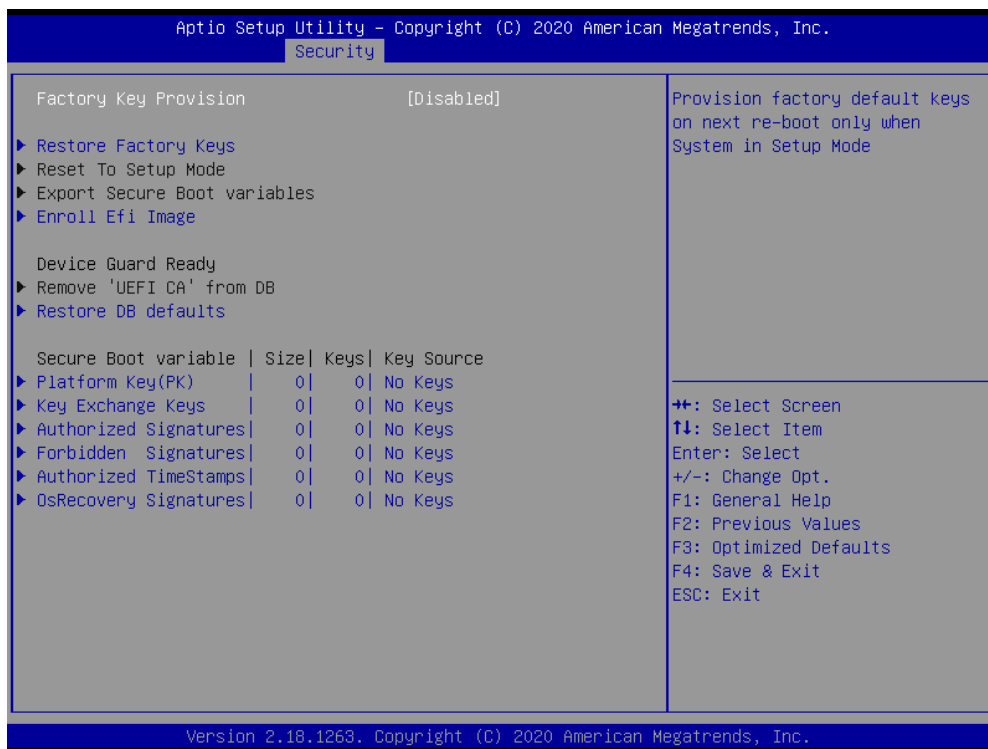



Item	Option	Description
<b>Factory Key Provision</b>	Disabled[ <b>Default</b> ] Enabled	Provision factory default keys on next re-boot only when System in Setup Mode.

### 3.6.5 Boot

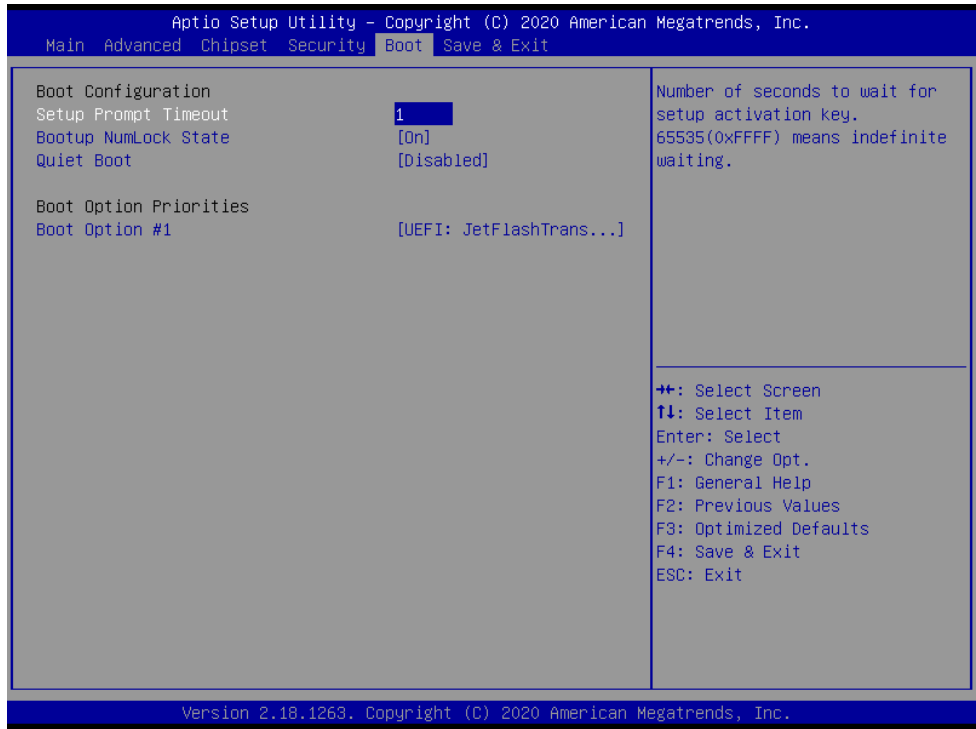

Item	Option	Description
<b>Setup Prompt Timeout</b>	1~ 65535	Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
<b>Bootup NumLock State</b>	On[Default] Off	Select the Keyboard NumLock state
<b>Quiet Boot</b>	Disabled[Default] Enabled	Enables or disables Quiet Boot option
<b>Boot Option #1</b>	Set the system boot order.	

### 3.6.6 Save and exit

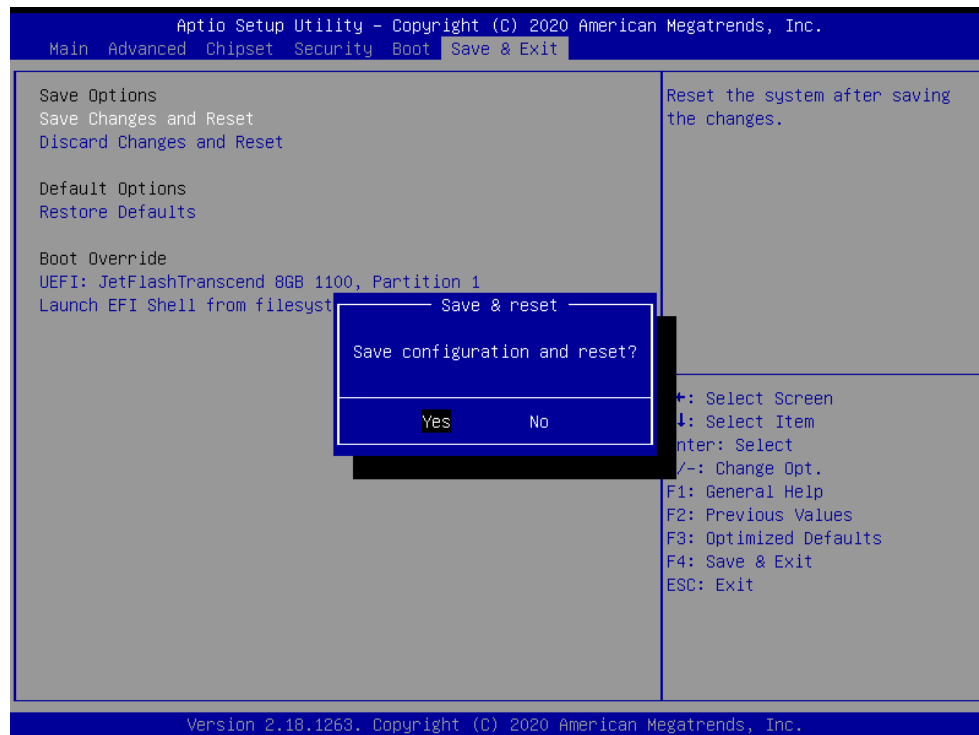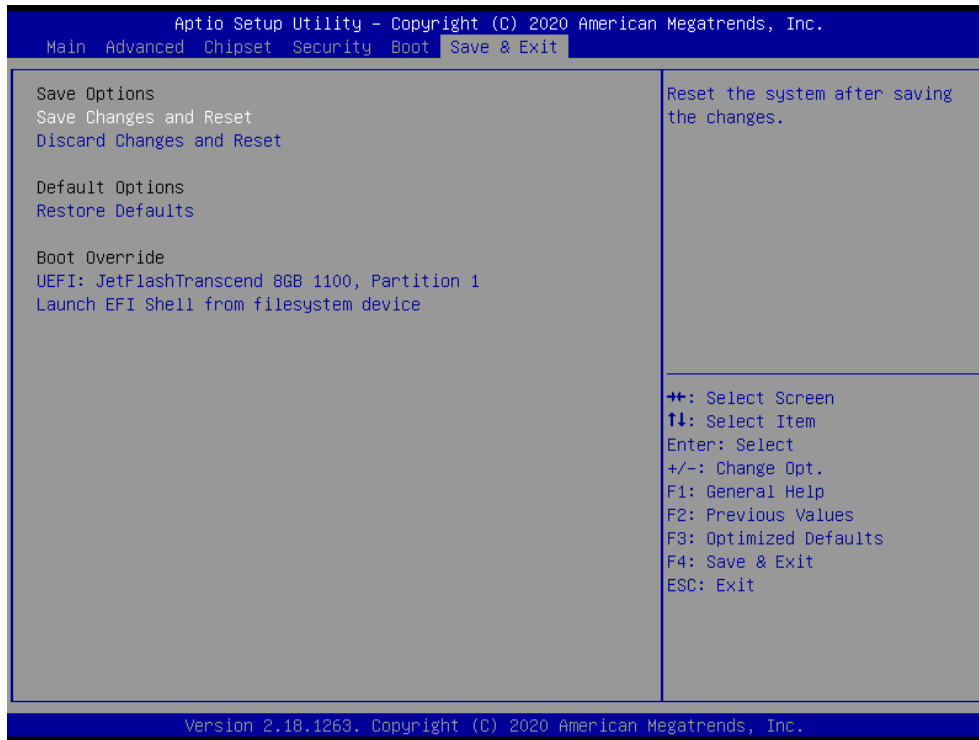

#### 3.6.6.1 Save Changes and Reset

Reset the system after saving the changes.

### **3.6.6.2 *Discard Changes and Reset***

Any changes made to BIOS settings during this session of the BIOS setup program are discarded. The setup program then exits and reboots the controller.

### **3.6.6.3 *Restore Defaults***

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

### **3.6.6.4 *Launch EFI Shell from filesystem device***

Attempts to Launch EFI Shell application (Shell.efi) from one of the available filesystem devices.

# 4. Drivers Installation

---



**Note:** Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.


## 4.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>.



**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

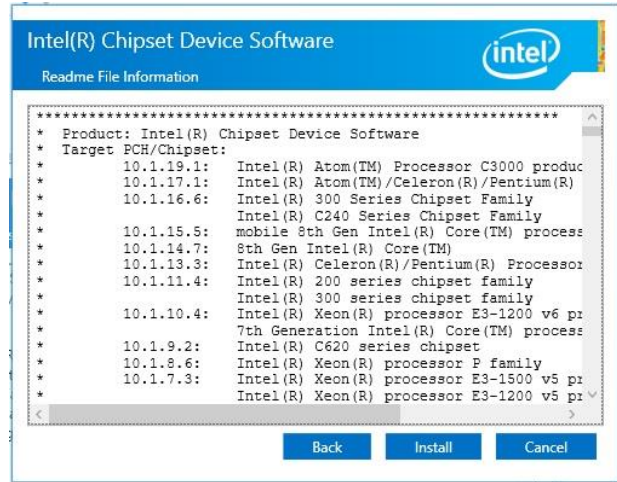

**Step 3. Click Install.**



**Step 1. Click Next.**



**Step 4. Setup completed**



**Step 2. Click Accept.**




## 4.2 Install TXE Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

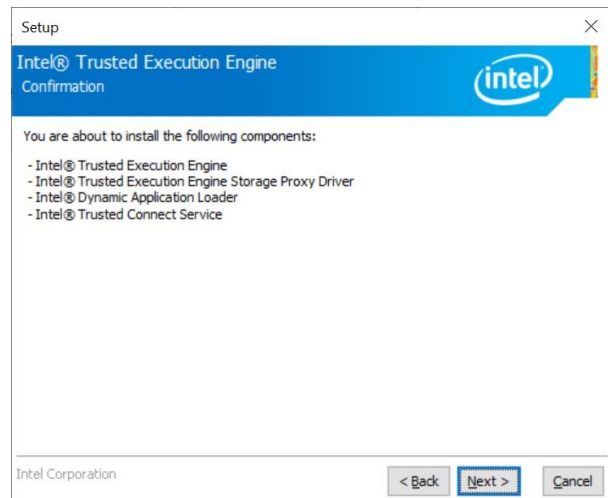


**Step 3.** Click **Next** to continue installation.

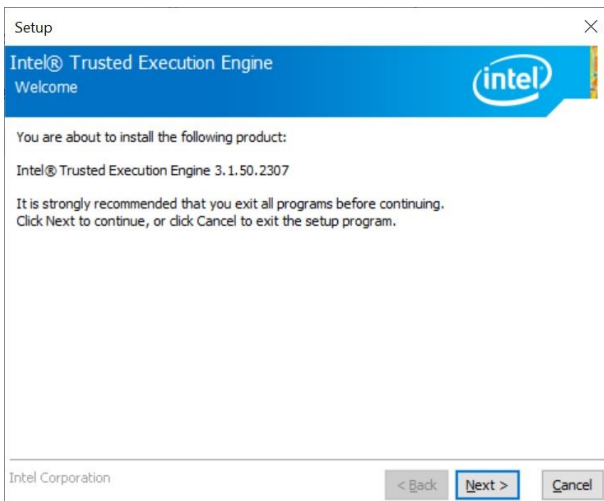

**Step1.** Click **Next** to start installation.

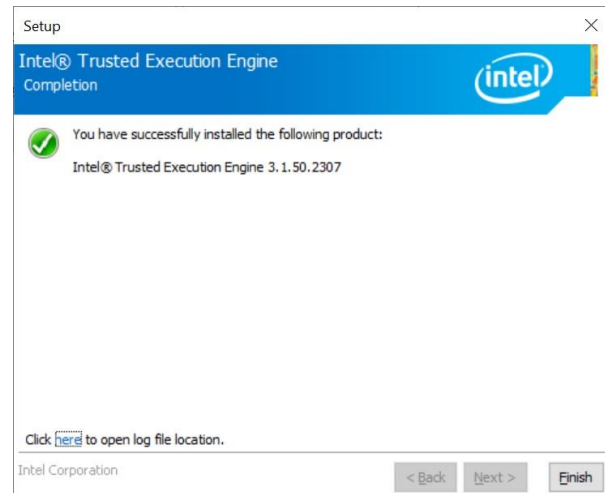

**Step 4.** Click **Finish** to complete setup.

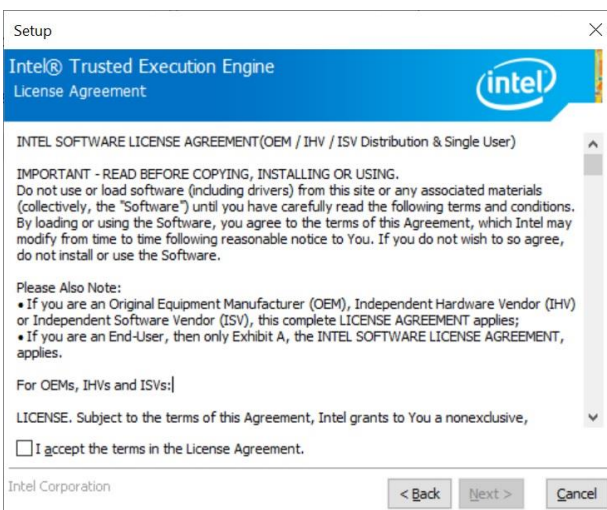

**Step 2.** Click **Next**.


## 4.3 Install VGA Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

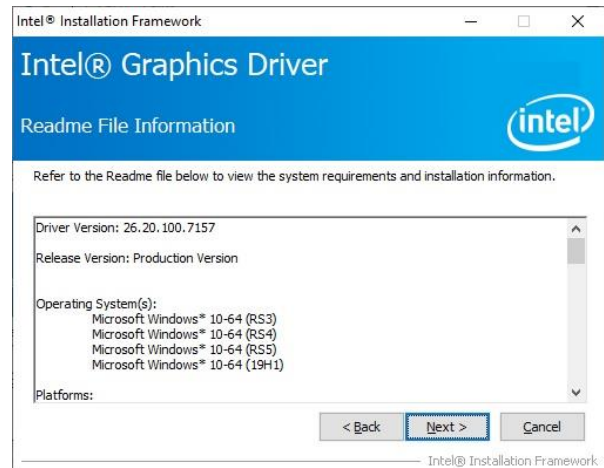


**Step 3. Click Next.**

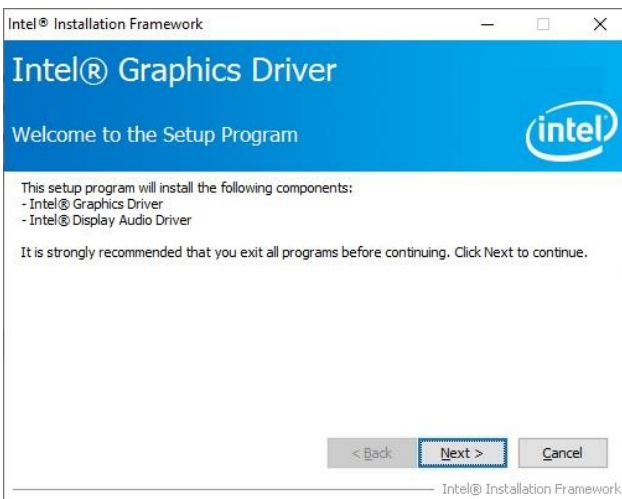

**Step 1. Click Next** to continue installation.

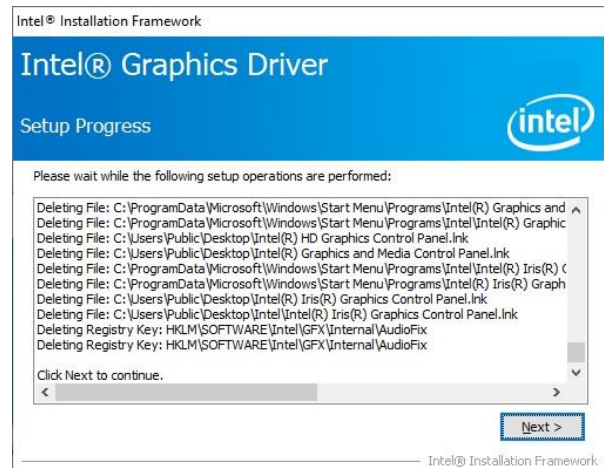


**Step 4. Click Next.**

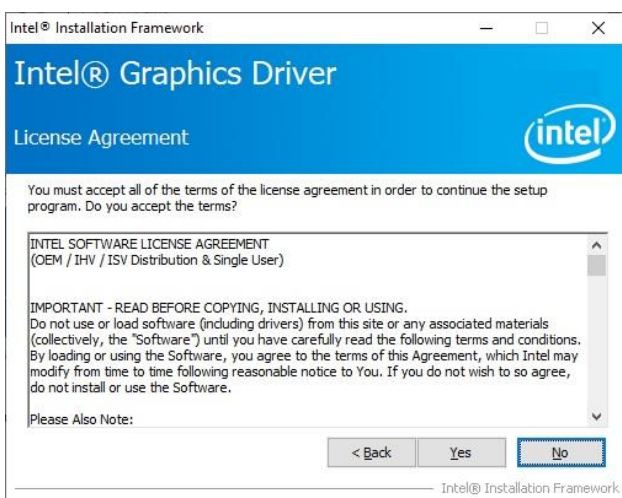

**Step 2.**

Click **Yes** to accept license agreement.

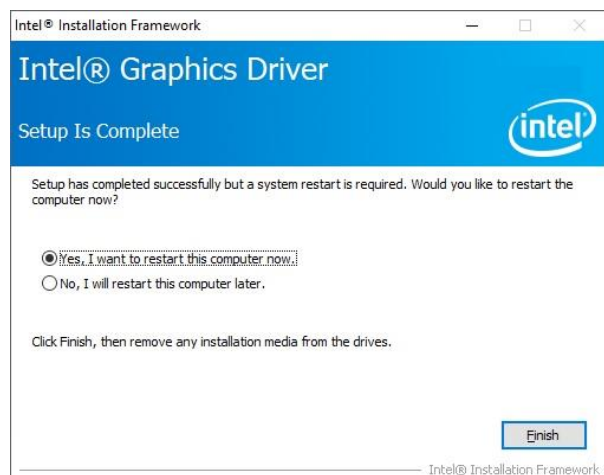

**Step 5. Click Finish** to complete setup.

## 4.4 Install Audio Driver (For Realtek ALC888S)


All drivers can be found on the Avalue Official Website:

<http://www.avalu.com.tw>.


(Audio driver is a customized driver. It must be downloaded from Avalue for subsequent use).



**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

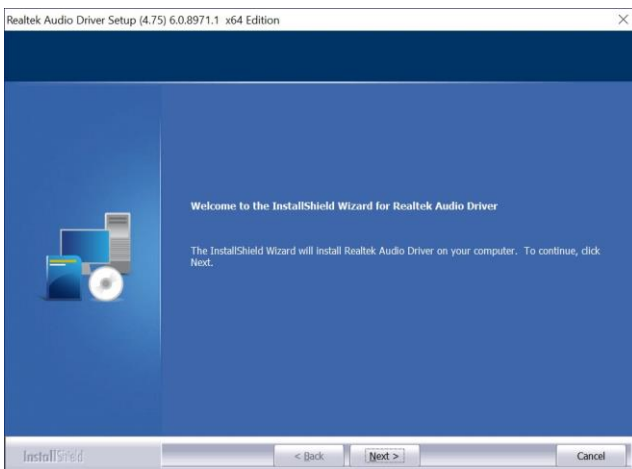

**Step 1.** Click **Next** to continue setup.

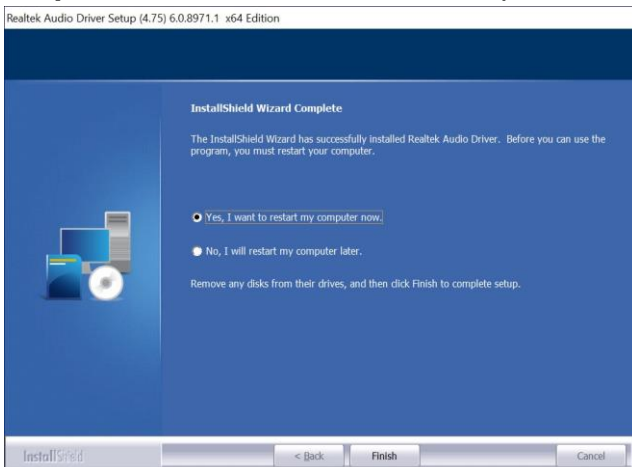

**Step 2.** Click **Finish** to complete the setup.


## 4.5 Install Gigabit Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

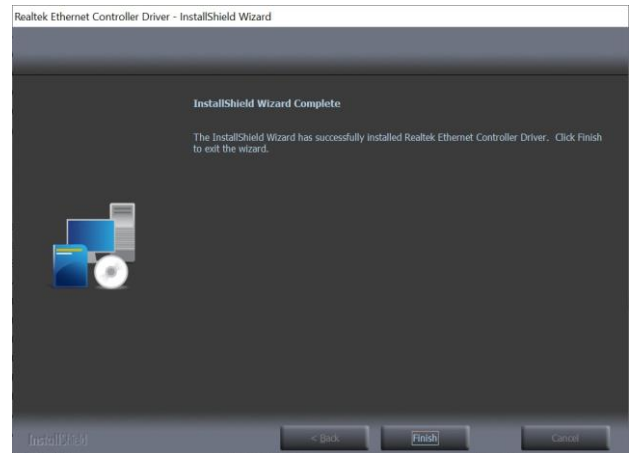

**Step 3.** Click **Finish** to complete the setup.

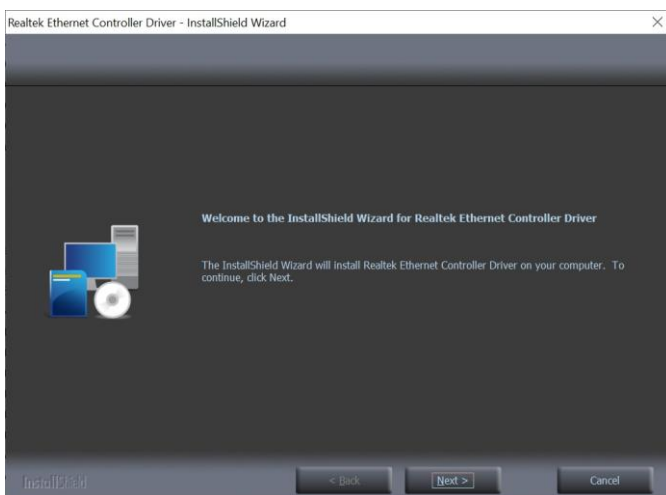

**Step 1.** Click **Next**.

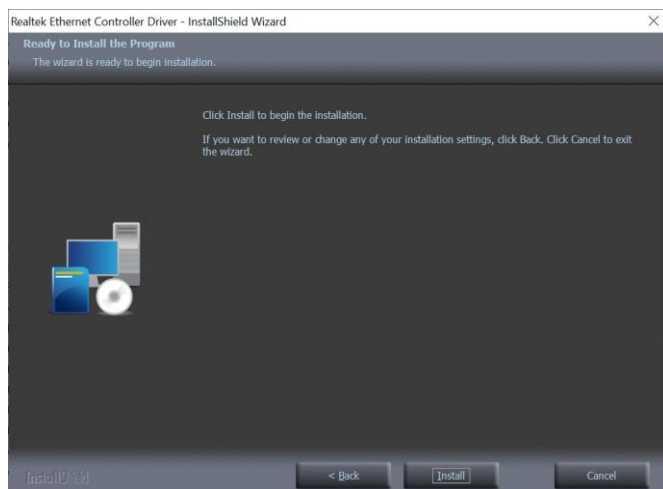

**Step 2.** Click **Install**.


## 4.6 Install Serial IO Driver

All drivers can be found on the Avalue Official Website:


<http://www.avalue.com.tw>.




**Note:** The installation procedures and screen shots in this section are based on Windows 10 operation system.

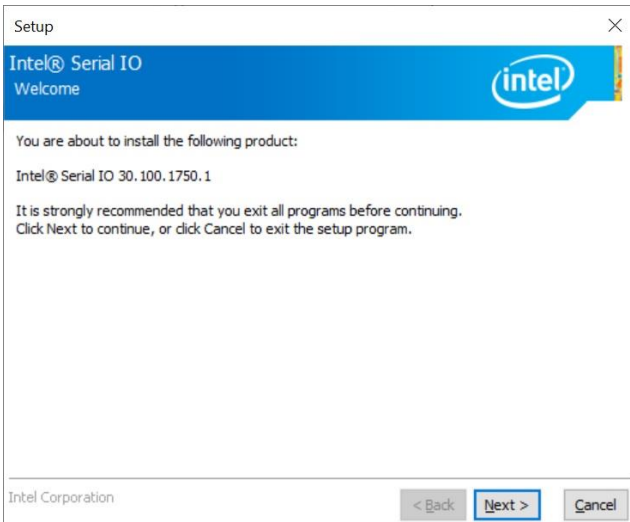

**Step 1. Click Next.**

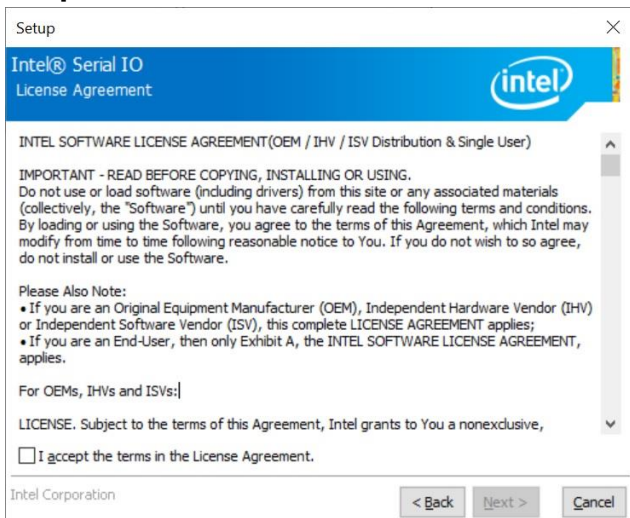


**Step 2. Click Next.**

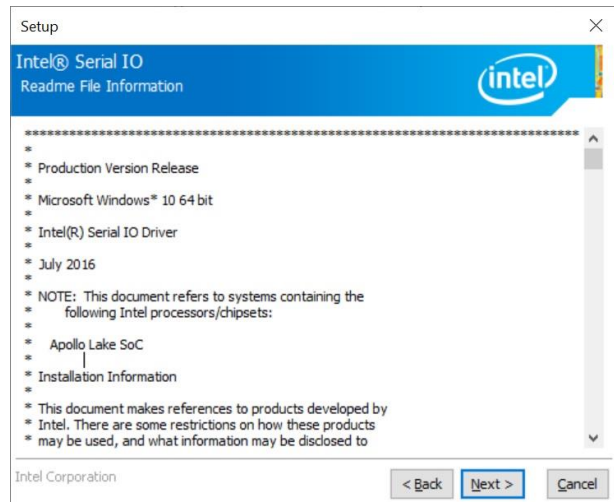

**Step 3. Click Next.**



**Step 4. Click Next to proceed.**

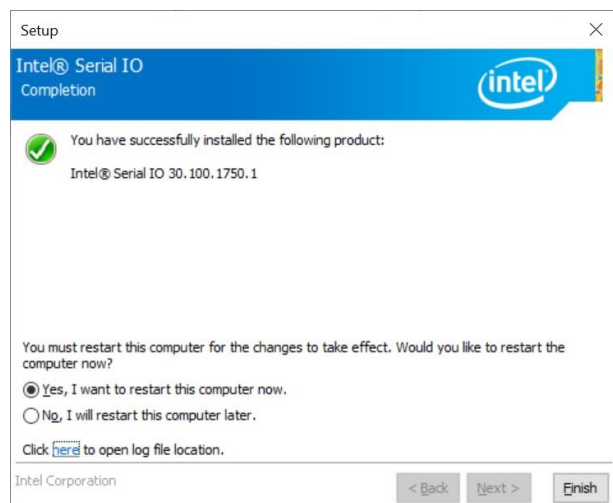

**Step 5. Click Finish to complete the setup**

