

HPS-621U2A

High Performance Computing system with single socket
CPU

Quick Reference Guide

1st Ed –19 January 2023

Copyright Notice

Copyright © 2023 Avalue Technology Inc., ALL RIGHTS RESERVED.

FCC Statement



THIS DEVICE COMPLIES WITH PART 15 FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS "A" DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE IN WHICH CASE THE USER WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT HIS OWN EXPENSE.

A Message to the Customer

Avalue Customer Services

Each and every Avalue's product is built to the most exacting specifications to ensure reliable performance in the harsh and demanding conditions typical of industrial environments. Whether your new Avalue device is destined for the laboratory or the factory floor, you can be assured that your product will provide the reliability and ease of operation for which the name Avalue has come to be known.

Your satisfaction is our primary concern. Here is a guide to Avalue's customer services. To ensure you get the full benefit of our services, please follow the instructions below carefully.

Technical Support

We want you to get the maximum performance from your products. So if you run into technical difficulties, we are here to help. For the most frequently asked questions, you can easily find answers in your product documentation. These answers are normally a lot more detailed than the ones we can give over the phone. So please consult the user's manual first.

To receive the latest version of the user's manual; please visit our Web site at:

<http://www.avalue.com.tw/>

Content

1. Getting Started.....	6
1.1 Safety Precautions	6
1.2 Packing List	6
1.3 System Specifications	7
1.4 System Overview.....	10
1.4.1 Front View	10
1.4.2 Rear View.....	10
1.5 System Dimensions.....	11
2. Hardware Configuration.....	12
2.1 HPS-621U2A connector mapping.....	13
2.1.1 Serial Port connector (COM).....	13
2.1.2 VGA connector (VGA).....	13
2.2 HPM-621UA Product Overview	14
2.3 HPM-621UA Jumper and Connector List	15
2.4 HPM-621UA Setting Jumpers & Connectors	18
2.4.1 ME Firmware Recovery (JME_RCVR1)	18
2.4.2 Flash Descriptor Security override (JME1).....	18
2.4.3 BMC strap setting (JBMC_DB1)	19
2.4.4 Clear CMOS (JCMOS1).....	19
2.4.5 CPLD strap setting for BMC Present or not (JBMC_PST1)	20
2.4.6 CPLD JTAG setting (JCPLD_JTAG_EN1)	20
2.4.7 CPLD DEBUG header (JCPLD_DEBUG1).....	21
2.4.8 Audio connector (JHD-AUDIO1).....	21
2.4.9 CPLD JTAG header (JCPLD_JTAG1).....	22
2.4.10 System fan connector 1 (SYS_FAN1).....	22
2.4.11 System fan connector 2 (SYS_FAN2).....	23
2.4.12 System fan connector 3 (SYS_FAN3).....	23
2.4.13 System fan connector 4 (SYS_FAN4).....	24
2.4.14 System fan connector 5 (SYS_FAN5).....	24
2.4.15 System fan connector 6 (SYS_FAN6).....	25
2.4.16 CPU fan connector (CPU1_FAN1)	25
2.4.17 HDD fan connector (HDD_FAN1).....	26
2.4.18 SPI connector (JSPI1)	26
2.4.19 Serial port 1 connector (JCOM1).....	27

HPS-621U2A

2.4.20	Serial port 2 connector (JCOM2).....	27
2.4.21	Serial General Purpose I/O connector (JSGPIO2).....	28
2.4.22	ATX 12V power connector (ATX12V1).....	28
2.4.23	ATX power connector (ATXPWR1)	29
2.4.24	Power supply PMBus connector (PMBUS1)	29
2.4.25	USB3.2 Gen1 connector (JUSB1)	30
2.4.26	USB2.0 connector (JUSB2).....	30
2.4.27	Front Panel connector (JFP1)	31
2.4.28	Inlet Thermal Sensors connector (INLET_SER1)	31
2.4.29	Outlet Thermal Sensors connector (OUTLET_SER1).....	32
2.4.30	HDD Backplane thermal Sensors connector (HDD_SER1)	32
2.4.31	VGA connector (JVGA1)	33
2.4.32	For BMC debug message read (JBMC_UART1)	33
2.4.33	CASE OPEN connector (JCASE_OPEN1)	34
3.BIOS Setup	35	
3.1	Introduction.....	36
3.2	Starting Setup.....	36
3.3	Using Setup	37
3.4	Getting Help.....	38
3.5	In Case of Problems	38
3.6	BIOS setup	39
3.6.1	Main Menu	39
3.6.1.1	System Language	40
3.6.1.2	System Date.....	40
3.6.1.3	System Time	40
3.6.2	Advanced Menu	40
3.6.2.1	Processor Configuration.....	41
3.6.2.1.1	CPU P State Control	42
3.6.2.1.2	CPU C State Control	42
3.6.2.1.3	Package C State Control.....	43
3.6.2.2	Memory Configuration	44
3.6.2.2.1	Memory Topology.....	45
3.6.2.2.2	Memory RAS Configuration	45
3.6.2.3	IIO Configuration	46
3.6.2.3.1	Socket0 Configuration	47
3.6.2.3.2	Intel® VT for Directed I/O (VT-d).....	48
3.6.2.4	PCI Express Configuration.....	48
3.6.2.5	sSATA Configuration.....	49
3.6.2.6	SATA Configuration.....	50
3.6.2.6.1	SATA Mode options	51

3.6.2.7	Miscellaneous Configuration	51
3.6.2.8	Server ME Configuration	52
3.6.2.9	Trusted Computing.....	53
3.6.2.10	ACPI Settings.....	53
3.6.2.11	Serial Port Console Redirection	54
3.6.2.11.1	Legacy Console Redirection Settings	55
3.6.2.12	Super IO Configuration.....	56
3.6.2.12.1	Serial Port 1 Configuration	56
3.6.2.12.2	Serial Port 2 Configuration	57
3.6.2.13	USB Configuration.....	58
3.6.2.14	NVMe Configuration	59
3.6.2.15	Option ROM Dispatch Policy.....	59
3.6.2.16	Network Stack Configuration.....	61
3.6.3	Server Mgmt.....	61
3.6.3.1	System Event Log	62
3.6.3.2	Bmc self test log	63
3.6.3.3	BMC network configuration	64
3.6.3.4	BMC User Settings.....	65
3.6.4	Security	65
3.6.4.1	Secure Boot.....	66
3.6.4.1.1	Key Management	67
3.6.5	Boot.....	68
3.6.6	Save and exit	70
3.6.6.1	Save Changes and Reset	70
3.6.6.2	Discard Changes and Reset	71
3.6.6.3	Restore Default Values	71
3.6.6.4	Save the User Default Values	71
3.6.6.5	Restore the User Default Values.....	71
4.	Drivers Installation.....	72
4.1	Install Chipset Driver	73
4.2	Install VGA Driver	74
4.3	Install Ethernet Driver	75
4.4	Install VROC Driver	76

1. Getting Started

1.1 Safety Precautions

Warning!



Always completely disconnect the power cord from your chassis whenever you work with the hardware. Do not make connections while the power is on. Sensitive electronic components can be damaged by sudden power surges. Only experienced electronics personnel should open the PC chassis.

Caution!



Always ground yourself to remove any static charge before touching the CPU card. Modern electronic devices are very sensitive to static electric charges. As a safety precaution, use a grounding wrist strap at all times. Place all electronic components in a static-dissipative surface or static-shielded bag when they are not in the chassis.

1.2 Packing List

- 1 x HPS-621U2A barebone system
 - HPM-621UA motherboard
 - 1U 80plus Gold 500W PSU



If any of the above items is damaged or missing, contact your retailer.

1.3 System Specifications

Component	
Processor	Single 2nd Gen. Intel® Xeon® Scalable Processors / Intel® Xeon® Scalable Processors up to 150W TDP L10 system: 1 x Intel® Xeon® Gold 6230 Processor CD8069504193701SRF8W, Intel(BCC-CPU-6230R) At CPU
Platform Controller Hub	Intel C621
System Memory	6 x DDR4 2933/2666/2400/2133 RDIMM/LRDIMM up to 768GB L10 system: 2 x DDR4 2666 16GB 288PIN 0~85C M4R0-AGS1BCIK, Innodisk, RDIMM (BCC-MEM-16G-04R) At DIMM3, DIMM6
BIOS Information	AMI UEFI BIOS
Watchdog Timer	System reset event 0~6553 second.
H/W Status Monitor	Temperature. Fan. Voltage. Case open. (1 x 2.5mm pitch Box Wafer, Pinrex 753-71-02TW07 or equivalent) Please refer to note 1 for more information.
RAID	Intel C621 software RAID 0,1,5,10
TPM	TPM 2.0 onboard
BMC	IPMI 2.0 with AST 2500 BMC controller onboard.
Expansion	
PCIe (Gen X, Lanes)	3x PCIe x16 slots, 3 x PCIe x8 slots, Slot 1, NA (This is for PCI 3.0 slot) Slot 2, PCIe 3.0 x8 Slot 3, PCIe 3.0 x16 (Computing GPU – Nvidia T4 for L10 system) Slot 4, PCIe 3.0 x8 Slot 5, PCIe 3.0 x16 (Display GPU – Nvidia P620 for L10 system) Slot 6, PCIe 3.0 x8 Slot 7, PCIe 3.0 x16 (Slot 7 is the slot closest to CPU)(Intel 10G Network card for L10 system)
PCI	1 x PCI 3.0 slot Slot 1, PCI 3.0
Storage	
M.2 (Key-X, Size, Signal)	1 x M.2 M-Key PCIe 3.0 x4 NVMe SSD 2242/2260/2280 form factor
2.5" Drive Bay	1 x 2.5" internal drive bay for L10 system

HPS-621U2A

(Height)	
Edge I/O (Front)	
USB Port	2x USB 2.0 type A ports
Power Button	1 power button
Reset Button	1 reset button
LED Indicator	1 x Power state 1 x Disk drive activity 2 x Network activity
Edge I/O (Rear)	
USB Port	4 x USB 3.2 Gen1 Ports
COM Port	1 x RS232 (Bracket at Slot 1)
VGA	Display Priority: VGA 1 x VGA (Bracket at Slot 2)
RJ-45	4 x RJ-45 (LAN 1 port shared with IPMI 2.0)
Display	
Graphic Chipset	AST2500 BMC controller
Resolution	1920x1200@60Hz 32bpp
Ethernet	
LAN Chipset	4 x Intel I210AT
Specification	Gigabit Ethernet Controller
LED Indicator	Follow Avalue standard.
Power Requirement	
ACPI	Yes
Power Mode	H/W: ATX power well design only BMC: AT (Default)
Power Supply Unit	Power Supply 1U 80plus Gold 500W PSU FSP500-50FDB -(BCC-PSU-500N-03R)
Mechanical & Environment	
Operating Temp.	Condition 1: Temperature: 0 to 40 degree C (L6 & L10(T4+P620)) Condition 2: Temperature: 0 to TBC degree C (L10 system, depends on added card spec.)
Storage Temp.	-40°C 24hrs IEC60068-2-1 Cold test Test : Ab 70°C/ RH95% 24hrs IEC 60068-2-3 Test:Ca
Operating Humidity	40°C/RH95%/24hrs IEC 60068-2-56 Test:Cb
Dimension (W*L*H)	483mm x 88mm x 650mm (W x H x D)
Weight	16KGS
Vibration Test	Operational : 1. 0.25 Grms Random


	<p>2. Operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 min. per each axis 6. IEC 60068-2-64 Test:Fh</p> <p>Non-operational :</p> <p>1. Test Acceleration : 0.5G 2. Test frequency : 5~500 Hz 3. Sweep : 1 Oct/ per one minute. (logarithmic) 4. Test Axis : X,Y and Z axis 5. Test time :30 min. each axis 6. System condition : Non-Operating mode 7. Reference IEC 60068-2-6 Testing procedures</p> <p>Package Vibration Test:</p> <p>1. PSD: 0.026G²/Hz , 2.16 Grms 2. Non-operation mode 3. Test Frequency : 5-500Hz 4. Test Axis : X,Y and Z axis 5. 30 min. per each axis 6. IEC 60068-2-64 Test:Fh</p>
Shock Test	<p>Operational :</p> <p>1. Wave form : Half Sine wave 2. Acceleration Rate : 5.0G for operation mode 3. Duration Time : 11ms 4. No. of Shock : Z axis 300 times 5. Test Axis: Z axis 6. Operation mode 7. Reference IEC 60068-2-27 Testing procedures</p>
Drop Test	<p>Package drop test :</p> <p>1. One corner, three edges, six face 2. ISTA 2A, IEC-60068-2-32 Test:Ed</p>
Software Support	
OS Information	<p>Windows : Windows 10 IOT Enterprise, Windows server 2016, Windows server 2019 Linux : Ubuntu 16.04 and 18.04</p>




Note: Specifications are subject to change without notice.

1.4 System Overview

1.4.1 Front View

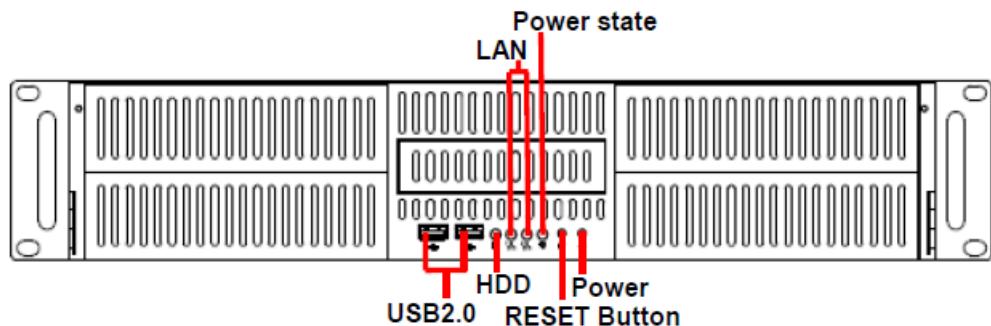


1.4.2 Rear View

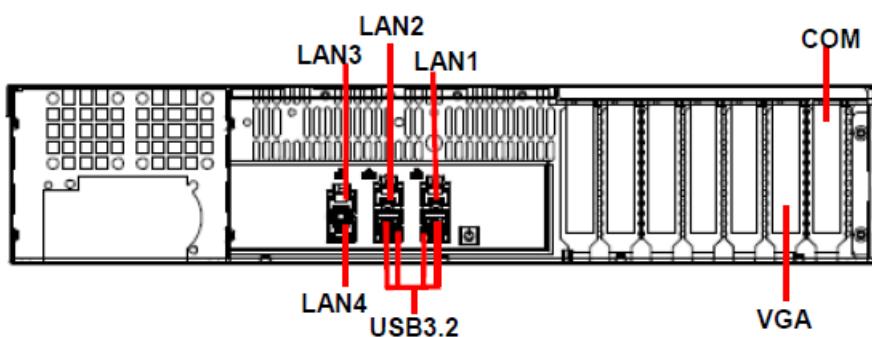


Connectors

Label	Function	Note
USB2.0	2 x USB2.0 connector	
Power	Power button	
Reset Button	Reset button	
Power state	Power state	
Indicator LAN	Network activity	
HDD	Disk drive activity	
COM	Serial port connector	D-sub 9-pin, male
LAN1/2/3/4	4 x RJ-45 Ethernet connector	
USB3.2	4 x USB3.2 connector	
VGA	VGA connector	

1.5 System Dimensions

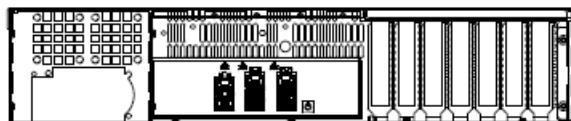


Rear View

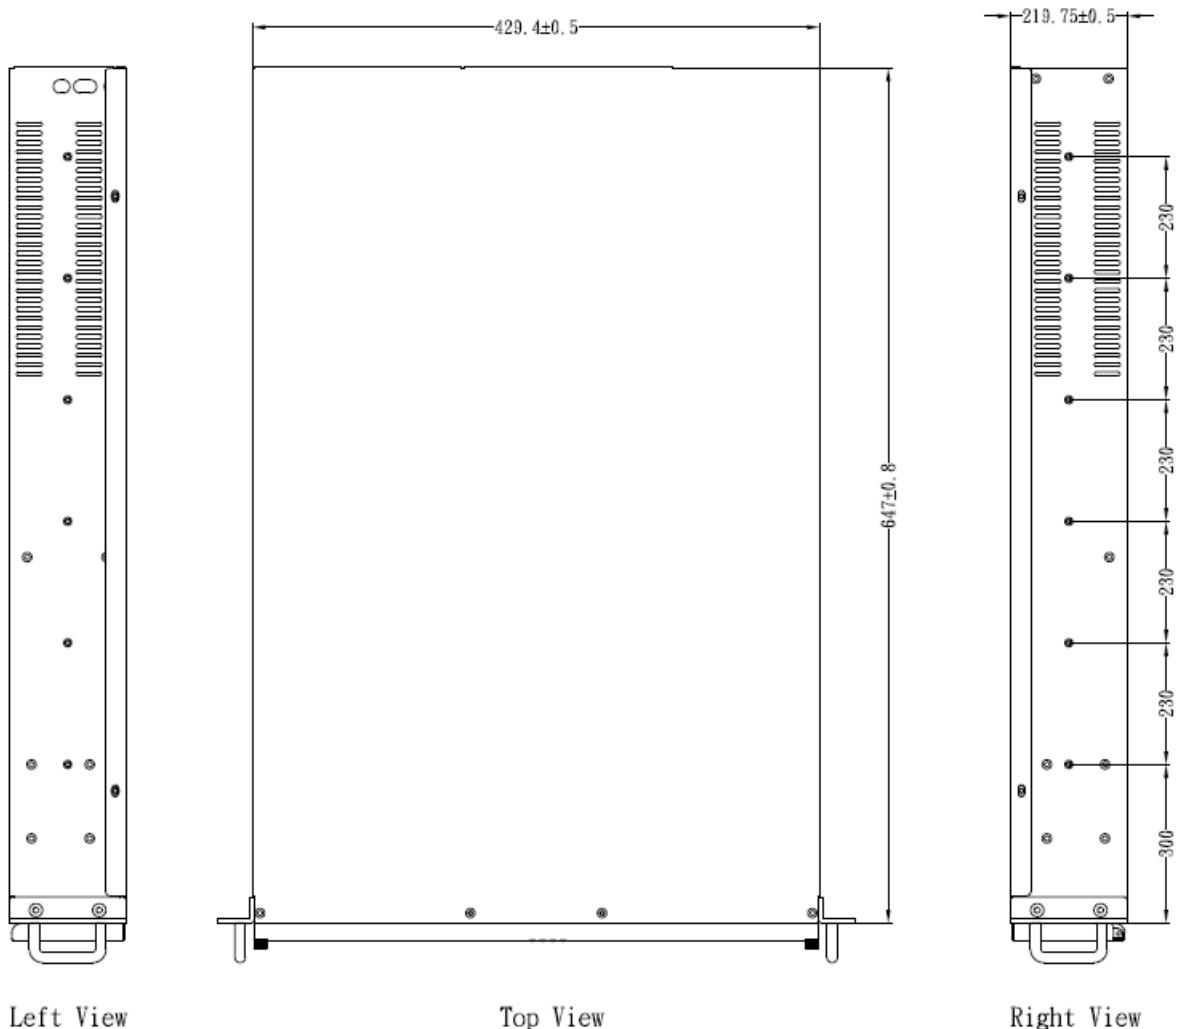

Left View

Top View

Right View

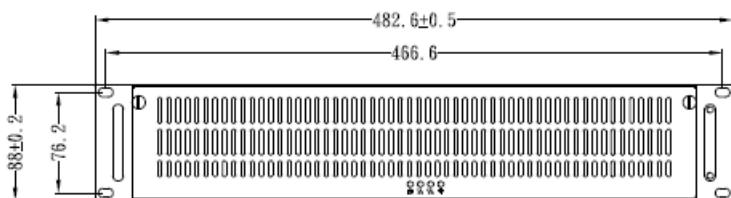

Front out-side View

(Unit: mm)

2. Hardware Configuration

Jumper and Connector Setting

For advanced information, please refer to:

- 1- HPM-621UA included in this manual.





Note: If you need more information, please visit our website:

<http://www.alue.com.tw>



2.1 HPS-621U2A connector mapping

2.1.1 Serial Port connector (COM)

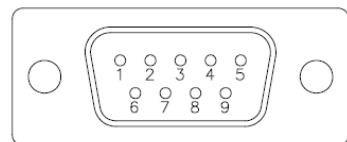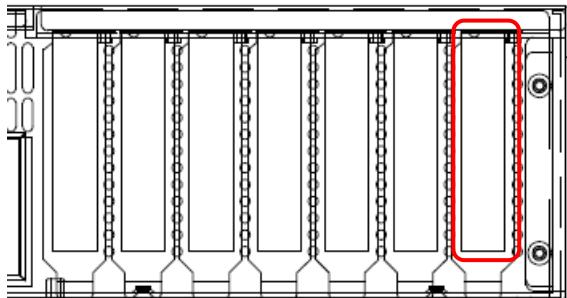


Signal	PIN	PIN	Signal
DCD#	1	6	DSR#
RXD	2	7	RTS#
TXD	3	8	CTS#
DTR#	4	9	RI#
GND	5		

2.1.2 VGA connector (VGA)

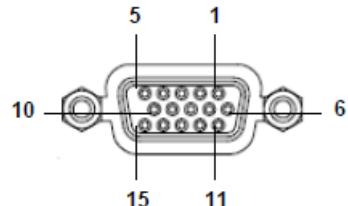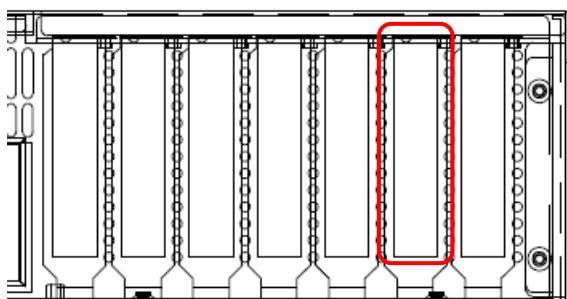

PIN	Signal	PIN	Signal	PIN	Signal
1	RED	6	GND	11	NC
2	GREEN	7	GND	12	DDCDAT
3	BLUE	8	GND	13	HSYNC
4	NC	9	+5V	14	VSYNC
5	GND	10	GND	15	DDCCLK


2.2 HPM-621UA Product Overview

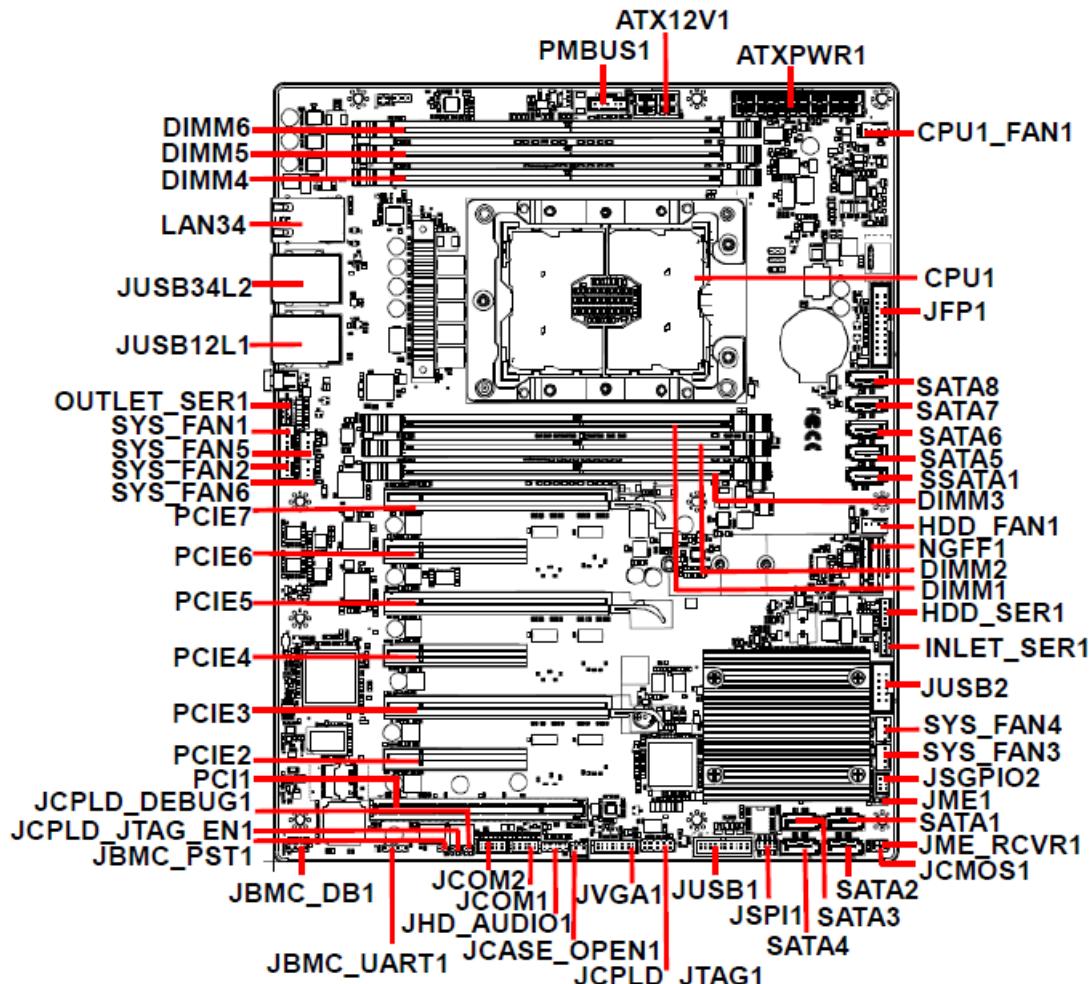

2.3 HPM-621UA Jumper and Connector List

You can configure your board to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch.

It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper you connect the pins with the clip. To “open” a jumper you remove the clip. Sometimes a jumper will have three pins, labeled 1, 2, and 3. In this case, you would connect either two pins.

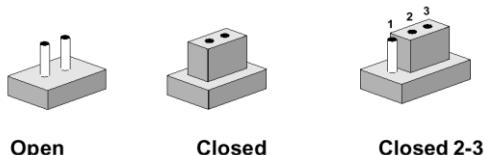

The jumper settings are schematically depicted in this manual as follows:



A pair of needle-nose pliers may be helpful when working with jumpers.

Connectors on the board are linked to external devices such as hard disk drives, a keyboard, or floppy drives. In addition, the board has a number of jumpers that allow you to configure your system to suit your application.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before you make any changes.

The following tables list the function of each of the board's jumpers and connectors.

Jumpers

Label	Function	Note
JME_RCVR1	ME Firmware Recovery	3 x 1 header, pitch 2.00mm
JME1	Flash Descriptor Security override	3 x 1 header, pitch 2.00mm
JBMC_DB1	BMC strap setting	4 x 2 header, pitch 2.00mm
JCMOS1	Clear CMOS	3 x 1 header, pitch 2.00mm
JBMC_PST1	CPLD strap setting for BMC Present or not	2 x 1 header, pitch 2.00mm
JCPLD_JTAG_EN1	CPLD JTAG setting	2 x 1 header, pitch 2.00mm
JCPLD_DEBUG1	CPLD DEBUG header	2 x 1 header, pitch 2.00mm

Connectors

Label	Function	Note
SYS_FAN1	System fan connector 1	4 x 1 wafer, pitch 2.54mm

HPS-621U2A


SYS_FAN2	System fan connector 2	4 x 1 wafer, pitch 2.54mm
SYS_FAN3	System fan connector 3	4 x 1 wafer, pitch 2.54mm
SYS_FAN4	System fan connector 4	4 x 1 wafer, pitch 2.54mm
SYS_FAN5	System fan connector 5	4 x 1 wafer, pitch 2.54mm
SYS_FAN6	System fan connector 6	4 x 1 wafer, pitch 2.54mm
CPU1_FAN1	CPU fan connector	4 x 1 wafer, pitch 2.54mm
HDD_FAN1	HDD fan connector	4 x 1 wafer, pitch 2.54mm
JCOM1	Serial port 1 connector	5 x 2 wafer, pitch 2.00mm
JCOM2	Serial port 2 connector	5 x 2 wafer, pitch 2.00mm
JSGPIO2	Serial General Purpose I/O connector 2	3 x 2 wafer, pitch 2.00mm
PCIE2	PCIe 3.0 x8	
PCIE3	PCIe 3.0 x16	
PCIE4	PCIe 3.0 x8	
PCIE5	PCIe 3.0 x16	
PCIE6	PCIe 3.0 x8	
PCIE7	PCIe 3.0 x16 (Slot 7 is the slot closest to CPU)	
PCI1	5-V PCI 32 bit / 33 MHz connector	
JFP1	Front Panel connector	10 x 2 wafer, pitch 2.54mm
	2 x USB3.2 Gen1 connector	
JUSB12L1	1 x RJ-45 Ethernet (LAN1 Share IPMI Port)	
	2 x USB3.2 Gen1 connector	
JUSB34L2	1 x RJ-45 Ethernet	
LAN34	2 x RJ-45 Ethernet	
JUSB1	USB3.2 Gen1 connector	10 x 2 wafer, pitch 2.00mm
JUSB2	USB2.0 connector	5 x 2 wafer, pitch 2.54mm
JHD_AUDIO1	Audio connector	5 x 2 header, pitch 2.00mm
JSPI1	SPI connector	4 x 2 header, pitch 2.00mm
SATA1-8	8 x Serial ATA connector	
SSATA1	Second Serial ATA connector	
DIMM1-6	6 x DDR4 DIMM socket	
JBMC_UART1	For BMC debug message read	4 x 1 header, pitch 2.54mm
JCASE_OPEN1	CASE OPEN connector	2 x 1 wafer, pitch 2.50mm
ATX12V1	ATX 12V power connector	4 x 2 wafer, pitch 4.20mm
ATXPWR1	ATX power connector	12 x 2 wafer, pitch 4.20mm

Quick Reference Guide


PMBUS1	Power supply PMBus connector	5 x 1 wafer, pitch 2.54mm
INLET_SER1	Inlet Thermal Sensors connector	4 x 1 wafer, pitch 2.00mm
OUTLET_SER1	Outlet Thermal Sensors connector	4 x 1 wafer, pitch 2.00mm
HDD_SER1	HDD Backplane thermal Sensors connector	5 x 1 wafer, pitch 2.00mm
NGFF1	M.2 M-Key PCIe 3.0 x4 NVMe SSD	
CPU1	CPU1 socket	
JVGA1	VGA connector	8 x 2 wafer, pitch 2.00mm
JCPLD_JTAG1	CPLD JTAG header	5 x 2 header, pitch 2.54mm

2.4 HPM-621UA Setting Jumpers & Connectors

2.4.1 ME Firmware Recovery (JME_RCVR1)

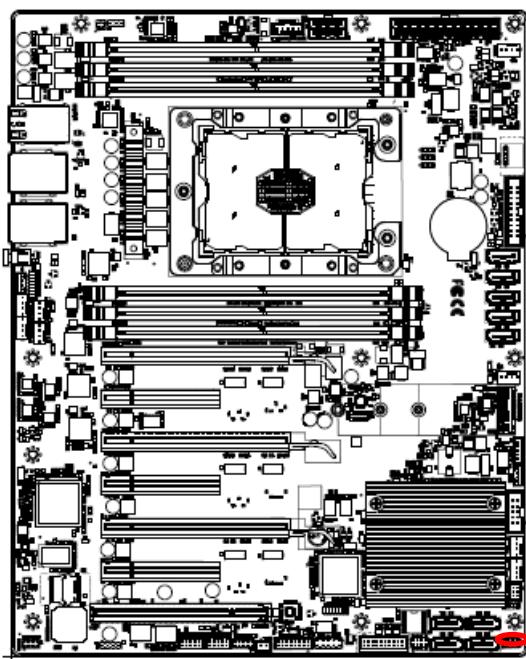

Normal*

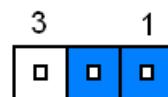


ME FORCE UPDATE




* Default


2.4.2 Flash Descriptor Security override (JME1)

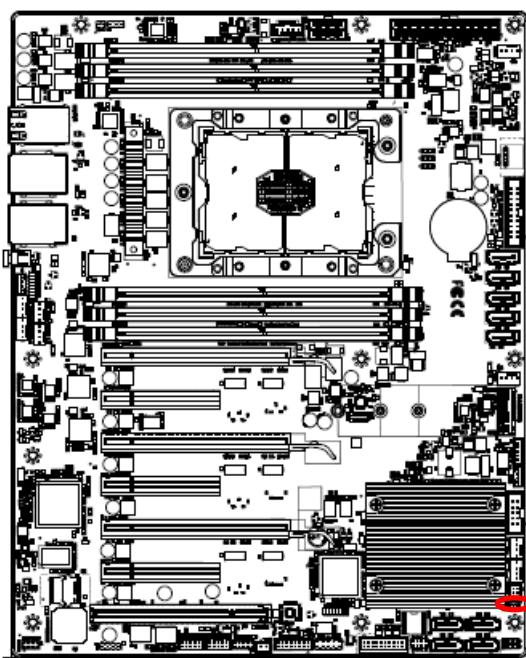

Override disable*

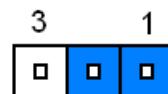


Override enable

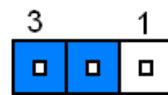


* Default

2.4.3 BMC strap setting (JBMC_DB1)

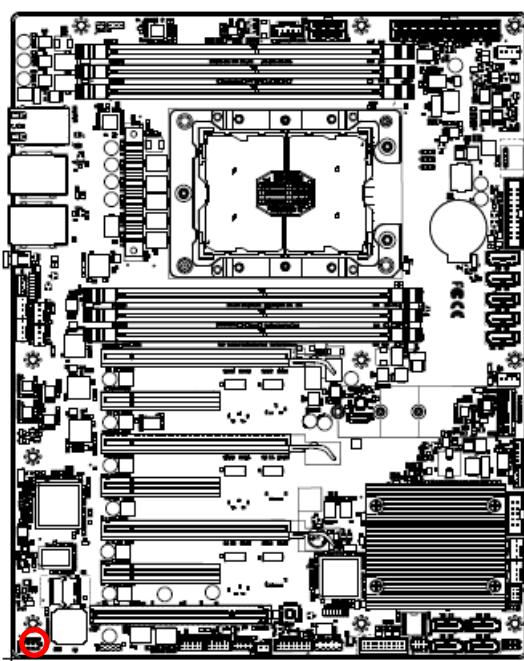


* Default


ENABLE PASS-THRU AT POWER ON*

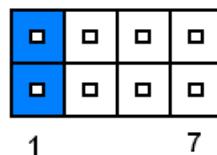


ENABLE DEDICATED VGA BIOS ROM

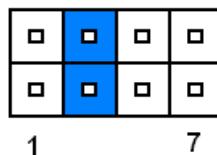


BMC SOC Level reset

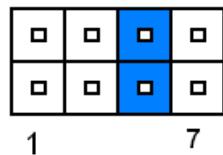

BMC Chip Level reset

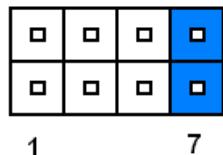


2.4.4 Clear CMOS (JCMOS1)

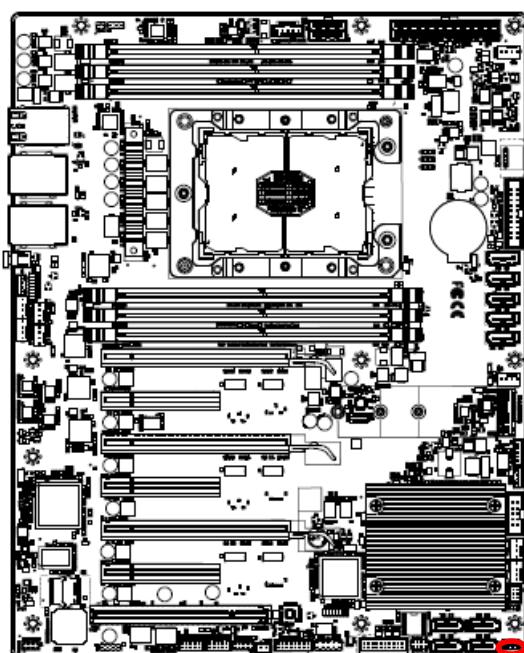

* Default


Normal RTC RESET*

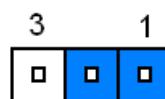


Clear RTC REGISTERS




2.4.5 CPLD strap setting for BMC Present or not (JBMC_PST1)

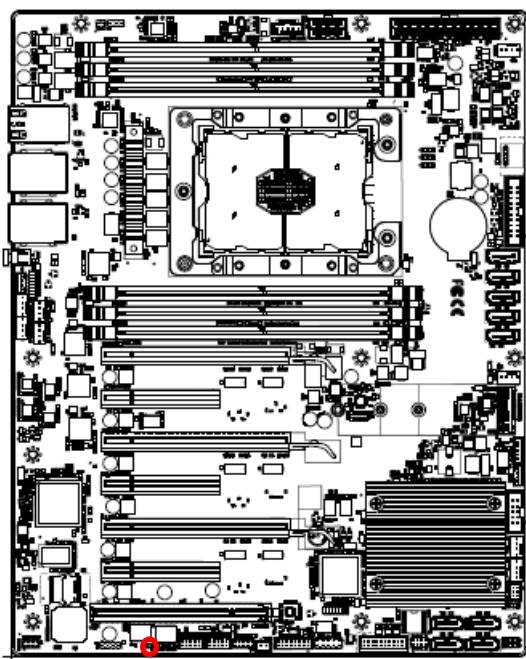

BMC Present*

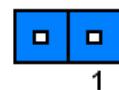


Non BMC

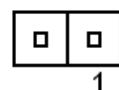


* Default


2.4.6 CPLD JTAG setting (JCPLD_JTAG_EN1)

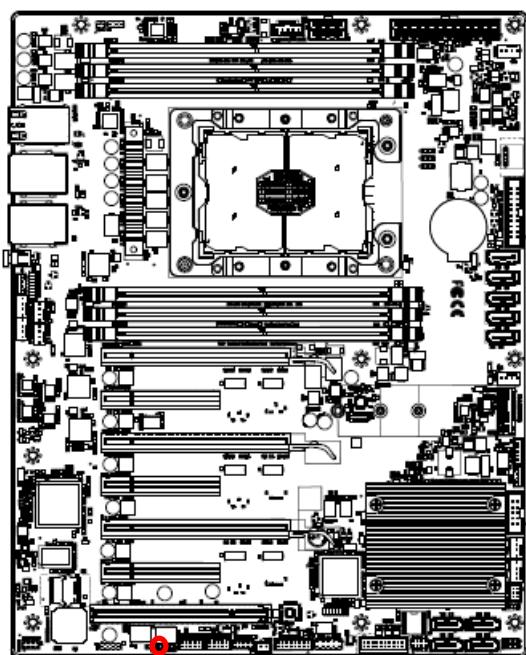

CPLD JTAG as JTAG*

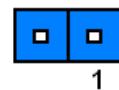


CPLD JTAG as GPIO

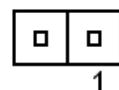


* Default


2.4.7 CPLD DEBUG header (JCPLD_DEBUG1)

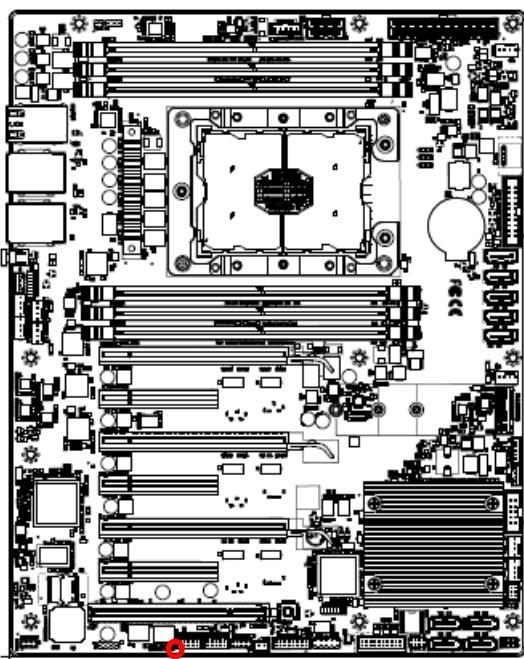

Force Power on


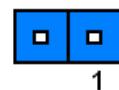


Normal mode*


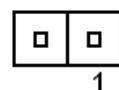


* Default



2.4.8 Audio connector (JHD-AUDIO1)

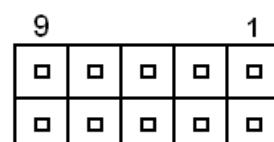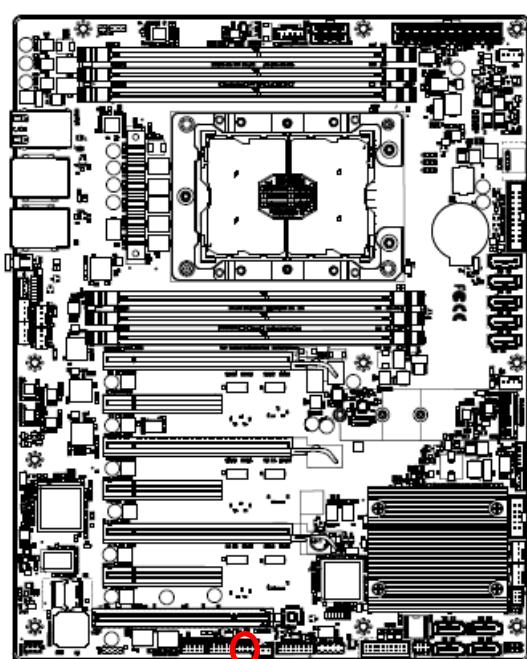

Signal	PIN	PIN	Signal
+3.3V	1	2	GND
HDA_SYNC	3	4	HDA_BCLK
HDA_SDO	5	6	HDA_SDIO
HDA_SD1	7	8	HDA_RESET#
+5VSB	9	10	GND

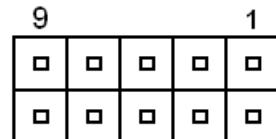
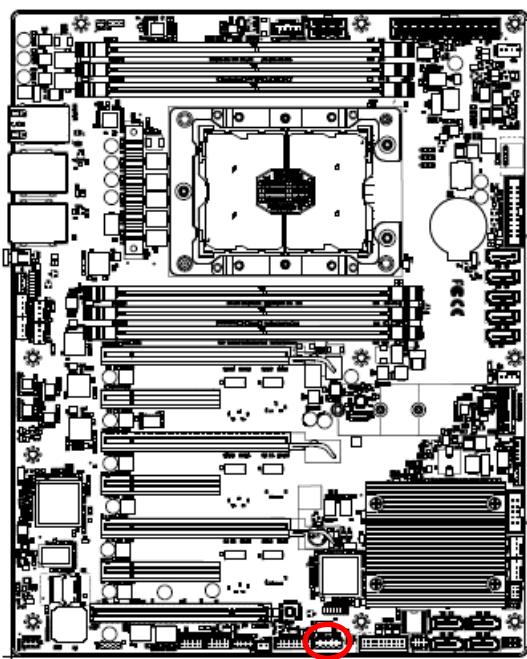
2.4.9 CPLD JTAG header (JCPLD_JTAG1)

Signal	PIN	PIN	Signal
JTAG_TCK	1	2	JTAG_Present#
JTAG_TDO	3	4	+3.3VSB
JTAG_TMS	5	6	NC
NC	7	8	NC
JTAG_TDI	9	10	GND

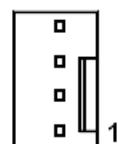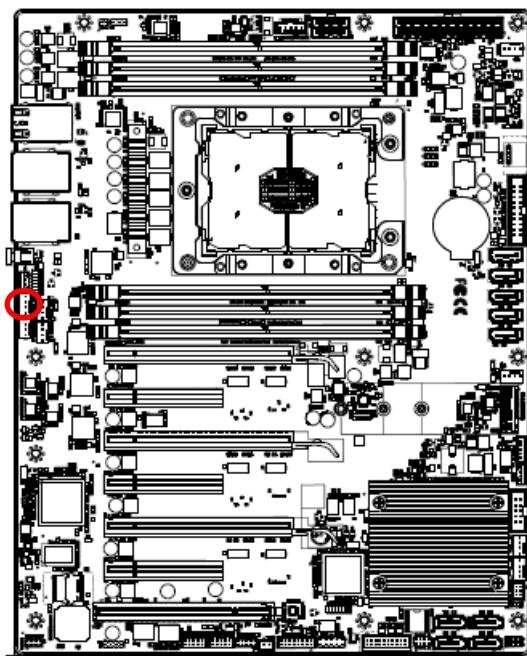2.4.10 System fan connector 1 (SYS_FAN1)



Signal	PIN
SYS_PWM1	4
FAN_TACH2	3
+12V	2
GND	1

2.4.11 System fan connector 2 (SYS_FAN2)

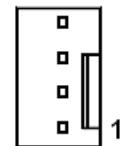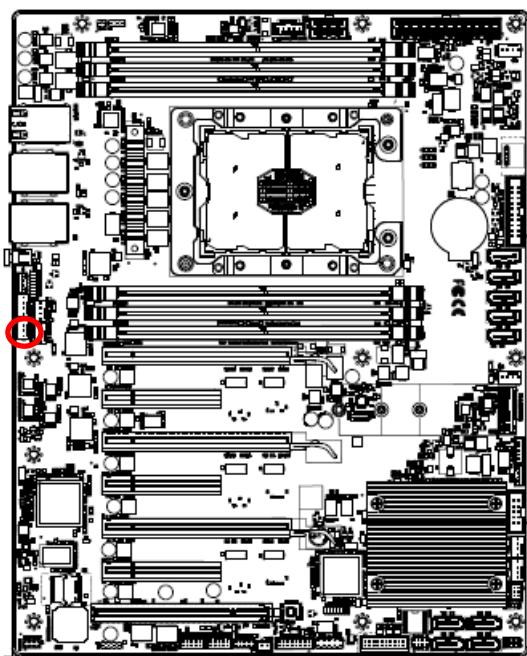


Signal	PIN
SYS_PWM2	4
FAN_TACH3	3
+12V	2
GND	1

2.4.12 System fan connector 3 (SYS_FAN3)

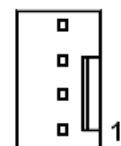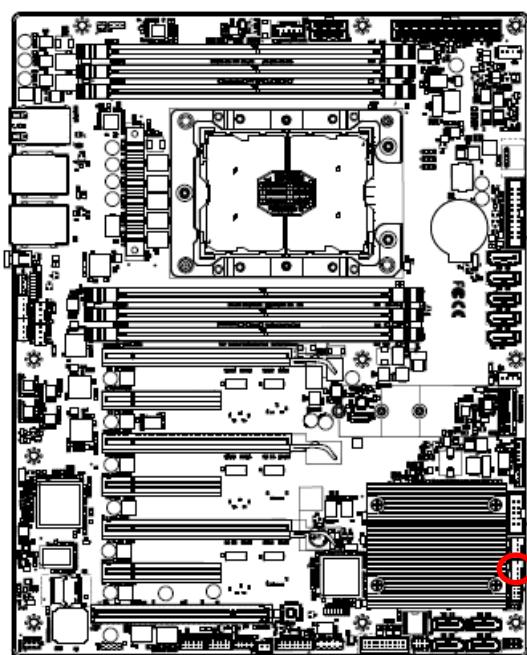



Signal	PIN
SYS_PWM3	4
FAN_TACH4	3
+12V	2
GND	1

2.4.13 System fan connector 4 (SYS_FAN4)

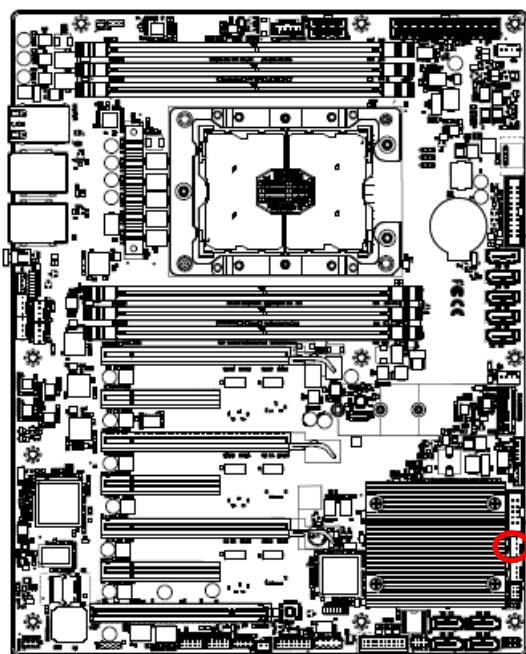



Signal	PIN
SYS_PWM4	4
FAN_TACH6	3
+12V	2
GND	1

2.4.14 System fan connector 5 (SYS_FAN5)

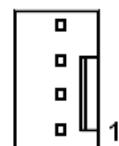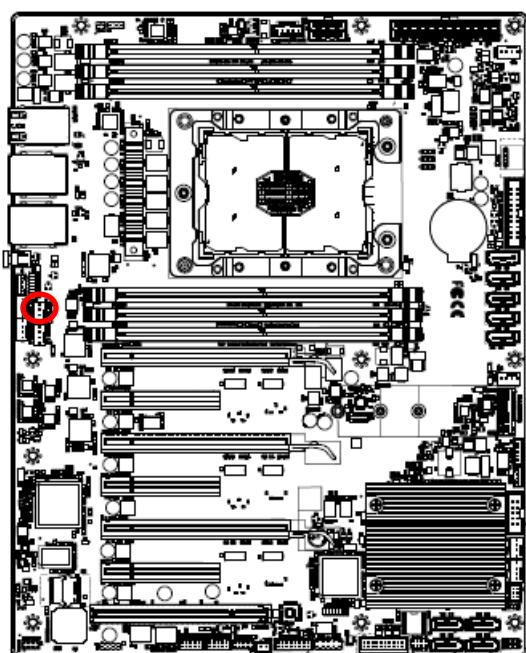



Signal	PIN
SYS_PWM5	4
FAN_TACH1	3
+12V	2
GND	1

2.4.15 System fan connector 6 (SYS_FAN6)

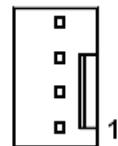
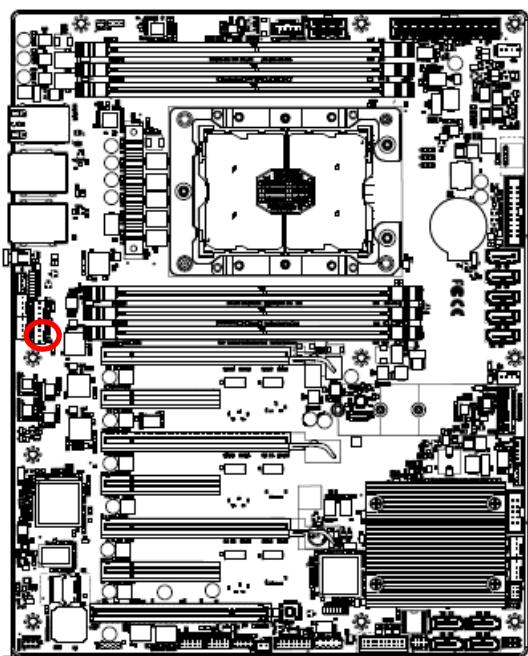


Signal	PIN
SYS_PWM6	4
FAN_TACH7	3
+12V	2
GND	1



2.4.16 CPU fan connector (CPU1_FAN1)

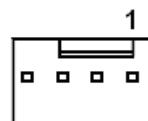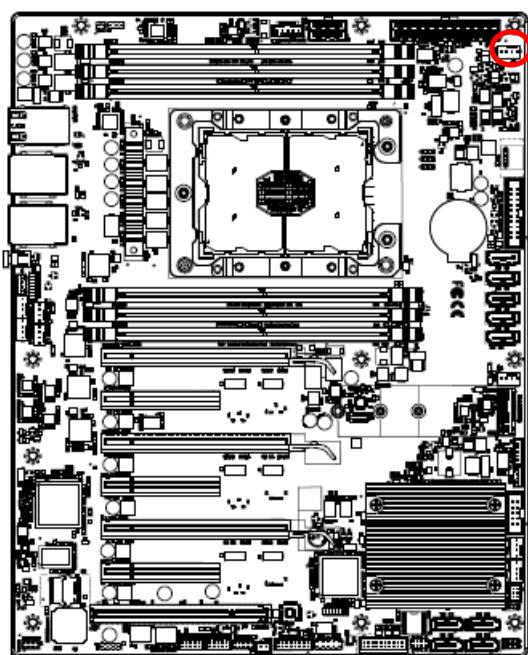

Signal	PIN
GND	1
+12V	2
FAN_TACH0	3
CPU0_PWM0	4

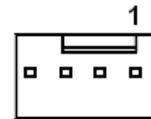
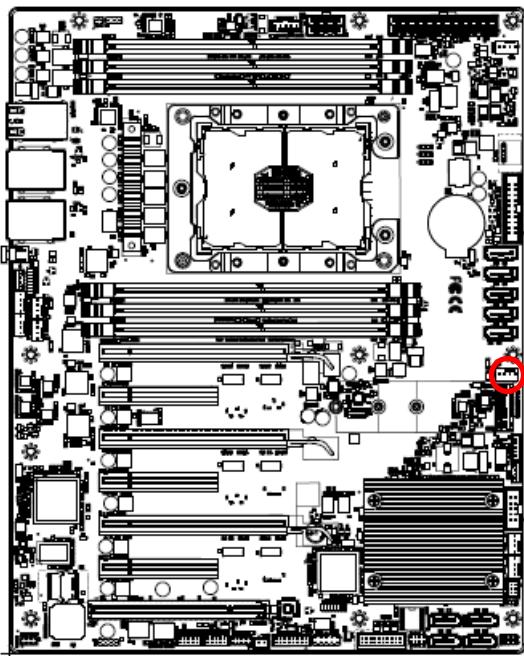
2.4.17 HDD fan connector (HDD_FAN1)

Signal	PIN
GND	1
+12V	2
FAN_TACH5	3
HDD_PWM1	4

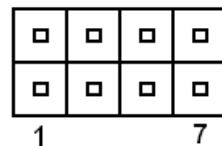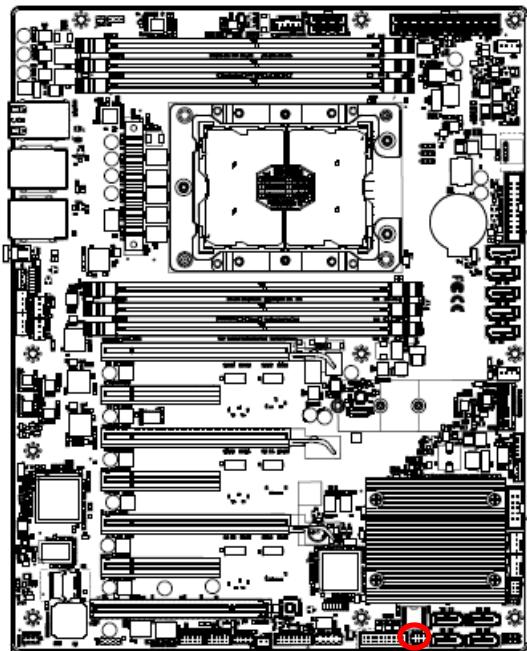2.4.18 SPI connector (JSPI1)



Signal	PIN	PIN	Signal
+3.3VSB	1	2	GND
SPI_CS#	3	4	SPI_CLK
SPI_MISO	5	6	SPI_MOSI
SPI_IO3	7	8	SPI_IO2

2.4.19 Serial port 1 connector (JCOM1)

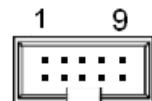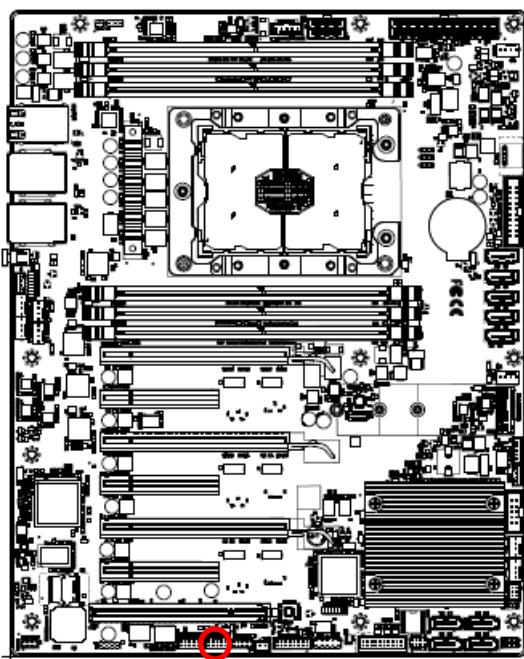



Signal	PIN	PIN	Signal
COM_DCD#1	1	2	COM_RXD1
COM_TXD1	3	4	COM_DTR#1
GND	5	6	COM_DSR#1
COM_RTS#1	7	8	COM_CTS#1
COM_RI#1	9	10	NC

2.4.20 Serial port 2 connector (JCOM2)

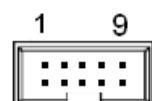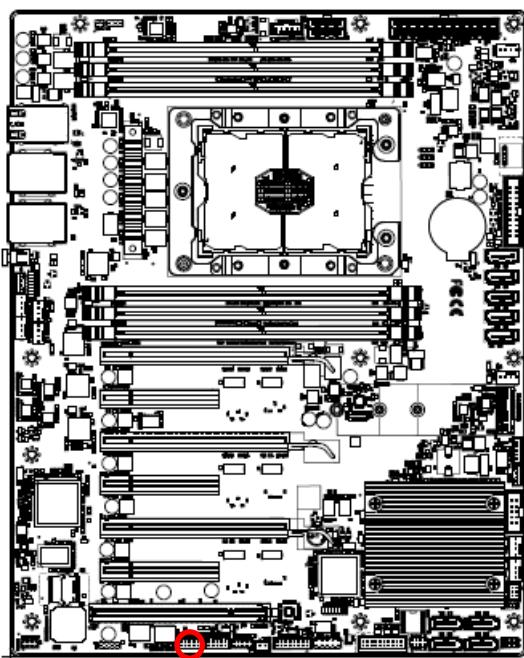



Signal	PIN	PIN	Signal
COM_DCD#2	1	2	COM_RXD2
COM_TXD2	3	4	COM_DTR#2
GND	5	6	COM_DSR#2
COM_RTS#2	7	8	COM_CTS#2
COM_RI#2	9	10	NC

2.4.21 Serial General Purpose I/O connector (JGPIO2)

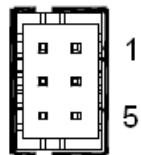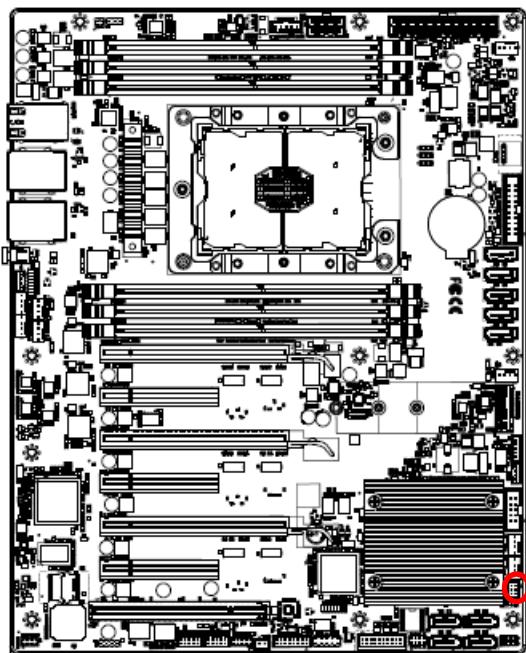



Signal	PIN	PIN	Signal
GND	2	1	GND
SGPIO_SATA_DATA0	4	3	SGPIO_SATA_LOAD
SGPIO_SATA_DATA1	6	5	SGPIO_SATA_CLOCK

2.4.22 ATX 12V power connector (ATX12V1)

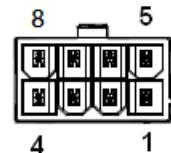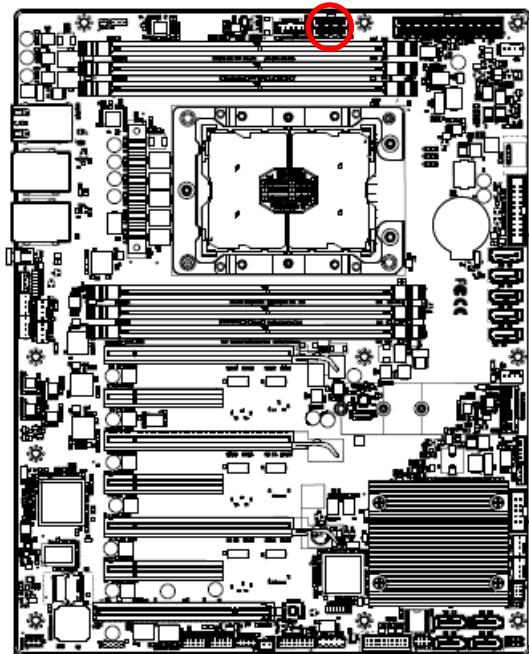



Signal	PIN	PIN	Signal
GND	1	5	+12V
GND	2	6	+12V
GND	3	7	+12V
GND	4	8	+12V

2.4.23 ATX power connector (ATXPWR1)

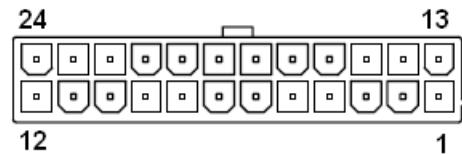
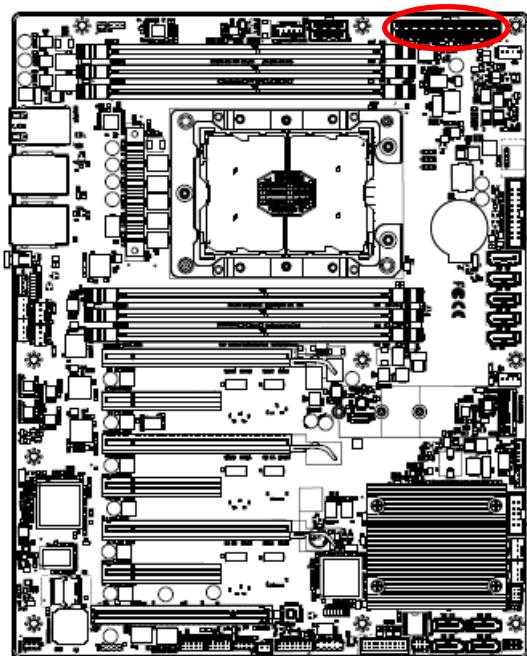


Signal	PIN	PIN	Signal
+3.3V	1	13	+3.3V
+3.3V	2	14	-12V
GND	3	15	GND
+5V	4	16	PSON
GND	5	17	GND
+5V	6	18	GND
GND	7	19	GND
PWRGOOD	8	20	NC
+V5SB	9	21	+5V
+12V	10	22	+5V
+12V	11	23	+5V
+3.3V	12	24	GND



2.4.24 Power supply PMBus connector (PMBUS1)

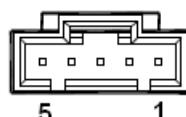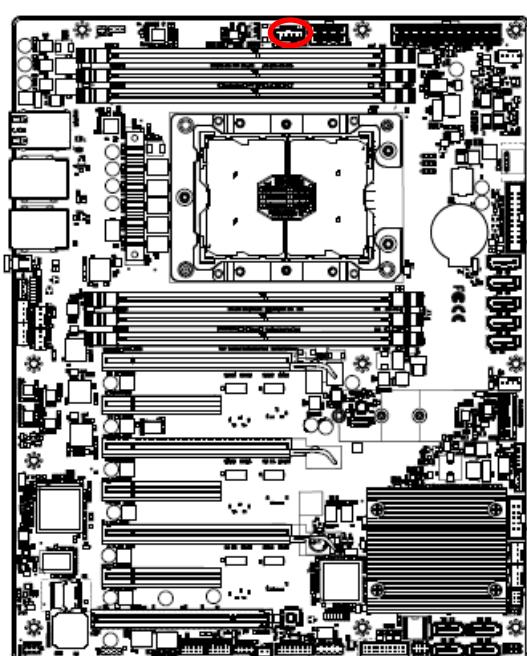

Signal	PIN
SMB_3V3SB_CLK	1
SMB_3V3SB_DATA	2
SMB_3V3SB_ALERT#	3
GND	4
NC	5

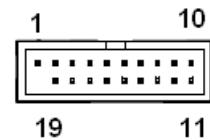
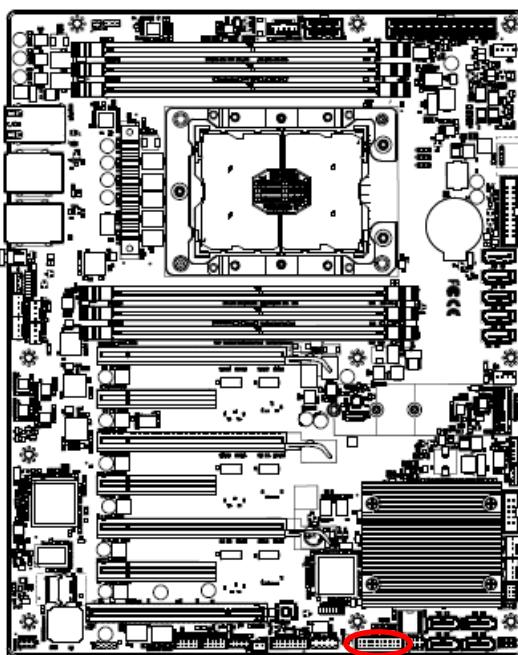
2.4.25 USB3.2 Gen1 connector (JUSB1)

Signal	PIN	PIN	Signal
		1	+5VSB
+5VSB	19	2	USB3_RN5
USB3_RN6	18	3	USB3_RP5
USB3_RP6	17	4	GND
GND	16	5	USB3_TN5
USB3_TN6	15	6	USB3_TP5
USB3_TP6	14	7	GND
GND	13	8	USB_PN5
USB_PN6	12	9	USB_PP5
USB_PP6	11	10	USB_OC#

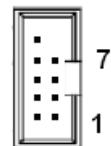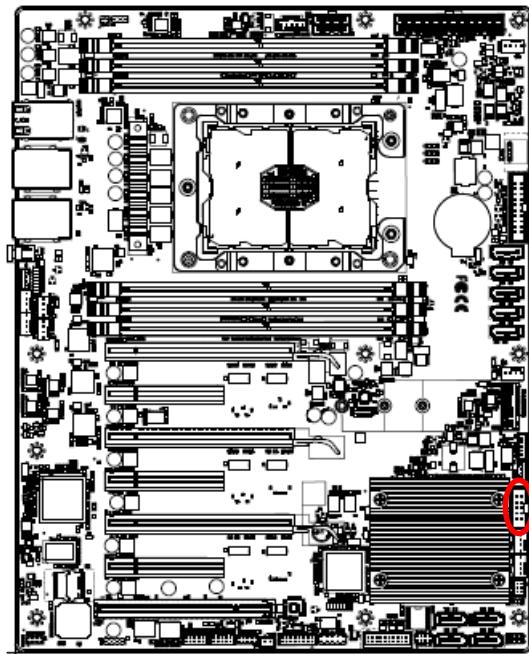2.4.26 USB2.0 connector (JUSB2)



Signal	PIN	PIN	Signal
NC	10		
GND	8	7	GND
USB_PP8	6	5	USB_PP7
USB_PN8	4	3	USB_PN7
+5VSB	2	1	+5VSB

2.4.27 Front Panel connector (JFP1)

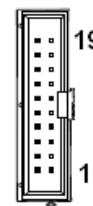
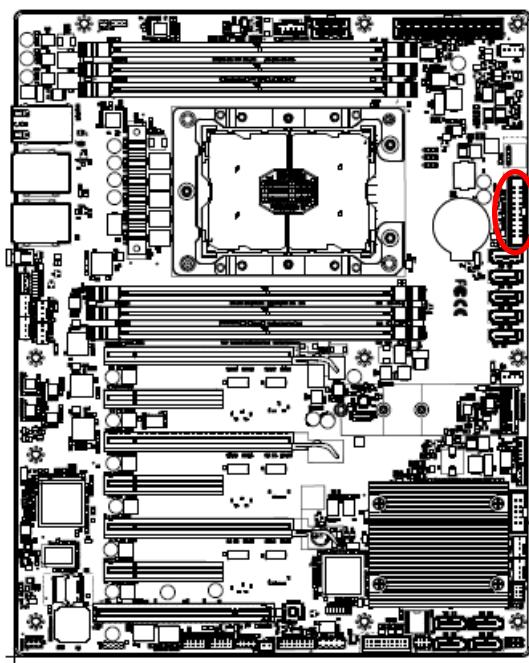


Signal	PIN	PIN	Signal
LAN_LED_ACT#	20	19	GND
+3.3VSB	18	17	FP_UID_BTN_N_R
GND	16	15	FRONT_UID_LED_P
SBPWRLED_P	14	13	FRONT_UID_LED_N
LAN1_LED_ACT_n	12	11	STATUS_LED_N
LAN1_FRONT_LED_ACT_p	10	9	STATUS_LED_P
GND	8	7	GND
FP_PWR_BTN_N_R	6	5	FP_RST_BTN_N
PWRLED_N	4	3	HDD_LED_N
+3.3VSB	2	1	HDD_LED_P



2.4.28 Inlet Thermal Sensors connector (INLET_SER1)

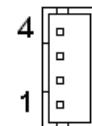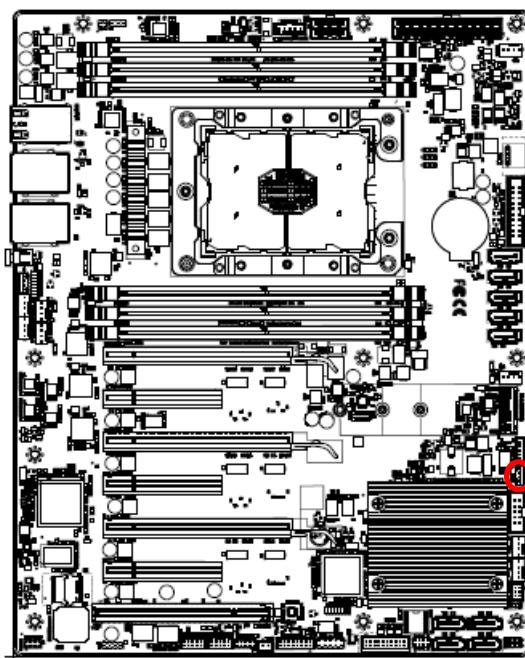

Signal	PIN
GND	4
SMB1_TEMPSENSOR_STBY_LVC3_SCL	3
SMB1_TEMPSENSOR_STBY_LVC3_SDA	2
+3.3VSB	1

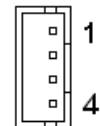
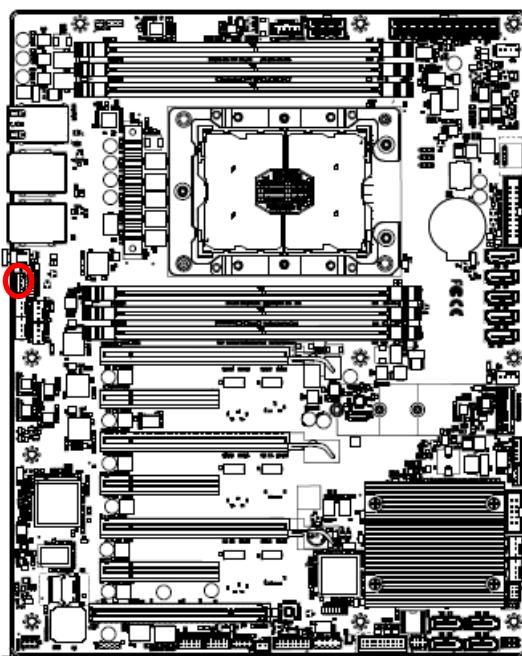
2.4.29 Outlet Thermal Sensors connector (OUTLET_SER1)

Signal	PIN
+3.3VSB	1
SMB_TEMPSENSOR_STBY_LVC3_SDA	2
SMB_TEMPSENSOR_STBY_LVC3_SCL	3
GND	4

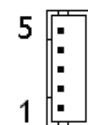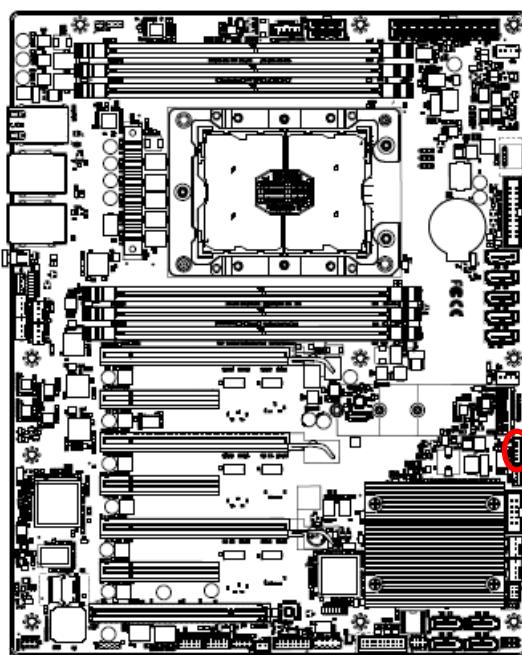2.4.30 HDD Backplane thermal Sensors connector (HDD_SER1)



Signal	PIN
SSD_LED_N	5
GND	4
SMB2_TEMPSENSOR_STBY_LVC3_SCL	3
SMB2_TEMPSENSOR_STBY_LVC3_SDA	2
+3.3VSB	1

2.4.31 VGA connector (JVGA1)

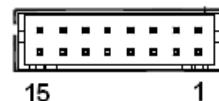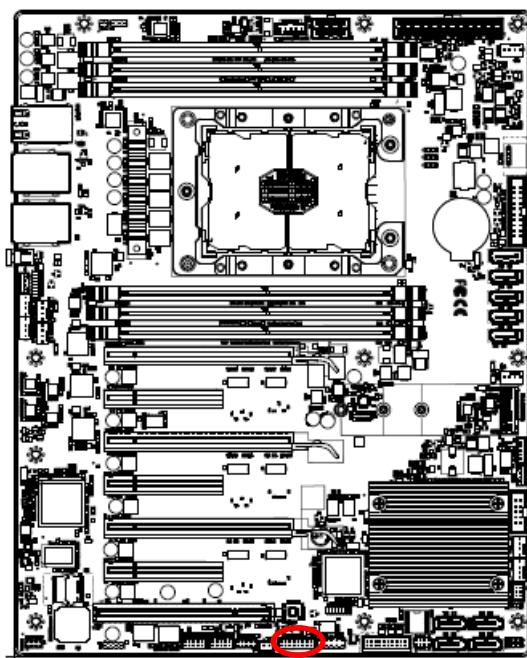


Signal	PIN	PIN	Signal
CRT_z_RED	2	1	+5V
CRT_z_GREEN	4	3	GND
CRT_z_BLUE	6	5	NC
NC	8	7	CRT_DDC_z_DATA
GND	10	9	CRT_z_HSYNC
GND	12	11	CRT_z_VSYNC
GND	14	13	CRT_DDC_z_CLK
GND	16	15	GND

2.4.32 For BMC debug message read (JBMC_UART1)

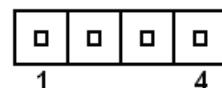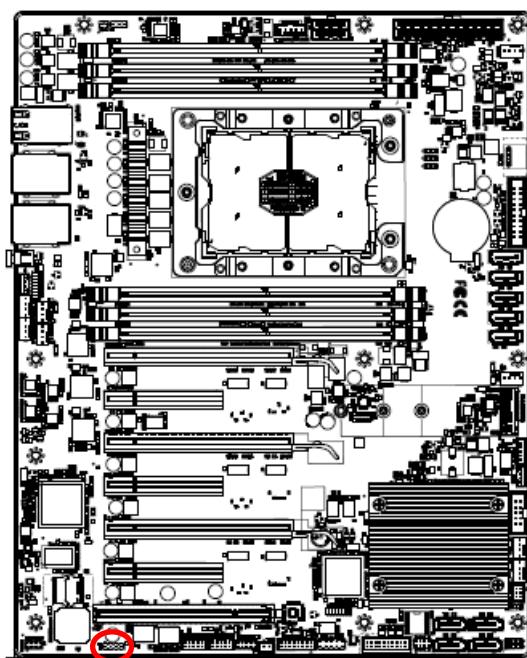

Signal	PIN
UART5_TX	1
UART5_RX	2
GND	3
+3.3VSB	4

2.4.33 CASE OPEN connector (JCASE_OPEN1)

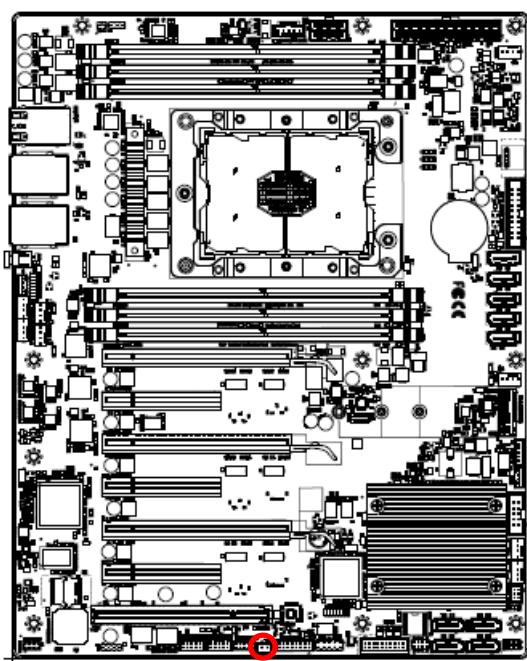

Signal	PIN
FP_CHASSIS_INTRUSION	1
GND	2

3.BIOS Setup

3.1 Introduction

The BIOS setup program allows users to modify the basic system configuration. In this following chapter will describe how to access the BIOS setup program and the configuration options that may be changed.

3.2 Starting Setup

AMI BIOS™ is immediately activated when you first power on the computer. The BIOS reads the system information contained in the NVRAM and begins the process of checking out the system and configuring it. When it finishes, the BIOS will seek an operating system on one of the disks and then launch and turn control over to the operating system.

While the BIOS is in control, the Setup program can be activated in one of two ways:

By pressing <ESC> or immediately after switching the system on, or

By pressing the < ESC> or key when the following message appears briefly at the left-top of the screen during the POST (Power On Self Test).

Press <ESC> or to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system to try again by turning it OFF then ON or pressing the "RESET" button on the system case. You may also restart by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

3.3 Using Setup

In general, you use the arrow keys to highlight items, press <Enter> to select, use the PageUp and PageDown keys to change entries, press <F1> for help and press <Esc> to quit. The following table provides more detail about how to navigate in the Setup program using the keyboard.

Button	Description
↑	Move to previous item
↓	Move to next item
←	Move to the item in the left hand
→	Move to the item in the right hand
Esc key	Main Menu -- Quit and not save changes into NVRAM Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
+ key	Increase the numeric value or make changes
- key	Decrease the numeric value or make changes
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Previous Values
F3 key	Optimized defaults
F4 key	Save & Exit Setup

- **Navigating Through The Menu Bar**

Use the left and right arrow keys to choose the menu you want to be in.



Note: Some of the navigation keys differ from one screen to another.

- **To Display a Sub Menu**

Use the arrow keys to move the cursor to the sub menu you want. Then press <Enter>. A “➤” pointer marks all sub menus.

3.4 Getting Help

Press F1 to pop up a small help window that describes the appropriate keys to use and the possible selections for the highlighted item. To exit the Help Window press <Esc> or the <Enter> key again.

3.5 In Case of Problems

If, after making and saving system changes with Setup, you discover that your computer no longer is able to boot, the AMI BIOS supports an override to the NVRAM settings which resets your system to its defaults.



The best advice is to only alter settings which you thoroughly understand. To this end, we strongly recommend that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both BIOS Vendor and your systems manufacturer to provide the absolute maximum performance and reliability. Even a seemingly small change to the chipset setup has the potential for causing you to use the override.

3.6 BIOS setup

Once you enter the Aptio Setup Utility, the Main Menu will appear on the screen. The Main Menu allows you to select from several setup functions and exit choices. Use the arrow keys to select among the items and press <Enter> to accept and enter the sub-menu.

3.6.1 Main Menu

This section allows you to record some basic hardware configurations in your computer and set the system clock.

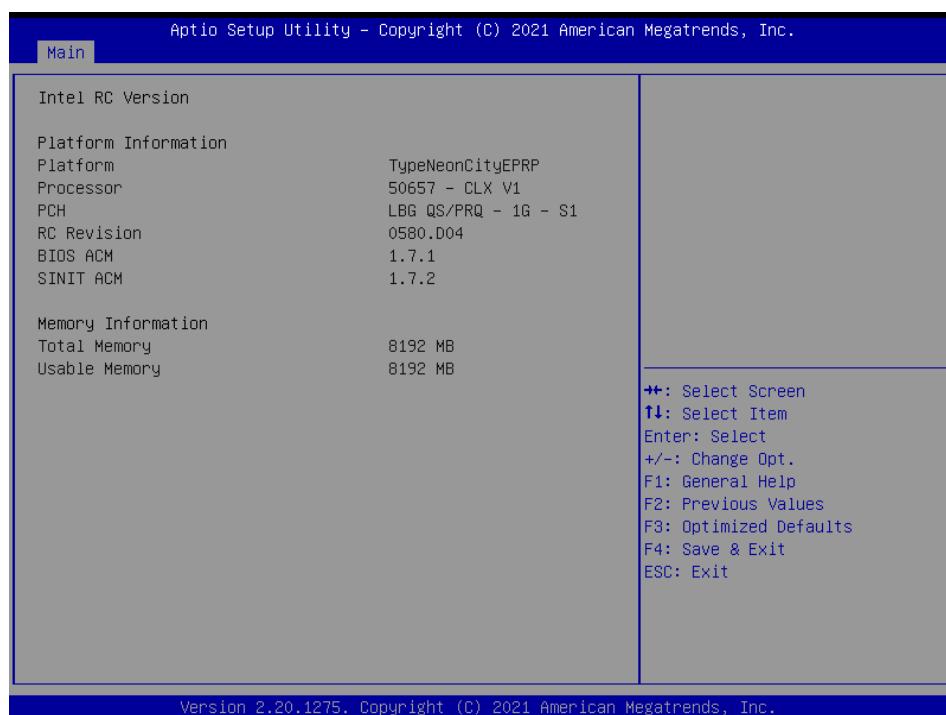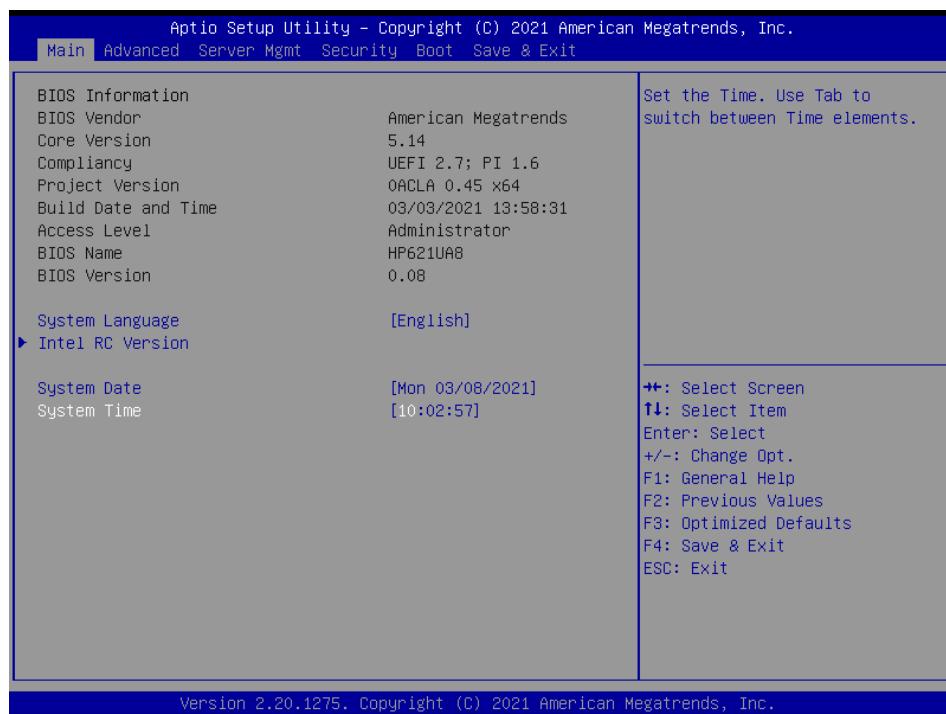

3.6.1.1 System Language

This option allows choosing the system default language.

3.6.1.2 System Date

Use the system date option to set the system date. Manually enter the day, month and year.

3.6.1.3 System Time

Use the system time option to set the system time. Manually enter the hours, minutes and seconds.




Note: The BIOS setup screens shown in this chapter are for reference purposes only, and may not exactly match what you see on your screen.


Visit the Avalue website (www.alue.com.tw) to download the latest product and BIOS information.

3.6.2 Advanced Menu

This section allows you to configure your CPU and other system devices for basic operation through the following sub-menus.

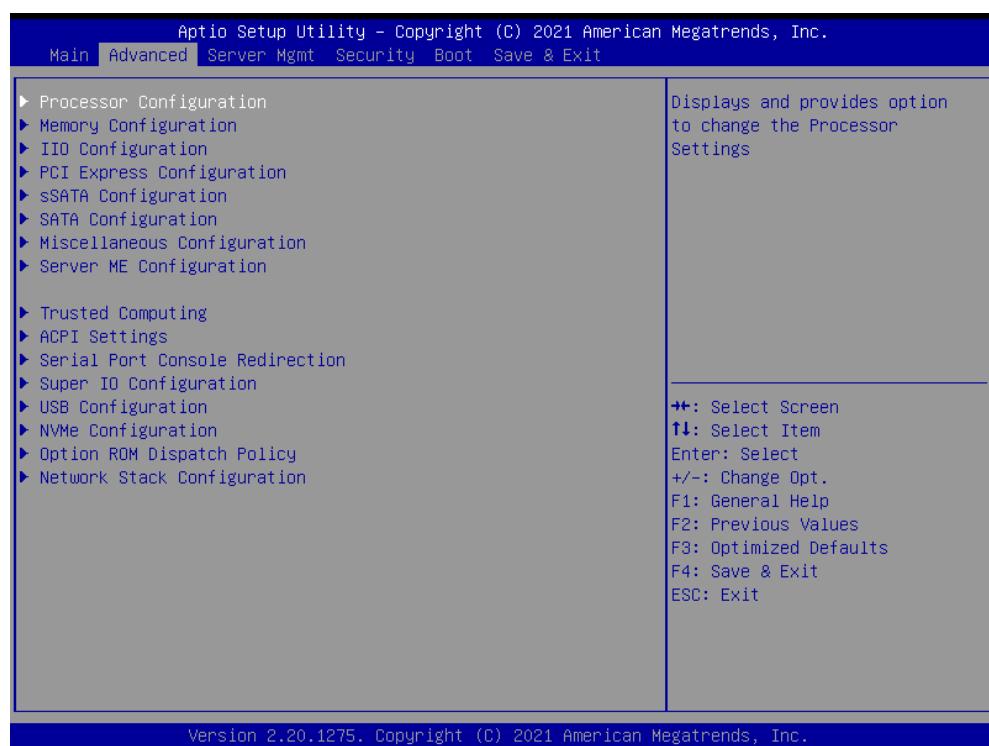


3.6.2.1 Processor Configuration

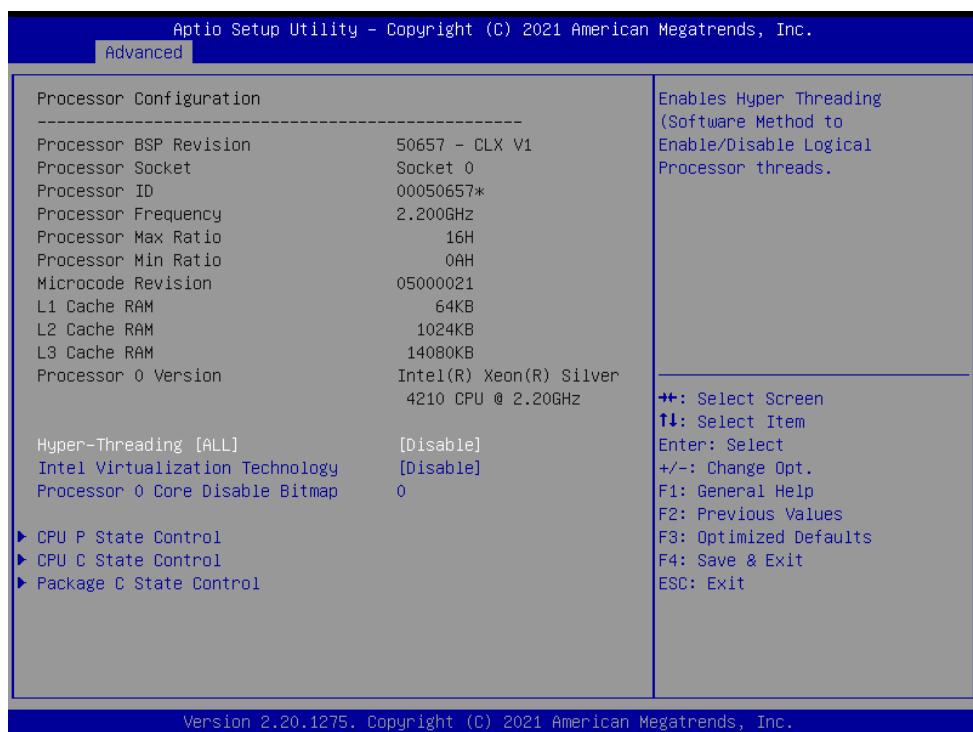

Item	Options	Description
Hyper-Threading (ALL)	Disable[Default] Enable	Enables Hyper Threading (Software Method to Enable/Disable Logical Processor threads).
Intel Virtualization Technology	Disable[Default] Enable	Enables the Vanderpool Technology, takes effect after reboot.
Processor 0 Core Disable Bitmap	0	0: Enable all cores. 3fff: Disable all cores.

3.6.2.1.1 CPU P State Control

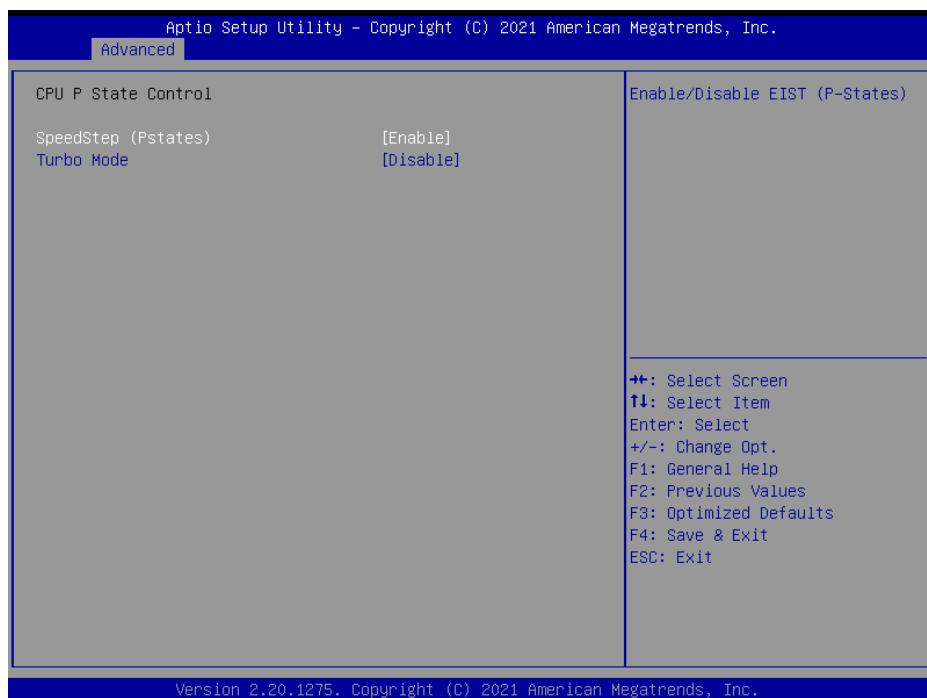


Item	Option	Description
SpeedStep (Pstates)	Enable[Default], Disable	Enable/Disable EIST (P-States)
Turbo Mode	Enable Disable[Default]	Enable/Disable processor Turbo Mode (requires EMTTM enabled too).

3.6.2.1.2 CPU C State Control




Item	Option	Description
Autonomous Core C-State	Enable Disable[Default],	Autonomous Core C-State Control.
CPU C6 report	Disable Enable Auto[Default]	Enable/Disable CPU C6(ACPI C3) report to OS.
Enhanced Halt State (C1E)	Disable Enable[Default]	Core C1E auto promotion Control. Takes effect after reboot.

3.6.2.1.3 Package C State Control

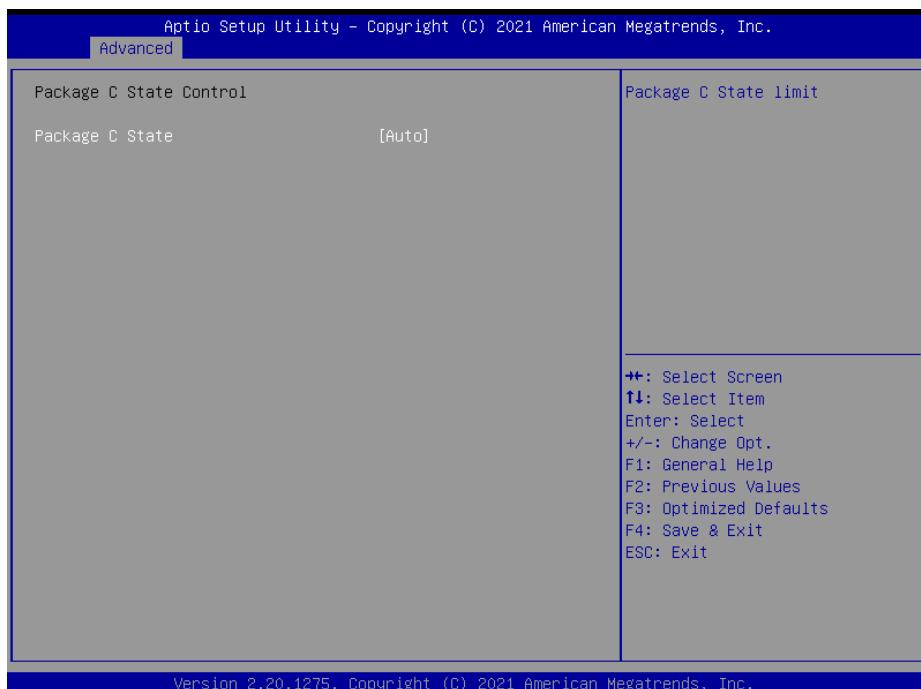


Item	Option	Description
Package C State	C0/C1 state C2 state C6(non Retention)state C6(Retention)state No Limit Auto[Default],	Package C State limit.

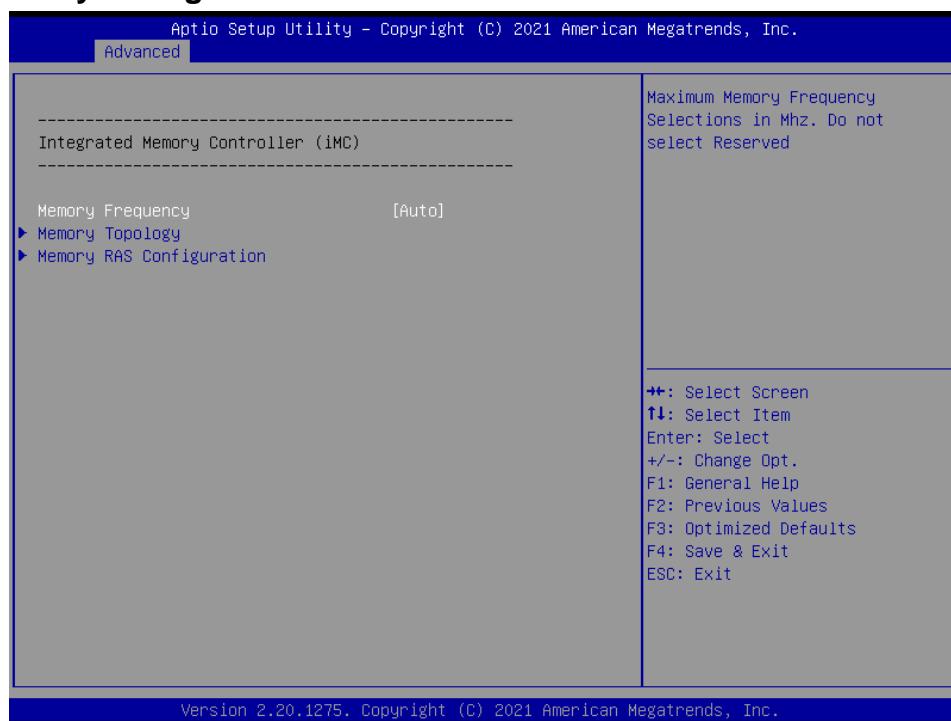
3.6.2.2 Memory Configuration

Item	Option	Description
Memory Frequency	Auto[Default]/800/1000/1066/1200 /1333/1400/1600/1800/1866 /2000/2133/2200/2400/2600/2666 /2800-OvrClk/2933/3000-OvrClk /3200-OvrClk/3400-OvrClk/3466-OvrClk /3600-OvrClk/3733-OvrClk/3800-OvrClk /4000-OvrClk/4200-OvrClk/4266-OvrClk /4400-OvrClk	Maximum Memory Frequency Selections in Mhz. Do not select Reserved.

3.6.2.2.1 Memory Topology

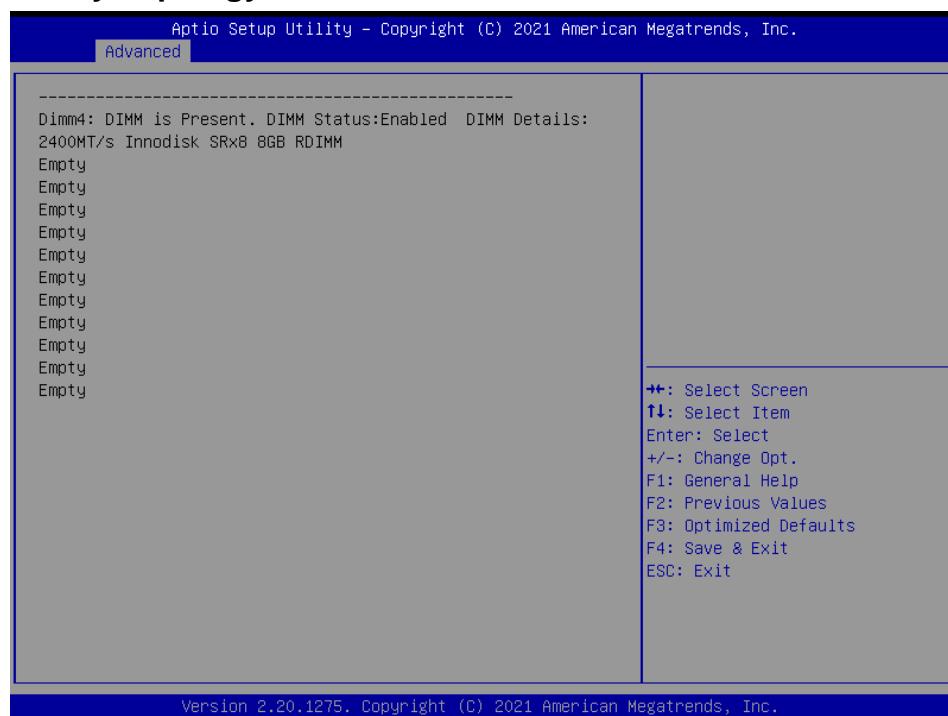


3.6.2.2.2 Memory RAS Configuration

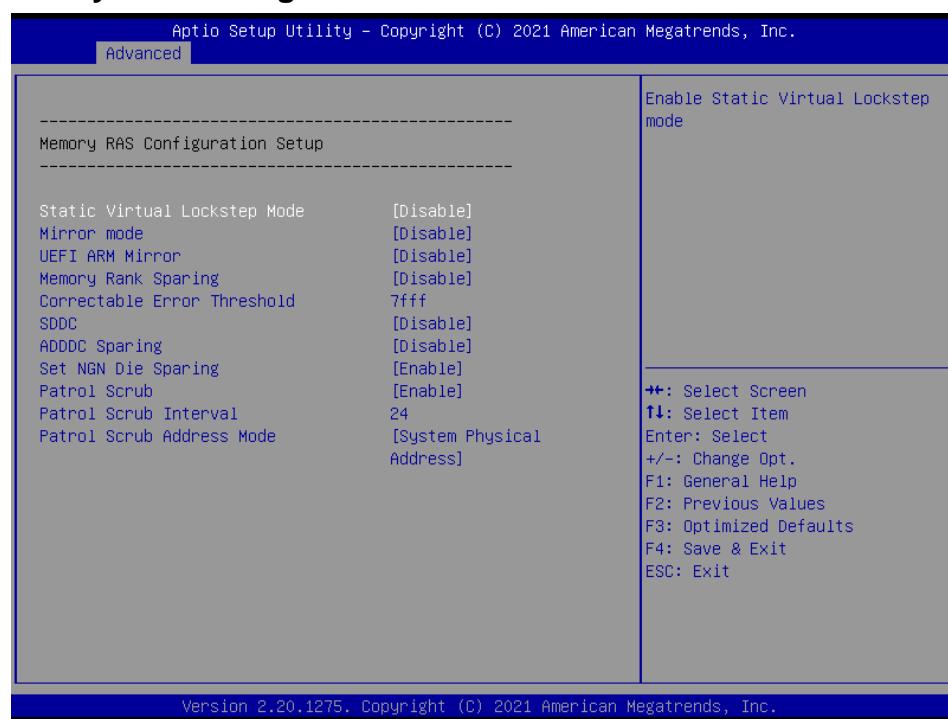


Item	Option	Description
Static Virtual Lockstep Mode	Disable[Default] Enable	Enable Static Virtual Lockstep mode.
Mirror mode	Disable[Default] Enable Mirror Mode(1LM)	Mirror Mode will set entire 1LM memory in system to be mirrored, consequently reducing the memory

		capacity by half. Mirror Enable will disable XPT Prefetch.
UEFI ARM Mirror	Disable[Default] Enable	Imitate behaviour of UEFI based Address Range Mirror with setup option.
Memory Rank Sparing	Disable[Default] Enable	Enable/Disable Memory Rank Sparing. This feature is only available on 1LM.
Correctable Error Threshold	32767	Correctable Error Threshold (0x01 – 0x7fff) used for sparing, tagging, and leaky bucket.
SDDC	Disable[Default] Enable	Enable/Disable SDDC. Not supported when AEP dim present!
ADDDC Sparing	Disable[Default] Enable	Enable/Disable ADDDC Sparing.
Set NGN Die Sparing	Disable Enable[Default]	Enable/Disable NGN Die Sparing.
Patrol Scrub	Disable Enable[Default]	Enable/Disable Patrol Scrub.
Patrol Scrub Interval	1-24[Default]	Selects the number of hours (1-24) required to complete full scrub. A value of zero means auto!
Patrol Scrub Address Mode	Reverse Address System Physical Address[Default]	Selects the address mode between System Physical Address (or) Reverse Address.

3.6.2.3 IIO Configuration

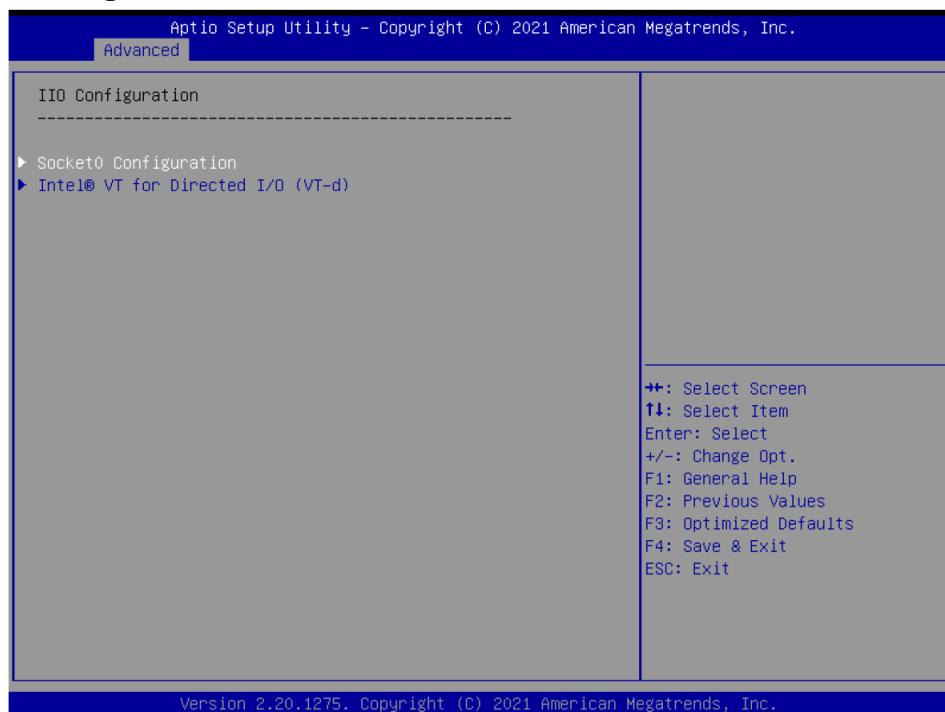

3.6.2.3.1 Socket0 Configuration

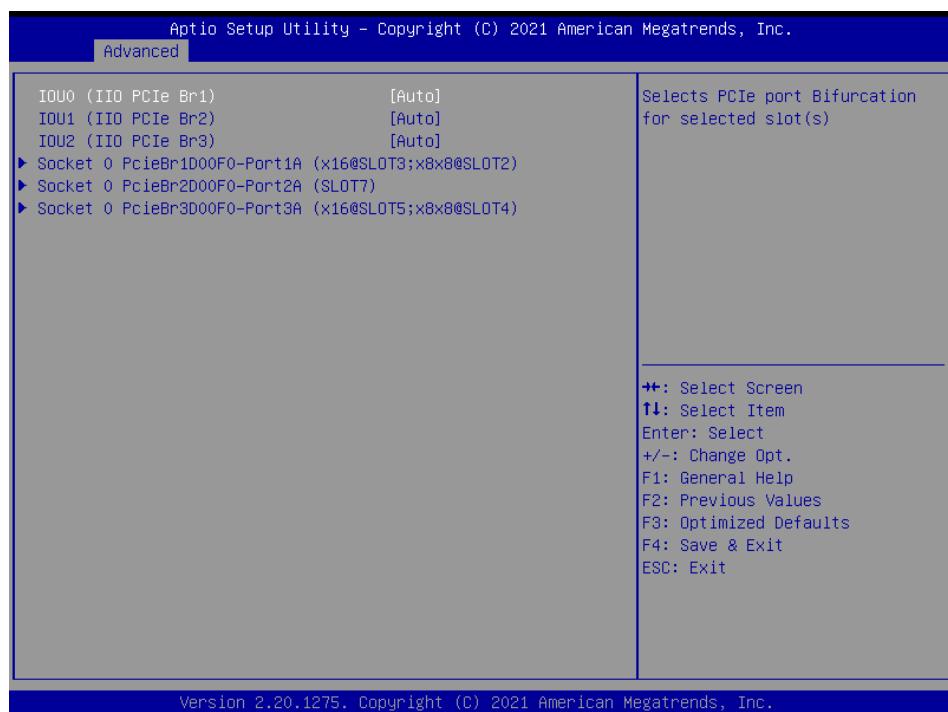


Item	Options	Description
IOU0 (IIO PCIe Br1)	x8x8 x16 Auto[Default]	Select PCIe port Bifurcation for selected slot(s).
IOU1 (IIO PCIe Br2)	x8x8 x16 Auto[Default]	Select PCIe port Bifurcation for selected slot(s).
IOU2 (IIO PCIe Br3)	x8x8 x16 Auto[Default]	Select PCIe port Bifurcation for selected slot(s).

3.6.2.3.2 Intel® VT for Directed I/O (VT-d)




Item	Options	Description
Intel® VT for Directed I/O (VT-d)	Enable[Default] Disable	Enable/Disable Intel® Virtualization Technology for Directed I/O (VT-d) by reporting the I/O device assignment to VMM through DMAR ACPI Tables.

3.6.2.4 PCI Express Configuration

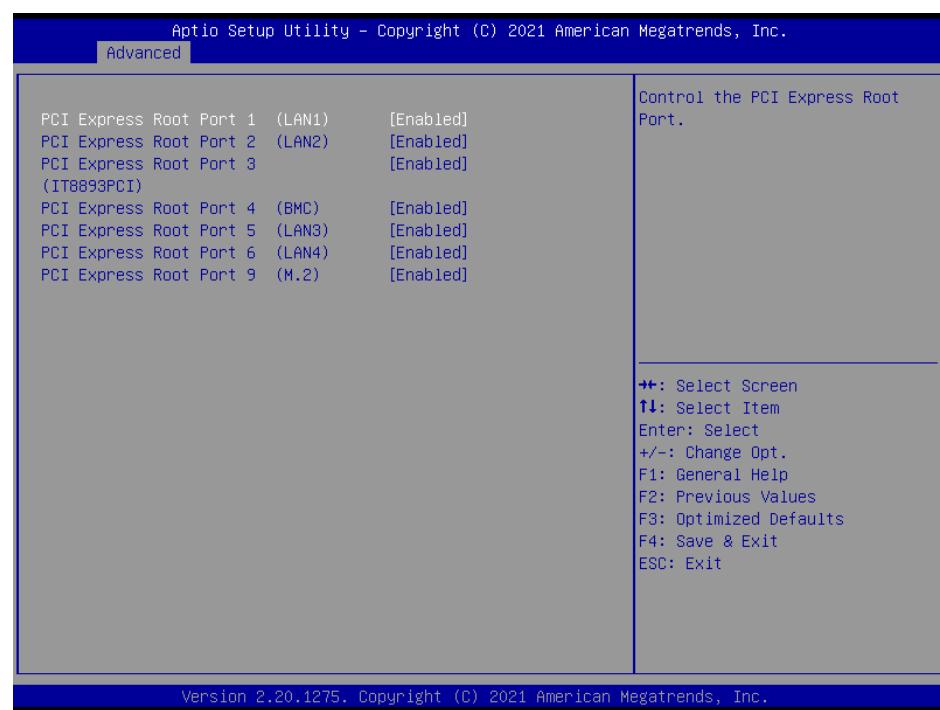


Item	Options	Description
PCI Express Root Port 1(LAN1)	Disabled Enabled[Default]	Control the PCI Express Root Port.
PCI Express Root Port 2(LAN2)	Disabled Enabled[Default]	Control the PCI Express Root Port.
PCI Express Root Port 3(IT8893PCI)	Disabled Enabled[Default]	Control the PCI Express Root Port.
PCI Express Root Port 4(BMC)	Disabled Enabled[Default]	Control the PCI Express Root Port.
PCI Express Root Port 5(LAN3)	Disabled Enabled[Default]	Control the PCI Express Root Port.
PCI Express Root Port 6(LAN4)	Disabled Enabled[Default]	Control the PCI Express Root Port.
PCI Express Root Port 9(M.2)	Disabled Enabled[Default]	Control the PCI Express Root Port.

3.6.2.5 sSATA Configuration

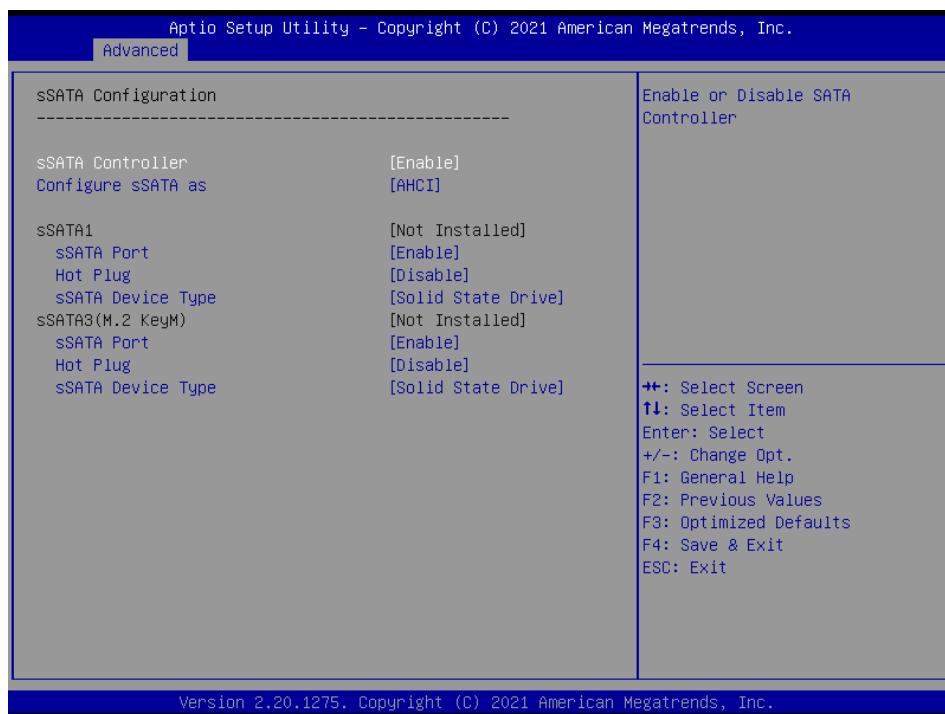


Item	Options	Description
sSATA Controller	Enable[Default] Disable	Enable or Disable SATA Controller.
Configure sSATA as	AHCI[Default] RAID	This will configure sSATA as RAID or AHCI.
sSATA Port	Disable Enable[Default]	Enable or Disable SATA Port.
Hot Plug	Disable[Default] Enable	Designates this port as Hot Pluggable.
sSATA Device Type	Hard Disk Drive Solid State Drive[Default]	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.

3.6.2.6 SATA Configuration

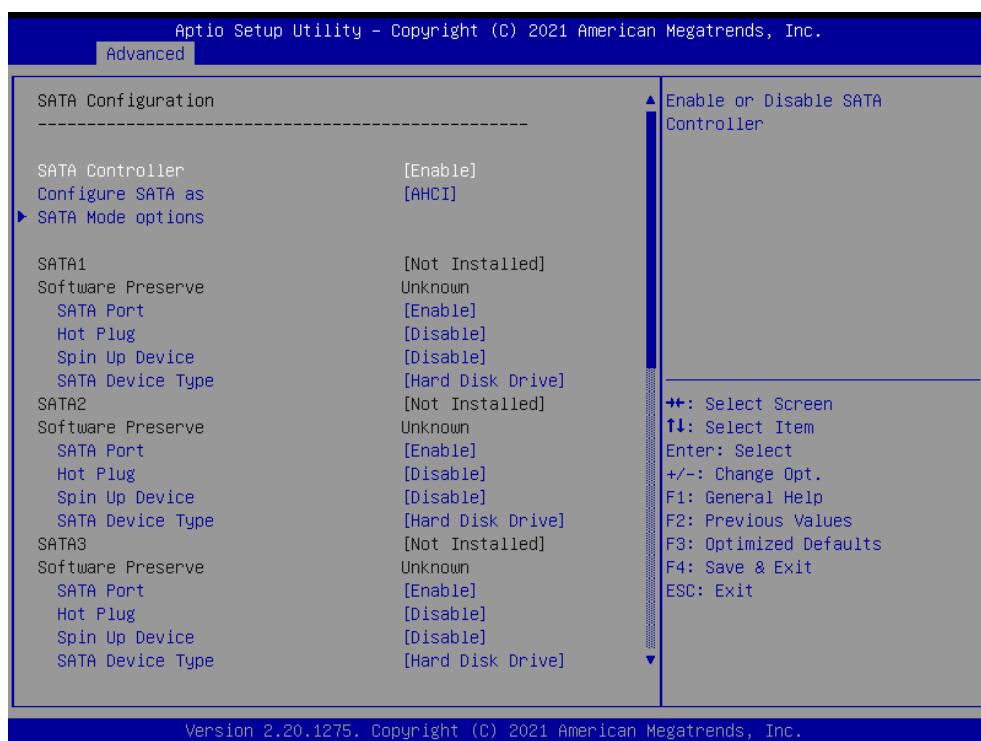


Item	Options	Description
SATA Controller	Enable[Default] Disable	Enable or Disable SATA Controller.
Configure SATA as	AHCI[Default] RAID	This will configure SATA as RAID or AHCI
SATA Port	Disable Enable[Default]	Enable or Disable SATA Port.
Hot Plug	Disable[Default] Enable	Designates this port as Hot Pluggable.
Spin Up Device	Disable[Default] Enable	If enabled for any of ports Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.
SATA Device Type	Hard Disk Drive[Default] Solid State Drive	Identify the SATA port is connected to Solid State Drive or Hard Disk Drive.

3.6.2.6.1 SATA Mode options

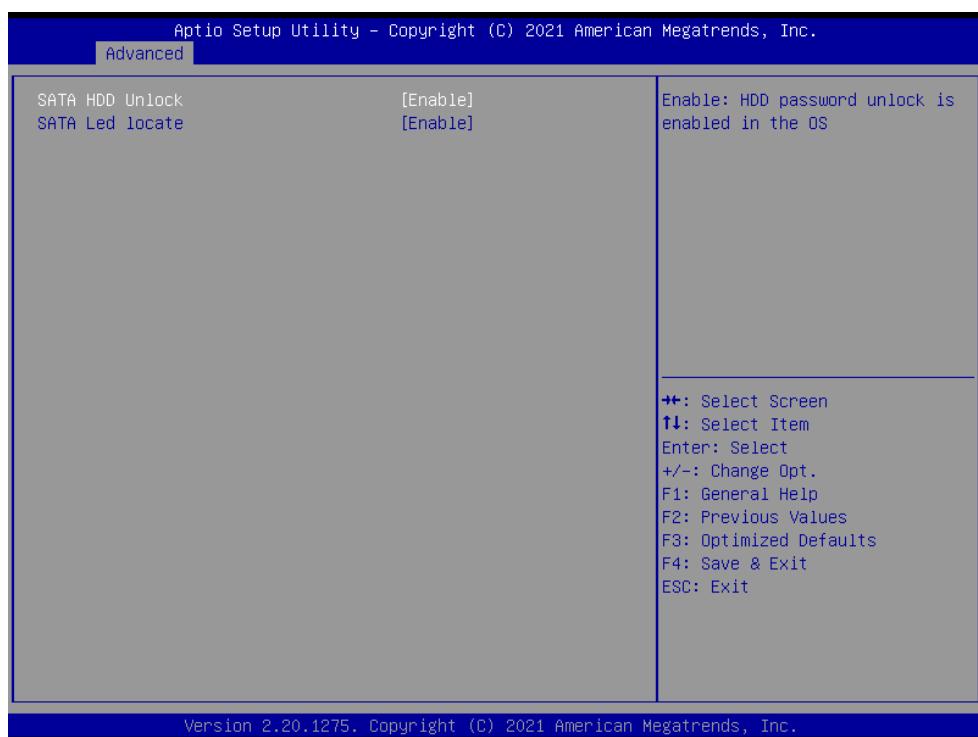


Item	Option	Description
SATA HDD Unlock	Disable Enable [Default]	Enable: HDD password unlock is enabled in the OS.
SATA Led locate	Disable Enable [Default]	If enabled LED/SGPIO hardware is attached.

3.6.2.7 Miscellaneous Configuration

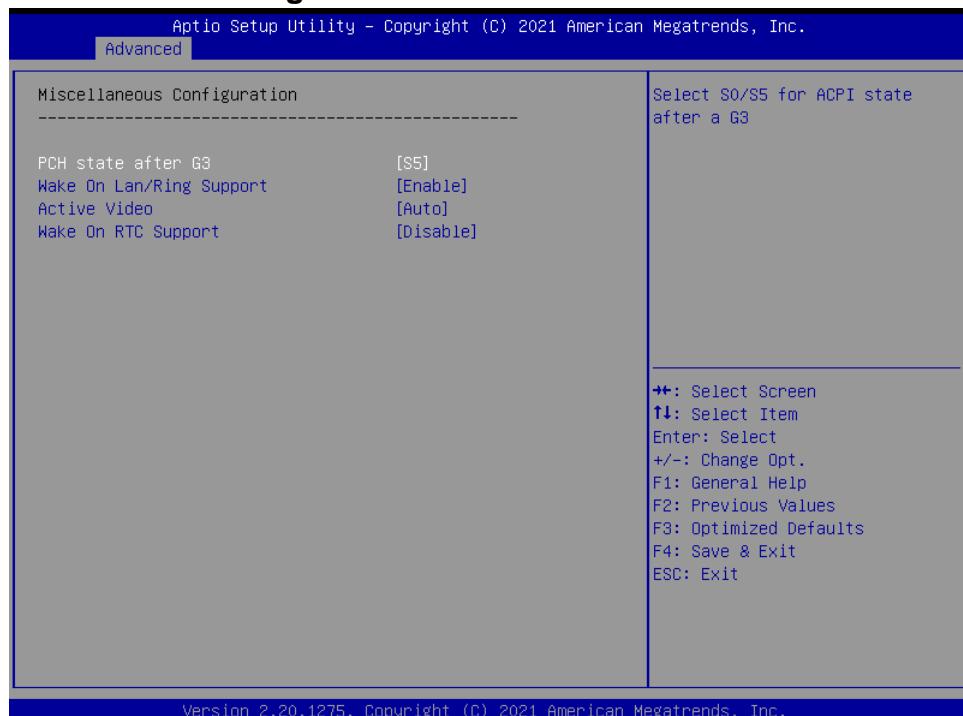

Item	Options	Description
PCH state after G3	S0 S5[Default] Leave power state unchanged	Select S0/S5 for ACPI state after a G3.
Wake On Lan/Ring Support	Disable, Enable[Default]	Enable or Disable Wake On Lan Support.
Active Video	Auto[Default] Onboard Offboard	Select active Video type.
Wake On RTC Support	Disable[Default], Enable	Enable or disable System wake on alarm event. When enabled, System will wake on the day ::hr::min::sec specified.

3.6.2.8 Server ME Configuration

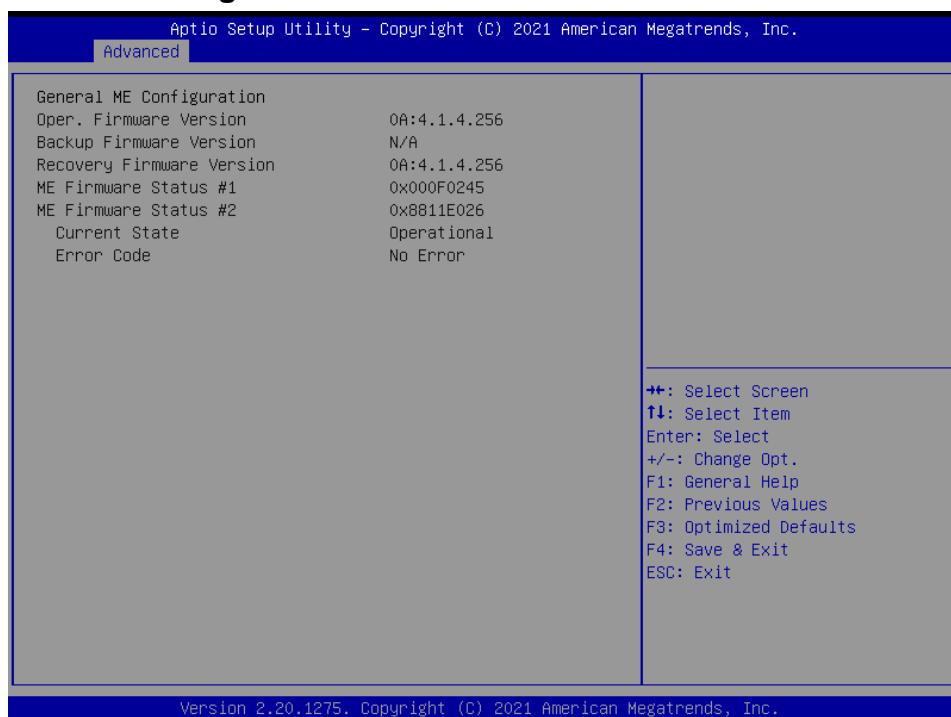


3.6.2.9 Trusted Computing




Item	Options	Description
TPM Support	Disable, Enable [Default]	Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

3.6.2.10 ACPI Settings

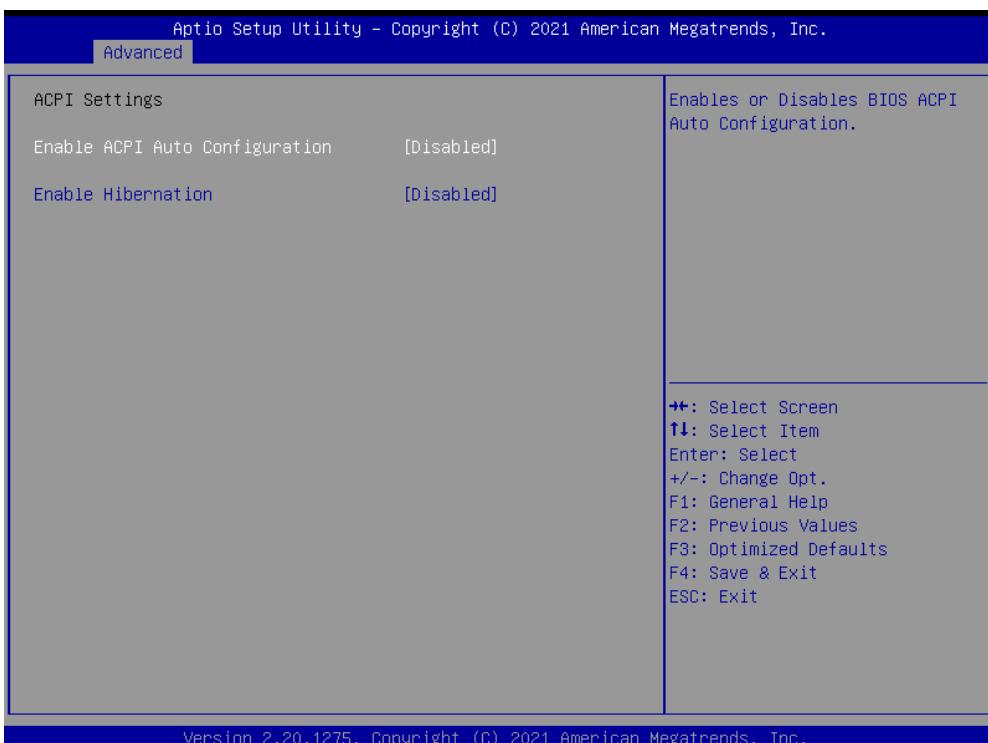


Item	Options	Description
Enable ACPI Auto Configuration	Disabled[Default] Enabled	Enables or Disables BIOS ACPI Auto Configuration.
Enable Hibernation	Disabled[Default] Enabled	Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems.

3.6.2.11 Serial Port Console Redirection

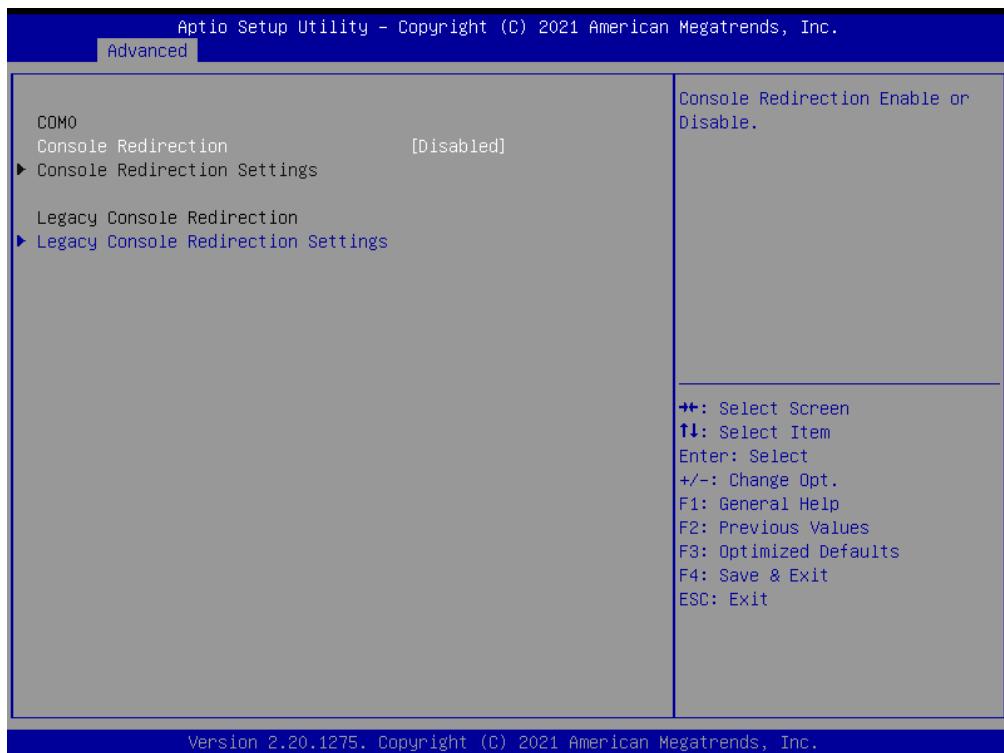


Item	Options	Description
Console Redirection	Disabled[Default], Enabled	Console Redirection Enable or Disable.

3.6.2.11.1 Legacy Console Redirection Settings

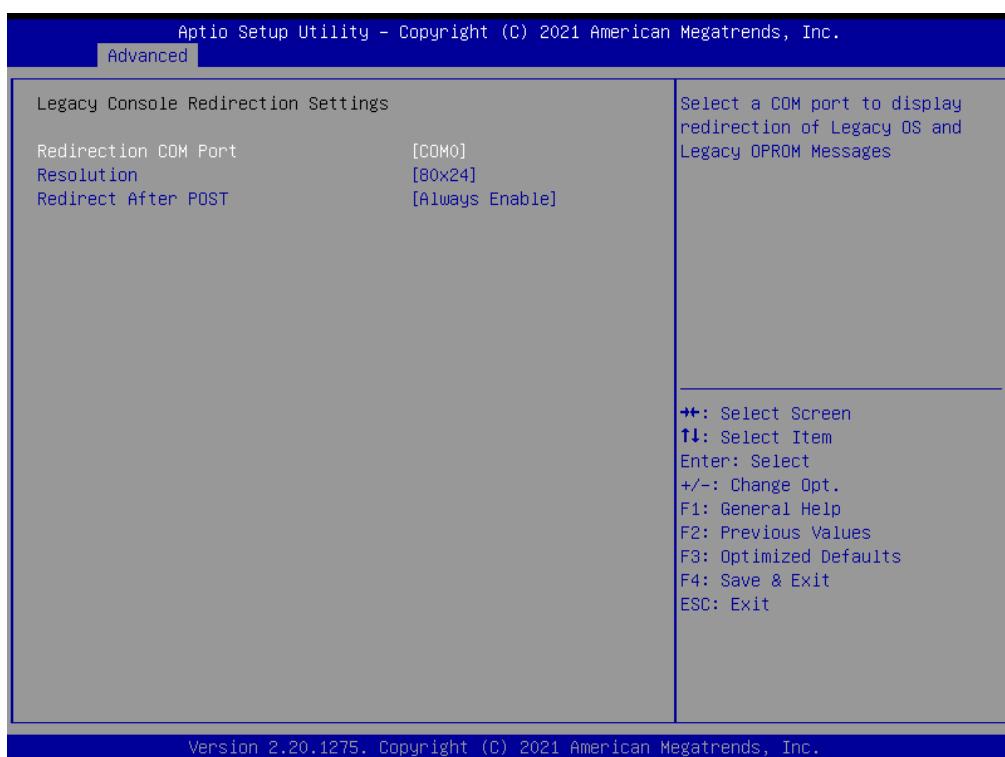


Item	Option	Description
Redirection COM Port	COM0[Default]	Select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.
Resolution	80x24[Default] 80x25	On Legacy OS, the Number of Wows and Columns supported redirection.
Redirect After POST	Always Enable[Default] BootLoader	When Bootloader is selected, then Legacy Console Redirection is disabled before booting to legacy OS. When Always Enable is selected, then Legacy Console Redirection is enabled for legacy OS. Default setting for this option is set to Always Enable.

3.6.2.12 Super IO Configuration

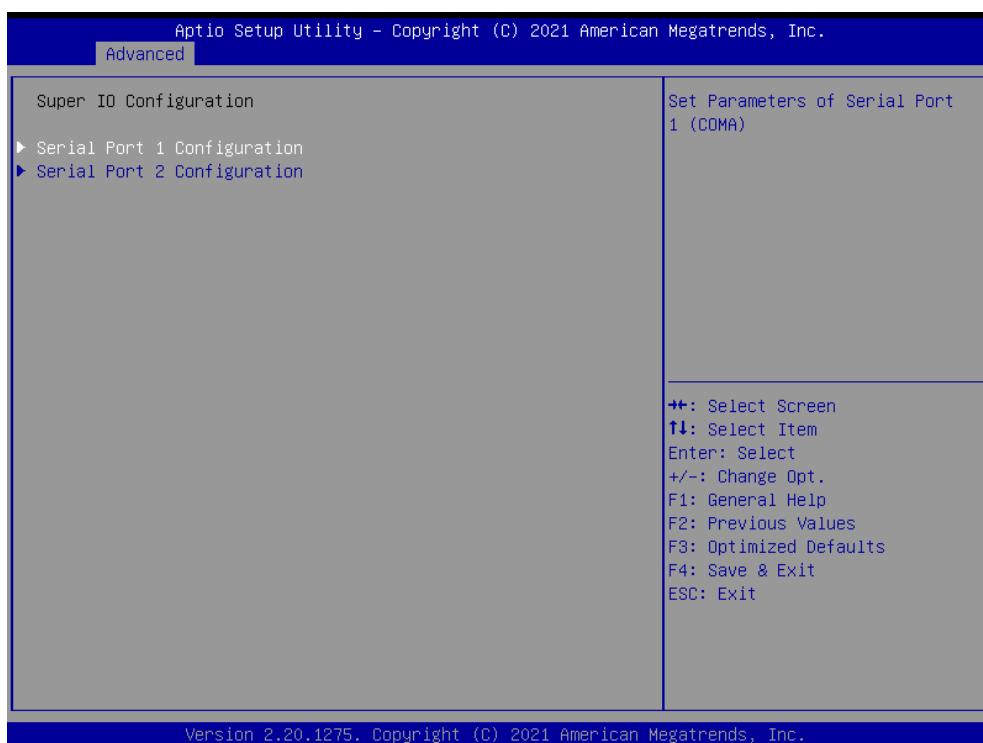


Item	Description
Serial Port 1 Configuration	Set Parameters of Serial Port 1 (COMA).
Serial Port 2 Configuration	Set Parameters of Serial Port 2 (COMB).

3.6.2.12.1 Serial Port 1 Configuration

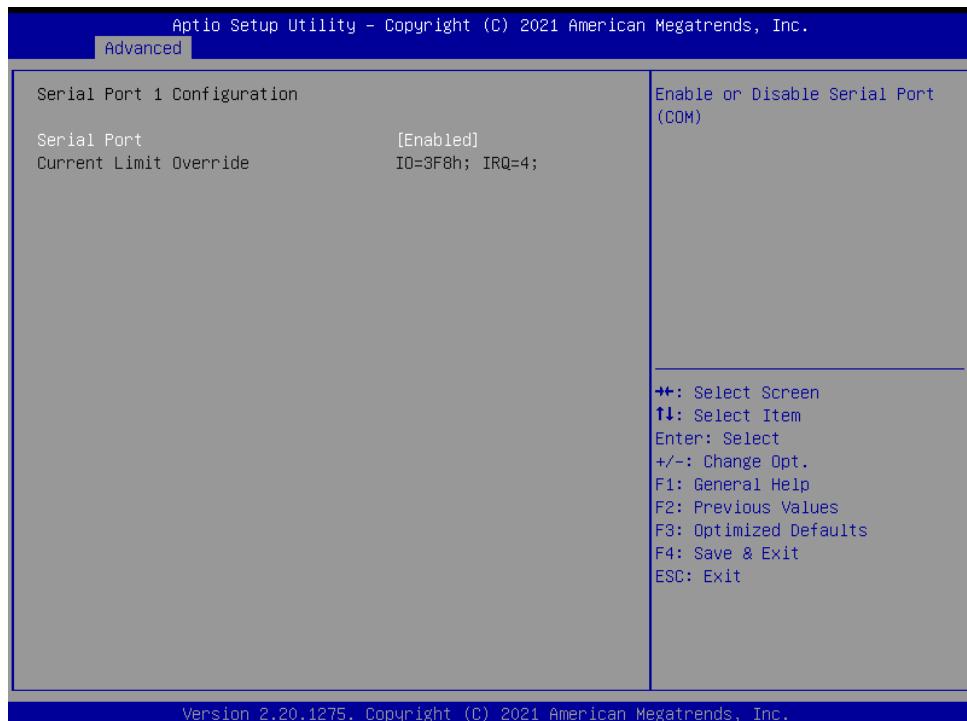

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).


3.6.2.12.2 Serial Port 2 Configuration

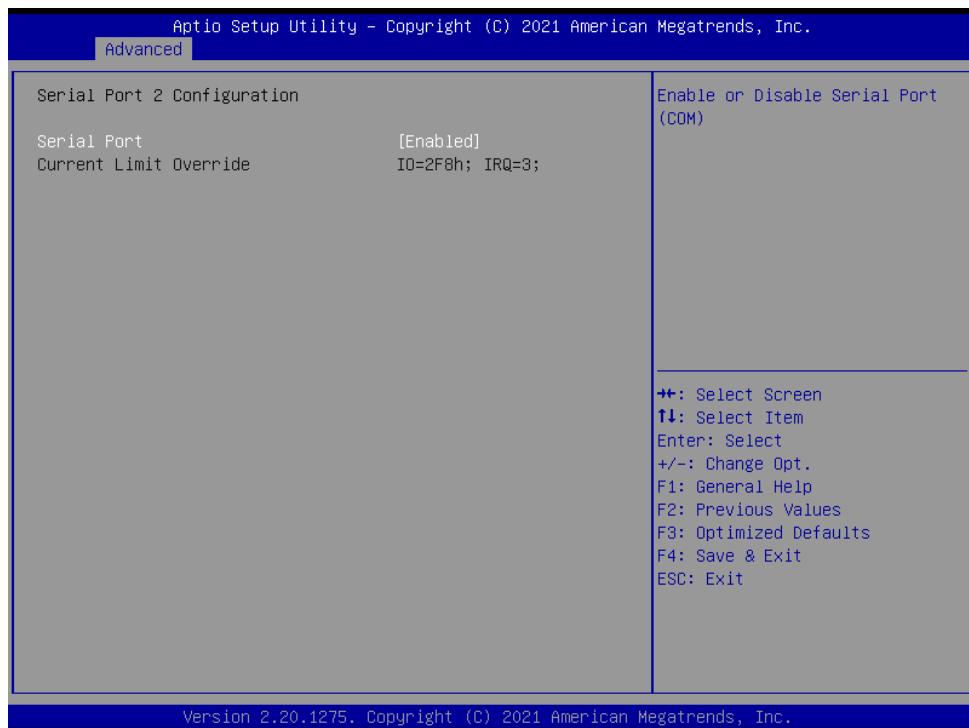

Item	Option	Description
Serial Port	Enabled[Default], Disabled	Enable or Disable Serial Port (COM).


3.6.2.13 USB Configuration

The USB Configuration menu helps read USB information and configures USB settings.

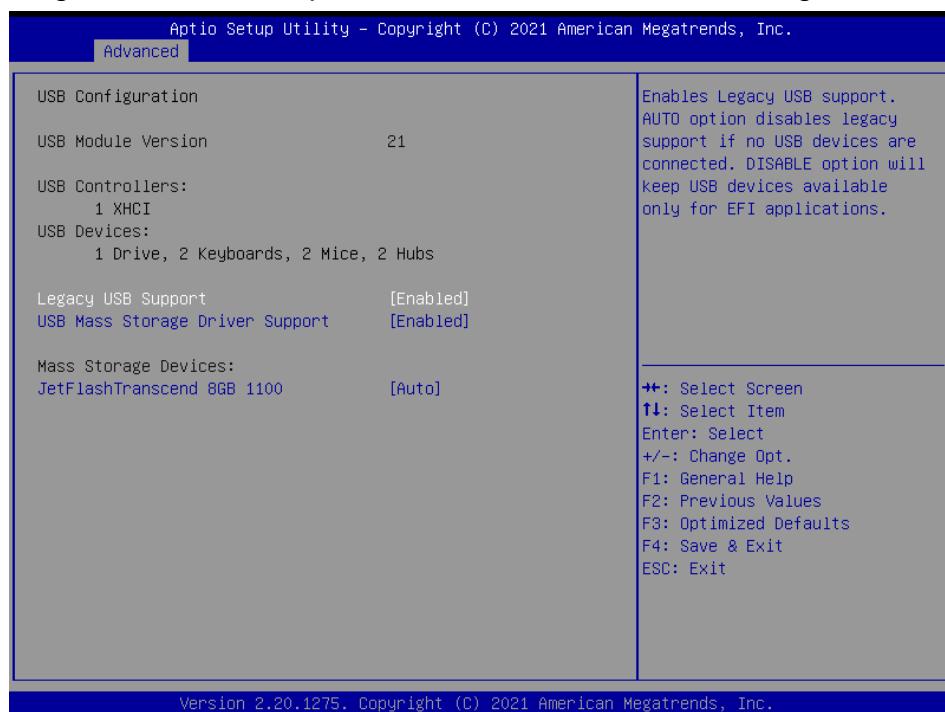


Item	Options	Description
Legacy USB Support	Enabled[Default], Disabled Auto	Enables Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.
USB Mass Storage Driver Support	Disabled Enabled[Default],	Enable/Disable USB Mass Storage Driver Support.
Mass Storage Devices	Auto[Default] Floppy Forced FDD Hard Disk CD-ROM	Mass storage device emulation type. 'AUTO' enumerates devices according to their media format. Optical drives are emulated as 'CDROM', drives with no media will be emulated according to a drive type.

3.6.2.14 NVMe Configuration

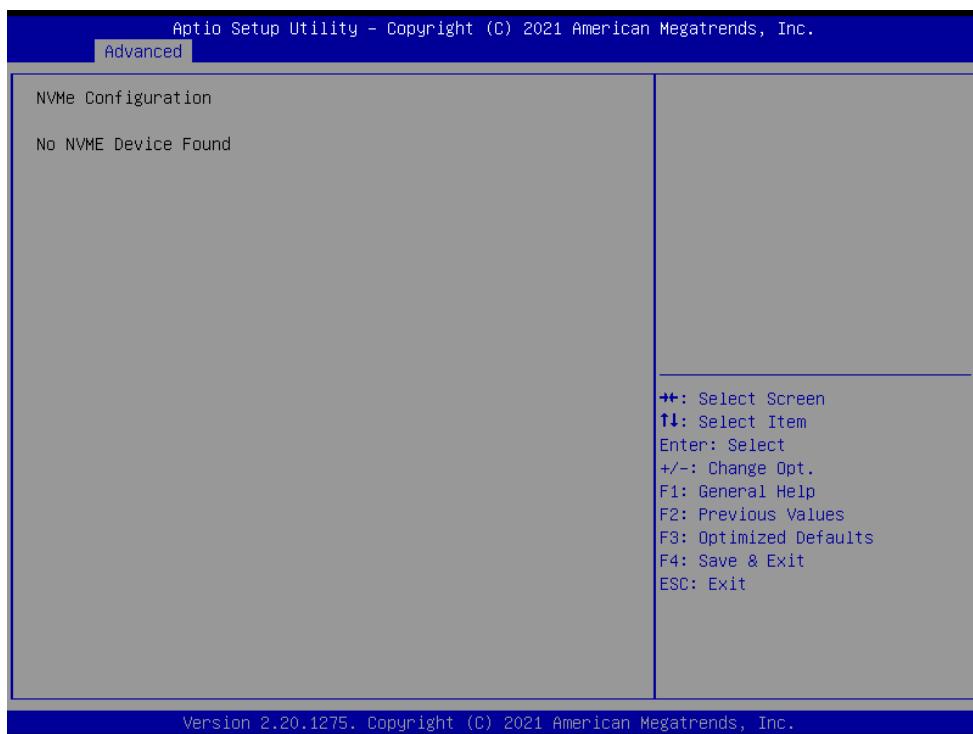

3.6.2.15 Option ROM Dispatch Policy

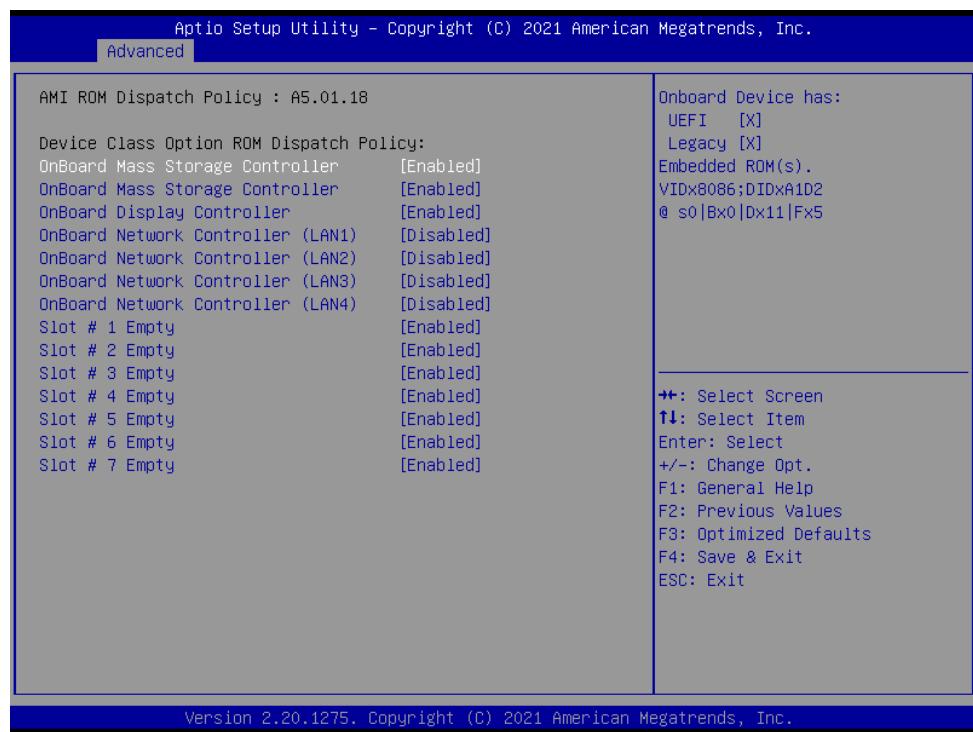

Item	Options	Description
Onboard Mass Storage Controller	Enabled[Default], Disabled	Onboard Device has: UEFI [X] Legacy [X]

HPS-621U2A


		Embedded ROM(s). VIDx8086; DIDxA1D2 @ s0 Bx0 Dx11 Fx5
Onboard Display Controller	Enabled[Default], Disabled	Onboard Device has: UEFI [X] Legacy [X] Embedded ROM(s). VIDx1A03; DIDx2000 @ s0 BxA Dx0 Fx0
Onboard Network Controller(LAN1)	Enabled[Default], Disabled	Onboard Device has: UEFI [X] Legacy [X] Embedded ROM(s). VIDx8086; DIDx1533 @ s0 Bx6 Dx0 Fx0
Onboard Network Controller(LAN2)	Enabled, Disabled[Default]	Onboard Device has: UEFI [X] Legacy [X] Embedded ROM(s). VIDx8086; DIDx1533 @ s0 Bx7 Dx0 Fx0
Onboard Network Controller(LAN3)	Enabled, Disabled[Default]	Onboard Device has: UEFI [X] Legacy [X] Embedded ROM(s). VIDx8086; DIDx1533 @ s0 Bx1 Dx0 Fx0
Onboard Network Controller(LAN4)	Enabled, Disabled[Default]	Onboard Device has: UEFI [X] Legacy [X] Embedded ROM(s). VIDx8086; DIDx1533 @ s0 Bx2 Dx0 Fx0
Slot#1 Empty	Enabled[Default], Disabled	Enable or Disable Option ROM execution for selected Slot.
Slot#2 Bridge Device	Enabled[Default], Disabled	Enable or Disable Option ROM execution for selected Slot.
Slot#3 Empty	Enabled[Default], Disabled	Enable or Disable Option ROM execution for selected Slot.
Slot#4 Empty	Enabled[Default], Disabled	Enable or Disable Option ROM execution for selected Slot.
Slot#5 Empty	Enabled[Default], Disabled	Enable or Disable Option ROM execution for selected Slot.
Slot#6 Empty	Enabled[Default], Disabled	Enable or Disable Option ROM execution for selected Slot.
Slot#7 Empty	Enabled[Default], Disabled	Enable or Disable Option ROM execution for selected Slot.

3.6.2.16 Network Stack Configuration




Item	Options	Description
Network Stack	Enabled Disabled [Default]	Enable/Disable UEFI Network Stack.

3.6.3 Server Mgmt

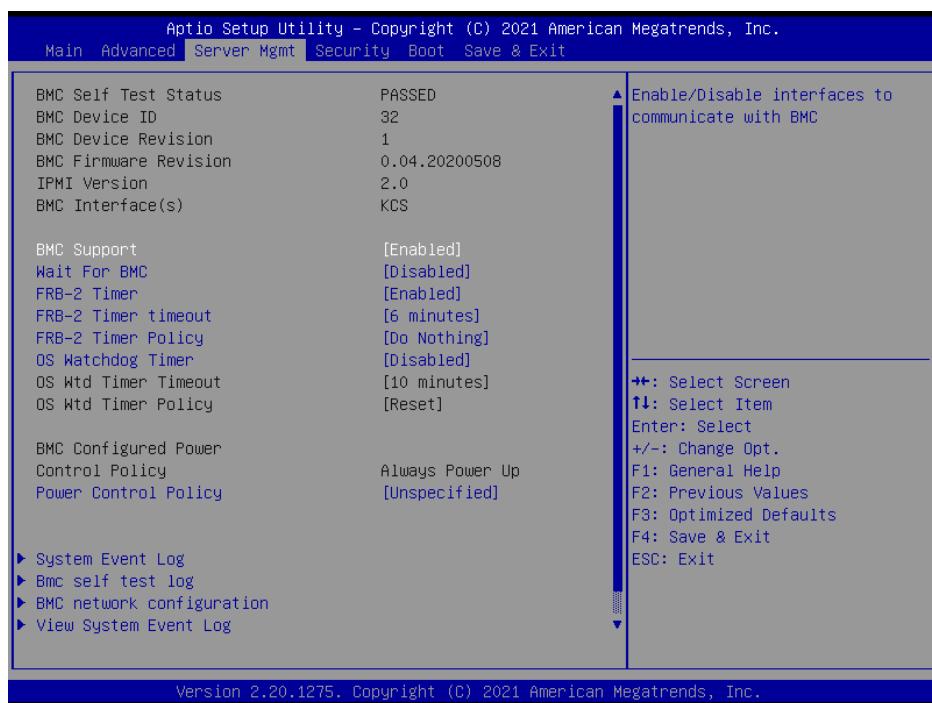


Item	Options	Description
BMC Support	Enabled[Default] Disabled	Enable/Disable interfaces to communicate with BMC.
Wait For BMC	Enabled Disabled[Default]	Wait For BMC response for specified time out. BMC starts at the same time when BIOS starts during AC power ON. It takes around 30 seconds to initialize Host to BMC interfaces.
FRB-2 Timer	Enabled[Default] Disabled	Enable or Disable FRB-2 time (POST timer).
FRB-2 Timer timeout	3 minutes 4 minutes 5 minutes 6 minutes[Default]	Enter value Between 3 to 6 min for FRB-2 Timer Expiration value.
FRB-2 Timer Policy	Do Nothing[Default] Reset Power Down Power Cycle	Configure how the system should respond if the FRB-2 Timer expires. Not available if FRB-2 Timer is disabled.
OS Watchdog Timer	Enabled Disabled[Default]	If enabled, starts a BIOS timer which can only be shut off by Management Software after the OS loads. Helps determine that the OS successfully loaded or follows the OS Boot Watchdog Timer policy.
Power Control Policy	Do Not PowerUp Last Power State Power Restore Unspecified[Default]	Configure how the system should respond if AC Power is lost, Reset not required as selected Power policy will be set in BMC when policy is saved.

3.6.3.1 System Event Log

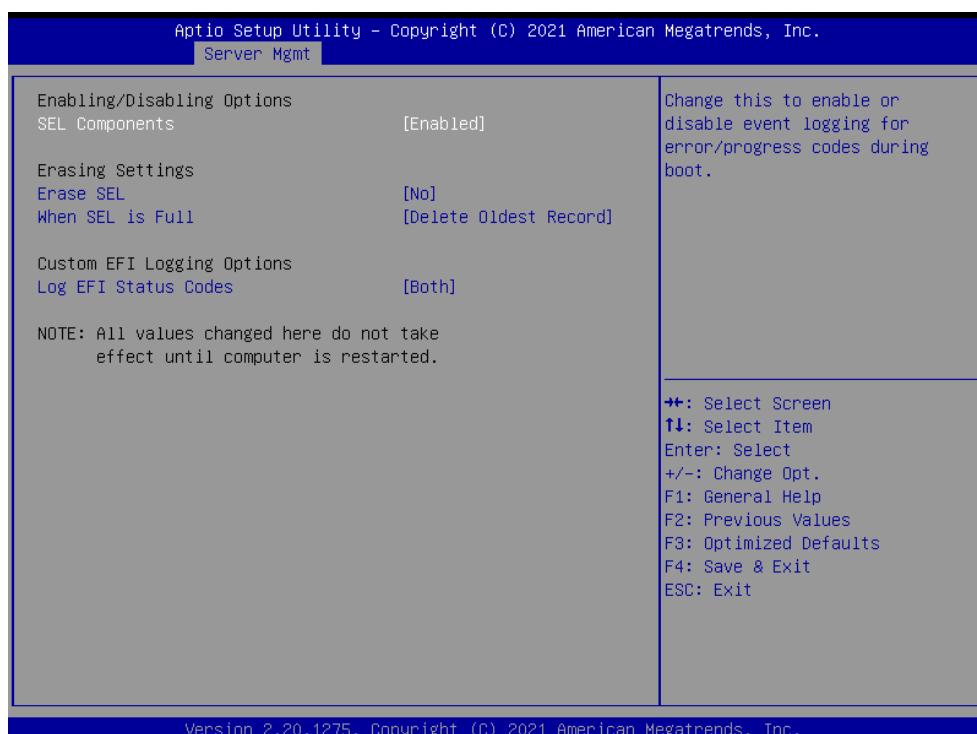


Item	Option	Description
SEL Components	Enabled[Default] Disabled	Change this to enable or disable event logging for error/progress codes during boot.
Erase SEL	No[Default] Yes, On next reset Yes, On every reset	Choose options for erasing SEL.
When SEL is Full	Do Nothing Erase Immediately Delete Oldest Record[Default]	Choose options for reactions to a full SEL.
Log EFI Status Codes	Disabled Both[Default] Error code Progress code	Disable the logging of EFI Status Codes or log only error code or only progress code or both.

3.6.3.2 Bmc self test log

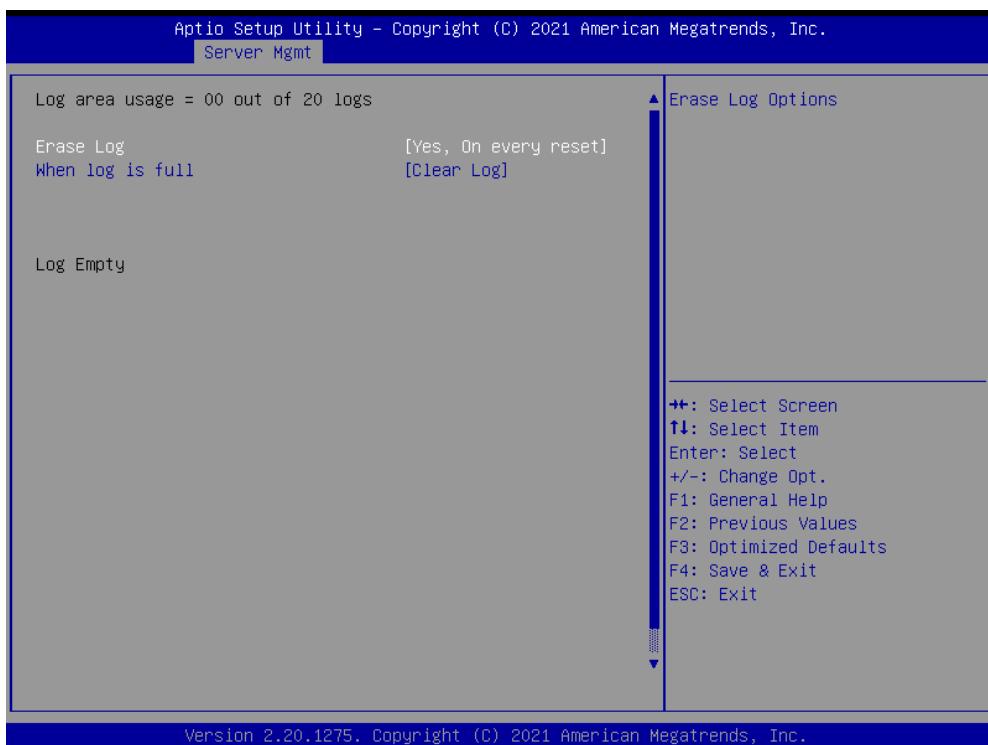


Item	Option	Description
Erase Log	Yes, On every reset[Default] No	Erase Log Options.
When log is full	Clear Log[Default] Do not log any more	Select the action to be taken when log is full.

3.6.3.3 BMC network configuration

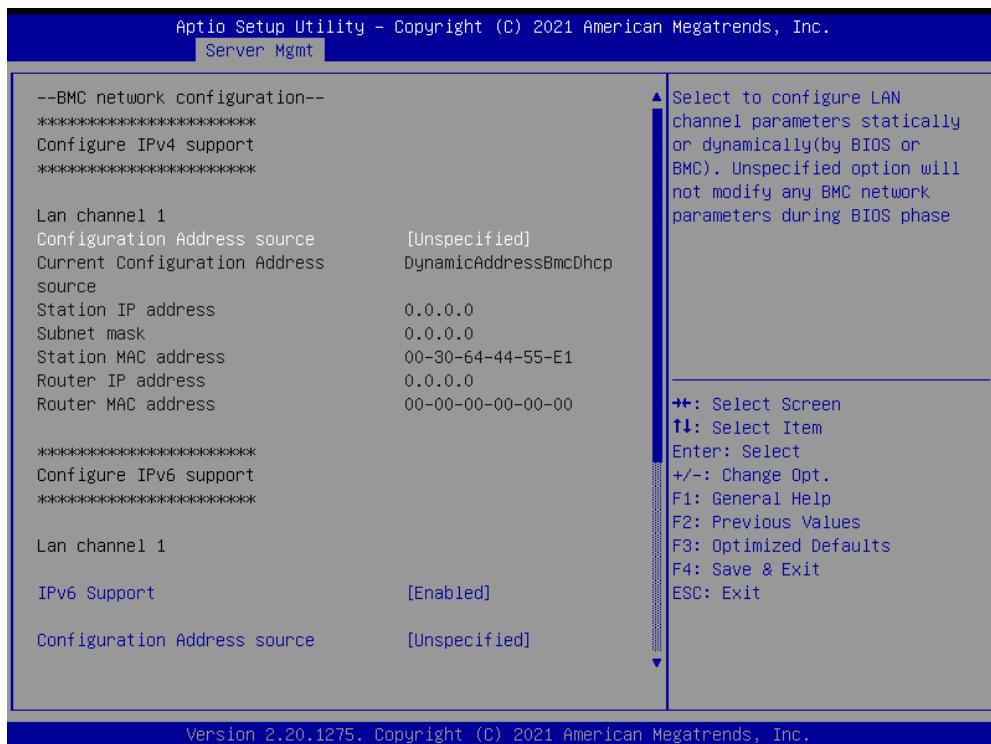


Item	Option	Description
Configuration Address source	Unspecified[Default] Static DynamicBmcDhcp DynamicBmcNonDhcp	Select configure LAN channel parameters statically or dynamically(by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase.
IPV6 Support	Enabled[Default] Disabled	Enable or Disable LAN1 IPv6 Support.
Configuration Address source	Unspecified[Default] Static DynamicBmcDhcp	Select to configure LAN channel parameters statically or dynamically(by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase.

3.6.3.4 BMC User Settings

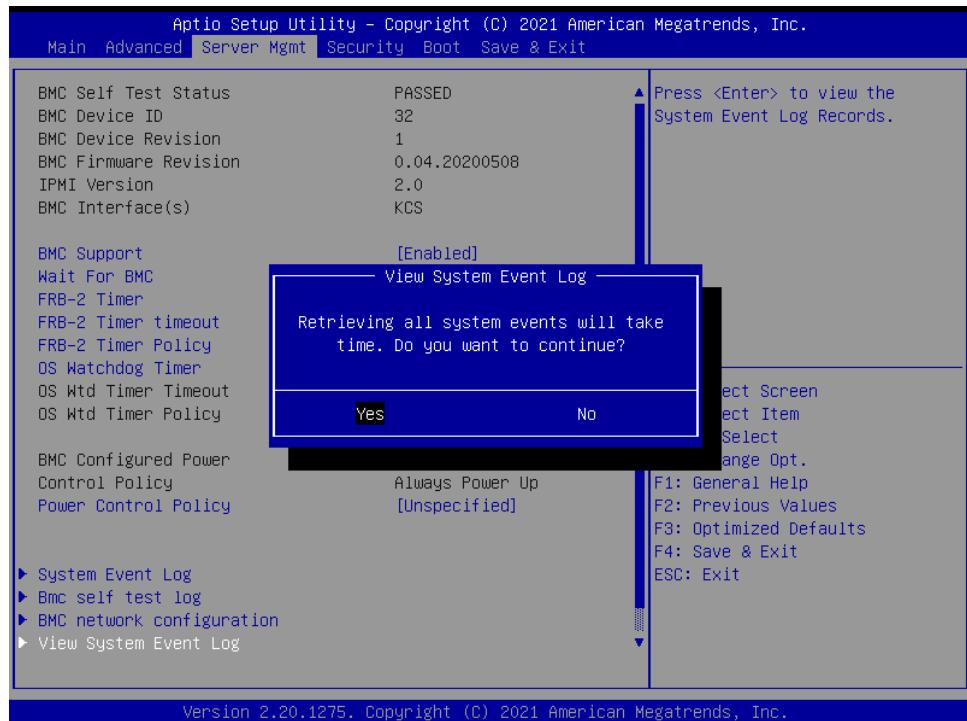

3.6.4 Security

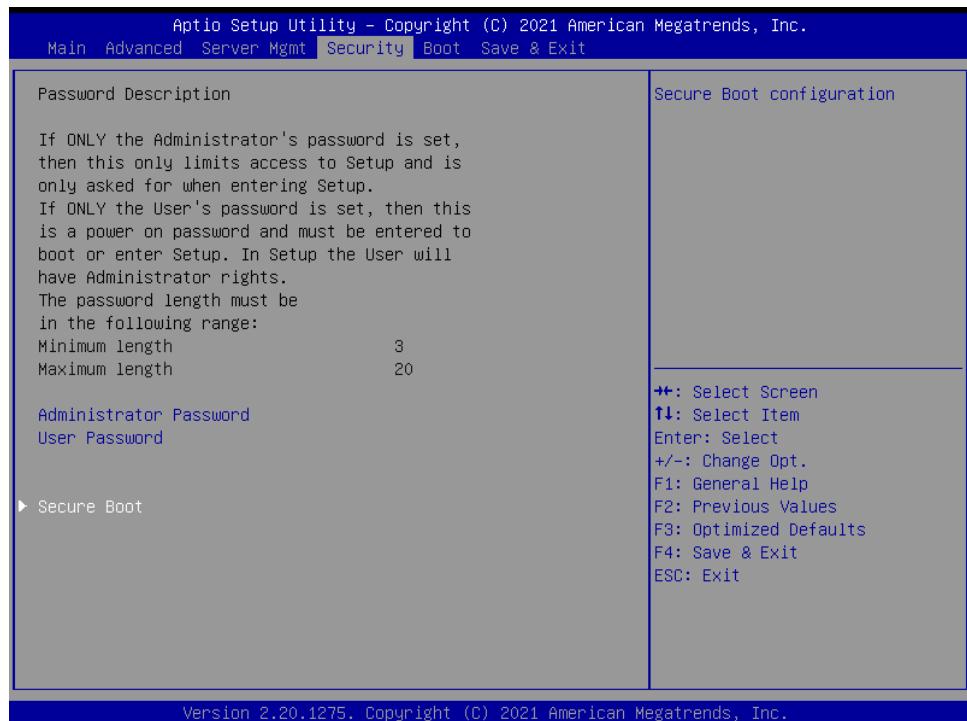

● Administrator Password

Set setup Administrator Password

● User Password


Set User Password

3.6.4.1 Secure Boot





Item	Option	Description
Secure Boot	Disable[Default] Enable	Secure Boot feature is Active if Secure Boot is Enable, Platform Key(PK) is enrolled and the System is in User mode. The mode change requires platform reset.
Secure Boot Mode	Standard Custom[Default]	Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.

3.6.4.1.1 Key Management

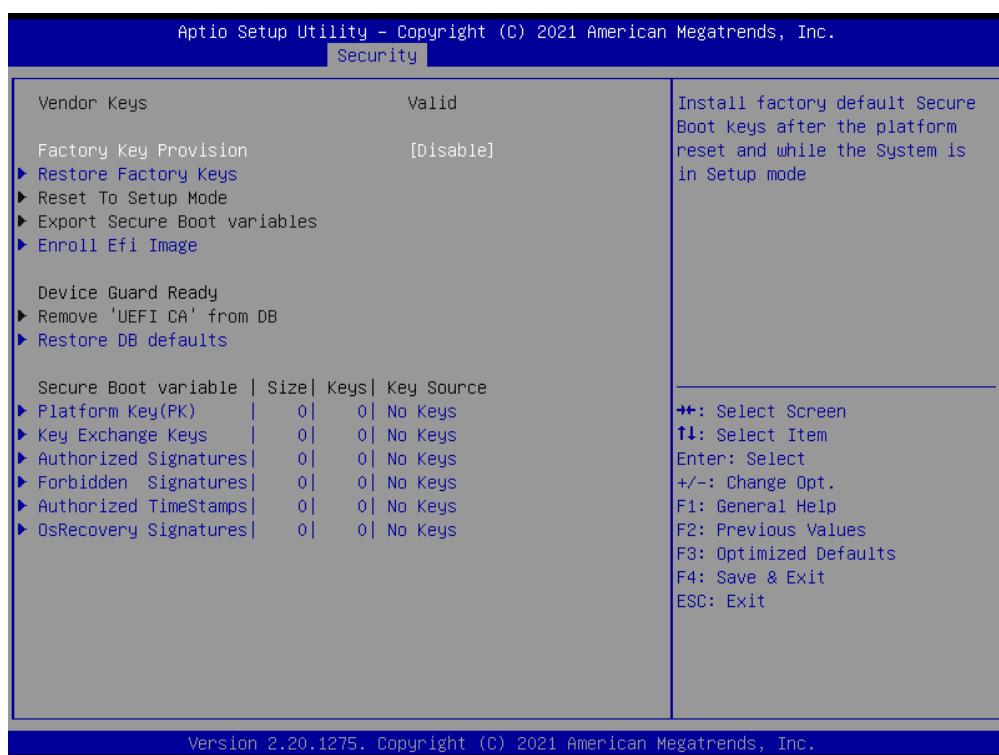

Item	Option	Description
Factory Key Provision	Disable[Default] Enable	Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

3.6.5 Boot

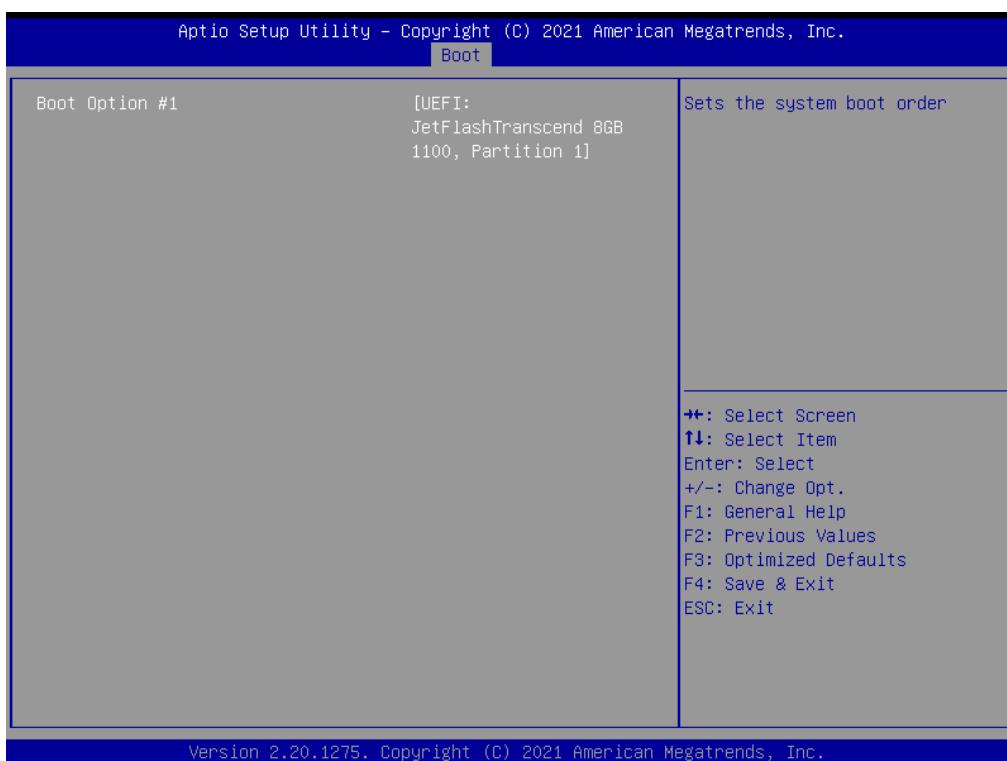
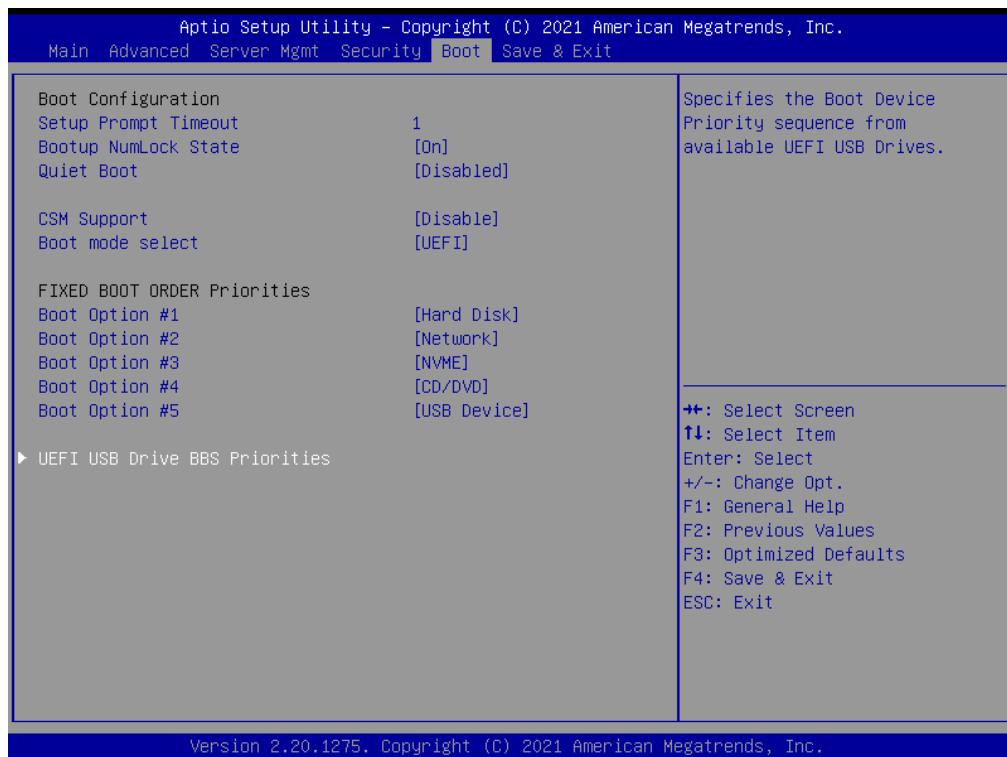


Item	Option	Description
Setup Prompt Timeout	1~ 65535	Set the default timeout before system boot. A value of 65535 will disable the timeout completely.

Quick Reference Guide

Bootup NumLock State	On[Default] Off	Select the keyboard NumLock state
Quiet Boot	Disabled[Default] Enabled	Enables or disables Quiet Boot option
CSM Support	Disabled[Default] Enabled	Enable/Disable CSM Support.
Boot mode select	LEGACY UEFI[Default]	Select boot mode LEGACY/UEFI.
Boot Option #1/#2/#3/#4/#5	Set the system boot order.	

3.6.6 Save and exit

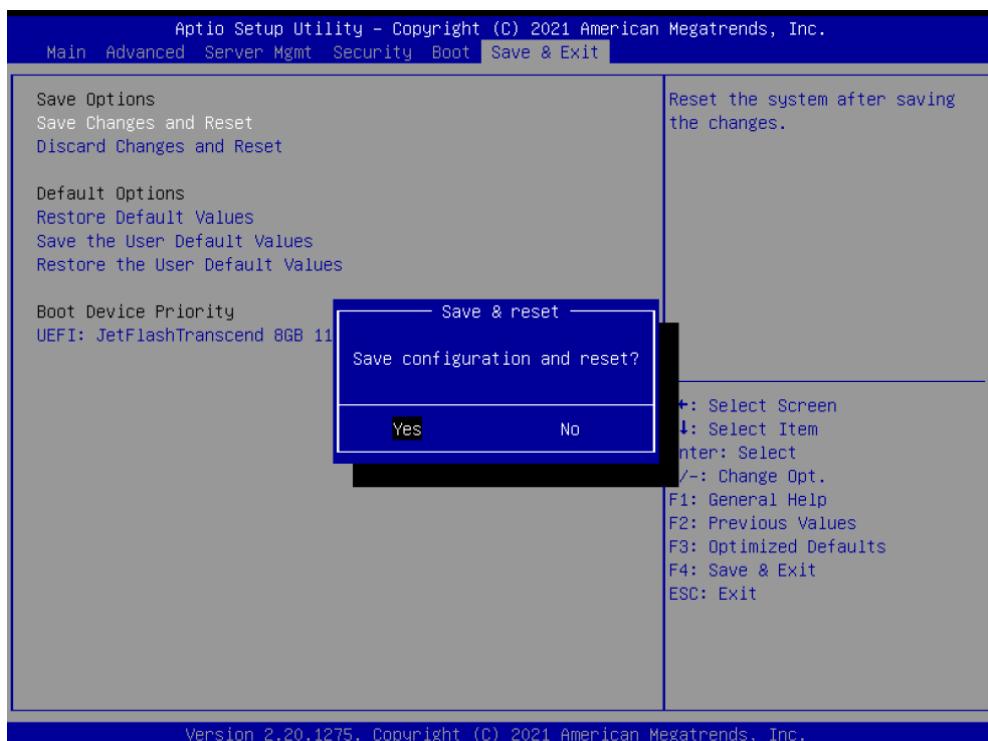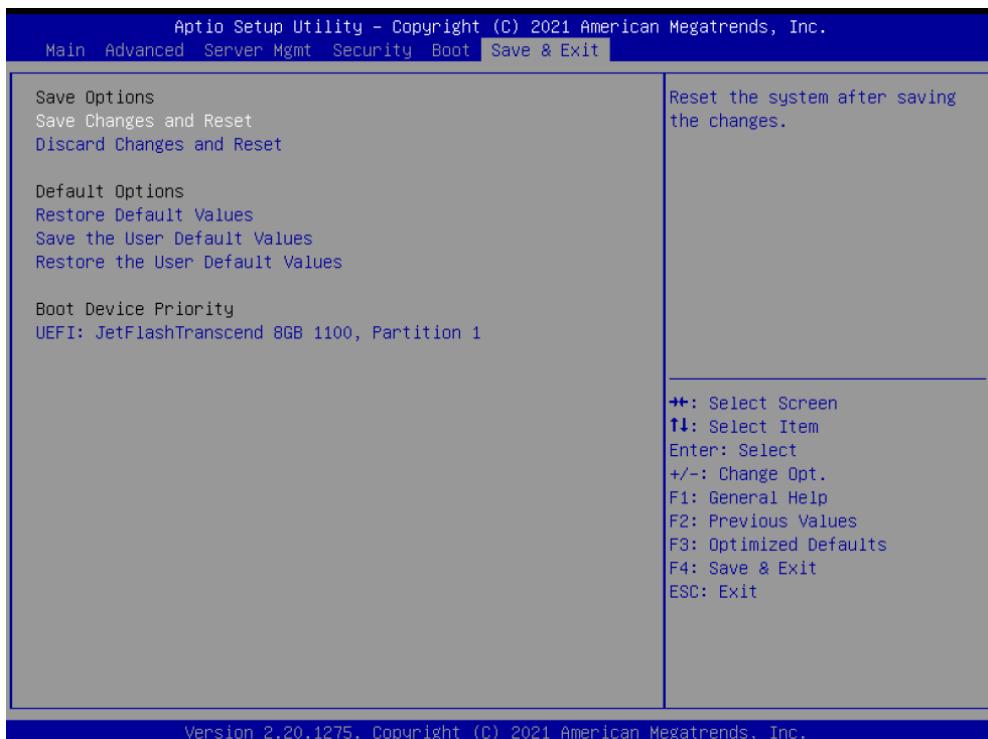

3.6.6.1 Save Changes and Reset

Reset the system after saving the changes.

3.6.6.2 *Discard Changes and Reset*

Reset system setup without saving any changes.

3.6.6.3 *Restore Default Values*

This option restores all BIOS settings to the factory default. This option is useful if the controller exhibits unpredictable behavior due to an incorrect or inappropriate BIOS setting.

3.6.6.4 *Save the User Default Values*

Restore/Load Default values for all the setup options.

3.6.6.5 *Restore the User Default Values*

Restore the User Defaults to all the setup options.

4. Drivers Installation



Note: Installation procedures and screen shots in this section are for your reference and may not be exactly the same as shown on your screen.


4.1 Install Chipset Driver

All drivers can be found on the Avalue Official Website:

<http://www.avalue.com.tw>



Note: The installation procedures and screen shots in this section are based on Windows 10 operation system. If the warning message appears while the installation process, click Continue to go on.

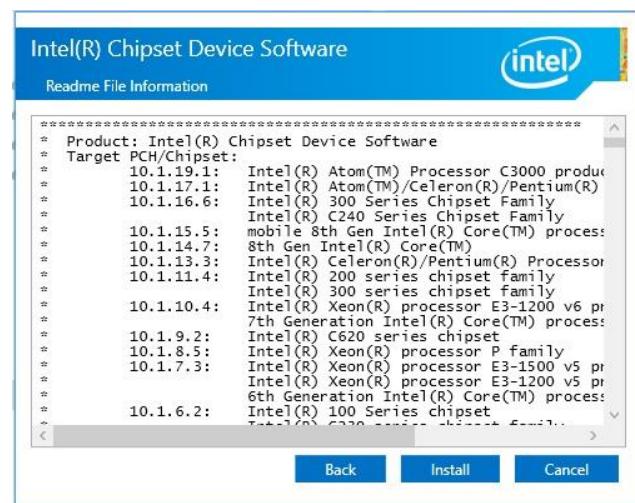

Step1. Click Next.



Step 2. Click Accept.

Step 3. Click Install.




Step 4. Setup completed.

4.2 Install VGA Driver


All drivers can be found on the Avalue Official Website:
<http://www.alue.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

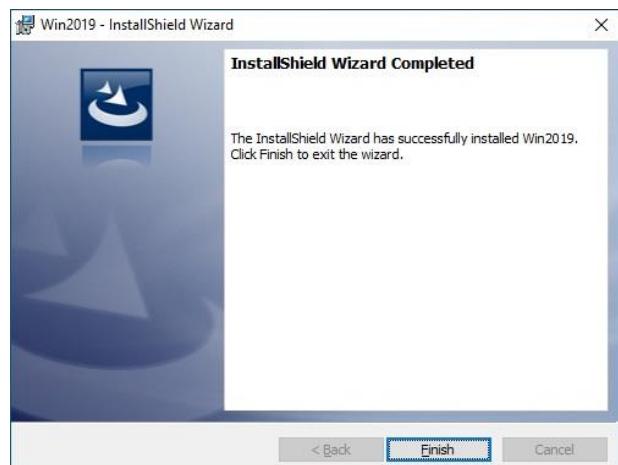

Step 3. Click **Finish** to complete setup.

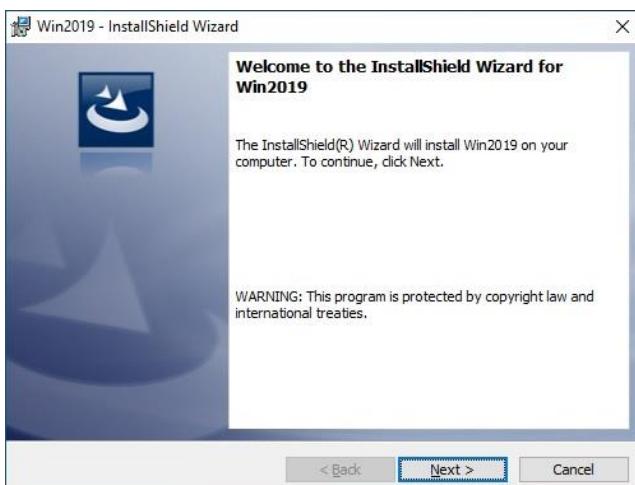

Step 1. Click **Next** to continue installation.

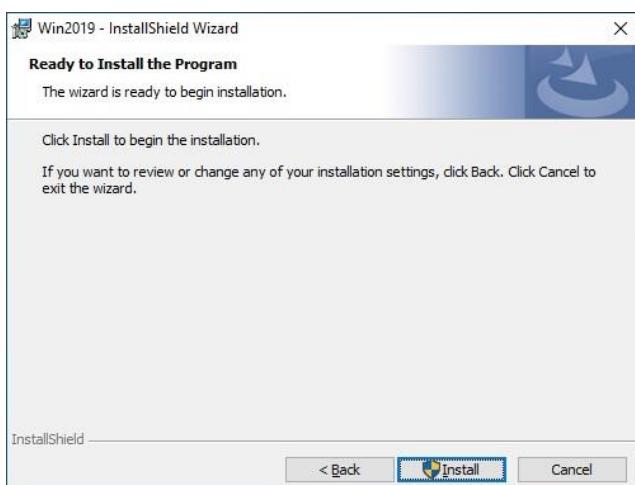

Step 2. Click **Install**.


4.3 Install Ethernet Driver

All drivers can be found on the Avalue Official Website:


<http://www.alue.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

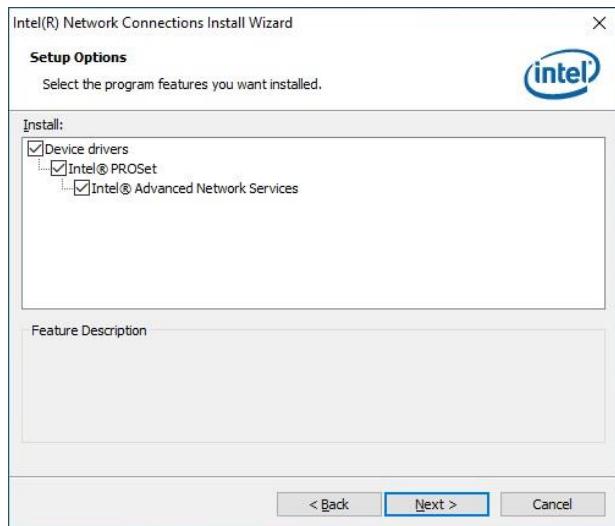

Step 3. Click Next.

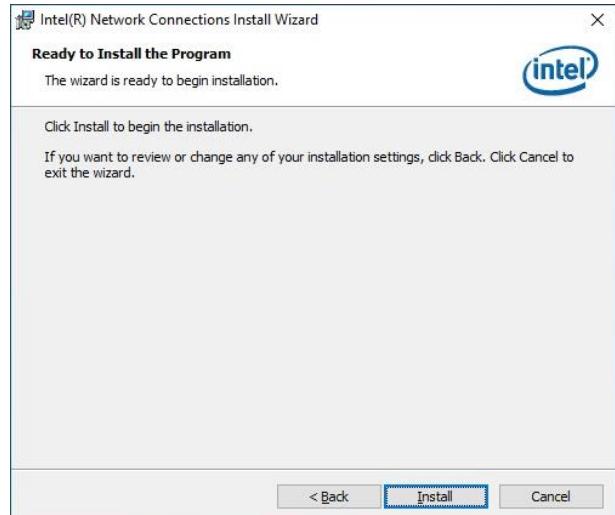


Step 1. Click Next to continue installation.

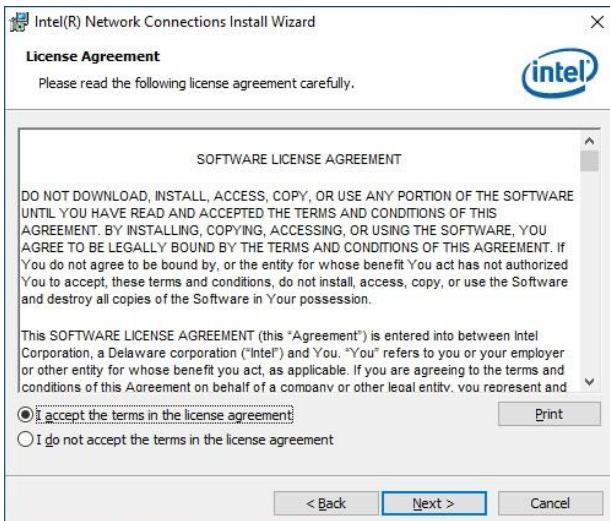

Step 2. Click Next.

Step 4. Click Install.

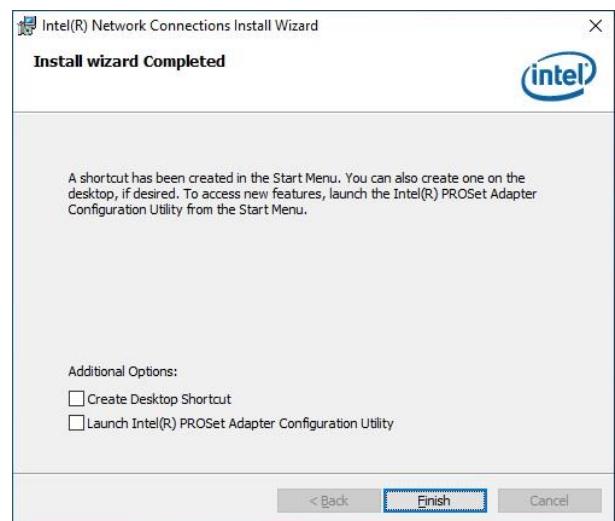

Step 5. Click Finish to complete setup.


4.4 Install VROC Driver

All drivers can be found on the Avalue Official Website:



<http://www.avalue.com.tw>.




Note: The installation procedures and screen shots in this section are based on Windows 10 operation system.

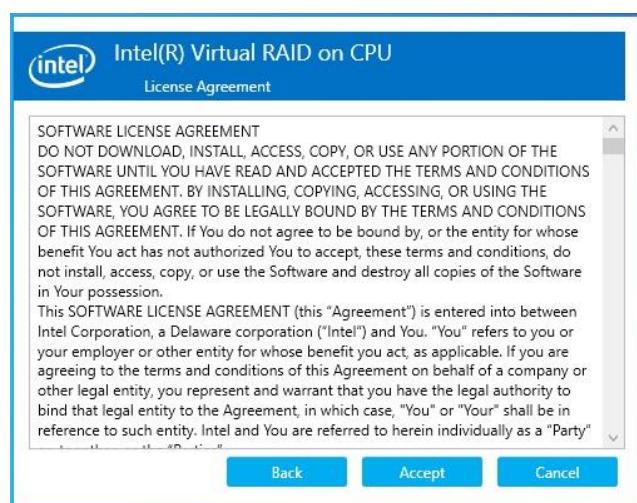

Step 3. Click Accept.

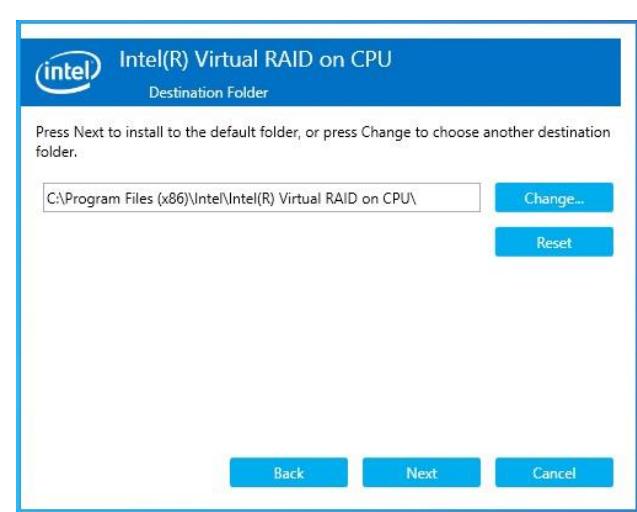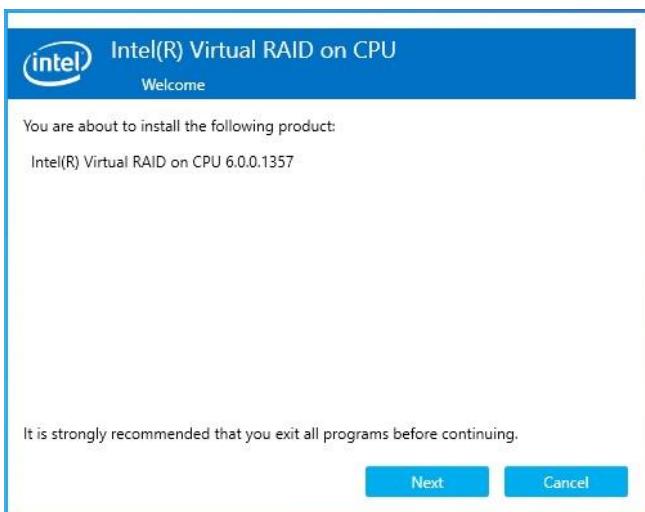


Step 1. Click Next to continue installation.

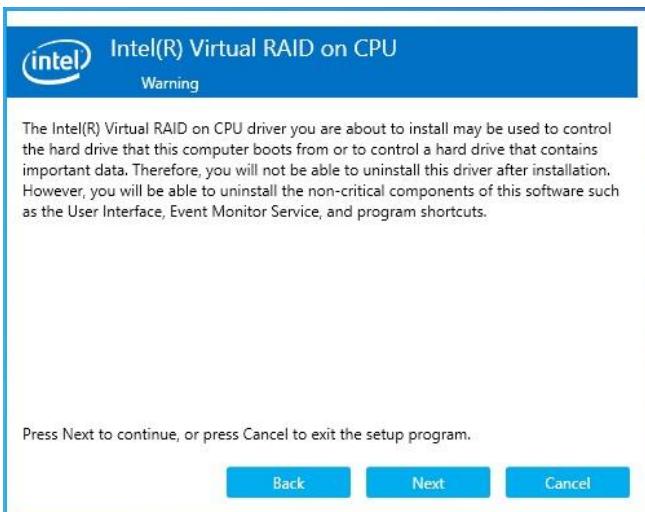


Step 2. Click Next.


Step 4. Click Next.

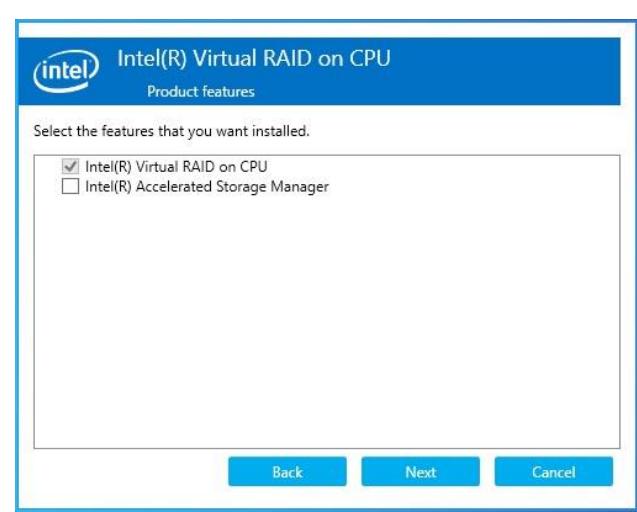

Step 5. Click Next.

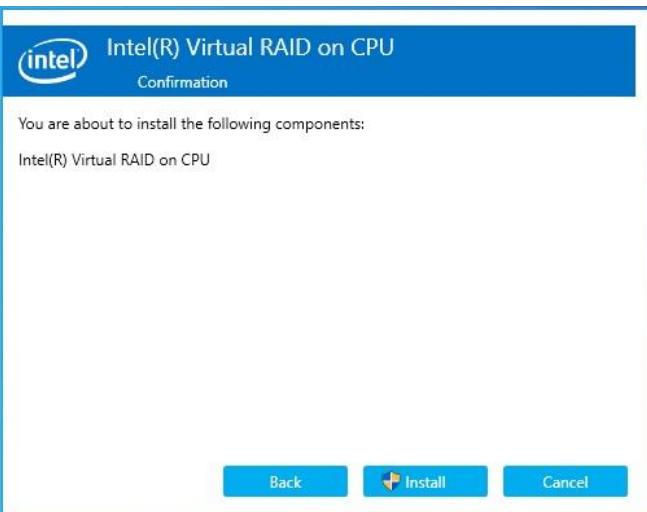

Step 6. Click **Install** to complete setup.

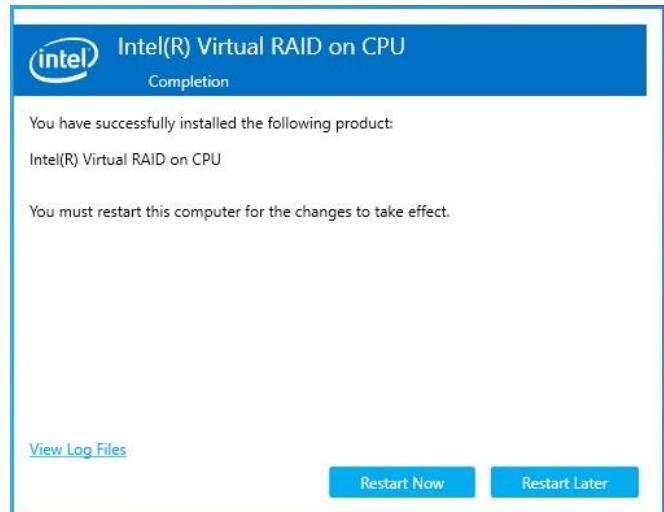

Step 7. Setup completed.

